

**RUNNER**  
MAINTENANCE MANUAL

 1300 888 479

 [sales@dieciaustralia.com.au](mailto:sales@dieciaustralia.com.au)

 1/5 Melito Court, Prestons NSW

 [www.dieciaustralia.com.au](http://www.dieciaustralia.com.au)



# 1 Info

## USE AND MAINTENANCE MANUAL

Code:	DOCMA0000010 -UK
Version:	2.1 -
Manual language:	English (ENG )

### Original instructions for:

	Vehicle model	Brand	Emission standard	Nominal power	Homologation	Area	Sector
MFG3410	RUNNER 40.13	FPT	Stage IIIA/Tier 3	93 kW (125 HP)	XVL175	WORLD	CONSTRUCTION
MFE3223	RUNNER 35.7	FPT	Stage IIIA/Tier 3	93 kW (125 HP)	XVC175	WORLD	CONSTRUCTION
MFG3321	SAMSON 45.8	FPT	Stage IIIA/Tier 3	93 kW (125 HP)	XVM175	WORLD	CONSTRUCTION
MFG3322	AGRI MAX 45.8	FPT	Stage IIIA/Tier 3	93 kW (125 HP)	XCM175	WORLD	AGRICULTURAL

### Standards

This manual is prepared in accordance with the provisions indicated in the following Standards:

- EN1459-1
- ISO 3600:2015
- ISO 6750:2005
- M.D. 2006/42/EC

Dear Customer,

congratulations and thank you for choosing **DIECI**.

This Use and Maintenance Manual has been written to help you fully appreciate the quality of **DIECI** products.

We strongly recommend that you read this manual in its entirety before using the vehicle.

It contains information, advice and important warnings that will help you to fully take advantage of the technical capabilities of your **DIECI** products.

You will learn about its features and special practical information in addition to information about its maintenance, driver and operation safety to help maintain your **DIECI** products over time.

We are confident that you will be happy with your new purchase and we remain at your disposal should you have any further queries.

Sincerely,

**Sales Management**



[www.dieci.com](http://www.dieci.com)

**Dieci s.r.l.**

VIA E. MAJORANA, 2-4

42027 - MONTECCHIO E. (RE) - ITALY

TEL. ++39 0522-869611

FAX ++39 0522-869744

e-mail: [info@dieci.com](mailto:info@dieci.com)

Fully paid-up share capital € 10.000.000,00

Companies Register C.R. No. 01283560686 - Economic and Administrative Index C.R. No. 204278

Tax Code 01283560686 - VAT no. 01682740350

## 1.1 General information

The purpose of this publication is to provide safe and effective instructions to the Operator on use and maintenance of:

- Runner 35.7
- Runner 40.13
- Samson 45.8

This vehicle has been designed and built as a self-propelled vehicle with operator's seat, wheels, designed for use on paved or natural ground and on uneven ground.

It consists of a main support structure suitable to support the extensible boom.

The head of the boom can be fitted with forks or other equipment only if approved by *Dieci s.r.l.* or only if the manufacturer of the equipment declares that its use conforms with the type of machine.

When used normally, the machine performs loads lifting and positioning by extending/ retracting, lifting/lowering the boom.




### WARNING


**Any other use is considered contrary to the intended use by *DIECI s.r.l.* which, therefore, can not be responsible for damage to objects and the machine itself, or injury to persons that might derive from misuse.**

For other controls, or complaints to agencies, refer to the applicable local legislation in the country of use of the vehicle.


## 1.2 Identification of the vehicle

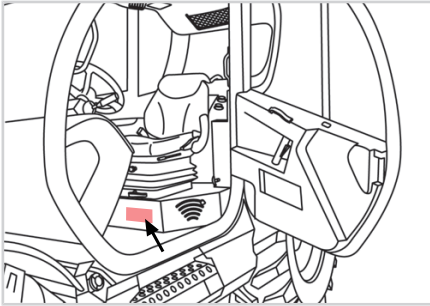


150640-1

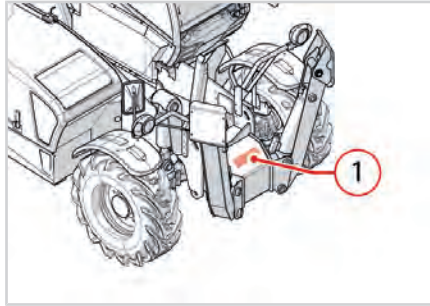


150640-2

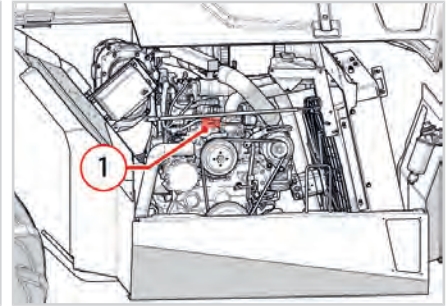

150640-3

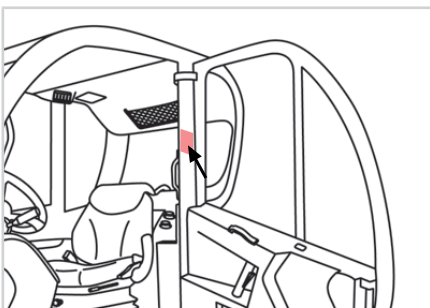

150640-4

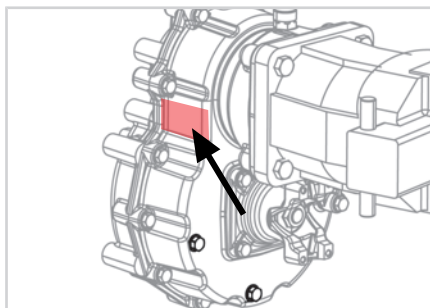

150640-5

Vehicle model (fig. 150640-1)	.....
Year	.....
Serial number of the chassis (fig. 150640-2)	.....
Serial number of the engine (fig. 150640-3)	.....
Serial number of the cab (fig. 150640-4)	.....
Serial number of the transmission gearbox (fig. 150640-5)	.....
Owner / Operator	.....
Address of the Dealer or Agent	.....
Delivery date	.....
Warranty expiry date	.....

Equipment code	Serial number	Year
.....	.....	.....
.....	.....	.....
.....	.....	.....
.....	.....	.....

# Contents

<b>1</b>	<b>Info .....</b>	<b>3</b>
1.1	General information.....	5
1.2	Identification of the vehicle .....	6
	<b>Definitions .....</b>	<b>16</b>
<b>2</b>	<b>Introduction .....</b>	<b>17</b>
2.1	Manual structure .....	17
2.2	Purpose and content .....	17
2.3	Preservation .....	17
2.4	Recipients .....	17
2.4.1	Training.....	17
2.4.2	Training.....	18
2.4.3	Qualification.....	18
2.5	Hazard Classification.....	18
2.6	Machine general warnings .....	19
2.7	Equipment general warnings .....	20
2.8	Intended use.....	20
2.9	Contraindications for use.....	20
2.10	Declaration of first test.....	21
2.11	Liability.....	21
2.12	Manufacturer .....	21
2.13	Vehicle identification label.....	21
2.14	Units of measurement and abbreviations used.....	23
<b>3</b>	<b>Warranty.....</b>	<b>25</b>
3.1	Exclusions from the guarantee .....	25
3.2	Delivery and installation.....	25
3.3	Warranty: duration .....	25
3.4	Warranty: commencement.....	25
3.5	Warranty: activation .....	26
3.6	Warranty procedure.....	26
3.7	Intervention campaigns for faulty products .....	26
3.8	Warranty: intervention request.....	26
3.8.1	Guarantee: claim .....	26
3.8.2	Obligation of vehicle downtime.....	26
3.9	Non-activation, failure to grant, termination.....	26
3.9.1	Warranty: failure to grant .....	26
3.9.2	Guarantee: termination .....	27
3.10	Final terms .....	27
<b>4</b>	<b>Safety regulations.....</b>	<b>28</b>
4.1	General warnings .....	28
4.2	Safety indications.....	29
4.3	Personal protective equipment .....	30
4.3.1	Protective clothing .....	30
4.3.2	Protect yourself against noise .....	30



4.3.3	Protections against objects falling from height.....	31
4.3.4	Protect yourself from flying fragments.....	31
4.4	Preparing for accidents.....	31
4.4.1	First Aider Tasks .....	31
4.4.2	Emergency call.....	32
4.4.3	Traumas .....	32
4.4.4	Hemorrhages.....	32
4.5	Preventing fires and accidents.....	32
4.5.1	Risks of fires .....	32
4.5.2	Risks of inhaling gas .....	33
4.5.3	Risks of batteries exploding .....	33
4.5.4	Residual risks.....	34
4.5.5	Contact with dangerous substances .....	34
4.6	Storing dangerous liquids .....	35
4.7	Warnings for safe working.....	35
4.7.1	Ensuring the vehicle is clean.....	35
4.7.2	Checking for damage .....	36
4.7.3	Start working with the vehicle .....	36
4.7.4	Passengers transportation.....	36
4.7.5	Electrical system protection.....	36
4.7.6	Signals to multiple vehicles.....	37
4.7.7	Working with the danger of falling masses and objects .....	37
4.7.8	Working near electrical lines.....	38
4.7.9	Working under the snow.....	38
4.7.10	Working with scarce lighting.....	39
4.7.11	Working in closed areas or dangerous atmospheres.....	39
4.7.12	Reduce vibrations .....	39
4.8	Working in windy conditions.....	40
4.9	Assessing the consistency of the work ground.....	40
4.10	Moving safely .....	41
4.11	General warnings for moving the load .....	41
4.12	Use of cables, ropes and slings .....	43
4.13	Road travel.....	43
4.13.1	Road travel warnings .....	43
4.13.2	Road travel instructions.....	44
4.14	Momentary stop .....	44
4.15	Parking the vehicle .....	45
4.16	Starting and stopping the vehicle .....	45
4.16.1	General warnings regarding starting up the vehicle .....	45
4.16.2	Inspections prior to starting-up.....	46
4.16.3	Starting-up the engine.....	46
4.16.4	Warm-up after starting-up.....	47
4.16.5	Start-up at low environmental temperatures.....	47
4.16.6	Causes of failed start-ups .....	47
4.16.7	Turn off the vehicle.....	47
<b>5</b>	<b>Vehicle description .....</b>	<b>48</b>
5.1	Engine components description .....	50
5.2	Cab components description .....	51
<b>6</b>	<b>Safety devices .....</b>	<b>52</b>
6.1	List of safety devices .....	52
6.2	Safety stickers.....	53

6.2.1	Warnings for safety stickers.....	53
6.2.2	Meaning of safety stickers .....	53
6.2.3	Safety stickers position on the vehicle .....	57
6.2.4	Safety stickers position in the cab.....	58
<b>7</b>	<b>Components description.....</b>	<b>59</b>
7.1	ROPS - FOPS Cab .....	59
7.1.1	Door opening .....	59
7.1.2	Climbing in/out.....	60
7.1.3	Door electric glass.....	61
7.1.4	Rear glass .....	61
7.1.5	Canopy .....	61
7.1.6	Sunshade.....	62
7.1.7	Cab ventilation.....	62
7.1.8	Air conditioning * .....	63
7.1.9	12V Socket .....	63
7.1.10	Storage compartment.....	64
7.1.11	Cab lighting.....	64
7.1.12	Steering wheel .....	64
7.1.13	Multifunction lever .....	64
7.1.14	Lights turning on.....	66
7.1.15	Emergency Lights .....	68
7.1.16	Seat.....	68
7.1.17	Emergency stop.....	71
7.1.18	Spirit Level .....	71
7.1.19	Emergency exit: Rear glass .....	71
7.1.20	Emergency exit: Front glass * .....	72
7.1.21	Cab front glass protection * .....	72
7.1.22	Warnings in case of vehicle tipping .....	72
7.2	Parking brake.....	73
7.2.1	Pressure gauge .....	73
7.2.2	Braking circuit errors list .....	74
7.2.3	Deactivating the external parking brake manually .....	74
7.3	Matrix EVO instrument panel .....	75
7.3.1	Components .....	75
7.3.2	Initial check .....	77
7.3.3	Home .....	77
7.3.4	Menu.....	78
7.3.5	General alarm icon.....	79
7.3.6	Active errors.....	79
7.3.7	Service.....	80
7.3.8	Clock and clock setting .....	81
7.3.9	Hour meter .....	81
7.3.10	Check page.....	81
7.3.11	Info page .....	82
7.3.12	Anti-tipping device.....	83
7.4	Mechanical steering selector .....	89
7.5	Wheels alignment * .....	90
7.6	Joystick.....	91
7.6.1	Joystick with capacitive deadman sensor .....	91
7.6.2	Joystick with capacitive deadman sensor with FNR function.....	92
7.6.3	Joystick with mechanical deadman button .....	93
7.6.4	Joystick for man basket prearrangement .....	95
7.6.5	Joystick error list .....	96
7.7	Continuous oil function * .....	98
7.7.1	Continuous oil function on Joystick with capacitive deadman .....	98

7.7.2	Continuous oil function on Joystick with mechanical deadman .....	98
7.7.3	Continuous oil function for vehicles with man basket function.....	99
7.8	Rear hydraulic sockets * .....	99
7.9	Hydraulic sockets and electrical contact on boom head * .....	100
7.10	Electrical contact on boom head * .....	101
7.11	Equipment quick coupling * .....	101
7.11.1	Quick coupling with single lock on closed circuit vehicle.....	102
7.11.2	Quick coupling with single lock on open circuit vehicle .....	102
7.11.3	Quick coupling with double cylinder .....	103
7.12	Plate translation unit* .....	103
7.13	Transmission .....	104
7.13.1	Movement selection lever .....	104
7.13.2	Manual gear shift selection .....	105
7.13.3	Service braking pedal .....	105
7.13.4	Inching Pedal.....	106
7.13.5	Accelerator pedal .....	106
7.13.6	Manually disable off the 2-gear hydrostatic transmission .....	107
7.14	Electronic hand throttle.....	107
7.15	Safety rod .....	108
7.16	Wheel wedge.....	108
7.17	Block valves .....	108
7.18	Diagrams notebook .....	109
7.18.1	Load Charts .....	109
7.19	Water heater * .....	112
7.20	Fan reversal * .....	113
7.21	Boom suspension * .....	113
7.22	Remote Control * .....	115
7.22.1	Remote Control: Description .....	115
7.22.2	Remote Control: Use .....	119
7.22.3	Remote Control: Turn off the vehicle and the remote control .....	120
7.22.4	Remote Control: Receiver .....	120
7.22.5	Remote Control: Recharge.....	120
7.22.6	Remote Control: Back-up .....	120
7.22.7	Remote Control: Additional information.....	121
7.23	Outriggers * .....	121
7.23.1	Outriggers warnings .....	121
7.23.2	Outriggers movement.....	121
7.24	Transverse levelling device * .....	122
7.25	Kubota engine Stage IIIA - Tier 3 .....	122
<b>8</b>	<b>Description of agriculture components .....</b>	<b>123</b>
8.1	Agricultural applications .....	123
8.2	Forest and forestry applications .....	123
8.3	Caisson descent ** .....	123
8.4	Trailer descent ** .....	124
8.5	Hydraulic Power Take Off (PTO)** .....	125
8.5.1	Warnings for the Power Take Off PTO use .....	125
8.5.2	Use of hydraulic power take off .....	126
8.5.3	Power Take Off emergency stop .....	127
8.6	Towing a trailer ** .....	127

8.6.1	Warnings for towing a trailer .....	127
8.6.2	Towing a trailer on the road for AGRICULTURAL vehicles .....	128
8.6.3	Towing a trailer on the road for CONSTRUCTION vehicles .....	128
8.7	Trailers braking ** .....	128
8.7.1	Pneumatic braking EEC type.....	129
8.7.2	Pneumatic braking type CUNA NC 144-04 .....	129
8.7.3	Hydraulic braking EEC type .....	129
8.7.4	Hydraulic braking type CUNA NC 344-05.....	130
8.8	Trailers electrical socket ** .....	131
8.9	Hitches for rear trailers ** .....	131
8.10	Height adjustable tow hitch adjustment ** .....	132
8.11	Pick-up hitch ** .....	133
<b>9</b>	<b>Equipment and tools .....</b>	<b>134</b>
9.1	General warnings on equipment use .....	134
9.1.1	Equipment pre-use checks .....	135
9.2	Equipment installation procedure.....	137
9.3	Hydraulic connections .....	139
9.3.1	Warnings for hydraulic connections .....	139
9.3.2	Type of hydraulic quick couplings .....	139
9.3.3	References for correct connection.....	139
9.3.4	Push-Pull couplings connection.....	140
9.3.5	Flat-Face couplings connection.....	142
9.3.6	Closed center distributor: Relieve the pressure through the trailer Descent button * .....	143
9.4	Electrical Connections.....	143
9.4.1	Warnings for electrical connections.....	143
9.4.2	Procedure for connecting electrical connections .....	144
9.5	Equipment removal .....	145
9.5.1	Electrical connections removal .....	146
9.5.2	Push-Pull couplings removal .....	147
9.5.3	Flat-Face couplings removal .....	148
9.6	Forks.....	148
9.6.1	Identification.....	148
9.6.2	Description .....	149
9.6.3	Forks check.....	149
9.6.4	Forks use.....	150
9.6.5	Forks adjustment .....	151
9.6.6	Fork block.....	151
9.6.7	Fork extensions.....	151
9.6.8	Forks safe working procedures .....	152
9.7	Bucket.....	155
9.7.1	Buckets identification.....	155
9.7.2	Buckets description .....	155
9.7.3	Buckets safety stickers.....	155
9.7.4	Bucket use.....	156
9.7.5	Fixed tilt indicator use .....	156
9.7.6	Movable tilt indicator use * .....	157
9.7.7	Buckets Safe Working Procedures .....	157
9.8	Equipment lifting .....	159
9.9	Equipment transport .....	159
<b>10</b>	<b>Emergency procedure .....</b>	<b>160</b>
10.1	Emergency procedures list .....	160
10.2	Vehicle towing .....	161


10.2.1 Vehicle towing with electrical panel on.....	161
10.2.2 Towing the machine with engine in failure .....	162
10.3 Man basket recovery in case of failure for fixed vehicles .....	162
<b>11 Maintenance.....</b>	<b>164</b>
11.1 Maintenance warnings .....	164
11.1.1 Avoid accidents during maintenance .....	164
11.1.2 Personal protective equipment for maintenance.....	166
11.2 Engine hood opening.....	167
11.3 Under chassis protection plate removal.....	167
11.4 Battery.....	168
11.4.1 Low maintenance batteries.....	168
11.4.2 "Zero" maintenance batteries.....	168
11.4.3 Battery: Instructions for recharging.....	169
11.4.4 Battery isolation switch.....	169
11.4.5 Battery: Replacement .....	170
11.4.6 Start up with auxiliary batteries.....	170
11.5 Fuel.....	171
11.5.1 Specifications for recommended fuel .....	171
11.5.2 Cleaning and storing fuel.....	171
11.5.3 Refueling .....	172
11.5.4 Fuel tank: Cleaning .....	172
11.6 Safety stickers: Inspection.....	172
11.7 Lubrication .....	172
11.7.1 Automatic lubrication system .....	173
11.8 Preliminary maintenance operations .....	177
11.8.1 Prepare the vehicle in the "Maintenance position" .....	177
11.9 Engine maintenance.....	178
11.9.1 Belts: Check and adjustment .....	178
11.9.2 Engine oil: Check and filling up.....	178
11.10 Air filter: Cartridges cleaning and replacement.....	178
11.11 Radiator maintenance .....	180
11.11.1 Air recirculation grids and nets.....	180
11.11.2 Radiator: Checking and cleaning.....	180
11.11.3 Radiator: Liquid filling up and replacement.....	181
11.12 Hydraulic system maintenance .....	182
11.12.1 Hydraulic oil: Check and replacement.....	182
11.12.2 Hydraulic oil intake filter: Replacement.....	183
11.12.3 Hydraulic oil return filter .....	183
11.13 2 speed transmission maintenance.....	184
11.13.1 Oil change: Inspection.....	184
11.13.2 Oil change: Check and replacement .....	184
11.14 Brakes maintenance.....	184
11.14.1 Brake: Inspection .....	184
11.14.2 Brakes oil: Check and replacement.....	184
11.15 Wheel maintenance .....	185
11.15.1 Epicycloidal reduction gear oil: Check and replacement .....	185
11.15.2 Wheel nuts tightening .....	185
11.15.3 Tires .....	186
11.16 Lighting .....	187
11.16.1 Headlight .....	188
11.16.2 Tail light .....	189
11.16.3 Work light * .....	189

11.16.4 Led work light*	190
11.17 Window washer fluid tank	190
11.18 Ventilation system maintenance	190
11.18.1 Cab ventilation filter: Cleaning and replacement	190
11.18.2 Air conditioning: Cleaning *	192
11.19 Boom maintenance	192
11.19.1 Sliding blocks maintenance	192
11.19.2 Boom lubrication with grease	193
11.19.3 Boom external chains	193
11.20 Cylinders block valves maintenance	196
11.21 Differential Axles Maintenance	197
11.21.1 Differential axles oil: Check and replacement	197
11.22 Hydraulic fittings tightening torques	198
11.23 Torque specifications - fasteners	199
11.23.1 Torque specifications - fasteners: Fine pitch	199
11.23.2 Torque specifications - fasteners: Coarse pitch	201
<b>12 Technical assistance service</b>	<b>203</b>
12.1 Spare parts supply	203
12.2 Assistance to owner / operator	203
12.3 Technical Assistance Service address	203
<b>13 Problems diagnostics</b>	<b>204</b>
13.1 Engine	204
13.2 Hydraulic transmission system	204
13.3 Brakes	205
13.4 Steering wheel	205
13.5 Telescopic boom	206
<b>14 Error List</b>	<b>207</b>
14.1 Error lists	207
14.2 Basket pre-arrangement error list *	208
<b>15 Cleaning</b>	<b>210</b>
15.1 Machine cleaning	210
15.2 Glasses cleaning	210
15.3 Cleaning the cab	210
15.4 Safety stickers cleaning	210
<b>16 Lifting the vehicle</b>	<b>212</b>
<b>17 Transporting the vehicle on a trailer</b>	<b>213</b>
<b>18 Storing the vehicle</b>	<b>214</b>
18.1 Long period of inactivity	214
18.2 Long period of inactivity	214
18.3 Restarting the vehicle	214
<b>19 Waste disposal</b>	<b>215</b>
19.1 Ecological considerations	215
19.2 Protect the environment	215

<b>20 Demolition</b> .....	<b>216</b>
<b>21 Wiring diagram</b> .....	<b>217</b>
21.1 Components legend .....	217
21.2 Wiring diagram sheets .....	222
21.3 Fuse box .....	235
21.4 Engine compartment fuses .....	236
<b>22 Hydraulic diagram</b> .....	<b>237</b>
22.1 Components legend .....	237
22.2 Runner 35.8 and Samson 45.8 hydraulic diagram .....	238
22.3 Runner 40.13 hydraulic diagram .....	239
22.4 Optional hydraulic diagram .....	240
22.5 Basket prearrangement hydraulic diagram .....	241
<b>23 Technical data</b> .....	<b>242</b>
23.1 Runner 35.7 .....	242
23.1.1 Equipment.....	247
23.2 Runner 40.13.....	249
23.2.1 Equipment.....	255
23.3 Samson 45.8.....	258
23.3.1 Equipment.....	263
23.4 Agri Max 45.8.....	265
23.4.1 Equipment.....	270
23.5 Environmental conditions .....	273
23.6 Electromagnetic Interference.....	273
23.7 Radiations .....	273
23.8 DIECI Hydro Telehandler Fluid ISO46 .....	274
23.9 DIECI Hydro Telehandler Fluid ISO32 .....	275
23.10Declaration of conformity for F-Gas.....	276
23.11Forks technical data .....	277
23.12Buckets technical data .....	278
23.13Tires data.....	280
<b>24 Control and maintenance logs</b> .....	<b>281</b>
24.1 Type of logs.....	281
24.1.1 Control log.....	281
24.1.2 Maintenance Log .....	281
24.2 Instructions for compiling the logs .....	281
24.2.1 Warnings on the control log.....	281
24.2.2 Warnings on the maintenance log .....	281
24.2.3 Logs compiling .....	282
24.2.4 Logs legend.....	282
24.2.5 Intervals legend .....	282
24.3 Periodic checks and recording mode (Italian only) .....	282
24.4 Obligation and how to report to I.N.A.I.L. (National institute for insurance against accidents at work) (Italy only) .....	283
24.5 Control log.....	284
24.6 Maintenance log .....	295

## Definitions

### Attachment holding plate

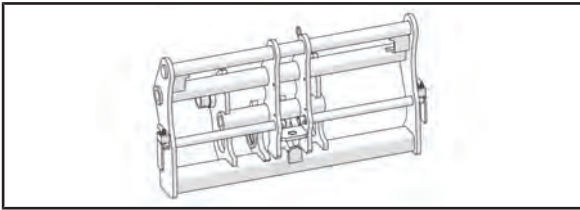

The attachment holding plate is the interface between the vehicle (telehandler) and the interchangeable equipment. The attachment holding plate is placed at the end of the telescopic boom and is used for the quick and safe installation of the interchangeable equipment at the vehicle base.

### Back

The back is the side that is in back of the operator in the control position during the normal forward travel of the vehicle.

### Equipment

The equipment is an interchangeable device that can be installed by the operator on the attachment holding plate of the machine, in order to change the function of the vehicle.

### Front

The front is the side that is in front of the operator in the control position during the normal forward travel of the vehicle.

### Generic maintenance technician

Trained and educated person to perform routine maintenance interventions with basic mechanical, electrical and hydraulic knowledge.

### Left side

The left side is the side that is located to the left of the operator in the control position during the normal forward travel of the vehicle.

### Operator

Instructed person, trained with specific theoretical-practical course concerning use of the vehicle or equipment.

### Right side

The right side is the side that is located to the right of the operator in the control position during the normal forward travel of the vehicle.


### Specialized maintenance technician

Trained and educated person to perform routine and extraordinary maintenance interventions with in-depth and specific mechanical, electrical and hydraulic knowledge, normally sent or authorized by DIECI s.r.l. or the dealer.

### Tool

Category of interchangeable equipment not provided with movable parts such as forks or buckets. No CE marking is required for tools.

### Vehicle

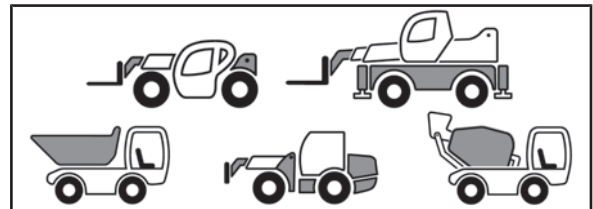

Vehicle means a work vehicle provided with an engine for operation. The term "vehicle" or "basic vehicle" are indistinctly used.



## 2 Introduction

### 2.1 Manual structure

This manual is an integral part of the official documentation of the Vehicle, Equipment and Tool. It must be carefully stored and be available to the managers, the users and personnel in charge of maintenance.

### 2.2 Purpose and content

This manual is an integral part of the official documentation and is aimed at supplying the Operator with all the information required concerning technical aspects, operation and safety during the entire lifespan of the vehicle or equipment.



#### ATTENTION

This manual should be read carefully before the first use or before maintenance.



#### NOTE

If in doubt on the correct understanding of the instructions, contact the Manufacturer for clarifications.

### 2.3 Preservation

The instruction manual must be kept near the equipment available to the Users (in the cab or on the equipment where set up) inside a dedicated envelope, protected from liquids and anything that might make it illegible.

If the manual becomes creased and/or be, even partially, damaged or illegible or in case of loss of the manual, it must be replaced immediately by contacting the ***Dieci Technical Assistance Service***, giving the details of the manual found on the first page of the manual.

### 2.4 Recipients

This manual is addressed to the following persons:

- Operator : instructed person, trained with specific theoretical-practical course concerning use of the vehicle or equipment
- Generic maintenance technician : trained and educated person to perform routine maintenance interventions with basic mechanical, electrical and hydraulic knowledge
- Specialized maintenance technician : trained and educated person to perform routine and extraordinary maintenance interventions with in-depth and specific mechanical, electrical and hydraulic knowledge, normally sent or authorized by ***DIECI s.r.l.*** or the dealer.



#### ATTENTION

The users must not carry out operations reserved for maintenance technicians or qualified technicians. The Manufacturer is not liable for damage deriving from the non-compliance with this prohibition.

#### 2.4.1 Training

This manual gives the users all technical data on the vehicle or on the equipment, the presence and type of control and safety devices and the presence and meaning of the safety stickers and plates.

All vehicle or equipment users must have all necessary information, training and education in relation to the correct use conditions of the means and foreseeable anomalous risks.

The information, training and educating must be implemented upon introduction of new work equipment and for each work equipment available to users.



#### NOTE

Ensure to respect the current laws and Standards in the selling country of the vehicle with regard to information, training and educating of personnel to use the vehicle and its equipment.

The employer is obliged to inform personnel on the following topics related to safety during use:

- Risk of injury

- Vehicle and equipment safety devices set up for operator safety
- Individual safety devices set up for operator safety
- General accident-prevention rules and/or foreseen by international directives
- Accident-prevention rules of Legislation of the Country where the vehicle or the equipment is intended for use

The operator, before starting the work, must know the characteristics of the vehicle and equipment and must have fully read this Use and Maintenance Manual.

## 2.4.2 Training



### ATTENTION

The operator in charge of using the vehicle or equipment must have attended a suitable theoretical-practical course lasting as long as indicated by legal prescriptions in the Country where the vehicle or equipment is used.

Training must at least include the following subjects:

- Use and limits of the functioning and emergency controls of the equipment and of the vehicle on which the equipment is mounted
- Knowledge and awareness of the Use and Maintenance Manual and of the control marks, of the instructions and of the warnings applied on the vehicle
- Knowledge and understanding of the Standard on this equipment, including the educating aimed at recognizing and avoiding potential dangers at work
- Knowledge of the mechanical functioning of the vehicle sufficient for recognizing a real or potential failure
- Hints on constructive particulars of the vehicles and on static and dynamic stability concepts
- Correct use of the vehicle procedures in safe conditions with regard to the work place and the load to be handled/lifted, capacity and guide notions
- Knowledge and use of the PPE to be worn during use of the vehicle and of the equipment
- Knowledge and execution of the routine maintenance to be carried out

Training must be carried out under the supervision of a qualified person in an open area and free from obstacles. At the end of this practice, the trainee must be able to safely use the equipment, and the vehicle on which it is installed.

The operator must also be trained on the responsibility and authority of not using the vehicle or equipment in case of failure or presence of unsafe conditions, and request further information from the Manufacturer or authorized dealer.

## 2.4.3 Qualification

The vehicle and equipment are intended for professional use; their use must therefore be entrusted to qualified figures, in particular:

- Being of adult age
- Be physically and psychically suitable to carry out particularly difficult technical work
- Have been adequately trained on the use and maintenance of the vehicle and equipment
- Have been judged suitable by the employer to carry out the work entrusted to them
- Are able to understand and interpret the manual and the safety requirements
- Know the emergency procedures and their activation
- Have the ability of activating the specific type of vehicle or equipment
- Are familiar with the specific standards of the case
- Have understood the operational procedures defined by the Manufacturer of the vehicle or equipment

## 2.5 Hazard Classification

Carefully read the safety regulations given and follow all recommended precautions in order to avoid potential risks and safeguard your health and safety.

The symbols listed below are inserted to highlight situations which **DIECI S.R.L.** considers particularly important.

If in doubt, contact your agent or dealer.



**DANGER**

It indicates an imminently hazardous situation which, if not avoided, could result in death or serious injury.



**WARNING**

It indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



**ATTENTION**

It indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.



**ATTENTION**

Used without the safety warning symbol it indicates a potentially hazardous situation which, if not avoided, could result in property damage.



**NOTE**

It indicates information or a company policy that relates directly or indirectly to personnel safety or to property protection.



**NOTE**

Indicates an optional accessory or attachment.

**2.6**

**Machine general warnings**

Every vehicle or equipment comes with a copy of its own manual.



**ATTENTION**

Reproduction of all or part of the contents of this manual or of the multimedia attachment, if any, is prohibited.

*Dieci s.r.l.* will protect the ownership rights of these materials.



**ATTENTION**

It is compulsory to read and understand this manual before using the vehicle or various equipment and to carefully follow the indications therein. The instructions for use, maintenance and repair described in this handbook must be followed if the vehicle is to be considered as being operated in accordance with the manufacturer's intended uses.



**NOTE**

*DIECI s.r.l.* reserves the right to carry out possible modifications to the vehicle or equipment for technical or commercial reasons without prior notice.

- A copy of the use and maintenance manual relative to vehicle parts or equipment of the respective suppliers can be supplied. These manuals are written by the respective product suppliers and reproduced accurately and in full by *DIECI s.r.l.* with their specific authorization: they can be enhanced with further specifications drawn up by *DIECI s.r.l.*
- This Use and Maintenance manual is also provided by the Dealer upon delivery of the vehicle, in order to make sure that these instructions are read and correctly understood. Should you have trouble understanding any part of this manual, do not hesitate to contact your nearest Dealer for clarification.
- All documentation provided constitutes an integral and important part of the product and must always be available to users.

- The instructions for use, maintenance and repair described in this handbook must be followed if the vehicle is to be considered as being operated in accordance with the manufacturer's intended uses.
- This manual assumes that the health and safety standards in the work place, in force in the place of use of the vehicle and of the equipment, are complied with.
- This Use and Maintenance Manual in the user's language, must be carefully stored on the vehicle at all times in an accessible and well known place to all users. If the manual becomes creased and/or be, even partially, damaged or illegible or in case of loss of the manual, it must be replaced immediately by contacting the Dieci Technical Assistance Service, giving the details of the manual found in the "Introduction" chapter.
- Improper, incorrect, or irrational use of the vehicle or the accessories with which it is equipped as well as modification to its physical structure or functioning is prohibited. A different use is strictly prohibited and relieves **DIECI s.r.l.** from responsibility for damage caused to persons, things or animals.
- **DIECI s.r.l.** is not liable for damage caused by negligent use of this vehicle or the accessory even if said damage is not a result of intentional improper use. Everything possible has been done during the design and construction phases of vehicles and equipment to make your job as safe as possible. Due caution, however, is indispensable and there is no better rule to prevent accidents.
- To correctly use the components and vehicle controls recalled in the following pages, refer to the specific use and maintenance manual of the vehicle.
- If the vehicle or the equipment must be used in particularly severe conditions (for example: In dusty environments or worksites, on argillaceous or muddy terrain), we advise consulting your nearest dealer for specific instructions. Failure to observe these instructions may result in the vehicle's guarantee being voided.



### WARNING

For your safety and the safety of others, do not change the structure or adjustment of the various components of the vehicle or equipment.



### NOTE

The right and left positions indicated in this manual refer to the view of the operator sitting in the driver's seat (looking forwards).

## 2.7

### Equipment general warnings



### WARNING

**Only equipment CE certified by the relative manufacturer can be used on DIECI vehicles, as well as equipment approved or falling within the technical limits set out by DIECI S.r.l.**

Before commissioning any kind of accessory make sure about its compatibility with the operating vehicle and about the calibration of the safety system related to the accessory used.

**DIECI S.r.l.** liability shall not be involved if equipment use or modifications do not comply with the above mentioned requirements.

## 2.8

### Intended use

The vehicle or equipment described in this document must be used only for the purposes set out in this Use and Maintenance manual.

Adherence to and strict compliance with the terms of use, repair and maintenance, as specified by the Manufacturer, are essential elements covered by the intended use.



### WARNING

The vehicle and equipment must be used **ONLY** by trained and qualified staff who is aware of the information contained in this Manual.

## 2.9

### Contraindications for use

The vehicle or equipment must **NOT** be used:

- For recipients other than those listed in the "Recipients" chapter

- For uses other than those mentioned in this manual
- In environmental conditions other than those listed in chapter "Environmental Conditions"
- In use on the road, use the vehicle only if in possession of a valid driver's license in accordance with the regulations in force in the country of use
- Do not use the movable hydraulic parts of the vehicle to lift persons (except with special man baskets)



**NOTE**

For any other use of the vehicle or equipment, other than those mentioned above, the Manufacturer will reserve the right to revise the terms of the warranty.

- The Manufacturer also reserves the right to make any changes to the vehicle or equipment for any technical and commercial requirement without notice.

**2.12  
Manufacturer**

**DIECI s.r.l.**

Via E. Majorana, 2/4  
 42027 Montecchio Emilia (RE) ITALY  
 Tax Code 01283560686 VAT No. 01682740350  
 Tel. +39 0522 869611 - Fax +39 0522 869744  
 email: info@dieci.com

**2.10  
Declaration of first test**

**Manufacturer's declaration of first test**

**DIECI s.r.l.** declares that each machine and equipment manufactured at its plants, before placing on the market, has been subjected to static and dynamic tests designed to verify proper operation and compliance with EU directives to which it is subject.

At the conclusion of the tests performed, the CE certification of the tested machine will be issued.

Each **DIECI s.r.l.** product with CE marking is provided with the related certificate, which must be kept by the rightful owner according to the requirements of law.

**2.11  
Liability**

- The vehicles and equipment are built according to the EC Directives in force at the time of sale;
- Failure to follow the instructions for use and safety or the use of the vehicle in good working order can not cause accidents criminal offense;
- The manufacturer is not liable for damage caused to persons, animals or property resulting from improper use of the vehicle or equipment or from unauthorized structural changes, applications, and transformations;

**2.13  
Vehicle identification label**

The identification label (fig. 160550-1) shows the main identification data of the vehicle

**NOTE!** Refer to the "Identification" chapter of the vehicle use and maintenance manual to know the position of the label in the cab.



Figure: 160550-1

1	Type	.....
2	Homologation number	.....
3	Identification number	.....
4	Total permissible mass (kg)	.....
5	Permissible load on the front axle (kg)	.....

6	Permissible load on the rear axle (kg)	.....
7	Permissible towable mass (kg)	.....
8	Total unladen mass (kg)	.....
9	Power (kW)	.....
10	Year of construction	.....
11	CE Marking (if installed)	.....

To ensure a prompt and efficient service when ordering parts or when requesting information or technical clarification always specify the identification details.

Therefore we recommend to note the data relating to the accessory in your possession in order to safely and quickly identify them in the future, in case of need.

## 2.14 Units of measurement and abbreviations used

DECIMAL METRIC SYSTEM (IS)		ENGLISH IMPERIAL SYSTEM (IMP)	
NAME	SYMBOL	NAME	SYMBOL
<b>SURFACE</b>			
square meter	m <sup>2</sup>	square foot	ft <sup>2</sup>
<b>ELECTRICITY</b>			
Ampere	A		
Volt	V		
<b>FORCE</b>			
kiloNewton	kN		
Newton	N		
<b>FORCE FOR LENGTH - TORQUE</b>			
Newton-meters	N-m	pounds-inch	lb-in
<b>SURFACE FORCE - PRESSURE</b>			
kilopascal	kPa	pound/square inch	psi
<b>ROTATION FREQUENCY</b>			
Revolutions per minute	rpm		
<b>LENGTH</b>			
kilometer	km	mile	mi
meter	m	foot	ft
centimeter	cm	inch	in
millimeter	mm	inch	in
<b>MASS</b>			
kilogram	kg	pound	lb
ton	t	pound	lb
<b>POWER</b>			
kilowatt	kW	horse power	HP
Watt	W		
<b>TEMPERATURE</b>			
Celsius degrees	°C	Fahrenheit degrees	°F
<b>SPEED</b>			
kilometers per hour	km/h	miles per hour	mph
meters/second	m/s	feet/second	ft/s
<b>VOLUME</b>			
cubic meter	m <sup>3</sup>	cubic yard	yd <sup>3</sup>
		cubic inch	in <sup>3</sup>
liter	l	UK gallon	UK gal
<b>TIME</b>			
hour	h	hour	h
minute	min	minute	min
second	s	second	s
<b>VOLUME PER TIME</b>			

cubic meter per minute	m <sup>3</sup> /min	cubic foot per minute	ft <sup>3</sup> /min
liter per minute	l/min	UK gallon per minute	UK gal <sup>3</sup> /min
<b>SOUND POWER AND ACOUSTIC PRESSURE</b>			
decibel	dB		



## 3

## Warranty

## 3.1

## Exclusions from the guarantee

The guarantee does not include:

- All consumables and those subject to normal wear and tear (e.g. batteries, clutch/brake discs, lubricants, filters, belts, fuel ...);
- All consumables such as oil and liquids;
- Damages and/or breakages deriving from failure to comply with/implement the operations recommended in the periodic maintenance programs illustrated in the "Use and maintenance manual";
- Damage caused by incorrect repair carried out by unauthorized workshops/personnel;
- Damages for lack of production and/or loss of the product;
- Costs for the rental of a replacement vehicle during the vehicle standstill period for repairs under warranty;
- Breakage of all types of glass, windows (doors, rear window, windshield).

## 3.2

## Delivery and installation

The dealer has the obligation to perform a set of operations when the vehicle is delivered to the customer. These include a complete check to ensure that the vehicle can immediately operate, an explanation on the safety regulations and a detailed explanation on the instructions contained in the "Use and maintenance" booklet regarding use of vehicle controls, the vehicle maintenance, starting up and stop operations and the use of all the parts. All people who use the vehicle must participate in the training.

For the period of coverage of your vehicle, check the terms in the guarantee certificate.

The guarantee consists in the restoration of the efficiency of parts that are unusable or inefficient due to factory defects through their replacement with original spare parts or through no-charge repair; the costs of transport/travel of the vehicle from the final customer to the dealer/importer and/or to its authorized workshops are excluded, and vice versa.

The warranty is valid only if the vehicle has been used correctly according to the manufacturer's instructions and has not been tampered with, and is immediately terminated if modifications and/or repairs to the vehicle are carried out by personnel not authorized by DIECI.

The warranty also expires in the following cases:

- Failure to comply with, and carry out, the maintenance schedules and mandatory services prescribed by the manufacturer;
- Changes made without the manufacturer's consent;
- Repairs or maintenance carried out with non-original spare parts;
- Incorrect use of the vehicle;
- Carelessness, accidents, late notification of the defect, improper use of the vehicle, damage caused by prolonged use of the vehicle in conditions of declared failure;
- Improper use of equipment or their incorrect assembly;
- Use of lubricants/fuel with specifications other than those prescribed and recommended by the company DIECI.

DIECI is not liable for damage to the vehicle caused by incorrect use or malfunctions of other equipment connected to the vehicle.

The warranty covers only damages and/or malfunctions of the vehicle without the user being able to claim damages for production losses, for presumed or proven damage to equipment connected to the vehicle itself.

## 3.3

## Warranty: duration

The **DIECI s.r.l.** company guarantees its products for 12 months or 1500 hours from the date of delivery to the customer user or to the Dealer/Distributor.

If the vehicle is stored for long periods by the Dealer/Distributor at the time of sale to the customer, the Service Center will reserve the right to verify guarantee activation.

## 3.4

## Warranty: commencement

The guarantee is valid from the date the vehicle is shipped from the factory (sales to Distributors or Dealers). When delivery is handled by the Distributor

or Dealer, **DIECI s.r.l.** reserves the right to verify that the guarantee start date corresponds to the shipping or delivery date on the transport document of the product being guaranteed, and/or to the invoice date, and can request original copies of these documents.

### 3.5 Warranty: activation

The guarantee is automatically valid from the date the vehicle leaves the factory (sale to Distributors or Dealers).

### 3.6 Warranty procedure

The correct use of the vehicle, associated with regular maintenance, can do much to prevent breakdowns. If, however, malfunctions should occur during the warranty period, the following procedure is recommended:

- Immediately inform the dealer from whom the vehicle was purchased, indicating the model and serial number. The end customer has the obligation to report any flaw or defect regarding the vehicle no later than 8 days from its discovery, under penalty of cancellation of the warranty;
- Give your dealer as much information as possible. So he can know the number of hours of service performed, the type of work you are doing and the symptoms of the problem.

Remember that normal maintenance operations, such as brakes/clutch setting up and adjustment, as well as the supply of materials used for servicing (oil, filters, fuel and antifreeze) are not covered by warranty.

### 3.7 Intervention campaigns for faulty products

The replacement procedures of parts acknowledged to be faulty will be agreed upon by **DIECI s.r.l.** and its distributors/dealers/authorized workshops.

These intervention campaigns can be followed directly by **DIECI s.r.l.** suppliers, who are responsible for supplying the components to be replaced (interventions authorized by **DIECI s.r.l.**).

The above interventions will be preceded by written communication from **DIECI s.r.l.** to its purchasers.

Only **DIECI s.r.l.** can decide the intervention method (repair, replacement or modification).

## 3.8 Warranty: intervention request

### 3.8.1 Guarantee: claim

The claim of the faulty part must be made by the Customer, Dealer, Distributor or Authorized workshop and must be sent directly to **DIECI s.r.l.** Customer Service within 8 days from when it is noted.

The claim must include a clear description of the defect and precise references to the vehicle and equipment (type, model, and serial number). This information can be found on the places indicated in the USE AND MAINTENANCE MANUAL.

### 3.8.2 Obligation of vehicle downtime

If there is a risk that the defect may jeopardize safety and accident prevention or may cause further damage, the vehicle or the equipment must not be used until it has been repaired and tested.

Any change made on the vehicle or equipment involves a reassessment of conformity with the Machinery Directive 2006/42/EC. This procedure also applies in the case of repairs with non-original parts.

In the event of any dispute, exclusive jurisdiction will be held by the Court of Reggio Emilia - ITALY.

## 3.9 Non-activation, failure to grant, termination

### 3.9.1 Warranty: failure to grant

The guarantee is not granted:

- If the defect is not reported as described and within the established time limit.

- If the customer does not comply with **DIECI s.r.l.** request to return the faulty parts replaced during the repairs.
- If the customer has not complied with the obligation to stop using the vehicle after making a claim, limited to damages caused by noncompliance.

### 3.9.2

#### Guarantee: termination

The guarantee is terminated:

- If the buyer does not fulfill contractual payment obligations.
- If damage has been caused by carelessness, negligence, or by use of the vehicle for purposes not in compliance with specifications provided in the use and maintenance manual (incorrect manoeuvres, overloading, use of incorrect fuel, poor maintenance, disregard for warning indicator instruments etc.)
- If the defect is a result of applications, equipment, modifications or repairs not authorized by **DIECI s.r.l.** or carried out using poor quality parts. (For this reason, we recommend always using original spare parts).



#### NOTE

Refer to the "MAINTENANCE" paragraph for information regarding recommended routine maintenance.

### 3.10

#### Final terms

In none of the cases regarding non-activation of the guarantee, it not being granted or being terminated, the buyer cannot request the cancellation of the contract, or compensation, or an extension of the guarantee.

Any guarantee conditions other than those listed above must be agreed upon in writing and signed by both parties.

Unless agreed upon in writing by both parties; **Dieci s.r.l.** does not pay compensation for any type of claim caused by vehicle downtime, such as:

- Replaced or rented vehicles or equipment
- Labor
- Loss of profit

## 4 Safety regulations

### 4.1 General warnings

The instructions for use, maintenance and repair described in this handbook must be followed if the vehicle is to be considered as being operated in accordance with the manufacturer's intended uses.



#### DANGER

**THE VEHICLES AND EQUIPMENT MAY NOT BE MODIFIED WITHOUT PERMISSION OF THE MANUFACTURER.**

For your safety and the safety of others, do not change the structure or adjustment of the various components of the vehicle or equipment. The same applies to the deactivation or modification of the safety devices present. Any changes made to the vehicle or equipment, holds DIECI s.r.l. harmless from any liability arising from damage or injury.

Every vehicle or equipment must be used, assisted or repaired only by persons that have received training in advance on the vehicle and on its safety regulations, in addition to being authorized to use the vehicle or equipment itself.



#### NOTE

**The user must always observe the general safety regulations as well as those for accident prevention, such as traffic rules if the vehicle is used on public roads (according to the regulations in force in the country of use).**

**DO NOT USE THE VEHICLE OR THE ACCESSORIES IF YOU ARE UNDER THE EFFECT OF ALCOHOL, DRUGS OR IF YOU HAVE TAKEN MEDICINES THAT MAY MAKE YOU DROWSY OR MAY ALTER YOUR REFLEX AND REACTION TIME.**

DIECI s.r.l. is not liable for damage caused by negligent use of this vehicle or the equipment even if said damage is not a result of intentional improper use. Everything possible has been done during the design and construction phases of vehicles and accessories to make your job as safe

as possible. Due caution, however, is indispensable and there is no better rule to prevent accidents.



#### DANGER

**THE VEHICLES OR EQUIPMENT IN QUESTION ARE NOT SET-UP FOR USE IN ENVIRONMENTS OR SITES EXPOSED TO THE PRESENCE OF EXPLOSIVE GASES, THUS USE IN THESE PLACES IS PROHIBITED.**

To operate in these environments, the Manufacturer must be contacted so that the necessary modifications can be made to the vehicle and/or equipment.



#### DANGER

All functions and procedures concerning the operation and mounting of the vehicle or its equipment that are not described in this manual are strictly FORBIDDEN.



#### WARNING

Read all of the safety stickers on the vehicle and on the equipment and observe all regulations printed on these stickers before starting up, running or refueling the vehicle or before carrying out maintenance work. Immediately replace damaged, lost or illegible stickers. Clean them when they are covered by mud, concrete or debris.

- Do not use the vehicle or equipment without having first read and understood all parts of this manual, and without having attended an adequate training course.
- Do not use the vehicle or equipment when hands or shoes are wet or dirty with grease or greasy substances.
- Verify that all safety devices function before using the vehicle or the equipment. The operator must always maintain control of the vehicle and equipment state and operation.
- Use the audible warning device or other signals to alert people in the area before starting up the vehicle.

- Inspect control instruments immediately after start up, while the engine is hot and at regular intervals during use, in order to promptly recognize and resolve any malfunctions.
- Do not use the vehicle or equipment if a danger label or a maintenance in progress label is placed inside the cab.
- Do not carry passengers on the vehicle or in the driver's cab or on any other part of the vehicle (including man basket).
- It is prohibited to use the mobile hydraulic parts of the vehicle the lift people except when using the man baskets with relative personal protective equipment for the operator inside.
- Regardless of the user's experience, become familiar with the position and function of all controls and instruments in a work area free from obstacles and persons, before operating the vehicle or the equipment.
- Carry out all the described safety checks before resuming operations.
- While the vehicle is running, always keep light signals on. These serve to warn people that the vehicle is about to move.
- Always keep the safety distance adequate for the type of work and persons or objects in the work area. Always look in the travel direction and maintain good road visibility.
- Adjust movement speed based on the load carried and the type of ground; remain at low speeds to reduce the risk of the vehicle tipping over or losing the load.
- Do not drive with the brake pedal pressed.
- Do not use the vehicle force of impact to carry out tasks. These vehicles are not designed for said use; therefore, such use may cause vehicle overturning, damage, the breakage of components and attachments, or serious personal injury for the user.
- Always operate with the engine hood closed.
- Do not operate with the vehicle protective parts removed.
- When working in a congested area, designate one person to signal and coordinate the work zone.
- Make sure that everyone follows the directions given by the person in charge of signaling.
- Make sure to use signals that conform with the provisions in force in the country of use of the vehicle.
- For additional information with regard to the presence of a person in charge of signaling, consult the "Signals to more vehicles" chapter.
- When working alongside excavations or on the edge of the road or soft ground, keep at a safe distance as the vehicle may overturn.
  - Designate a person on the ground to be in charge of signaling.
  - Remember that after strong rains, the use of explosives or an earthquake, the ground is more fragile.
- When working on the upper part or inside buildings or other structures, verify their capacity and stability before starting operations. The risk of collapse exists and can cause serious injuries or damage.
- Working on a slope may be dangerous. The conditions of the terrain may vary according to climatic conditions (e.g. rain, snow, ice). Therefore, pay careful attention to the conditions of the terrain on which the vehicle is being used; the use of low speeds is recommended.
- Drive slowly on grass, leaves or wet steel slabs. Even when operating on slight slopes the vehicle may slip or lose balance with risk of tipping.
- Tipping conditions of the vehicle can vary depending on the features of the ground, environmental conditions and the type of work. Complying with all the safety instructions contained in this manual reduces risks for the vehicle and the operator in most operating conditions provided herein.
- It is forbidden to use the tractor if there is any risk of tipping that is not covered herein, as this manual contains an incomplete list.

## 4.2 Safety indications



### ATTENTION

Carefully observe and follow all safety signals on the vehicle and on the equipment and read all safety messages in this manual.

- The safety messages in this chapter illustrate the basic safety procedures of the vehicles and equipment.
- The safety signals must be installed, maintained and replaced when necessary.
- If a safety signal or this manual is damaged or missing, order a replacement from the **DIECI s.r.l.** dealer in the same way in which spare parts

are ordered (be sure to communicate the model and serial number of the vehicle when placing the order).

- Learn how to correctly and safely operate the vehicle and the equipment and their relative controls.
- Allow only trained, qualified and authorized personnel to operate the vehicle and installed equipment.
- Keep the vehicle, equipment and accessories in appropriate working conditions.
- Unauthorized modifications to the vehicle, to the equipment or accessories can jeopardize their operation and/or safety and influence their lifespan.
- In case of doubt, contact the manager before proceeding to operate or carry out maintenance work on the vehicle or on the equipment.

## 4.3 Personal protective equipment

In some cases, when working in particularly uncomfortable environments, adequate clothing or equipment must be worn.

It is mandatory for the operator, before starting to work, to learn from the safety manager or the site manager which are the possible risks of the work and which accident prevention clothes he must wear.



### ATTENTION

**Always use PPE that is appropriate for the type of work to be performed.**

The Personal Protective Equipment used by the operators can have different characteristics, depending on the type of construction site and risks present in the work place.



### ATTENTION

**Keep the personal protective equipment in good conditions.**

Accident prevention clothes must always be intact and in good condition. Damaged clothing cannot ensure adequate protection. Do not wear damaged clothing; always replace damaged or torn clothing before operating the vehicle.

## 4.3.1 Protective clothing

Icon	Reference	Description
	ISO7010: M004	Wear protective goggles
	ISO7010: M008	Wear safety shoes
	ISO7010: M009	Wear protective gloves
	ISO7010: M015	Wear high visibility clothing
	ISO7010: M013	Wear a protective mask (for work in dusty environments)
	ISO7010: M017	Use a protective breathing apparatus (for work with dangerous substances)
	ISO7010: M018	Wear a safety harness



## DANGER


### Danger of crushing

Pay attention to moving parts to avoid danger of crushing or dragging of the lower and upper limbs. Avoid wearing jewelry or pendants that might be trapped in moving parts. Long hair must be tied back to avoid it being caught in moving parts.

Do not wear loose clothing, chains, belts or other accessories that may be caught in the control levers or in other parts of the vehicle or equipment.

## 4.3.2 Protect yourself against noise

Prolonged exposure to loud noise can damage your hearing or may cause hearing loss.


Icon	Reference	Description
	ISO7010: M003	Wear hearing protection



**ATTENTION**

Always wear anti-noise earmuffs or earplugs to protect yourself from excessive and irritating noise.

**4.3.3**  
**Protections against objects falling from height**

Icon	Reference	Description
	ISO7010: M014	Wear a helmet




**DANGER**



**Danger of falling objects**

Use of a safety helmet is required if there is a risk of falling objects.

**4.3.4**  
**Protect yourself from flying fragments**

Icon	Reference	Description
	ISO7010: M013	Wear a face shield



**WARNING**

During operation in certain conditions, particles of material may be ejected. In such conditions, it is a good idea to wear protective goggles and clear the area of those people not in possession of such goggles.

**4.4**

**Preparing for accidents**

- Always be prepared in the event of a fire or an accident.
- Keep a fire extinguisher and first aid kit at hand. (Not supplied by the manufacturer, "optional accessories").
- Carry out periodic inspections to ensure that the first aid kit contains all necessary items; replenish content if necessary.
- To properly use the extinguisher, carefully read the instructions located on the extinguisher.
- Carry out periodic inspections and maintenance (six monthly) to ensure that the extinguisher is ready for use at any given moment.
- Create priority procedures to deal with fires or accidents.
- Keep emergency telephone numbers (doctors, ambulance, hospital and fire brigade) clearly visible and near the telephone.
- Adequately trained and educated personnel must be present for managing emergencies with adequate theoretical-practical course carried out on site.

Below are some First Aid procedures that can be activated in case of accident following use of the vehicle or equipment object of this use and maintenance manual.

These procedures may be useful in an emergency for the users or other operators present near-by, during use and various life phases of the vehicle or of the equipment (transport, installation, use, maintenance, adjustment, etc.).

**4.4.1**

**First Aider Tasks**

1. Activate first aid (emergency call).
2. Evaluate the victim and, if necessary, support vital functions.
3. Stop an external hemorrhage.
4. Protect wounds and burns.

5. Protect the victim against further damages.
6. Do not perform unnecessary or damaging actions, such as giving beverages, moving the victim, reducing dislocations and/or fractures, etc.

#### 4.4.2 Emergency call

Good first aid intervention also depends on the timely arrival of rescuers (emergency medical support) to the place of the emergency.

This is why the first aider in charge of calling the emergency must precisely indicate:

- Address of where the accident or illness took place.
- Number of injured or ill persons.
- The possible cause of the event.
- The state of the vital functions of the injured party, specifying whether the same is conscious or not and breathes normally or not.

At the end of the call it is recommended to:

- Give own details, indicating a telephone number where to be contacted.
- Wait for rescuers in an easily accessible and visible location.

#### 4.4.3 Traumas

##### Distortions, dislocations and fractures:

Immobilize the joints in the position after the trauma, using bandages or splints, supporting the analgesic position of the injured party without attempting dangerous manoeuvres. Apply the cold (with bag of ice or other systems). In case of exposed fracture, cover the wound using a sterile gauze pad, after having pressed at a distance on the specific points the relative hemorrhage.

##### Contusions, crushing:

In case of contusions and/or crushing of ends of the upper and lower limbs (fingers, hand, feet, etc.) it is advised to immediately place the limb underneath running water (cold) and apply ice. Also check for wounds and/or cuts in the hit area and, if necessary, disinfect with the due precautions.

#### 4.4.4 Hemorrhages

It is necessary to press the fingers on the hemorrhage point with sterile gauze pad, lifting the limb and eventually compress upstream of the hemorrhage with tourniquet. Wear protective gloves in case of contact with body fluids.

##### Treating superficial wounds:

Carefully expose and clean the wound, disinfect it with physiological solution, medicate it covering it with sterile gauze pads. Bandage avoiding excessive tightening to allow good circulation.

##### Treating deep wounds:

It is a priority to protect yourself against the risk of infection using gloves and splash shield; pad the hemorrhage by direct pressure or using other pressure points until it stops or the arrival of the ambulance. Call the medical emergency number, informing them that you are padding an arterial hemorrhage.

Treat the wound only after the hemorrhage is under control.



#### ATTENTION

Do not use cotton wool, methylated spirit, antibiotic powder to disinfect the wound.

#### 4.5 Preventing fires and accidents

##### 4.5.1 Risks of fires



#### DANGER



#### Danger of fire



It is forbidden to smoke or use naked flames during use and maintenance operation of the vehicle and equipment.

**Do not operate the vehicle or equipment without the following safety conditions:**



#### DANGER

Fuel, oil and lubricant leaks can trigger fires and cause serious injuries.



- Ensure that there are no flammable liquids leaking.
- To avoid oil or diesel leaks, make sure that there are no loose or missing clamps, no twisted tubes and no tubes that rub up against each other.
- Do not bend any tubes/pipes under pressure.
- Never install damaged tubes.
- Do not weld tubes or pipes containing inflammable liquids.
- Do not use a torch head to cut tubes or pipes containing inflammable liquids.



**DANGER**

Short circuits may cause fires.

- Ensure that there are no short circuits.
- Clean and interrupt all electrical connections.
- Check before each work shift that there are no loose, twisted, hardened or damaged wires.



**DANGER**

Fuel, oil, grease, waste, deposits or accumulated dust or other components can cause a fire.

- Remove inflammable materials.
- Prevent fires by inspecting and cleaning the vehicle at every shift, by immediately removing inflammable components.
- Check the ignition switch: in the event of fire, failure to switch off the engine will obstruct the work of the Fire Brigade.
- Do not use naphtha, petrol or inflammable liquids to clean parts of the vehicle. Only use non-flammable detergents.



**DANGER**

Safely handle dangerous liquids

- Handle fuel with care, it is easily inflammable. If fuel is ignited, there may be an explosion and/or a fire.
- Do not refuel the vehicle while smoking and in presence of naked flames or sparks.
- Always stop the engine before refueling the vehicle.
- Fill up the tank outside.
- All fuels, most lubricants and some anti-freezes are inflammable.
- Preserve the flammable fluids away from fire hazards.
- Do not burn or drill pressurized containers.

- Do not keep cloths soaked with lubricant; they may cause fires and spontaneous combustions.

4.5.2

Risks of inhaling gas



**DANGER**

**Exhaust engine gases are toxic and can cause damages to your health.**

If necessary to work in closed ambients, ensure it is sufficiently ventilated and equip the vehicle with special purifiers.

4.5.3

Risks of batteries exploding



**DANGER**

**The gas of the batteries may explode.**

- Keep any sparks, open flames or lit cigarettes away from the upper part of the battery.
- Never place a metal object between the terminals to check the battery charge. Use a voltmeter or a densimeter.
- Do not create sparks in the battery connection during recharging phases or starting the engine with auxiliary battery.
- Do not charge the batteries if they are extremely cold, extremely hot or damages as they might explode.
- The ideal temperature for the recharging of the batteries is 16 °C (60,8 °F).
- The electrolyte in the batteries is an extremely corrosive acid.
- Should the battery explode, the electrolyte may be sprayed in the eyes with the possibility of causing blindness.
- Ensure to be wearing protective goggles when carrying out maintenance on the batteries.
- Do not overturn or tilt the battery as acid could come out.

#### 4.5.4 Residual risks



### DANGER

**Damage may be caused by entanglement in moving parts.**

Keep away from moving parts.



### DANGER

**Avoid burns.**

Stay away from hot parts.

#### Jets of hot fluids:

After operation, the engine cooling liquid is hot and under pressure. Contact with hot water or steam may cause serious burns.

Avoid possible injury caused by hot water jets. Do not remove the radiator cap until the engine has cooled down. To open it, unscrew the cap as far as possible. Before removing the cap, release all of the pressure.

#### Hot surfaces and fluids:

The engine, reduction gears and hydraulic system oil heat up during vehicle use. The engine, rigid and flexible piping and other components heat up.

Wait until all parts cool down before beginning maintenance or repair work.



### DANGER

**Caution with pressurized fluids.**

Fluids such as fuel or hydraulic oil under pressure can penetrate the skin and eyes causing serious injuries.

Avoid these dangers while repairing or carrying out maintenance on the vehicle, discharging the pressures (using the hydraulic levers of the distributors) before disconnecting or repairing pipes and hydraulic parts.

Before restarting the engine, ensure that all connections have been correctly tightened.

Use a piece of cardboard to check for any leaks; make sure your hands and body are adequately protected against pressurized fluids. Wear a face mask or accident-prevention goggles to protect your eyes.

Should there be an accident, seek medical attention immediately. Any fluids that penetrate the skin must be removed surgically within a few hours to avoid infections.



### DANGER

**Electrocution**

All maintenance and/or adjustment interventions on powered parts must be carried out only and exclusively by qualified and adequately trained personnel.



### DANGER

**Risk of slipping.**

During on-site operations, the areas around the equipment may have debris and liquid (oil, water, etc.) that might make the floor slippery. Pay the utmost attention.



### DANGER

**Risk of falling, tripping.**

Pay the utmost attention when climbing in and out from the vehicle.



### DANGER

**Crushing of hands and feet.**

The presence of moving parts during functioning can cause risks for the ground operators. During vehicle movements, carefully check no unauthorized person is within the required moving area.

#### 4.5.5

#### Contact with dangerous substances

- Wear the necessary protective clothing.
- Refer to the safety data sheet of the product used and take appropriate precautionary measures when using the product.
- Avoid contact with skin and eyes
  - In case of contact with eyes: rinse them thoroughly with plenty of water for a few minutes keeping the eyelids open and seek medical attention.
  - Should any fluid come into contact with skin, wash the area carefully, remove contaminated clothing, and when skin is dry, apply moisturizing cream. Consult a doctor if necessary.
  - In the event of inhalation, move away from the contaminated area and go to a well-ventilated location. Consult a doctor in the event of respiratory problems.

- If swallowed: immediately contact a doctor, showing the label or container. Do not induce vomiting to avoid the risk of inhalation via respiratory passageways.

## 4.6 Storing dangerous liquids



### DANGER

#### Flammable material danger.

All fuels, most lubricants and some anti-freezes are inflammable.

Handle fuel with care, it is easily inflammable. If fuel is ignited, there may be an explosion and/or a fire.



### WARNING

All fluids must be kept out of the reach of children and incompetent persons.



### WARNING

Different types of substances must not be stored or mixed together.



### DANGER

#### All chemicals are generally very harmful to health.

Avoid contact with skin and eyes by wearing appropriate protective clothing; do not swallow.



### DANGER



#### It is forbidden to smoke and have open flames



It is forbidden to smoke or to use naked flames near fuels.

#### Comply with the following precautions to store dangerous liquids:

- All inflammable fluids must be stored in special containers, and the content of the containers must be clearly indicated. Containers must be tightly sealed.
- Store inflammable fluids in well-ventilated locations, far away from heat sources, sparks and open flames.

- Keep containers closed and covered. Other substances (e.g. foodstuffs) must not be present in this location.
- Always fill up the tank outside.
- Be careful of fumes and steam which may be formed by chemical products. Avoid inhalation.
- Do not breathe in fuel fumes.
- Ensure that these chemical products do not spill or flow into the ground, sewers or puddles. If necessary, inform the competent local authorities.
- In the event of a fire, use carbon dioxide, dry chemical powder, foam, sprayed water, sand, earth. Use jets of water to cool down surfaces exposed to the fire.
- Verify that there are no leaks of inflammable liquid (fuel, oil, grease, general lubrication leaks) in the storage containers.



### NOTE

Refer to the safety data sheet of the product for additional precautions and warnings that are to be adopted.

## 4.7 Warnings for safe working

### 4.7.1 Ensuring the vehicle is clean

- Clean the windows, lights and rear-view mirrors (if installed).
- Clean dirt and waste away from the engine, joints and radiator
- Make sure the cab steps and the handle are clean and dry
- Clean all safety stickers and manoeuvring instructions. Replace any stickers that are illegible or missing



### WARNING

If the vehicle or equipment is not in perfect working order its operation is strictly prohibited.



### NOTE

For the cleaning procedures, refer to the "CLEANING" chapter.

### 4.7.2

#### Checking for damage

- Make sure that there are no damaged or missing parts.
- Make sure that all articulated pins are properly fastened.
- Make sure that there are no signs of possible cracks or flaws or other damage to the windows (if installed).
- Make sure that there are no oil, fuel or cooling liquid leaks underneath the vehicle.
- Make sure that the wheel bolts are properly tightened.



#### WARNING

If the vehicle or equipment is not in perfect working order its operation is strictly prohibited.

### 4.7.3

#### Start working with the vehicle

Regardless of their level of driving experience, operators must familiarize themselves with the position and function of all controls and instruments before operating the vehicle.

- Before using the vehicle, check location of personnel.
- While the vehicle is running, always keep light signals on. These serves to warn people that the vehicle is about to move.
- When working in a congested area, have another person present for signaling.
- When manoeuvring the vehicle, pay attention to bulky vehicle parts. There are parts that jut out from the cab.
- Never use controls for purposes different than those for which they were created for; e.g. to climb on or off from the vehicle or hang clothing, etc...
- Only use the vehicle from the driver's position.
- The vehicle may move suddenly if started up without following the correct procedure, thus, creating the risk of personal injury.
- Start up the engine from the driver's seat only.
- Never start the engine by causing a short circuit between the terminals of the starter.
- Before starting the engine, make sure all control levers are in a neutral position.

### 4.7.4

#### Passengers transportation

Only the operator must be on board the vehicle, passengers are not admitted.

Passengers may obstruct the operator's view, causing an unsafe operation of the vehicle.



#### WARNING

Carrying people on or lifting people up with the vehicle is strictly prohibited unless the vehicle is equipped with an elevation work platform and has a special certificate of conformity regarding the transport of people.



#### WARNING

It is strictly forbidden to transport persons inside the basket while the vehicle is moving even in the presence of elevation work platform and certificate of conformity. It is compulsory to use the basket only with the parking brake engaged and the outriggers lowered (if present).

### 4.7.5

#### Electrical system protection

A burnt fuse must be replaced with another fuse of the same type, amperage and class.

Other types of interventions are not allowed, even if temporary.

Do not connect or remove terminals, fuses, or connectors when the vehicle is switched on or electrically powered.

Any intervention on the electric plant must take place with the vehicle not powered electrically. Restore the power supply only after the intervention has been concluded. Remount the lids and protections.

- Use the battery isolator to cut off power to the vehicle.
- Cut off power by means of the battery cut-off even before replacing the vehicle battery.
- In the event that a connector is damaged or is no longer inserted in its housing, replace it immediately in order to avoid short circuits or sparks.

Damaged, pinched or burnt cables must be replaced immediately even if damage is only to the sheathing or outer insulation.

- Never carry out or interrupt any connection on the load circuit, including connections on the battery, with the engine running.



 
 
 

- Never ground (earth) short circuit any charging component.
- Do not use an auxiliary battery with nominal voltage exceeding 12 volt.
- Make sure the polarity is correct when putting in the battery or when using an auxiliary battery when starting the vehicle with cables. Follow the use and maintenance instructions of the manual when starting up the vehicle with cables.


 




### 4.7.6 Signals to multiple vehicles

When working requiring more vehicles, give signals normally known to all employed personnel. Designate one person to signal and coordinate the work zone.

**Before operating make sure that:**

- The user and signaler are aware of the hand signals to be able to interact between them
- That everyone follows the directions given by the person in charge of signaling
- The signaler must be easily identified by the user of the vehicle
- The signaler must wear or hold one or more adequate recognition elements, like: jacket, helmet, sleeves, bracelets, signal paddles
- The recognition elements must be bright colored, preferably one, and reserved exclusively for the signaler.

  Move ment	Meaning	Description
	Start - Attention - Order taking	The two arms are open horizontally, the palm of the hands forward
	Stop - Interruption - End of motion	The right arm is stretched upwards, with palm of right hand forward
	Danger - Stop - Emergency stop	Both arms stretched upwards
	End of operations	The two hands are joint at height of chest
	Lift	The right arm, stretched upwards, with palm of right hand forward, makes a circle
	Lower	The right arm, stretched downwards, with palm of the hand towards the body, makes a circle

Move ment	Meaning	Description
	Vertical distance	The hands, one on top of the other, indicate the distance
	Horizontal distance	The hands, one next to the other, indicate the distance
	Forward	Both arms are folded, the palms of the hands backwards and the forearms make slow movements towards the body
	Move back	Both arms are folded, the palms of the hands forward and the forearms make slow movements away from the body
	To the right compared to operator	The right arm, stretched horizontally, with palm of right hand downwards, slowly makes small movements towards the direction where to move
	To the left compared to operator	The left arm, stretched horizontally, with palm of left hand downwards, slowly makes small movements towards the direction where to move
-	Quick motion	The conventional signals used to indicate movements are quickly made
-	Slow motion	The conventional signals used to indicate movements are made very slowly

### 4.7.7 Working with the danger of falling masses and objects

When working in areas where there is a risk of falling, bouncing or interference from objects capable of hitting the operator or entering the cab:

- Always close the windows.
- Always ensure that other operators near-by are at a safe distance and cannot be hit by bouncing or falling objects.

- Never carry out work operations under an overhang; this could give way and fall onto the vehicle.
- When working from the cab:
  - Mount suitable safety panels to protect the operator.
  - Always close the windows.
  - Pay careful attention to crumbling walls, landslides, falling material or objects from the installed equipment, that may hit the cab, the protective structure or windows, causing damages to the vehicle and to the operator.
  - Do not excessively weigh down or fill the installed equipment or transport loads that may come out or fall on the ground.
- When working from the passenger basket:
  - Install optionals on the basket such as the roof to provide additional protection to the operators.



**WARNING**

**Danger of falling objects**

Use of a safety helmet is required if there is a risk of falling objects.

4.7.8

**Working near electrical lines**

Before working near overhead electrical lines, check that the safety distance is sufficient, in compliance with the current Standard in the country of use. In any case, never work near electrical lines at distances shorter than those in the table below or at the minimum distances indicated by the Standards in force in the country of use of the vehicle and of the equipment.

Damp ground may increase the risk of electrocution.

Operating or parking the vehicle too close to electrical cables leads to increased risk of being struck by lightning or being seriously injured.

Designate someone on the ground to signal when too close to power lines.

Do not allow anyone near the vehicle when working in the vicinity of power lines. To prepare for any possible emergency situation, wear rubber shoes and gloves, cover the seat with a rubber piece of fabric and take care not to touch the chassis with any unprotected body parts.



**DANGER**

**High voltage danger**

Should the vehicle or the equipment installed on it collide with an electrical cable, the user, to avoid electrocution, must remain inside the driver's cab until certain that the electrical power supply has been properly disconnected.



**DANGER**

**High voltage danger**

If operating close to overhead electrical lines, check the safety distance in the table below, reported in the Italian Legislative Decree 81/08 Enclosure IX. The table is valid if the vehicle is used on Italian territory. However, refer to the Standards in force in the country of use of the vehicle and equipment.

Un (kV)	Distance
≤ 1	3 m (9.84 ft)
1 < Un ≤ 30	3.5 m (11.48 ft)
30 < Un ≤ 132	5 m (16.40 ft)
> 132	7 m (22.96 ft)

4.7.9

**Working under the snow**

Snow can hide obstacles and objects, and cover holes, dug-out areas and ditches, therefore, proceed with caution.



**WARNING**

Operation of the vehicle if the quantity of snow does not allow for clear distinction of obstacles and possible dangers along the path, is strictly prohibited.

- Take care when clearing snow and do not venture off the main road; that which is hidden at the sides of the road may cause vehicle overturning or damage to various components.
- Surfaces covered by snow or ice are extremely dangerous. Operate with caution, reducing vehicle speed as much as possible and engaging levers slowly.
- Operate with caution. If the vehicle should sink into the snow, it may overturn or remain buried. Do not venture from the road and avoid remaining entrapped or buried under heaps of snow.

- Extra care should be taken, when working on icy terrain. The ice will melt as the temperature rises and the ground will become slippery.
- Use caution in the presence of electrical cables, ditches, or freshly excavated or worked ground.
- Make sure not to cause risk to others in the area when backing up the vehicle.
- Always check the space around the vehicle before carrying out any manoeuvres



**NOTE**

If working the vehicle at temperatures below -10°C (14°F), empty and refill the tank using lubricants, fuel or cooling liquids suitable for such temperatures.



**NOTE**

There are accessories that can be used to facilitate working with ice or snow, contact your dealer or agent.

4.7.10

Working with scarce lighting



**ATTENTION**

**The standard illumination of the vehicle is not suitable in working conditions with poor visibility or for use at night.**

The vehicle can only be used with sufficient lighting in the work area.



**NOTE**

There are several ways to improve visibility in conditions of poor lighting. Contact your local **DIECI s.r.l.** dealer.

4.7.11

Working in closed areas or dangerous atmospheres

**It is FORBIDDEN to use the machine in:**

- Suitably ventilated closed spaces, that are nevertheless not compatible for the use of equipment with running endothermic engines.

- Spaces with dangerous or explosive atmospheres.
- Protected environments such as refineries.



**ATTENTION**

**The vehicle must be appropriately modified and certified to work in environments with an explosive atmosphere.**

The vehicle can only be used in a tunnel if it has been declared suitable for these environments.

4.7.12

Reduce vibrations

Consider the following recommendations to reduce the vibration exposure of the operator:

- Always use the appropriate equipment for the job to be carried out.
- The driver's seat must be properly adjusted to suit the operator needs. Inspect and if required repair the suspensions and the regulation mechanisms of the seat.
- Make sure that the vehicle is kept efficient, perform vehicle maintenance as prescribed in this manual.
- Steer, accelerate, brake, shift gears, move the tool in a non-abrupt way.
- During transfers adjust the speed of the vehicle to minimize the level of vibrations. Reduce speed to avoid the risk of jolting. Transport the vehicle in the event of significant distance between job sites.
- Maintain the workplace in good condition, remove stones and obstacles, fill depressions or holes etc.
- To avoid back pain problems, use the vehicle only in good health.
- Take breaks so as to reduce the time of sitting in the same posture.
- Do not exit the cab or go out of the vehicle with a jerk.
- Avoid to lift and move loads repeatedly.
- Further recommendations to reduce vibration when working with passenger basket:
  - Use the controls smoothly.
  - Do not make any sudden movements on the passenger basket.
  - The vibrations generated by the vehicle are not a source of risk when using the basket.

## 4.8 Working in windy conditions

Wind speed variation can cause a number of problems including the loss of vehicle stability, load oscillation, and a decrease in visibility due to dust, leaves, etc.

Adverse factors to vehicle use are:

- Location of the work site, the aerodynamic effect of buildings, trees and other structures influence wind speed.
- The height of the extended boom: the higher the boom is raised vertically, the higher wind speed becomes.
- Load bulk area: the more space the load occupies, the more the wind force is felt.

### Strong wind

**DIECI** telehandlers can be used up to a wind speed of 45 Km/h, equal to 12.5 m/s (No.6 on the Beaufort scale) measured on the ground.

At 10°C temperature, wind with a speed of 32 Km/h it seems that exposed parts of the body have a temperature of 0°C. The higher you climb the faster the wind speed and the more the sensation of pressure drop increases.



### WARNING

#### Strong wind danger

In the presence of strong winds (no.5 Beaufort scale) never lift loads with surfaces exceeding 1 m<sup>2</sup>.

Below you can find the graph of the Beaufort scale for an indication of the wind speed with which you are working and when to suspend operations, if wind speed should exceed determined values.

Beaufort Wind Scale			
No.	Definition	Indicators	Speed (m/s)
0	Calm	Smoke rises vertically	0 - 0,2
1	Light air	Smoke drift wind direction	0.3 - 1,5
2	Light breeze	Wind felt on exposed skin. Leaves rustle; vanes begin to move	1.6 - 3
3	Gentle breeze	Leaves and small twigs constantly moving; light flags extended	3 - 5
4	Moderate breeze	Dust and loose paper raised. Small branches begin to move	5 - 8

Beaufort Wind Scale			
No.	Definition	Indicators	Speed (m/s)
5	Fresh breeze	Small trees in leaf begin to sway; glassy water, small waves form	8 - 11
6	Strong breeze	Large branches in motion. Whistling heard in electrical cables. Umbrella use becomes difficult	11 - 14
7	Strong wind	Whole trees in motion. Effort needed to walk against the wind	14 - 17
8	Fresh gale	Some twigs broken from trees. Cars veer on road	17 - 21
9	Strong gale	Slight damage to buildings (falling chimneys and tiles)	21 - 24

## 4.9 Assessing the consistency of the work ground

The ground on which the vehicle can be positioned must be able to support the vehicle and its maximum bearing capacity.



### DANGER

#### Danger of tipping

The sinking of the machine base support may cause the vehicle tilting.



### ATTENTION

**Contact a qualified technician to assess the consistency of the ground according to the regulations in the country of use of the vehicle.**

Request in any case the advice of a qualified technician to know whether in the workplace, there are hidden cavities (pipes, wells, old tanks, basements, manure, etc...).



### NOTE

Refer to the "*Technical data*" chapter in the manual of the vehicle, to know the maximum load that each wheel or outrigger (if any) can apply on the ground while using the vehicle.



## 4.10 Moving safely



### NOTE

The following operations are standard for any type of installed equipment; however, refer to any warnings present in the equipment manual.



### WARNING

In the event of scarce visibility, have a person operate on the ground for signaling.



### WARNING

Do not lift or lower the loads when the vehicle is in motion.

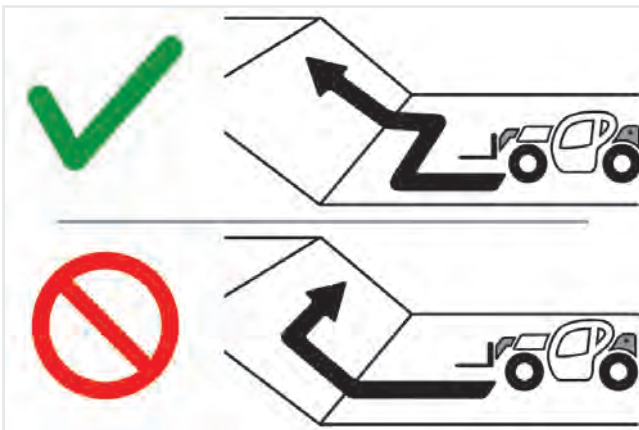


Figure: 150533-1

Operating on sloped terrain can cause overturning or sliding. Move forward and brake gradually and take all necessary cautions.

Always move in a straight line to go up or down a slope. Moving transversally or along the slope is extremely dangerous (fig. 150533-1).

Always use the parking brake when setting down or lifting a load on a slope.



### WARNING

**Check the vehicle is leveled before using the boom on sloped ground.**

Do not stop and leave the vehicle parked on a slope exceeding 15%, even with the parking brake engaged.



150534-1

150534-2

150534-3

150534-4

- In the event of having to travel uphill while transporting a load, operate always maintaining the load towards the top of the uphill (fig. 150534-1).
- When having to drive uphill without a load, operate with the vehicle facing downhill (fig. 150534-2).
- In the event of having to travel downhill while transporting a load, operate always maintaining the load towards the top of the uphill (fig. 150534-3).
- When having to drive downhill without a load, operate with the vehicle facing downhill (fig. 150534-4).

## 4.11 General warnings for moving the load

Always adhere to safety regulations; always transport balanced, properly arranged load to prevent the risk of tipping.



### ATTENTION

**It is strictly prohibited to work without the respective load charts for the equipment and the vehicle.**

When using this vehicle, carefully follow the load charts of the vehicle with the equipment mounted at that moment.

Do not attempt to carry out operations which exceed the capacity of the assembled equipment or of the vehicle.

Do not modify the structure and vehicle stability in any way by trying to add counterweights, whichever artifact is used.

Always ensure the pallet, the boxes and other supports for the load are in good conditions and adequate to the load to be lifted; the sudden collapse of a rack of material is often caused by a faulty pallet.

**Do not move the load with boom lifted or extended.**

- Handle the vehicle with the boom raised only in exceptional circumstances. In these circumstances, operate with due prudence, reduce speed as much as possible and brake delicately. Make sure that visibility is always sufficient and ask an operator on the ground to guide you for the operations.
- Reduce the speed as much as possible and brake gently during handling operations.



## WARNING

Do not handle loads while the vehicle is moving.

Avoid passing over unstable objects. Remove dangerous, unstable objects instead of passing over or around them. Also avoid holes and ditches that might make the load jolt.

Before turning, slow down as much as possible, and monitor the load.

Do not change direction abruptly or at high speed.

Remember that hydraulic steering is very sensitive to steering wheel movements; steer gradually and avoid sudden movements.

Slow down before turning.

Pay attention to the side space, in particular if transporting wide loads. If possible, keep to the center of the passage to avoid equipment or personnel from obstructing your path.



## WARNING

Handle loads with care, at low speed and without sudden or jolting movements, above all if they are carried at great heights.

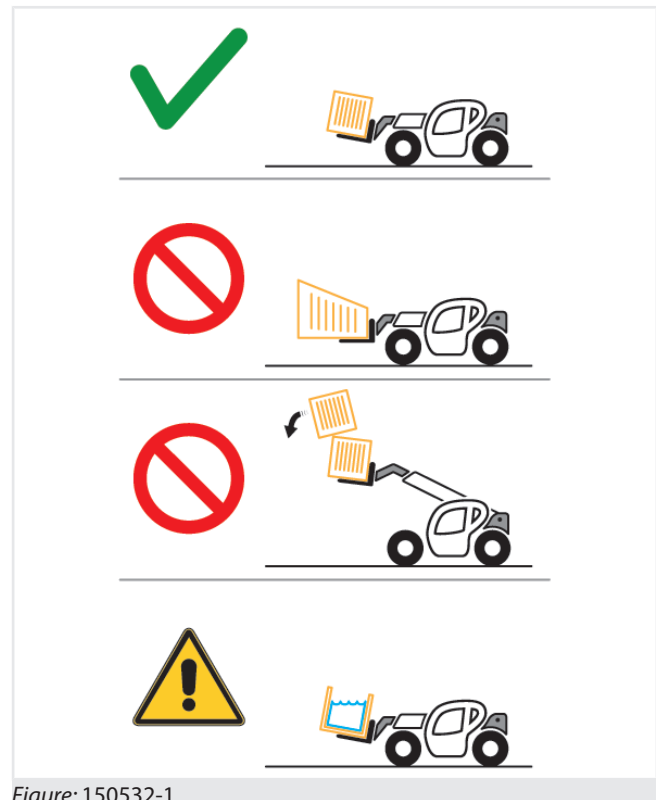


Figure: 150532-1

- Always ensure good visibility in the work area, including direct vision and visibility using wing mirrors in order to check for the presence of people, animals, obstacles, holes and changes in slope etc.
- Decrease the working speed of the vehicle in case of rain, fog, snow or in any case where visibility is reduced.
- If visibility on the right side is limited during boom operation, before lifting the load, ensure that the work area is clear and make note of the position of any possible obstacles and irregularities in the terrain.
- Always make sure there is good visibility (clean windows, clean mirrors, clean lights that work properly, etc.).
- Maintain control of the vehicle and its speed in all circumstances. The speed of the loaded vehicle must never exceed 10.0 Km/h (6.21 mph). If the load exceeds the maximum allowed load by 50%, vehicle speed must be reduced to 5.0 Km/h (3.11 mph).
- Do not drive in reverse for long distances.
- Brake gradually; avoid braking abruptly.
- Always maintain the safe distance from other vehicles in order to have sufficient space to brake in every condition.



**ATTENTION**

Before lifting loads, operators must be familiar with the weight of the load and its center of gravity.

- Transport the load as close as possible to the ground. Keep the load low, at a height from the ground of 300 mm. Never move with the load lifted more than necessary.
- The load diagrams are valid for centers of gravity of standard loads. For particular loads, contact your dealer.
- Pay the utmost attention during transporting of loads with variable center of gravity (e.g. Liquids). Operate with caution in order to limit such variations and to prevent the risk of vehicle overturning.
- Always ensure the moved load is correctly balanced and cannot fall on the ground. The loss of the load or part of it can entail a danger of damage to things and persons
- Pay the utmost attention to objects that may fall. Ensure there are no unstable objects on the upper part of the load.



**WARNING**

**Never lift a load when the vehicle is on a sloped surface. When on a sloped surface, pay attention to the conditions of the ground. When working with the vehicle on a sloped surface with the load high, a jolt or a hole is sufficient to make the vehicle overturn.**

Do not move the boom if the vehicle is located on terrain with a slope greater than 2° (3.5%).

**4.12**

**Use of cables, ropes and slings**



**DANGER**

**It is strictly forbidden to lift or move load fastening ropes or chains only to the vehicle's attachment holding plate, to forks or to any other equipment not designed for this purpose.**

Various equipment set-up for lifting, provided with suitable hooks for the use of cables, chains and straps are available. For further information contact your Dieci dealer.

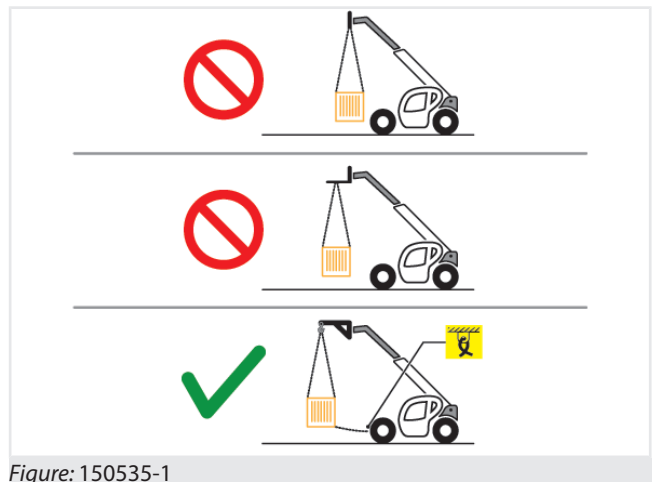


Figure: 150535-1

To keep the suspended load from swaying while being handled, the load can be fixed to the anchoring eyebolts of the vehicle while being transported.

**4.13**

**Road travel**

**4.13.1**

**Road travel warnings**



**ATTENTION**

Before starting the road travel make sure to observe the relevant laws and regulations in the country of use.

The road travel requirements are shown on the Vehicle Registration Document.

Low beam lights must be on even during the day and in streets where there is no obligation to use visual and lighting signaling devices.

Ensure correct operation and cleaning of headlights, direction lights and windscreen wipers.



## WARNING

### Check the correct position of the rear view mirrors.

The objects seen through the rear view mirror are closer than they appear.

When driving on the road and/or on a slope it is necessary to be very careful to the engine rpm. A high number of rpm can lead to mechanical failures. Keep under control the motor rpm and speed.

Pay particular attention to loading docks, trenches, scaffolding and land recently excavated or filled

- Make sure that your vehicle is in compliance with local legislation in reference to the presence of the license plate when traveling on the road both at day and at night.



## WARNING

Road transfer with equipment assembled to the fork holding plate is not allowed except those accepted by the legal authority of the country where the vehicle operates.



## WARNING

**It is not allowed to travel on public roads with loaded vehicle.**

Comply with the maximum permissible mass written on the vehicle registration document.

### 4.13.2

## Road travel instructions

- Level the vehicle so that the wheel axles are aligned with the chassis (if present).
- Ensure that all outriggers have been perfectly retracted and raised (if present).
- Close the telescopic arm (boom) completely.
- Lower the telescopic boom completely and then raise it slightly to about 20-30 cm from the ground.
- Check the correct operation of the lights before moving on roads. Check that the rotating light for slow vehicle signaling is installed and running; keep the rotating light in operation both at day and at night.
- Perform the wheels alignment, so that they are perfectly aligned with the vehicle chassis.
- **It is mandatory** to arrange the steering as reported in the Vehicle Registration Document and lock the selector lever with the dedicated device.
- Make sure that the amount of fuel is sufficient.
- Assemble all the accessories required for road circulation depending on the country in which the vehicle is operating.
- Install an overhanging load signal panel on the boom head before the entering onto the road.
- Always evaluate the road to be traveled, taking account of suspended structures (e.g. bridges, underpasses, etc.) that could be damaged by the vehicle.
- In some countries it is mandatory to place wedges under the tires when the vehicle is stopped.

### 4.14

## Momentary stop



## ATTENTION

If it is necessary to leave the driving position, follow the steps in the "Parking the vehicle" paragraph.



## WARNING

Never move away from the vehicle, leaving the engine running or the ignition key on the vehicle.



## WARNING

Do not stop and leave the vehicle parked on a slope exceeding 15%, even with the parking brake engaged.

- Gradually release the accelerator pedal.
- Stop the vehicle on even ground.
- Engage the parking brake
- Bring the movement selection lever to "N".
- During the running-in of the vehicle (50 h), do not keep the diesel engine at minimum revs for too long.

## 4.15 Parking the vehicle

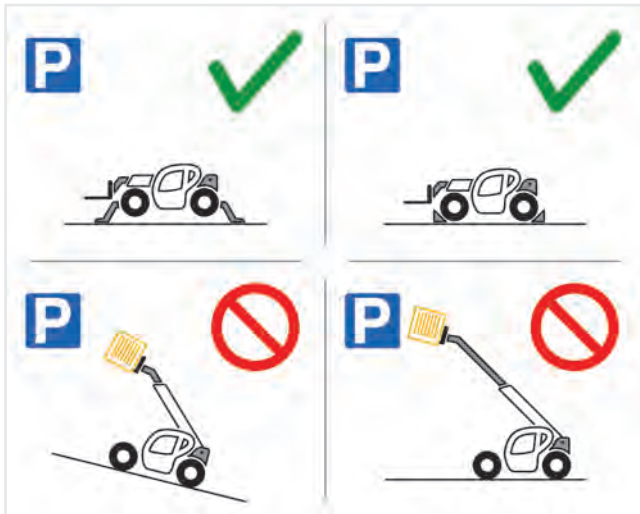


Figure: 150536-1

Never leave in any case the vehicle parked with a raised load.

- Always park on flat, firm and level ground, where there is no risk of falling rocks, landslides or flooding.
- Lower outriggers to the ground (if present).
- Retract the boom completely and lower it to the ground.
- Engage the parking brake
- Bring the movement selection lever to "N".
- Run the engine at idle speed for some seconds before turning it off, in order to allow the engine cooling.
- Turn the ignition key to the engine stop position.
- Remove the key from the ignition switch.
- Lock the hydraulic controls with the special devices (if present).
- Close the windows and lock them with the handles.
- Close the cab door by key.
- Place wedges under the wheels.
- Make sure that the vehicle is parked so as not to impede its movement and at least 5 meters away from the railroad tracks.



### WARNING

Do not stop and leave the vehicle parked on a slope exceeding 15%, even with the parking brake engaged.

## 4.16 Starting and stopping the vehicle

### 4.16.1 General warnings regarding starting up the vehicle



#### WARNING

Do not use the vehicle without having first read and understood all parts of this manual, and without having attended an adequate training course.

- Before starting the engine, make sure all control levers are in a neutral position, the parking brake is engaged, the engine hood is closed and that there is nobody in the area surrounding the machine.
- The machine can only be started up or maneuvered when the operator is seated in the driver's seat, with the seat belt fastened and adjusted.
- The machine may move suddenly if started up without following the correct procedure, thus, creating the risk of damage.
- Never start the engine by causing a short circuit between the terminals of the starter.
- Never start-up the engine by pushing or pulling the vehicle. This could seriously harm people or cause serious damage to the vehicle.
- Be careful when using auxiliary batteries as the gas contained in these may explode, causing serious damage. Follow the instructions provided in the "Emergency procedures" chapter, "Start-up using auxiliary batteries" paragraph to start the engine using auxiliary batteries. An incorrect procedure can cause serious damage to the electrical/electronic system, the vehicle could move suddenly, the battery could explode and damage could be caused to objects and/or people.
- Do not start the engine or touch the levers of the machine if a danger sticker or a maintenance in progress sign is placed inside the cab.

## 4.16.2 Inspections prior to starting-up

### 4.16.2.1 Inspecting the machine

Carefully inspect your machine every day or before every shift.

Carry out the following inspections and operating checks:

- Parking brake efficiency
- Intact condition of the tires
- Type of tire suitable for the type of work ground
- Engine oil level (check and top-up, if necessary)
- Hydraulic oil level (check and top-up, if necessary)
- Air filter clogging indicator (check and clean, if necessary)
- Tire inflation and pressure (check)
- Fuel level (check)
- Signaling and warning devices (check)
- Steering efficiency
- Service brake efficiency
- Tightness of all nuts and bolts
- Lighting
- Direction indicators
- Emergency Lights
- Switches
- Indicator lights
- Windscreen wipers
- Reverse movement alarm
- Position and condition of rear view mirrors



### DANGER

**Immediately stop using the machine in case of malfunctions or if it does not comply with safety standards.**

Contact an authorized *Dieci s.r.l.* workshop if the machine shows malfunctions. Refer to the "Maintenance" chapter for information regarding routine maintenance.



### NOTE

A thorough inspection is required if the machine is not used for a prolonged period of time. A detailed description of the operations is provided in the "Machine storage" chapter

### 4.16.2.2 Inspecting the work area

- Examine the work area when working at the edge of an excavation or on soft ground as the machine could overturn.
- Examine the conformation and condition of the terrain of the work area before beginning to operate.
- Keep the machine well away from the edge of the excavation and the side of the road.
- When working on a slope or near the roadside, have another person present for signaling.
- Pay utmost attention when working on icy ground. The ice will melt as the temperature rises and the ground will become slippery.
- Check for any overhead power lines or underground piping.
- Do not work in places at risk of landslides or falling rocks.
- Take due precautions to prevent any unauthorized persons from entering the working area.
- When moving through or operating in shallow water or soft ground, verify the shape and the conditions of the land, the water depth and flow rate before beginning the operation.

## 4.16.3 Starting-up the engine

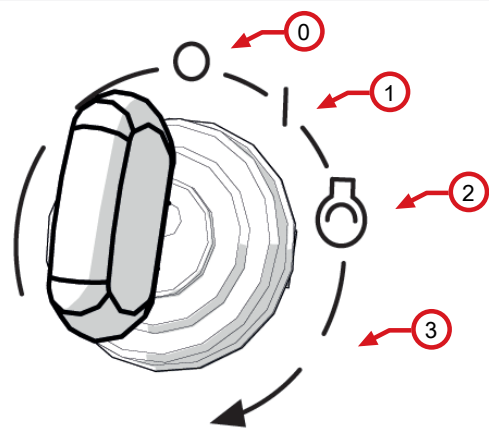


Figure: 150538-1

**Proceed as follows to start-up the engine of the vehicle:**

1. Press the parking brake switch.
2. Bring the movement selection lever to neutral.
3. Remain seated in the driver's seat.
4. Turn the ignition key (fig. 150538-1) clockwise to position "1". With the key in this position:

- The control panel and instrument panel will be powered
- A buzzer will sound, indicating that the key has been inserted. This buzzer also serves to warn any persons in the surrounding area that the vehicle has been started up.
- A check-up of the instrumentation will be performed with all the indicators lighting up for about 5 seconds. Only the following lights must remain switched on at the end of the check-up:
  - Engine oil pressure warning light
  - Battery charge indicator light
  - General alarm warning light
  - Intermittent buzzer
  - Other indicators of activated functions (e.g.: Parking brake, gears engaged, etc.)

**WARNING! If other indicators remain on signaling malfunctions or if one of the previous conditions does not occur, do NOT start-up the engine and refer to the "Maintenance" chapter or contact the Dieci service center.**

- Turn the ignition key (fig. 150538-1) to position "3" to start-up the engine. Release the starter within 5 seconds.
- Release the key once the engine has started. The indicators related to the engine oil pressure and battery charge must go off once the engine is started up.
- If the engine does not start within 5 seconds, try again at regular 15 second intervals to prevent overloading the starter motor.

#### 4.16.4 Warm-up after starting-up

During the first few minutes of use, keep the speed slow in order to warm up the engine and hydraulic oil.



#### **WARNING**

**Serious damage can be caused to the engine and the hydraulic system if the engine reaches high rpm before the operating oil temperature and pressure levels are reached.**

Let the engine run at 1100 - 1300 rpm for about 5 minutes so as to bring the engine oil to the operating temperature, particularly, with outdoor temperatures below 0 °C.

#### 4.16.5 Start-up at low environmental temperatures

Consider the following warnings before starting-up at low environmental temperatures and with a cold engine:

- In order to prevent discharging the battery, do not prolong each attempt to start-up by more than 15 seconds; however, if the engine does not seem to be starting-up, extend the time to a maximum of 30 seconds.
- Wait at least one minute before trying to start-up again.
- It is recommended to not exceed six start-up attempts so as not to discharge the battery excessively.



#### **NOTE**

It is recommended to use anti-freeze diesel at environmental temperatures lower than 0°C, so as to make sure the engine is optimally supplied, without reducing performance.

#### 4.16.6 Causes of failed start-ups

Check the following if the engine does not start-up:

- The parking brake switch is pressed.
- The gear selection lever is in the neutral position.
- No emergency buttons are pressed.

After checking all the previous conditions, remove the cause of failure to start and try the starting procedure again.



#### **NOTE**

If the problem persists, contact a *Dieci* after-sales center.

#### 4.16.7 Turn off the vehicle

It is recommended to perform the following before switching the engine off:

1. Bring all the control levers to the idle position.
2. Bring the engine to low speed for a few seconds.
3. Turn the ignition key to position "0".

# 5


## Vehicle description




### NOTE

**The images used to describe components and controls refer to a complete vehicle with all accessories; these may vary depending on the attachments and on the configuration chosen.**


Refer to the "Definitions" manual to understand references such as: Right side, Left side, Front and Back used in the manual.

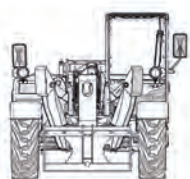


150641-1: Front view

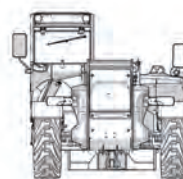

150641-2: Rear view

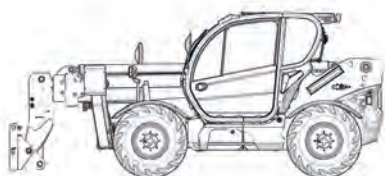

150641-3: Left view

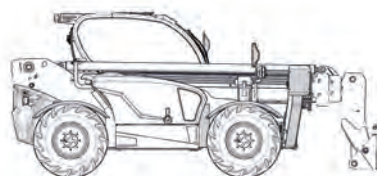

150641-4: Right view





## 5.1 Engine components description

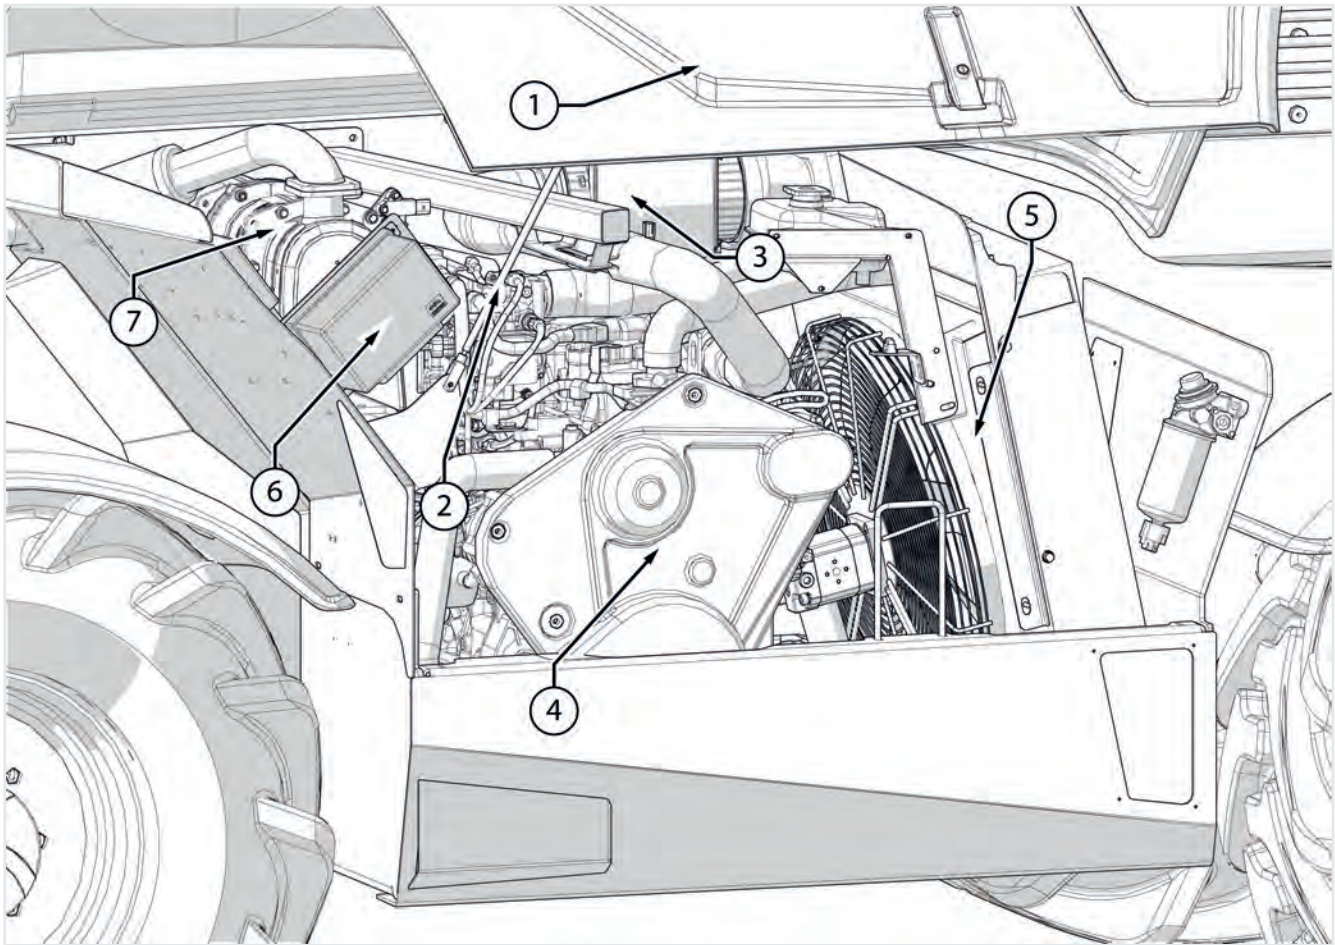


Figure: 150645-01: Engine view

- |               |                       |
|---------------|-----------------------|
| 1 Engine hood | 2 Safety rod          |
| 3 Air filter  | 4 Engine              |
| 5 Radiator    | 6 Engine control unit |
| 7 Muffler     |                       |

## 5.2 Cab components description

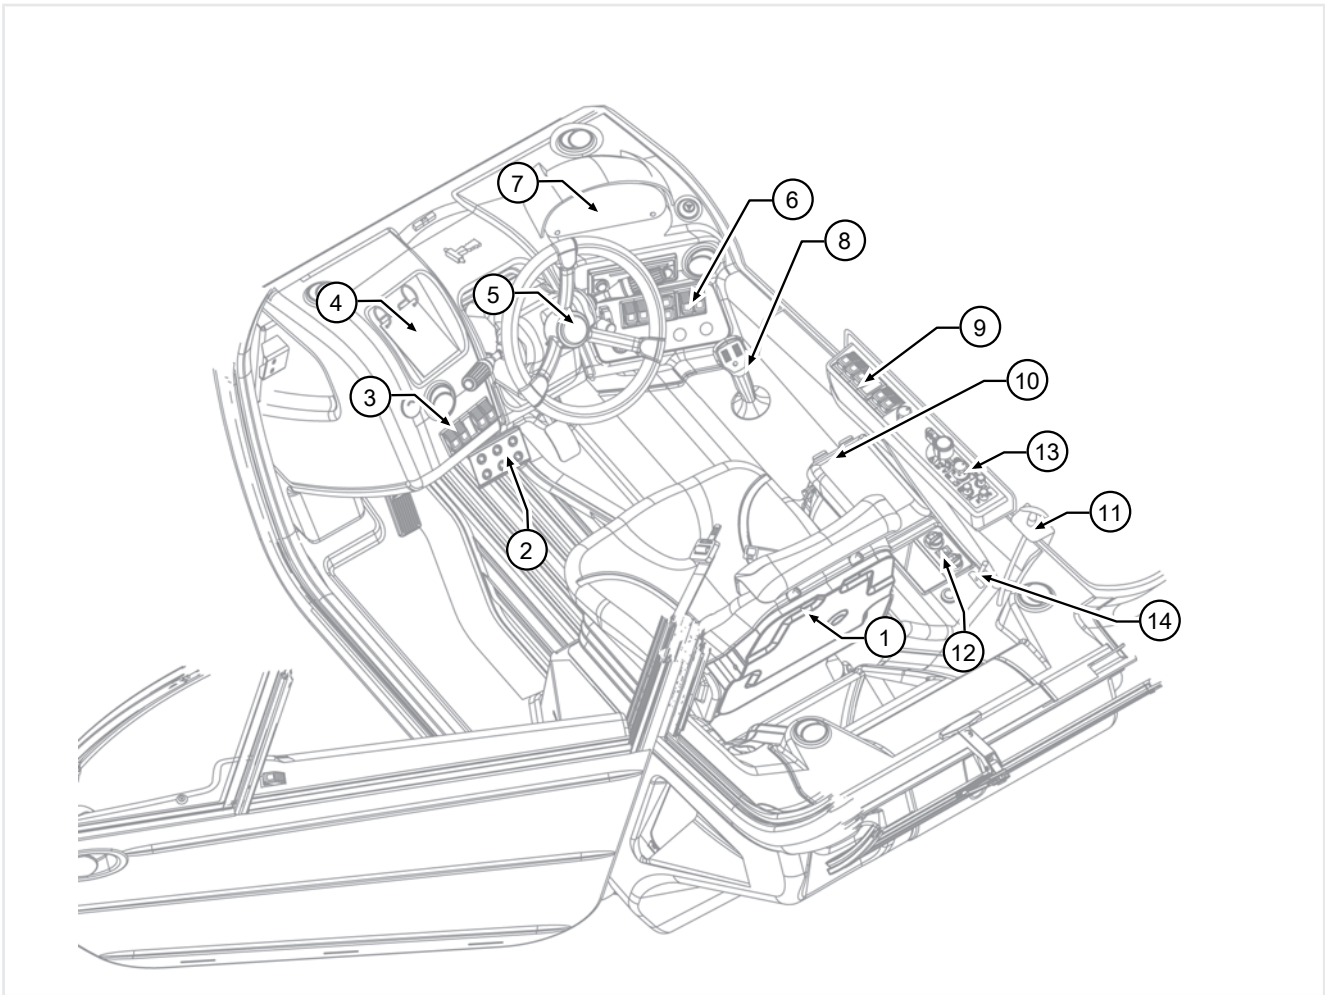


Figure: 150646-01: Cab view

1 Seat	2 Pedals
3 Left instrument panel	4 Diagrams notebook
5 Steering wheel	6 Right instrument panel
7 Instrument panel	8 Joystick
9 Right lateral instrument panel	10 Steering mode selection lever
11 Hitch pick-up hook command (optional)	12 Cab ventilation system
13 Not used	14 Not used

# 6

## Safety devices

### 6.1

#### List of safety devices

Safety devices	Additional information	
Safety devices	7.1	ROPS - FOPS Cab
	7.1.15	Emergency Lights
	7.1.16.1	Deadman seat sensor
	7.1.16.3	Seat belts
	7.1.17	Emergency stop
	7.1.19	Emergency exit: Rear glass
	7.1.20	Emergency exit: Front glass *
	7.15	Safety rod
	7.16	Wheel wedge
	7.17	Block valves
	7.18.1	Load Charts

## 6.2 Safety stickers

### 6.2.1 Warnings for safety stickers

Some safety stickers have been applied on the vehicle and equipment in the positions shown below. Their purpose is to provide a guide for your own and others safety. Before starting to work, check the content and location of the stickers indicated on this manual. Review the safety stickers with all operators who will use the vehicle and equipment.



#### ATTENTION

**Make sure to have fully understood their correct location and their contents.**

To ensure proper interpretation verify that they are in the correct position and that they are always kept clean.



#### DANGER

**Clean them when they are covered by mud, concrete or debris.**

It is absolutely forbidden to clean the stickers using solvents or gasoline; the stickers may become discolored.

See the summary table in the "Maintenance" chapter for the for safety stickers maintenance and control deadlines.

Replace the safety stickers in case of deterioration, damage or loss, as these must always be read and interpreted correctly.



#### WARNING

Do not under any circumstances remove the safety stickers.





















#### NOTE

The purchase order of replacement safety stickers must be made in the same way in which any spare part is ordered (be sure to communicate the model and serial number of the vehicle or equipment when placing the order).

### 6.2.2 Meaning of safety stickers

SIGNAL	CODE	DESCRIPTION
	AXA1163	Warning, keep the boom fully retracted when digging with buckets.
	DOCAD0000053	Danger, stop the engine and remove the ignition key during maintenance operations
	DOCAD0000054	Danger, comply with the safety distances from electric lines

SIGNAL	CODE	DESCRIPTION
	AXA1427	Indicates where to refuel
	AXA1431	Indicates the lifting points
	AXA1432	Indicates the points at which to anchor the vehicle for transport or towing
	DOCAD0000090	Position of the hitch for vehicle towing.
	AXA1433	Indicates where to check the hydraulic oil level
	AXA1434	Indicates where refueling hydraulic oil
	AXA1435	Danger, moving mechanical parts, do not remove the safety guards and wait that the parts have stopped before carrying out any maintenance
	AXA1436	Indicates the position of the safety rod for lifting cylinders
	AXA1438	Indicates vehicle parts that can not be walked on
	AXA1439	Danger moving mechanical parts
	AXA1440	Danger of hot steam under pressure escaping
	AXA1441	Danger of hot surface
	AXA1492	Indicates the position of the brakes oil tank and the type of oil to use
	AXA1493	Warning, keep a safe distance
	AXA1498	Indicates the position and instructions for using the battery isolation switch
	DOCAD0000063	Battery isolation switch button instructions
	AXA1501	Indicates lubrication points

SIGNAL	CODE	DESCRIPTION
	AXA1506	Compulsory use of seat belts
	AXA1514	Emergency exit
	AXA1515	Remove the cotter pin
	AXA1773	Warning, do not reach high speeds or over-revving the engine in downhill
	AXA2089	Caution, hydraulic circuit with pressure accumulators
	AXA2103	Warning, keep a safe distance
	AXA2430	Do not stand under the forks or transport people with the forks
	AXA2609	Instructions for joystick with capacitive deadman switch and continuous oil function
	AXA2610	Instructions for joystick with capacitive deadman switch and continuous oil function and FNR function
	AXA2613	Instructions for joystick with standard mechanical deadman button
	AXA2614	Instructions for joystick with mechanical deadman button and continuous oil function
	AXA2751	Instructions for joystick with mechanical deadman button and continuous oil function and FNR function
	AXA1803	Instructions for joystick for standard man basket
	AXA2633	Instructions for joystick for man basket with continuous oil function
	AXA2708	Type of oil used in the hydraulic system
	AXA2798	Type of oil used in the hydraulic system ISO 32
	AXA1892	Indicates maximum use of the vehicle in case of wind

SIGNAL	CODE	DESCRIPTION
	AXA1497 ***	Hand throttle use indication
	AXA1437	Engine hood opening lever indication
	AXA1446	Horizontal boom indication
	AXA2748	Battery maintenance danger
	AXA2042	Steering mode for construction vehicle
	AXA2652 **	Steering mode for tractor vehicle
	DOCAD0000049	AdBlue filling cap position
	AXA1444 *	Danger of feet crushing


\* Stickers present in case of outriggers

\*\*\* Stickers for mechanical engines

SIGNAL	CODE	DESCRIPTION
	AXA1428	Indicates the tire pressure
	AXA1807	Indicates the maximum guaranteed acoustic power
	AXA2206	Outriggers maximum load on the ground (R.max daN=) 8000 (Only Icarus 40.14)
	AXA2207	Outriggers maximum load on the ground (R.max daN=) 8500 (Only Icarus 40.17)
	AXA2224	Tires maximum load on the ground (R.max daN=) 8000 (Only Icarus 40.14)
	AXA2225	Tires maximum load on the ground (R.max daN=) 8500 (Only Icarus 40.17)



## 6.2.3 Safety stickers position on the vehicle

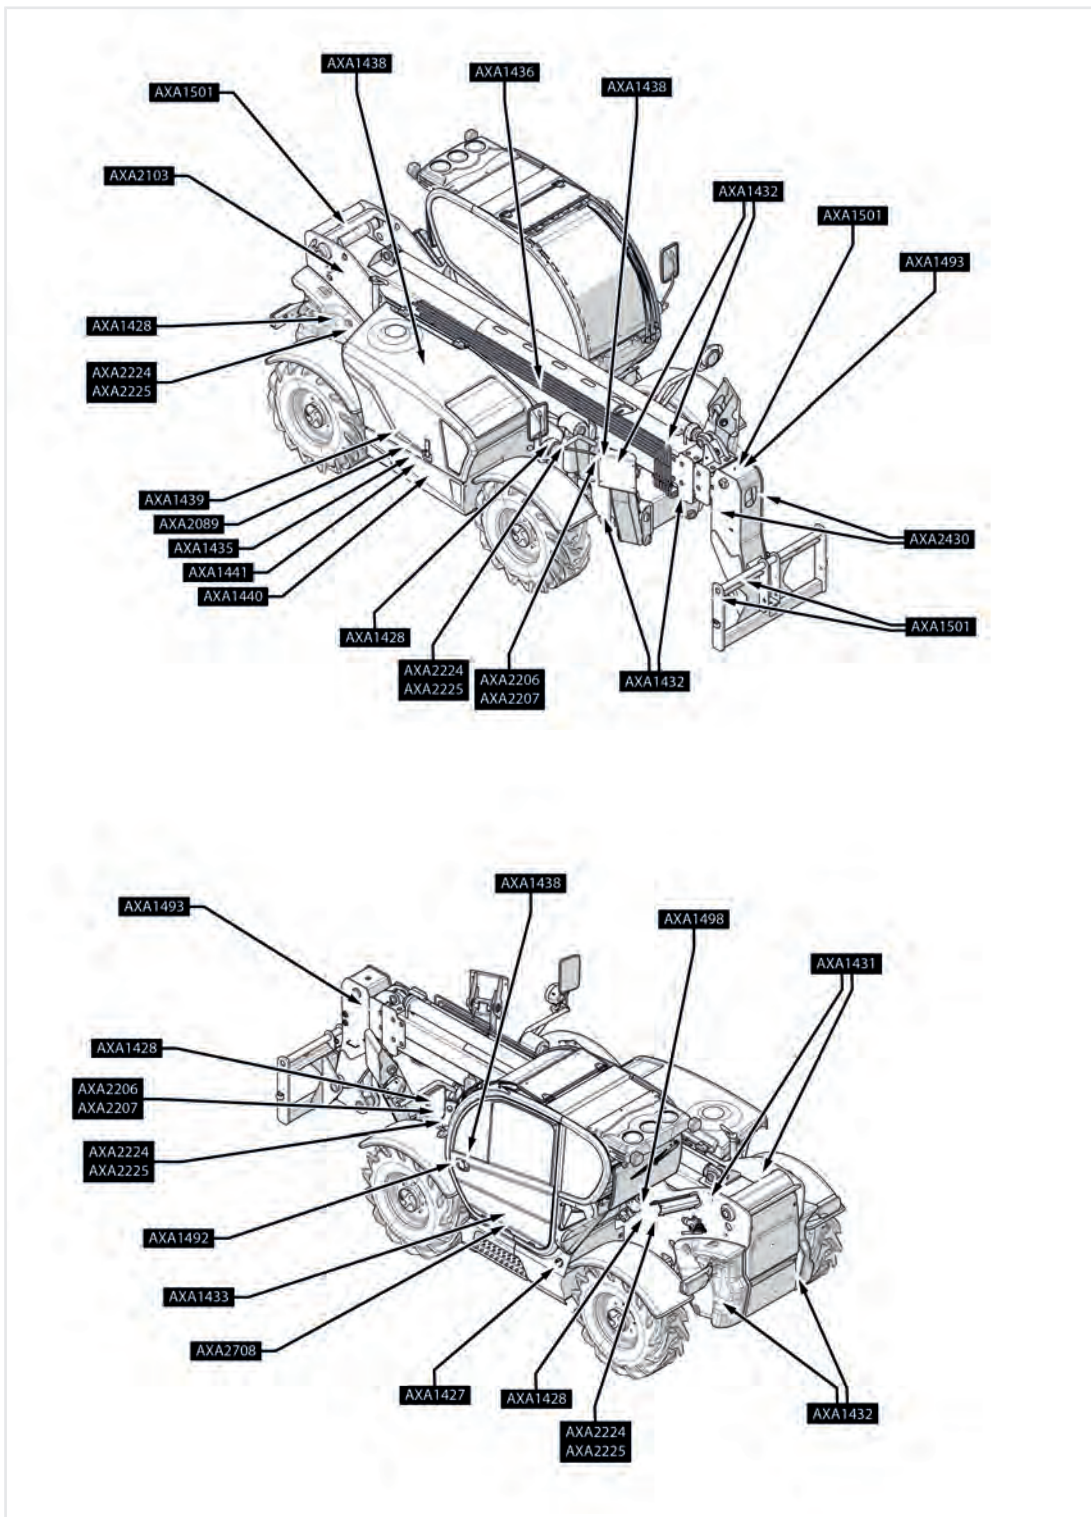

## 6.2.4 Safety stickers position in the cab

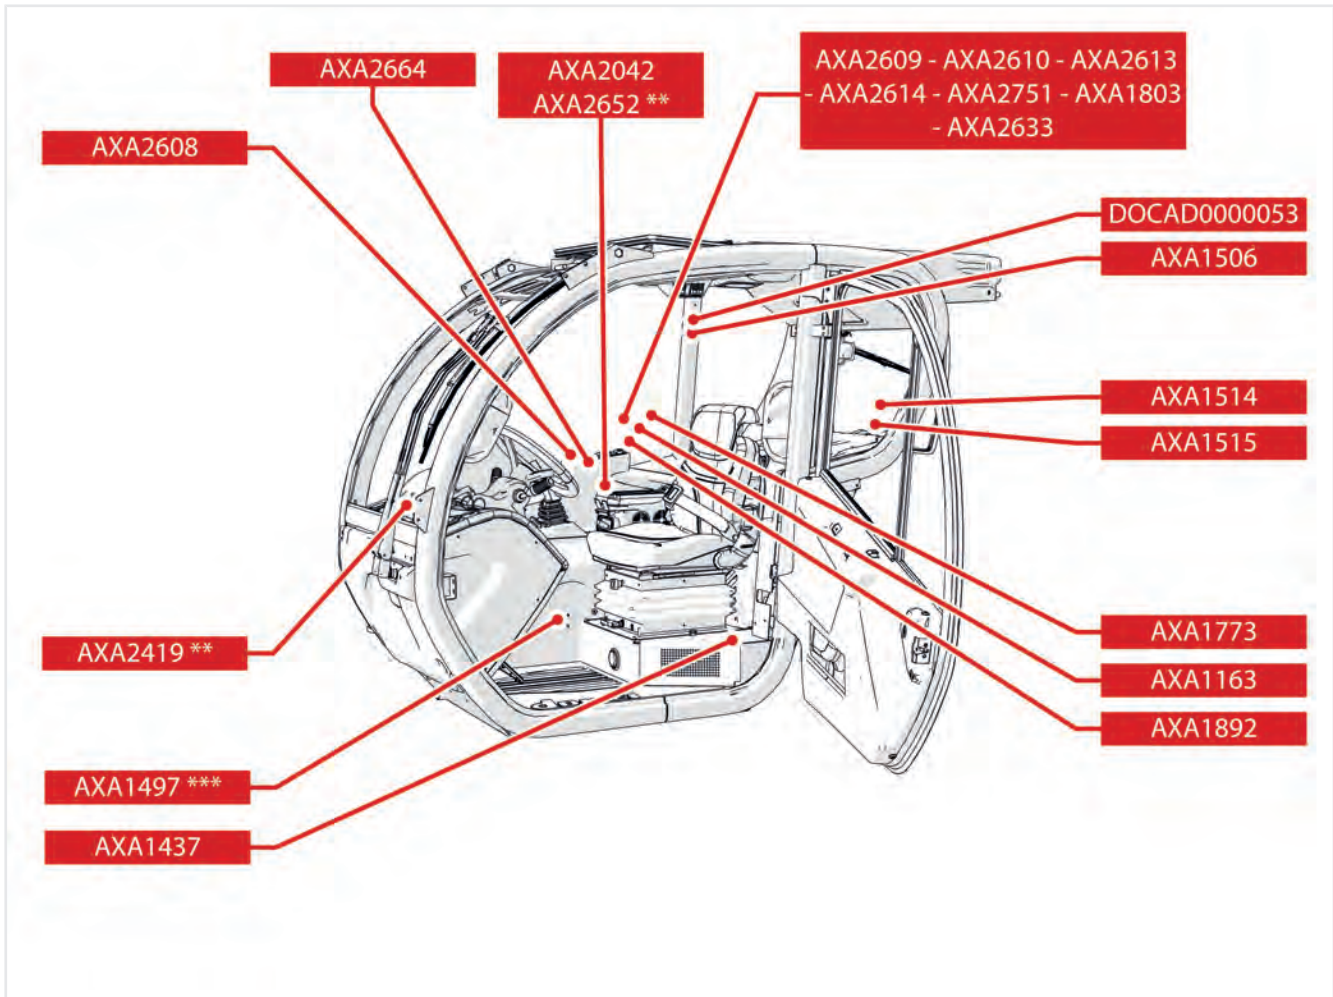


Figure: 170120-1: Cab stickers position

## 7

## Components description

## 7.1

## ROPS - FOPS Cab

The vehicle is equipped with an approved cab:

- **ROPS** (Roll Over Protection Structure)
  - OCSE code 4
- **FOPS** (Falling Objects Protective Structure)
  - OCSE code 10.

The operator is therefore protected in the event of vehicle tipping and in the event of falling objects, as prescribed for earth moving vehicles.



Figure: 170804-1

**ATTENTION**

The cab is a safety device and as such must be always kept in the right conditions of use.

In case of cab tampering, the manufacturer has no civil liability in case of an accident, therefore it is absolutely forbidden to:

- Change, drill, or alter in any way the structure of the cab.
- Weld or mechanically connect parts to the cab chassis.
- If the fastening bolts are replaced, use elements of different strength class.
- Connect chains or ropes to the cab for the purpose of towing.

**WARNING**

**In the case of vehicle tipping, staying in the cab with fastened seat belts allows to obtain a better protection.**

If the cab has undergone visual damage it must be replaced by consulting the authorized service center or Dieci authorized workshop.

The cab is classified as: CATEGORY "1"

The cab approved as category "1" does not offer full protection against the ingress of dust, aerosols and vapors. Consult and follow the instructions provided by the manufacturer of the chemicals used (such as pesticides, fungicides, herbicides, etc..) and those supplied by the manufacturer of the sprayer. Use the appropriate personal protective equipment and clothing (PPE) when indicated in these instructions, even when you are inside the cab.

**DANGER**

**Inhalation danger for operators and bystanders.**

For protection against harmful dust, aerosols and vapors, refer to the instructions provided by the manufacturer of chemicals, by the manufacturer of the sprayer and to the basic rules contained in this manual.

Refer to the packaging of the product used to use the appropriate protective equipment.

## 7.1.1

## Door opening

## 7.1.1.1

## External door handle

The door of the cab is equipped with an external handle "1" with lock.

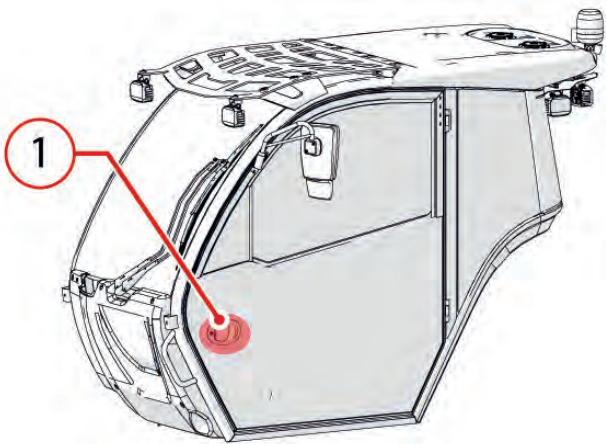


Figure: 170805-1

To open the door from the outside:

- Insert the key into the lock and turn it clockwise/ counterclockwise to engage/disengage the lock.
- Pull the handle towards yourself to release the door with lock disengaged.



## NOTE

With lock engaged, the door will not open by the handle.



## WARNING

It is absolutely forbidden to operate with the cab door open.

### 7.1.1.2 Internal door handle

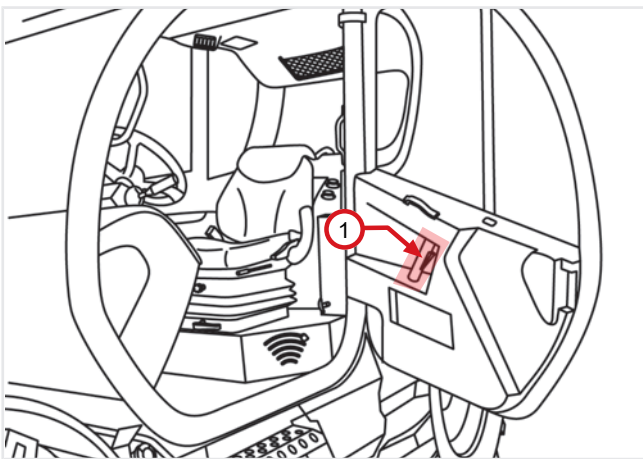


Figure: 170806-1

To open the door from the inside:

- Press the button on the handle to release the door "1".
- Push the door to the outside to complete the opening.

- Accompany the door with one hand while opening it.



## ATTENTION

Before pushing the door outwards verify that the opening area is free from obstacles of various kinds.

### 7.1.2 Climbing in/out



## NOTE

Before climbing into the cab, make sure your hands and your shoes are clean and dry to avoid slipping and falling.

Use only the appropriate handles and steps to access the cab, do not use the controls and the steering wheel from inside. Climb in and out of the vehicle always turned towards the driver's cab.

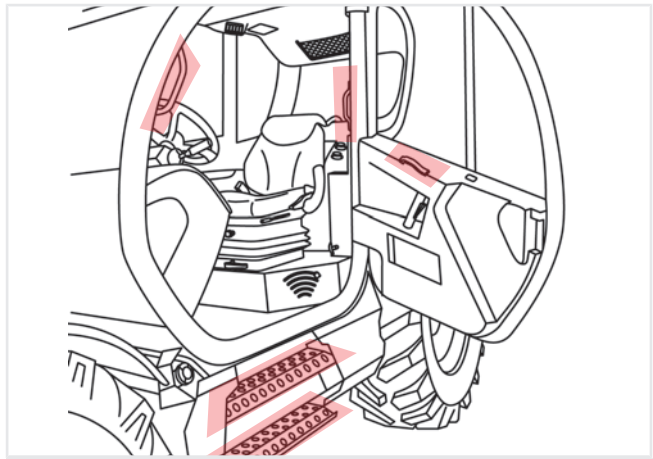


Figure: 170807-1



## WARNING

### DANGER

Climbing in and out of the cab is allowed only when the vehicle is stopped with the parking brake engaged. Do not leave the cab with the vehicle in motion.

**7.1.3**  
Door electric glass

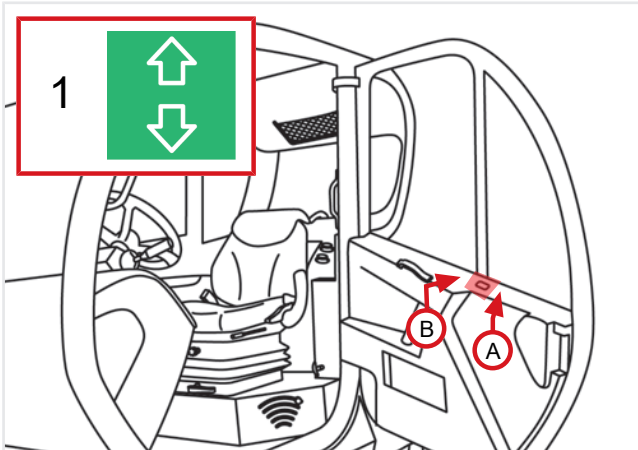


Figure: 170808-1

To open the glass of the door use the button on the door "1":

- Press on side "A" to lift the glass.
- Press on side "B" to lower the glass.



**WARNING**

Before closing the window check that there are no objects or human limbs that can be crushed by this.

**7.1.4**  
Rear glass

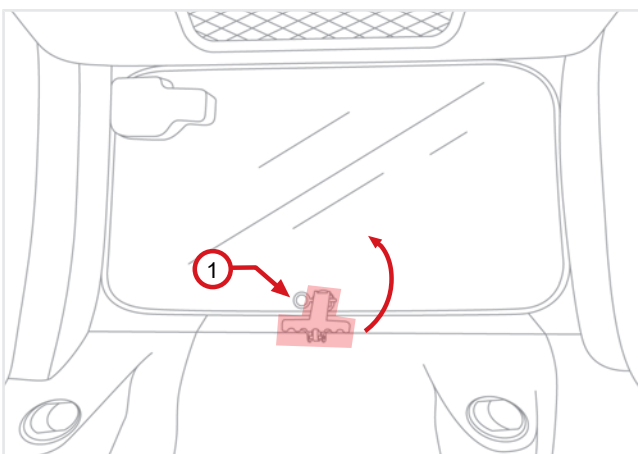


Figure: 170809-1

To open the rear glass, lift the handle "1" and push the glass outward.

The glass is maintained in the open position by the handle.

To close the rear glass, pull the handle back in the cab and lower until it until the whole unit is completely locked.



**WARNING**

**Danger of crushing**

In case the handle would no longer maintain the open position of the glass, replace it in the shortest possible time.



**NOTE**

The rear glass also serves as an emergency exit, see the "Safety Devices" chapter for more information.

**7.1.5**  
Canopy

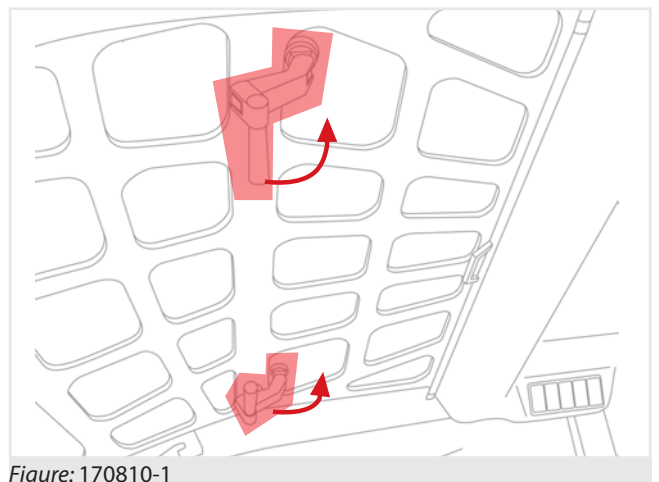


Figure: 170810-1

To open the canopy, hold the handle and push upward with a rotating motion. The position is held by the handles fully extended.

To close proceed with the inverse operation until the handles are locked.



**WARNING**

**Danger of crushing**

In case the handles would no longer maintain the open position of the glass, replace them in the shortest possible time.

## 7.1.6 Sunshade

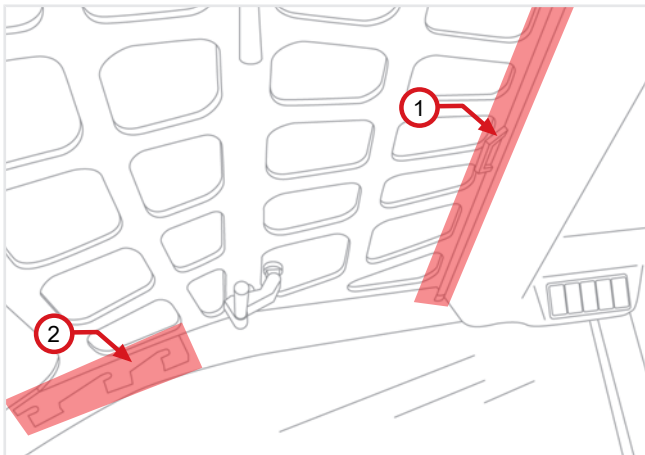


Figure: 170811-1

The Sunshade is located at the top of the cab.

To lower the Sunshade, take the handle located at the center of "1" and lower it down to lock it the hooks provided "2".

To close the sunshade, lower the handle "1" to release it from the hooks "2" and take back the sunshade in closure.

## 7.1.7 Cab ventilation

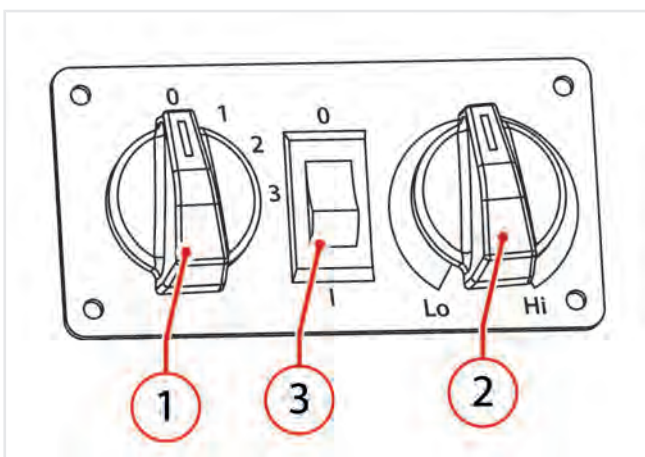


Figure: 161208-1

### 7.1.7.1 Ventilation adjustment

To adjust the ventilation turn the knob "1" (fig. 161208-1).

Clicks indicate respectively:

0 - Off

1 - First speed

2 - Second speed

3 - Third speed

### 7.1.7.2 Air temperature adjustment

To adjust the temperature of the air coming out of the vents, turn the knob "2" (fig. 161208-1):

- Turning the knob clockwise (in the red scale) the temperature increases.
- Turning the knob counterclockwise (in the blue scale) the temperature decreases until it is next to the outside temperature.

### 7.1.7.3 Air vents



Figure: 170812-1

To open the air vents press on one side of these and adjust the air flow direction using the fins or rotating the vent.

To close the vents push the fins bringing them to the horizontal closing position.

### 7.1.7.4 Air recirculation inside the cab

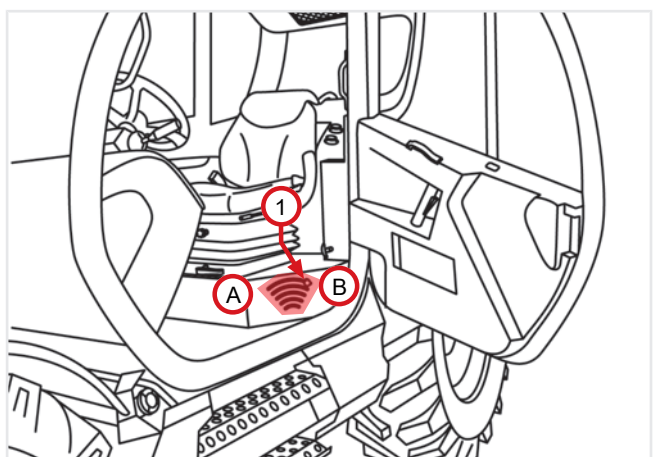


Figure: 170813-1

To enable or deactivate the air circulation in the cab use the lever "1":

- In "A" position to enable air recirculation inside the cab.
- In "B" position to disable the air recirculation inside the cab and allow the ventilation system to draw air from the outside.



**NOTE**

The lever acts on the air "draw" by the ventilation system. The air flow and temperature must always be controlled by the ventilation system inside the cab.

**7.1.8**  
Air conditioning \*



**NOTE**

\* Air conditioning is an optional accessory.

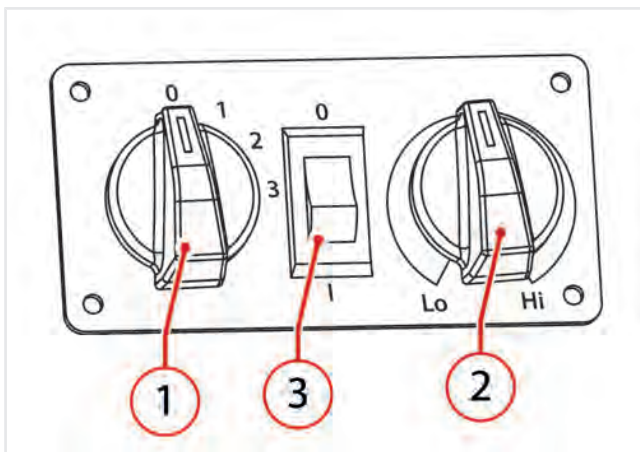


Figure: 161209-1

For a correct use of air conditioning, follow the following steps (fig. 161209-1):

1. Check that all doors and windows are closed.
2. Check that the heater is turned off by moving the lever towards the end of the blue scale.
3. With the engine running, turn on the air conditioning moving the switch "3" in position "1".
4. Turn the knob to adjust the airflow "1" to select the desired intensity.
5. Open and adjust the vents to obtain the best cooling according to the ambient temperature.
6. Turn the temperature knob "2" to obtain the desired temperature.



**ATTENTION**

**Turn on the air conditioning two minutes, every 15 days, even in the colder seasons with the engine idling (without accelerating). In this way the moving parts, such as the compressor and the system in general are lubricated.**

To keep the air conditioning system efficient keep the condenser clean.



**DANGER**

**Do not loosen any hose of air conditioning systems in order to reach the capacitor since the contact between the skin and the refrigerant can cause frostbite.**

For maintenance and deadlines, see the "Maintenance" chapter.

**7.1.9**  
12V Socket

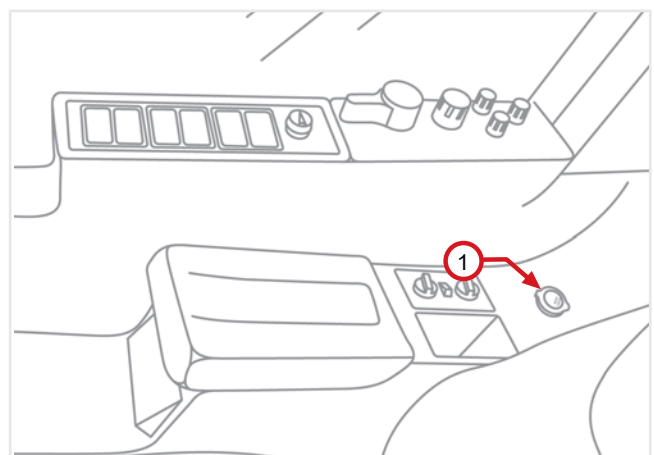


Figure: 170814-1

The 12V-180W "1" socket allows to connect direct current users (battery chargers, cell phones, etc.)



**WARNING**

**Do not connect users with nominal voltage greater than 12V and power consumption greater than 180W.**

Risk of damage to the electrical system.

### 7.1.10 Storage compartment

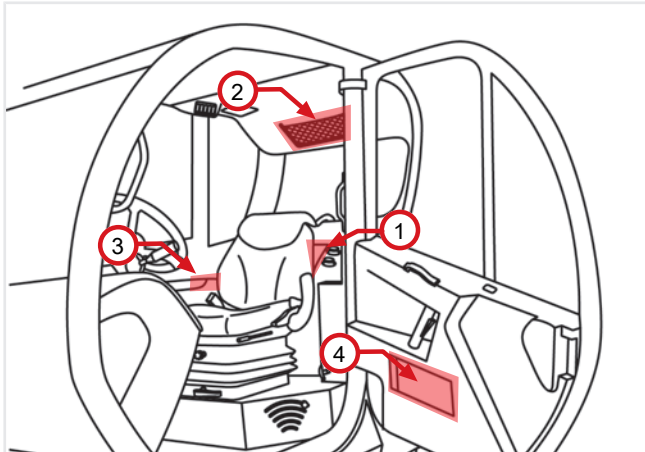


Figure: 170815-1

There are different storage compartments on the vehicle:

1. Behind the seat
2. On the left side
3. Behind the driver's seat, document holder net (Optional)
4. On the door

### 7.1.11 Cab lighting

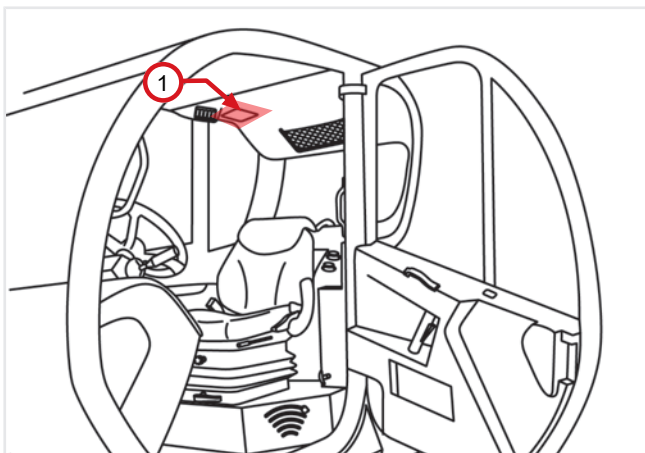


Figure: 170816-1

To turn on the lighting inside the cab act on the overhead light pressing one of the ends "1".

In the center position the lighting is turned off.

### 7.1.12 Steering wheel

The steering wheel of the vehicle allows steering the vehicle wheels according to the steering mode set.



#### NOTE

Refer to the "Steering selector" chapter.

### 7.1.12.1 Steering wheel adjustment



150401-1



150401-2

To adjust the steering wheel angle (fig. 150401-1):

- Turn the steering wheel adjustment lever "1" (fig. 150401-2) down to unlock the movements.
- Push the steering wheel forward or pull it towards yourself to the desired position.
- Push down or pull up on the steering wheel to the desired height.
- Turn the steering wheel adjustment lever up to lock the steering wheel in the position in which it is located. For correct locking, screw firmly.



#### NOTE

The steering wheel is properly adjusted when the operator, with the back firmly against the backrest of the seat, is able to grasp the furthest side of the steering wheel while keeping the elbow slightly bent.

### 7.1.13 Multifunction lever

The multifunction lever contains several functions: direction indicators, horn, headlights turning on, window wipers and washers.



7.1.13.1  
Direction indicators

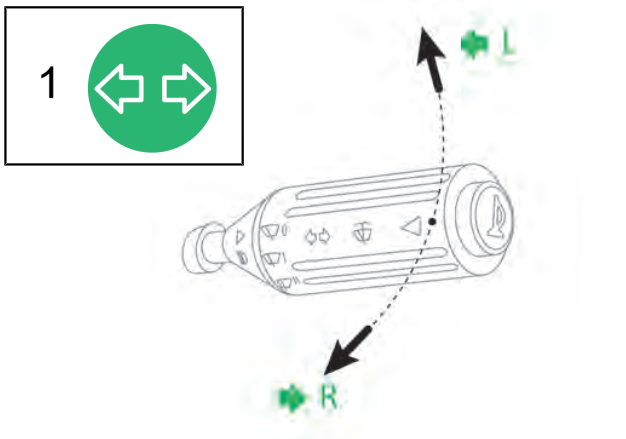


Figure: 150402-1

Move the lever (fig. 150402-1):

- Towards yourself to indicate a curve to the right (**R**).
- Forward to indicate a curve to the left (**L**).

The indicators only work when the ignition switch is in the position of instrumentation on.

The indicator light "1" on the central instrument panel will activate the direction indicators.



**ATTENTION**

Push the multifunction lever in stand-by position after making the turn, return to the neutral position is not automatic.

7.1.13.3  
Front window wiper

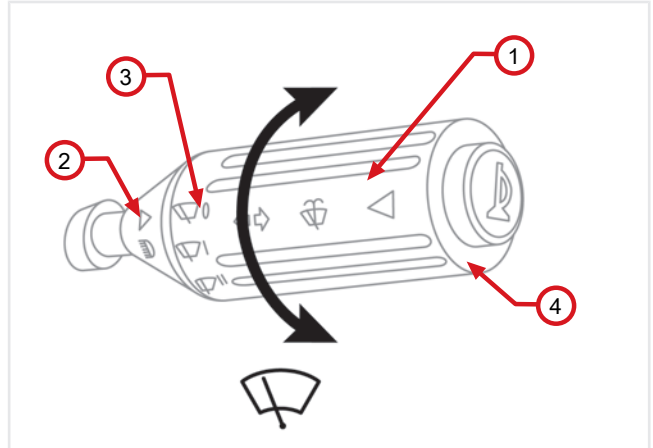


Figure: 150404-1-

Turning the knob to "1" (fig. 150404-1) activates the front window wiper.

The arrow "2" indicates which window wiper mode "3" is currently active:

- 0 - Off
- I - Slow
- II - Fast



**WARNING**

**Worn blades cause viewing difficulties and scratches to the glass.**

Replace the blades if they are damaged or worn.

7.1.13.2  
Horn

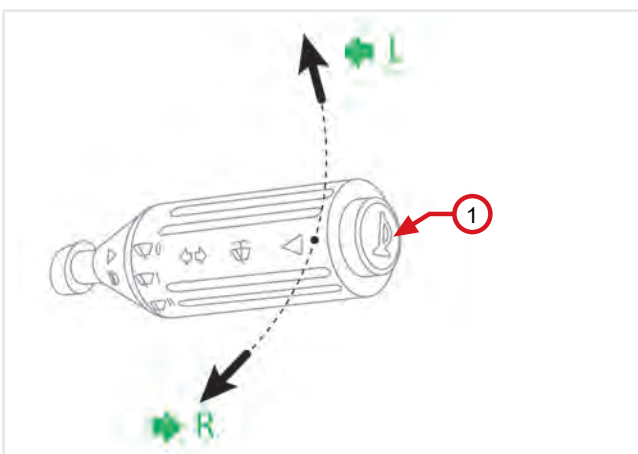


Figure: 150403-1

Press the button on the end of the lever "1" (fig. 150403-1), to activate the horn.

7.1.13.4  
Window washer

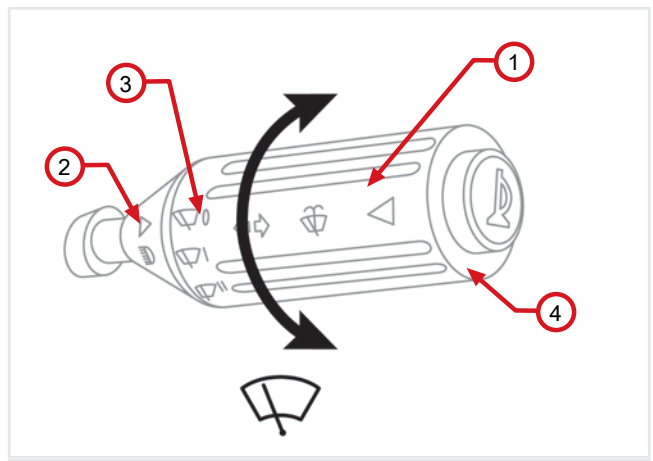


Figure: 150405-1

Press the middle button on the lever "4" (fig. 150405-1) to turn on the front window washer.

### 7.1.13.5 Rear window wiper and washer

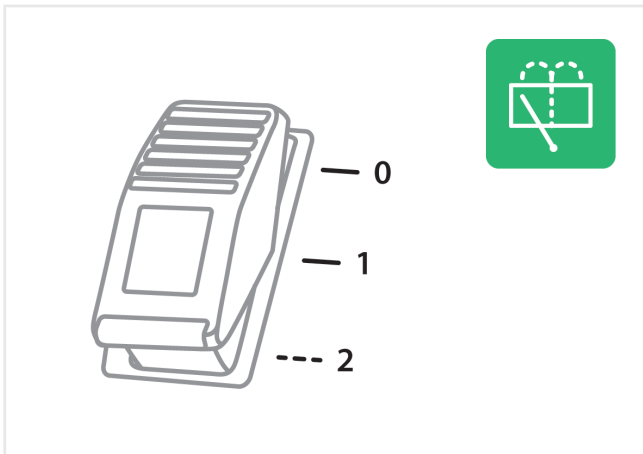


Figure: 150406-1

The switch of the rear window wiper and washer (fig. 150406-1) has 3 positions, 2 of which are stable and 1 unstable:

- 0 - Window wiper off
- 1 - Window wiper on
- (2) - Rear window wiper in operation, until pressed

## 7.1.14 Lights turning on

### 7.1.14.1 Sidelights and low beam lights

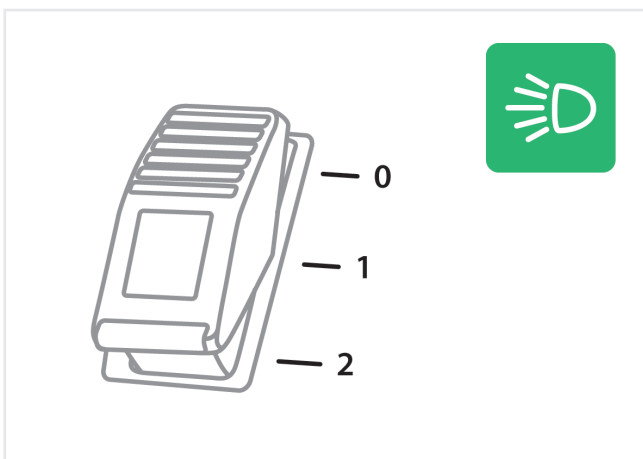


Figure: 150407-1

To turn on the front and rear side lights of the vehicle it is necessary to use the switch on the left instrument panel (fig. 150407-1).

The switch has 3 stable positions:

- 0- Lights off
- 1- Side lights on
- 2 - Low beam lights on

The side lights turned on is indicated by the indicator on the switch that turns on.

When the side light are activated the instrument panel of the vehicle lights on.



### NOTE

It is possible to turn on the side lights with the ignition key in "0" position, while it is necessary to bring the ignition key in position "I" to turn on the low beam lights.

### 7.1.14.2 High beam lights

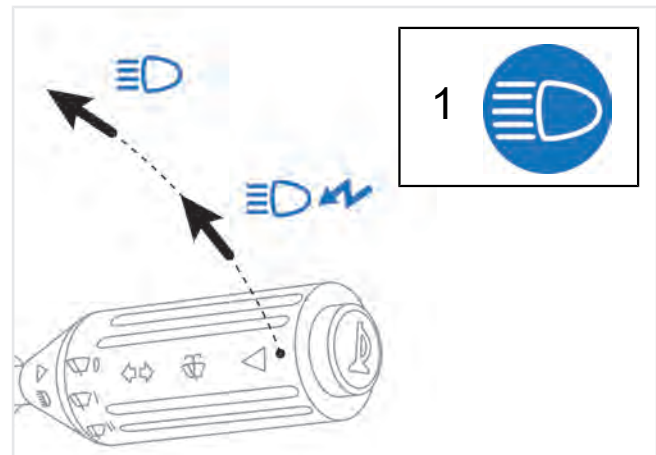


Figure: 150408-1

To turn on the high beam lights it is necessary to move the multifunction lever (fig. 150408-1).

- To make individual flashes with the high beam lights, pull the multifunction lever toward the steering wheel to the first click. It is possible to use this function with the lights off and the ignition key in position "0".
- To turn on the high beam lights, pull the multifunction lever toward the steering wheel to the second click. It is possible to turn on the high beam lights only with the ignition key in position "I" and low beam lights on. The high beam lights turned on is indicated by the warning light "1" on the instrument panel.

In both cases, once obtained the desired click, the multifunction lever returns to its rest position.

### 7.1.14.3 Cab front light \*



### NOTE

\* The cab front light is an optional accessory.

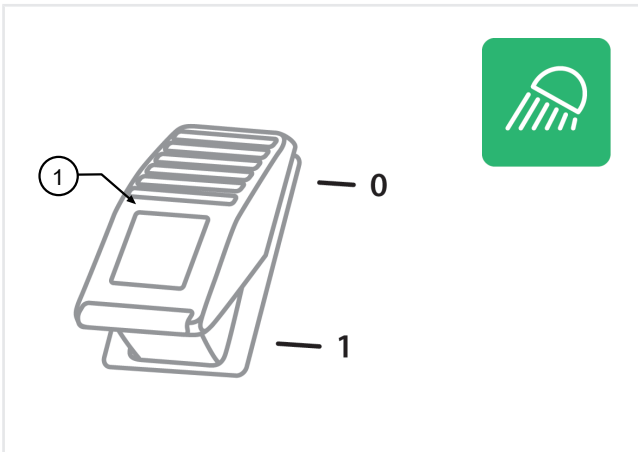


Figure: 150409-1

Press the switch "1" (fig. 150409-1) to turn on the front work light.

The warning light on the same switch indicates that the light is turned on.



**NOTE**

To turn on the headlight it is necessary to bring the ignition key in position "1".

7.1.14.4  
Cab rear light \*



**NOTE**

\* The cab rear light is an optional accessory.

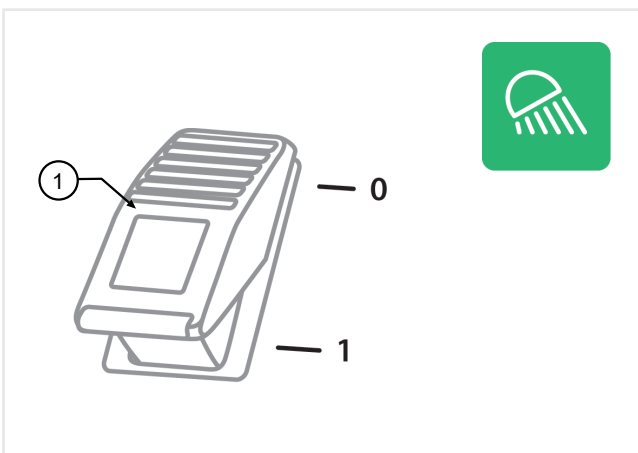


Figure: 150410-1

Press the switch "1" (fig. 150410-1) to turn on the rear work light.

The warning light on the same switch indicates that the light is turned on.



**NOTE**

To turn on the headlight it is necessary to bring the ignition key in position "1".

7.1.14.5  
Work light on the boom head\*



**NOTE**

\* The work light on the boom head is an optional accessory.

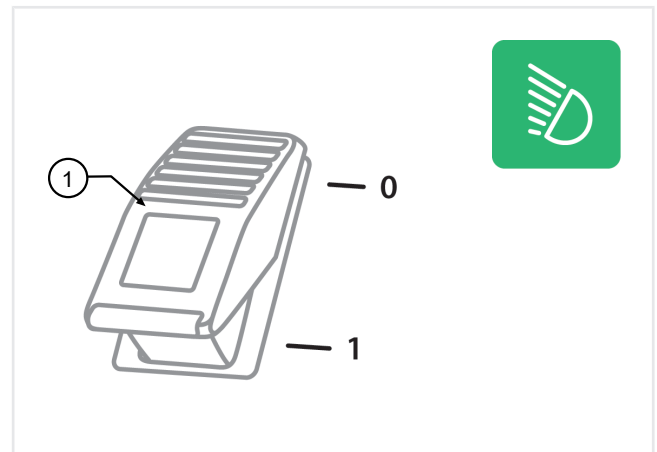


Figure: 150411-1

Press the switch "1" (fig. 150411-1) to turn on the work light on the boom head.

The warning light on the same switch indicates that the light is turned on.



**NOTE**

To turn on the headlight it is necessary to bring the ignition key in position "1".

### 7.1.14.6 Rotating light

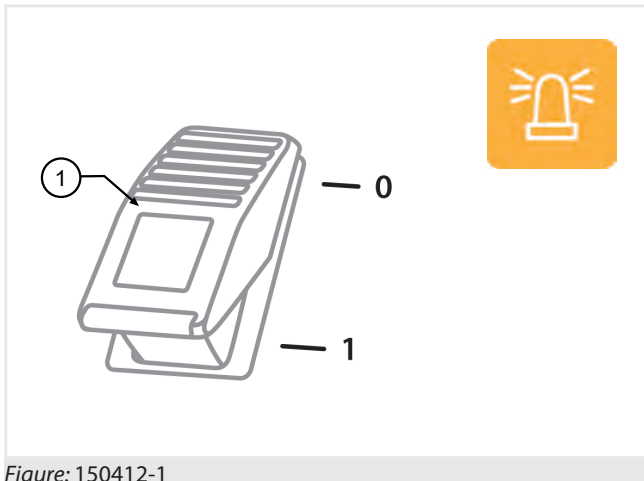


Figure: 150412-1

The rotating light "1" (fig 150412-1) must be positioned onto the driver's cab.

To activate and position the rotating light, perform the following steps:

1. Clean and dry the top of the driver's cab.
2. Place the rotating light on the cab.
3. Insert the plug of the rotating light into the electrical socket on the rear left side of the cab, under the rear glass.
4. Turn on the rotating light using the switch on the canopy instrument panel.

The rotating light turned on is indicated by the indicator light on the switch.



#### ATTENTION

##### Do not use the rotating light improperly.

Refer to the manager in charge of the work and to the regulations in force in the country of use of the vehicle to know the cases in which it is necessary and/or allowed to use the rotating light.



#### NOTE

It is possible to turn on the rotating light even if the ignition key is in the "0" position.



#### WARNING

##### Risk of damage to the electrical system.

Do not connect users with nominal voltage greater than 12V and power consumption greater than 180W.

### 7.1.15 Emergency Lights

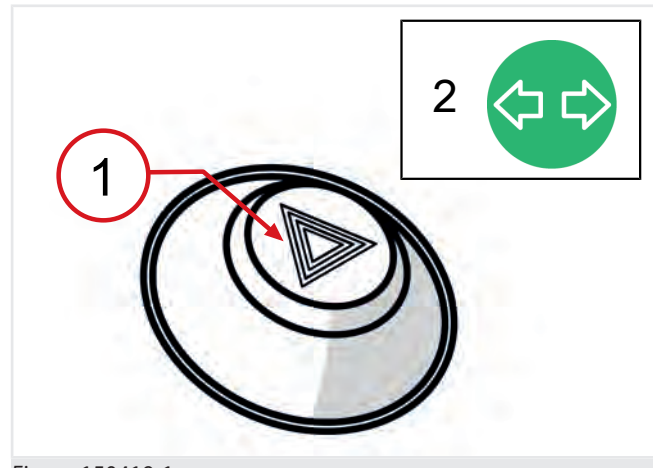


Figure: 150419-1

Press the emergency lights switch "1" (fig. 150419-1) to turn on all four direction indicators.

The side lights turning on is indicated by the switch flashing and by indicator "2" on the instrument panel of the vehicle.

### 7.1.16 Seat

#### 7.1.16.1 Deadman seat sensor



Figure: 150413-1

The vehicle is equipped with a safety system called "deadman" which consists of an electrical microswitch inside the seat cushion "1" (fig. 150413-1).

If the engine is running and the operator is not sitting properly in the driver's seat for a time longer than 3 seconds, the transmission is automatically disabled and the park brake is engaged.

To continue moving the machine, the operator must sit in the driver's seat and set the movement selection lever in position "N".



**NOTE**

The engine can be started only if the operator is seated properly in the driving seat and the gear lever is in neutral "N".

7.1.16.2  
Seat adjustment



**WARNING**

**Correctly position the seat.**

The seat is properly positioned when the operator is able to perform a full stroke to the brake pedal by holding the back against the backrest of the seat itself.

The seat can be adjusted to different positions:

**Backrest inclination**


To adjust the inclination of the backrest (fig. 150415-1), lift the lever on the left side and let the backrest adapt to the required position. Release the lever to block the backrest.



150415-1

**Backrest height**

To adjust the backrest height (fig. 150415-2), lift or lower the top of the backrest.

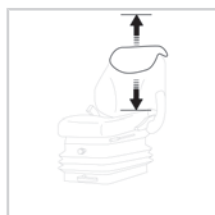

150415-2

**Horizontal position**

To adjust the seat longitudinally (fig. 150415-3), move the lever to the left and slide the seat along the guides. Once established the desired position, release the lever. Perform small movements to make sure that the seat is fastened properly.



150415-3

**Horizontal suspension**

To unlock the horizontal suspension (fig. 150415-4), move the lever forward; to lock the suspension move the lever backward.



150415-4

**Vertical position**

To adjust the seat height (fig. 150415-5), turn the lever to the symbol "+" printed on this to increase the height or to the symbol "-" to reduce the height.



150415-5

**Mechanical suspension degree**

To adjust the degree of suspension (fig. 150415-6) turn the knob towards "+" to soften the suspension. Turn the knob towards the "-" to hardened suspension.



150415-6

**Pneumatic suspension degree \***



**NOTE**

The pneumatic suspension of the seat is an optional accessory.

To adjust the pneumatic spring rate, pull knob (fig. 150415-7) to let out pressure and soften suspension. Push the knob to add pressure and harden suspension.

Pneumatic adjustment can only be performed with the engine running.



150415-7

### 7.1.16.3 Seat belts



#### WARNING

**Always fasten the seat belts when operating the vehicle.**

The machine is equipped with a cab that can withstand the weight of the machine in the event of rollover (ROPS), it is therefore necessary that the operator remains tied to the seat by the seat belt not to be swept out and possibly crushed.

Before starting the vehicle, carefully examine the straps, buckles and fastening devices to the structure. If some component is damaged or worn, replace the seat belt or the component before operating the vehicle.

Remain seated with the seat belts fastened properly for all the time of operation of the vehicle to reduce the risk of injury in case of accident.

Following an accident of a certain importance, replace the seat belts, even if they do not appear damaged.

To fasten the seat belt is necessary to:

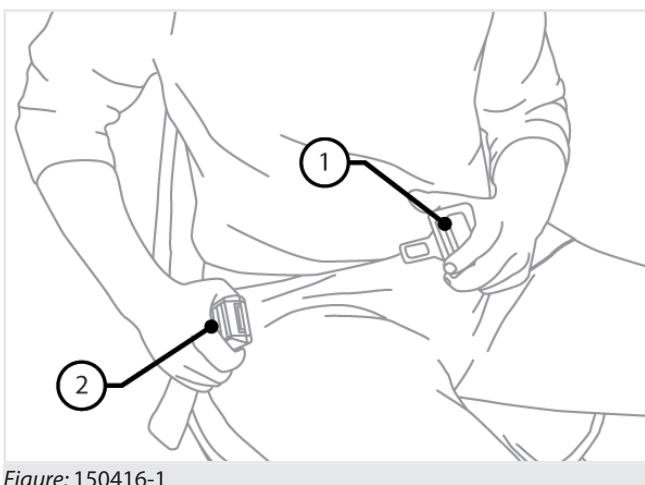


Figure: 150416-1

- Insert the latch plate "1" in the buckle "2".

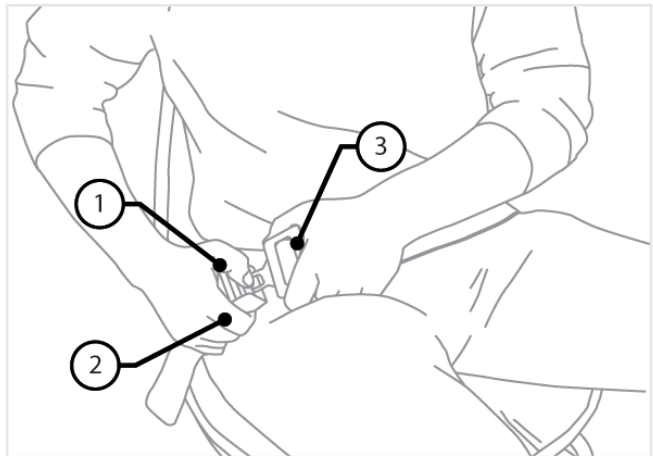


Figure: 150416-2

- Make sure of that the hooking occurred, and then adjust the belt around the body.
- The belt is considered properly connected when it is close to the body.

To remove the belt it is necessary to:

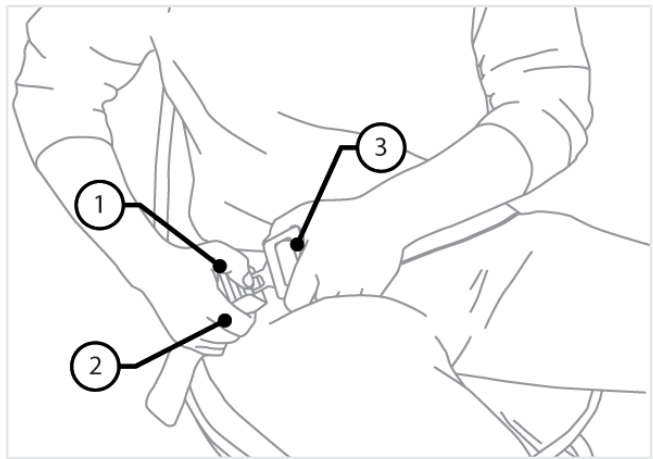


Figure: 150416-3

- Press the red button "1" on the buckle "2".
- Then remove the latch plate "3".



#### WARNING

**Drive the vehicle only with safety belt properly worn, fastened and adjusted.**

Operating without the seat belt fastened increases the risk of accidents.

Do not use damaged or worn seat belts. If worn, damaged or yielded belts are used, they can break or yield in case of collision resulting in serious injury to the operator.

**7.1.17**  
Emergency stop



Figure: 150420-1

In emergency conditions, the machine can be stopped using the Emergency stop button in the cab (fig. 150420-1); the stop occurs immediately.



**ATTENTION**

It is recommended to use the emergency stop button only in case that there is an immediate danger to the operator, to the load and/or to the integrity of the machine.

The pressure exerted on the emergency stop button activates the power supply cut-off and the consequent complete shutdown of the machine and any connected equipment.

The return to normal working conditions, after a stop caused by the emergency stop button, is only possible after:

- Removal of the cause that caused the stop
- Releasing the emergency stop button

To release the emergency stop button, rotate it in the direction indicated by the arrow printed on the button.


**7.1.18**  
Spirit Level

The spirit level is located in the center of the instrument panel. It is used to verify the correct transverse leveling of the machine.




**NOTE**

The machine can be fitted with two types of spirit level, standard or optional; the optional level is featured by the reference degrees.

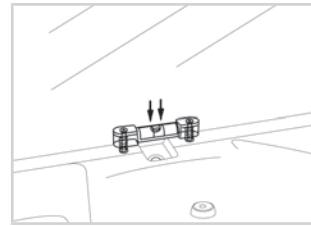

150421-1: Standard spirit level

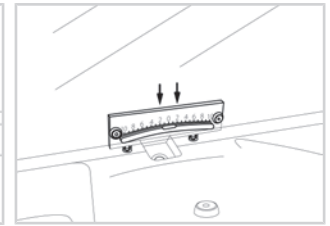

150421-2: Graduated spirit level

To safely operate the spirit level must in the center, with a maximum approximation of 2° to the right or left.

In the standard spirit level, the angle exceeds 2° when the spirit level moves completely outside the 2 limit marks of 2°.



**DANGER**



**DANGER OF TRANSVERSE TIPPING.**

To safely operate the spirit level must in the center, with a maximum approximation of 2° to the right or left.

**7.1.19**  
Emergency exit: Rear glass

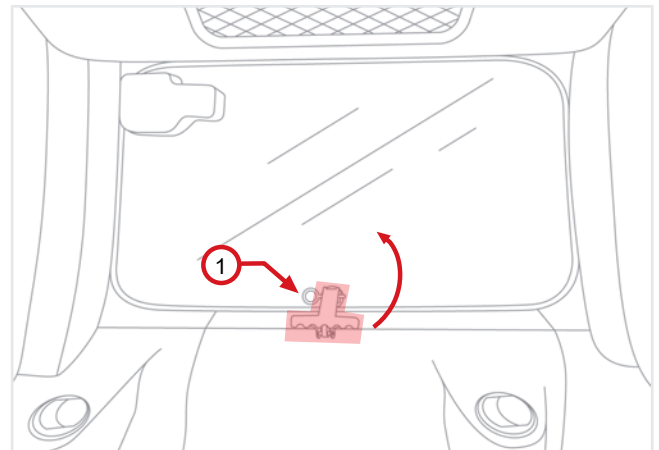


Figure: 150422-1

The rear glass of the cab (fig. 150422-1) can be used as an emergency exit in case the vehicle doors are locked.

To open the window fully, slide the fastener to "1" and push the glass outward.

The fastener must always be positioned as shown in the figure during normal work operations.



## DANGER

### Danger of crushing.

It is prohibited to fully open the glass during the use of the vehicle, because of the shearing risks between the boom and the chassis.

The rear glass is near the telescopic boom.



## WARNING

Be very careful when opening and/or removing the glass, as this may chip or crush and may cause injury to the operator in the cab and to who is near the vehicle.

### 7.1.20

#### Emergency exit: Front glass \*




## NOTE

\* **Emergency exit: The front glass is an optional attachment.**

Emergency exit: The front glass is a standard attachment for the vehicles approved as agricultural tractors.



150423-1

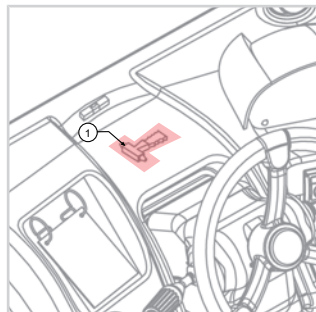

150423-2

The front glass of the cab (fig. 150423-1) can be used as an emergency exit in case the vehicle doors are locked.

To break the glass front in case of emergency, use the hammer "1" located in the cab (fig. 150423-2).

### 7.1.21

#### Cab front glass protection \*



## NOTE

\* **The cab front protection glass is an optional accessory.**

Consult your dealer in case of doubts or information on your vehicle.

It is not possible to install the cab front protection glass in case the vehicle is provided with front emergency exit.

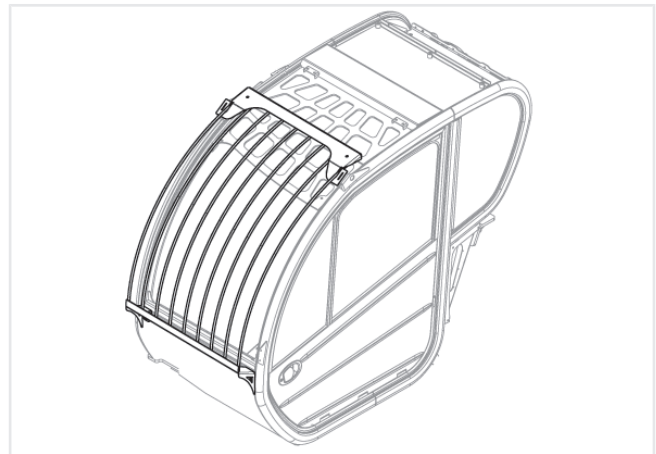


Figure: 150424-1

The cab front protection glass (fig. 150424-1) provides a higher protection level against any large/heavy loads or objects, which may fall on the cab.



## ATTENTION

If the vehicle is equipped with the front glass protection, it is not permitted to ride on public roads, except for the exceptions permitted by the regulations in force in the country of use.

### 7.1.22

#### Warnings in case of vehicle tipping

- The seat belt is the best guarantee of protection for you in case of lateral or front tipping of the vehicle
- Stay calm: stay on board, do not try to jump out of the driver's seat
- Hold the steering wheel with both hands
- Push your feet strongly on the floor, keeping them within the driver's seat
- Tilt your body in the opposite direction to that of the fall



- To avoid head impact, move your head as much as possible towards the steering wheel

## 7.2 Parking brake

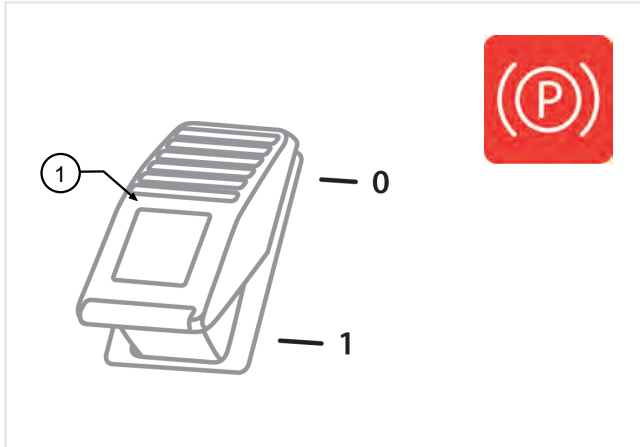


Figure: 150454-1

To engage the parking brake, press the switch to "1" (fig. 150454-1).



150454-2



150454-3

The parking brake properly engaged is indicated by the lighting of the switch and by the indicator on the instrument panel of the vehicle (fig. 150454-2).

With the parking brake engaged, the vehicle cannot move; the hydrostatic transmission is switched off and the wheels are braked.

The parking brake must be engaged:

- Every time the operator leave the vehicle, even in case of momentary stop
- Whenever the vehicle operates from a standstill even with outriggers down (if any)

The brake engages automatically when the engine is stopped.



### WARNING

Unauthorized modification of axle ratios, vehicle weight, size of wheels and tires can affect the efficiency of the parking brake.



### NOTE

To verify the efficiency of the parking brake contact a **DIECI** authorized workshop.



### DANGER

**RISKS: In case of failure of the parking brake do not use the vehicle.**

If the warning light (fig. 150454-3) turns on intermittently, it indicates a low brake fluid level.

If the warning light (fig. 150454-3) turns on in a fixed way, the parking brake is stuck or damaged.

Do not use the vehicle until the problem has been solved. Contact a **DIECI** service center.

### 7.2.1

#### Pressure gauge



Figure: 150742-1

The pressure gauge (fig. 150742-1) is used to control the servo brake pressure. In case of anomalies and faults, the pressure may drop.



### DANGER

**The pressure should not drop below 18 bar (1.8 MPa – 260 psi).**

In the case of low pressure (below 18 bar) stop the vehicle and contact an authorized Dieci dealer to eliminate the defect.



### DANGER

It is absolutely forbidden to operate with servo brake accumulator pressure less than 18 bar (1.8 MPa – 260 psi).

## 7.2.2 Braking circuit errors list



### NOTE

In case the vehicle is in error, contact a *Dieci* service center to solve the problem, indicating the error code reported.

For more information about the errors display, refer to the "Instrument panel" chapter.

Icon	Example	Description
	000000000	Parking brakes errors or brakes failure

Code	Description
100	Service brakes low oil level reporting
101	Parking brake system failure
102	Parking brake accumulator low pressure



### NOTE


The parking brake, even if disengaged, will return automatically into operation when the engine is started.




### DANGER

Never use the vehicle with the negative parking brake disengaged/disconnected.

## 7.2.3 Deactivating the external parking brake manually

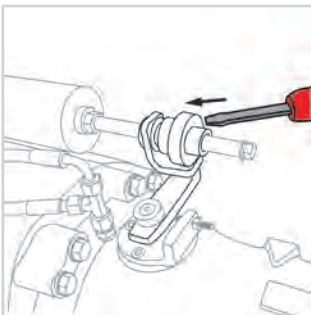

150562-1

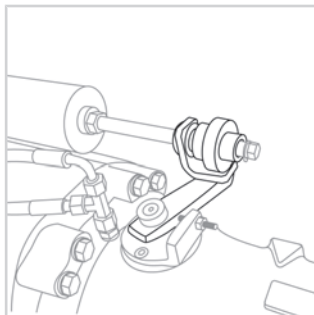

150562-2

The parking brake must be disengaged directly on the axle to allow the vehicle to be towed.

- Place safety wedges under the wheels to prevent the vehicle from moving suddenly
- Place a screwdriver on top of the crown (fig. 150562-1)
- With a rubber mallet give a sharp blow on the handle of the screwdriver to push the crown inward to release the lock.
- With the crown unlocked at the stroke end, towards the outside of the vehicle (fig. 150562-2), the parking brake is disengaged and it is possible to tow the vehicle.

# 7.3 Matrix EVO instrument panel

## 7.3.1 Components

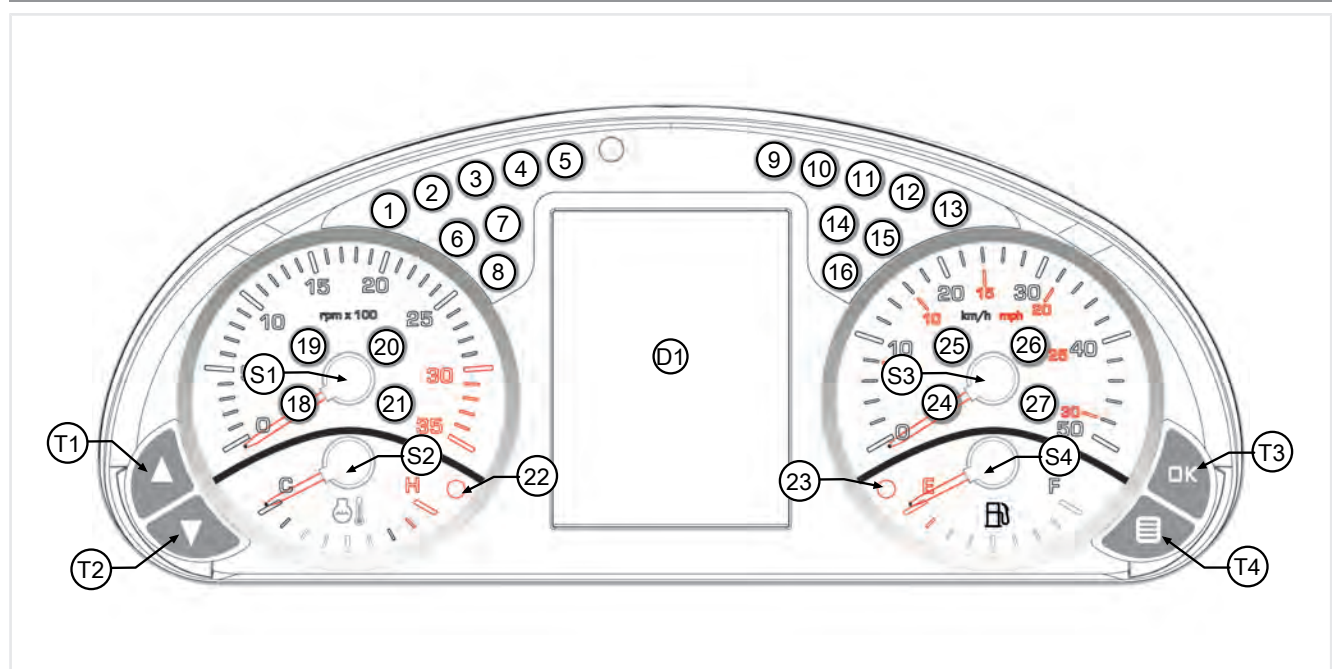


Figure: 150425-1 - Instrument panel components

Position	Indicator light			Description
T1	-	-	-	UP button
T2	-	-	-	DOWN button
T3	-	-	-	OK button
T4	-	-	-	MENU key
D1	-	-	-	Display
S1	-	-	-	Tachometer indicator
S2	-	-	-	Engine water temperature indicator
S3	-	-	-	Speed indicator
S4	-	-	-	Fuel level indicator
1		Red	Fixed	Generator, battery failure
2		Red	Fixed	Engine oil low pressure
3		Yellow	Fixed	Glow plugs
4		Red	Fixed	Parking brake insufficient pressure
5		Red	Fixed	Engine air filter clogging
6		Red	Fixed	Hydrostatic oil filter clogging

Position	Indicator light		Description	
7		Red	Fixed	Hydraulic oil high temperature
8		Green	Fixed	Forward movement engaged
9		Red	Fixed	Parking brake engaged
10		Red	Flashing	Brakes oil low level
			Fixed	Braking system failure
11		Green	Fixed	
12		Yellow	Fixed	Slow gear engaged *
13		Yellow	Fixed	Fast gear engaged *
14		Yellow	Fixed	Front axle wheels alignment *
15		Yellow	Fixed	Rear axle wheels alignment *
16		Green	Fixed	Backward movement engaged
17	-	-	-	Not used
18		Blue	Fixed	High beam
19		Green	Fixed	Direction indicators
21		Green	Fixed	Side lights
22	-	Red	-	Engine water high temperature
23	-	Yellow	-	Fuel reserve


\* Indicator lights used depending on configurations or optional equipment.

Position	Indicator light		Description	
24		Yellow	-	Not used
25		Yellow	-	Not used
26		Yellow	-	Not used
27		Red	-	Not used

### 7.3.2 Initial check

When the panel is switched on, the system will perform a check of all the indicator lights and all the indicators. During the check, the screen will show a loading bar "1" (fig. 150426-1).


After completing the initial check the display shows the main Home screen.

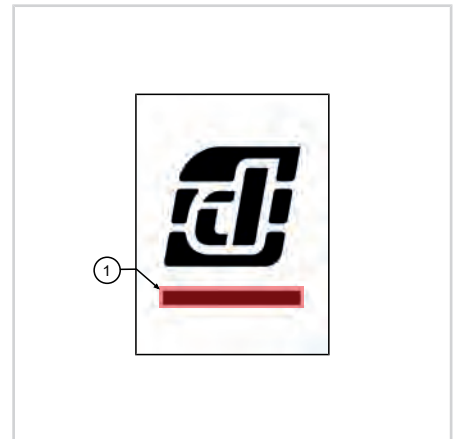

150426-1

### 7.3.3 Home

The Home screen (fig. 150428-1) is the standard display, containing the information required by the operator to use the vehicle.

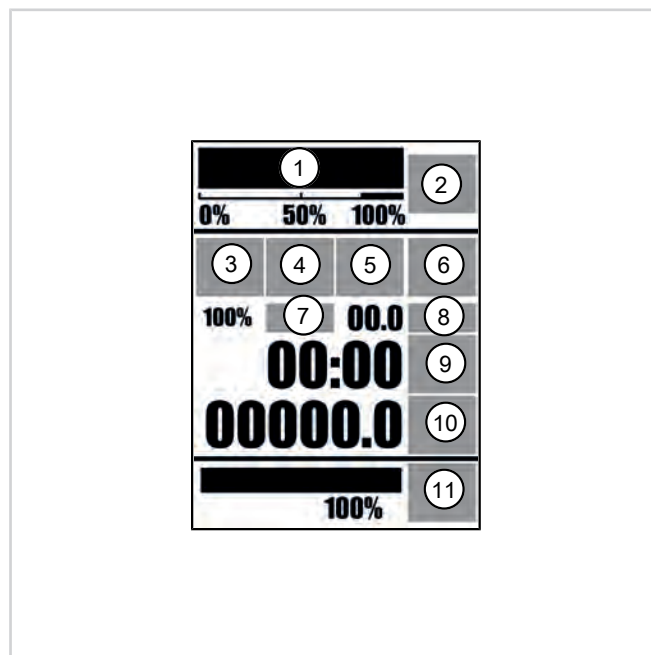

150428-1

Position	Description
1	Longitudinal momentum indicator [ ▶ 85]
2	Longitudinal momentum indicator [ ▶ 85]
3	General alarm icon [ ▶ 79]
4	Service [ ▶ 80] ByPass key [ ▶ 84]
5	Not used

Position	Description
6	Outriggers movement [▶ 121]
7	Not used
8	Not used
9	Clock and clock setting [▶ 81]
10	Hour meter [▶ 81]
11	Not used

### 7.3.4 Menu

From the Home screen, it is possible to access the menu (fig. 150429-1) pressing the **MENU** key.


Use the **UP** and **DOWN** buttons to scroll through the menu items and press the **OK** button for 3 seconds to make a selection and go to the related page.



150429-1

The menu items are:

	Clock setting
	Active errors
	Check
	Service
	Anti-tipping calibration (Reserved to trained personnel)
	Info



Settings  
(Reserved to trained personnel)

### 7.3.5 General alarm icon

The general alarm icon (fig. 150430-1) lights on together with other signals, to underline danger to the safety of the vehicle or the operator.



150430-1

If the machine is in motion, the General alarm icon is accompanied by a general alarm acoustic signal.

General alarm icon	Acoustic signal	Condition
On	Intermittent	Generator, battery failure
On	Intermittent	Engine oil low pressure
On	Intermittent	Engine air filter clogging
On	Intermittent	Hydrostatic oil filter clogging
On	Intermittent	
Intermittent	Continuous	Reached engine overspeed limit
Intermittent	Continuous	Reached maximum speed limit

### 7.3.6 Active errors

The presence of errors will be reported by the general warning icon, by the acoustic signal lasting 1.5 sec. and by the displaying of the error code on the Home screen instead of the time.



150432-1

In the presence of more than one error, the error codes will be displayed cyclically every 2 sec. on the Home screen. At the end of the cycle showing all the active errors, an icon will be displayed that indicates the user to access the Active Errors page to view all active errors in that time.


In case of an error from the SAR, the acoustic signal will be continuous and the error code will remain fixed on the Home screen. Press the **OK** button to stop the sound of the acoustic signal and resume the active errors displaying cycle.

To enter the Active errors page it is necessary to:

- Press the **MENU** button,
- Select the Active errors icon,
- Press the **OK** button,

Use the **UP** and **DOWN** buttons to scroll though the pages if there are several errors. The arrows at the bottom of page "1" indicate the presence and directions in which the additional pages flow.

Press the **MENU** button at any time to return to the Home screen.

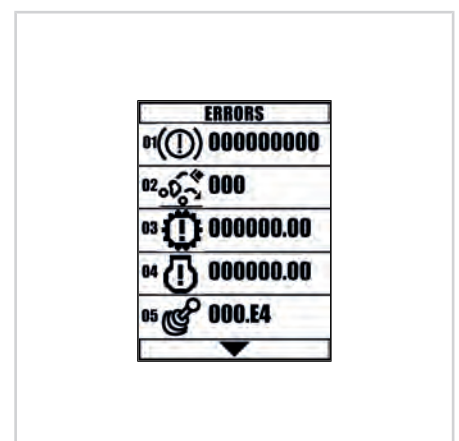

150432-2

Each error code is associated with an icon that identifies the nature of the error:

	Icon	Example	Description
01		000000000	Parking brakes errors or brakes failure
02		000	SAR errors
03		000000.00	Transmission errors
04		000000.00	Engine errors
05		000.E4	Joystick errors

### 7.3.7 Service

The Service icon indicates intervals at which to carry out maintenance on the machine (fig. 150434-1).

20 hours before the deadline, the icon stays on for 3 seconds after switching on the instrument panel.

The Service indicator icon stays on permanently if, at the end of deadline, maintenance is not carried out by specialized personnel.


To find out the hours remaining to next maintenance, it is necessary to access the Service page (fig. 150434-2):

- Press the **MENU** button,
- Select the Service icon,
- Press the **OK** button.

To return to the Home screen, simply press the **MENU** button or select the **BACK** icon "1" and press the **OK** button.



150434-1

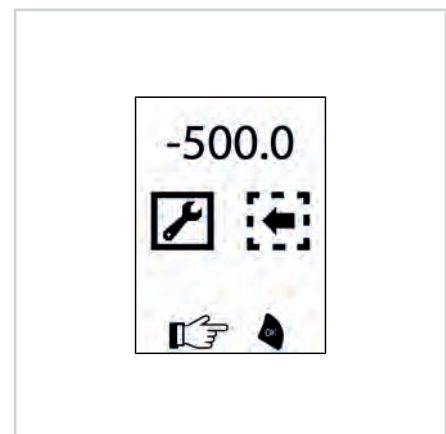

150434-2



#### NOTE

Contact the Dieci technical service to perform maintenance and reset the Service hour counting.



### 7.3.8 Clock and clock setting

On the home screen there is the indication of the time next to the related icon (fig. 150439-1).




150439-1

To adjust the time it is necessary to (fig. 150439-2):

- Press the **MENU** button,
- Select the clock setting icon,
- Press the **OK** button,
- Use the **UP** and **DOWN** to set the hour digits,
- Press the **OK** button,
- Use the **UP** and **DOWN** to set the minutes digits,
- Press the **OK** button to set the new time.

Press the **MENU** button at any time to cancel the process and return to the Home screen.

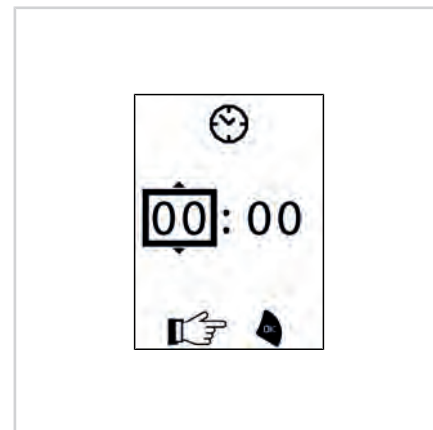

150439-2

### 7.3.9 Hour meter

On the home screen there is the indication of the hour meter next to the related icon (fig. 150440-1).



150440-1

The separation of the decimal point flashes when the hour meter is active.

### 7.3.10 Check page


The Check page allows to check some parameters of the vehicle:

- Boom absolute angle value (a)
- Boom extension values (L)
- Lateral direction tilt value (x)
- Longitudinal direction tilt value (y)

To access the Check screen it is necessary to: (fig. 150750-1):

- Press the **MENU** button,
- Select the Check icon,
- Press the **OK** button.

To return to the Home screen, simply press the **MENU** button or select the **BACK** icon and press the **OK** button.

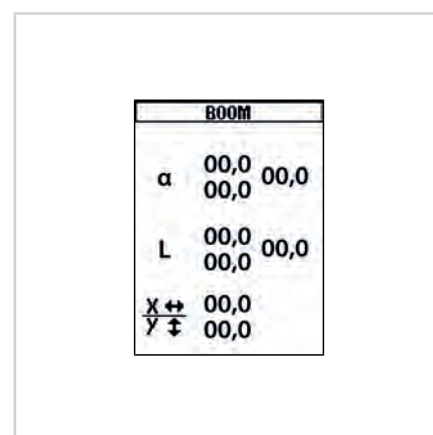

150750-1


## 7.3.11 Info page

The Info page provides information about the software version installed on the machine.

To access the Check screen it is necessary to: (fig. 150751-1):

- Press the **MENU** button,
- Select the Info icon,
- Press the **OK** button.

To return to the Home screen, simply press the **MENU** button or select the **BACK** icon and press the **OK** button.

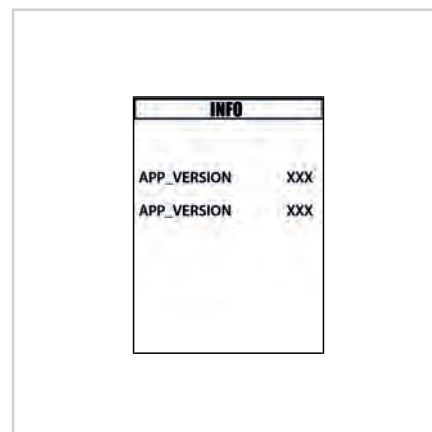

150751-1

## 7.3.12

## Anti-tipping device

The vehicle is equipped with an anti-tipping device that has the purpose to help the operator to use the vehicle safely with different acoustic and visual warning signals according to the vehicle overturning danger.

The anti-tipping device is always active.

**WARNING**

**This device can not replace the good experience of the operator in using the vehicle safety; the operator is the only one responsible for the safe operation of the vehicle and compliance with all safety standards prescribed.**

The operator must be able to determine if the data provided by the instrument are correct and real, using them for a safe use of the vehicle. When checking the loaded weight, make sure that this is lifted from the ground. When turned on, the device starts a self-diagnostic program to check the proper operation of itself and of the transducers. In case of failure, the device sets itself in a safety state and stops the operations.

Therefore the operator, before starting to work, must make sure that the instrument operates correctly:

- Correct settings check.
- Check for messages and alarms on the panel.
- Check that the device operates correctly.

The operator must, in case of any type of anomaly, to immediately contact an authorized workshop or a DIECI authorized service center.

**WARNING**


**The operator is responsible for selecting the correct settings depending on the equipment installed on the vehicle. When it is turned on, the last configuration used is set automatically until it is changed.**

An incorrect setting of the accessory may cause undesired operation of the device and therefore create a dangerous situation of operation.

It is not possible to use the vehicle with equipment other than that set on the device.

## 7.3.12.1


## Anti-tipping device description

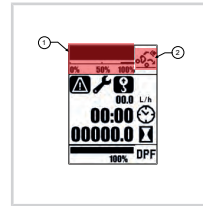

150431-1



150431-2

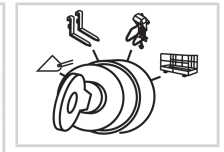

150431-3

The device detects the longitudinal stability condition of the vehicle by measuring the residual load bearing on the rear axle.

The device is composed of:

- Longitudinal momentum indicator "1" and "2" (fig. 150431-1)
- Bypass key (fig. 150431-2)
- Operating modes key (fig. 150431-3)

**The device is always in operation.**

The device is not intended for warning about the risk of tipping in case of:

- Transverse overturning
- A sudden overload,
- Transport/movement with the load in an elevated position,
- Movement on rough terrain, with obstacles or holes;
- Transport/movement on a slope or in the vicinity of a slope;
- High speed of movement on straight lines and on turns.

**ATTENTION**

When the limit load is reached, the device automatically locks all the aggravating movements for the stability of the vehicle. Only the movements that allow to return the vehicle in safety conditions will remain active.

## 7.3.12.2

## ByPass key


**DANGER**


**Danger of tipping**

The ByPass Key must be used only if all of the following conditions occur:

- a) In case the maximum tipping limit and danger of vehicle overturning has been reached.
- b) By skilled and properly trained personnel
- c) For short periods of time
- d) In case it is not possible to restore the safety conditions through the roller on the joystick to retract the boom.



150436-1

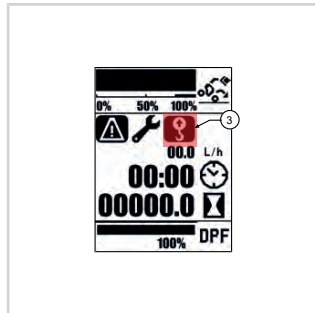

150436-2

The ByPass Key (fig. 150436-1) is with hold down action, therefore, must be maintained rotated during the operation for setting the vehicle in safe conditions.

When using the ByPass key, the display will show the related icon "3" (fig. 150436-2).

The ByPass Key function turns off automatically after 30 seconds, even if the key continues to be rotated.

After reaching the safety zone, the alarm stops and the ByPass key can be released.


**DANGER**

**DO NOT MAKE THE DESCENT OR THE EXTENSION OF BOOM MOVEMENTS AS THEY ARE AGGRAVATING MOVEMENTS FOR THE TIPPING.**

When using the bypass key, only make the return or the slope of the telescopic boom, bringing this in safety situation.


**WARNING**


When using the bypass key the anti-tipping systems are disabled.

It is mandatory to consult the load charts of the vehicle and the equipment installed before performing any maneuver.

Use the inclinometer and the letters on the boom to know the exact position of the load.


In these conditions do not perform aggravating movements for the stability of the vehicle, there is a danger of loss of stability and tipping.


**NOTE**

The bypass function is performed by a key to give the possibility to the Safety Officer to extract the key to prevent deactivating the anti-tipping system during normal working conditions.

7.3.12.3  
Longitudinal momentum indicator

The tipping indicator is displayed by a bar "1" (fig. 150435-1), which indicates the vehicle risk of tipping.

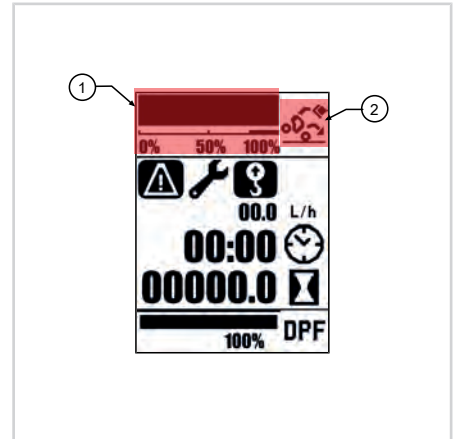

150435-1


The icon "2" has several icons and states depending on the working conditions of the vehicle.

Icon	State	Condition
	Steady on	Normal work
	Flashing	Pre-alarm
	Steady on	Alarm

7.3.12.4  
Operating modes key

The vehicle is designed for use with different types of equipment, therefore it is necessary to set the correct operating mode according to the equipment used at that time.

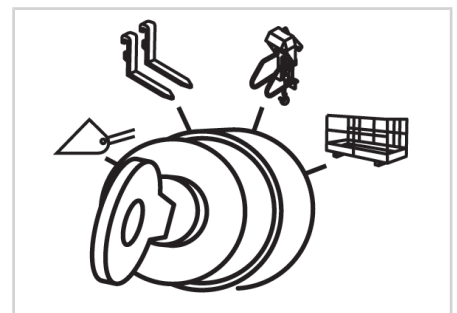

To select the operating mode required for the equipment, use the operating mode key moving it to the work mode symbol (fig. 150437-1).



150437-1

The operating modes are:

Symbol	Operating mode	Description	Combined equipment
	Bucket	To be used during digging	<ul style="list-style-type: none"> <li>• Bucket</li> <li>• Mixing buckets</li> </ul>
	Telescopic elevator	To be used to transport materials	<ul style="list-style-type: none"> <li>• Forks</li> <li>• Ladles</li> <li>• Material basket</li> </ul>

Symbol	Operating mode	Description	Combined equipment
	Mobile crane	To be used to lift materials	<ul style="list-style-type: none"> <li>Equipment with hook</li> <li>Equipment with winches</li> </ul>
	Elevating work platform *	To be used to lift persons, it enables the controls on the basket	<ul style="list-style-type: none"> <li>Man basket</li> </ul>

\* The "Elevating Work Platform" operating mode for lifting persons is provided only with the "Man basket pre-arrangement" option.



## WARNING



**The anti-tipping device state can be changed by a key to give the possibility to the Safety Officer to extract the key preventing to use a mode different than the selected one.**

The safety officer must ensure that the operator is informed, educated and trained in the use of the vehicle in the set mode.



## WARNING

**It is forbidden to use the vehicle with equipment other than that selected using the "Operating mode selector".**

The equipment applicable to vehicles in question refer to *DIECI* price list.

### Operating mode: Bucket

Bucket Mode, boom fully retracted, the anti-tipping device is automatically disabled. In case the boom is extracted or is subsequently extracted the operation will be with the same mode of the forks.

In this mode:

- The device always works properly and only indicates the load status.
- With closed boom the acoustic signal is not working to report the state of the load, but it starts operating only for reporting system errors.



## DANGER



If accessories other than that specified being combined equipment is used in "Bucket" mode there is a risk of tilting.

### Operating mode: Elevating work platform



## WARNING

It is allowed to use the basket from the cab with "forks" operating mode only to return the basket to the ground in the event of illness or injury of the operator is in it.

7.3.12.5

Operation check with anti-tipping device load



**ATTENTION**

It is mandatory to check the proper operation of the anti-tipping device at the beginning of each work restart.

For a proper check of the device carry out the following operations (fig. 150438-1):

- Place the vehicle on a flat, level surface and engage the parking brake.
- Make sure that the equipment is properly installed on the vehicle and that it is suitable for its capacity.
- Make sure that the anti-tipping device is set for the equipment currently used.
- Perform the test with warm vehicle engine.
- Refer to the load charts of the equipment installed and with closed boom pick up a load approximately weighing 50% of maximum capacity.
- Raise the load at about 50 cm from the ground.
- With the engine idling, extend the boom slowly. During this operation, check the display of the anti-tipping device. When the red zone is reached, the continuous audible signal will operate and the extension movement will stop simultaneously.
- At this point, check that aggravating movements for the equipment assembled are not permitted.
- Check that the stopping occurs at the point indicated in the load chart shown in notebook inside the cab.
- In the event that everything is working properly, it is possible to begin the work.

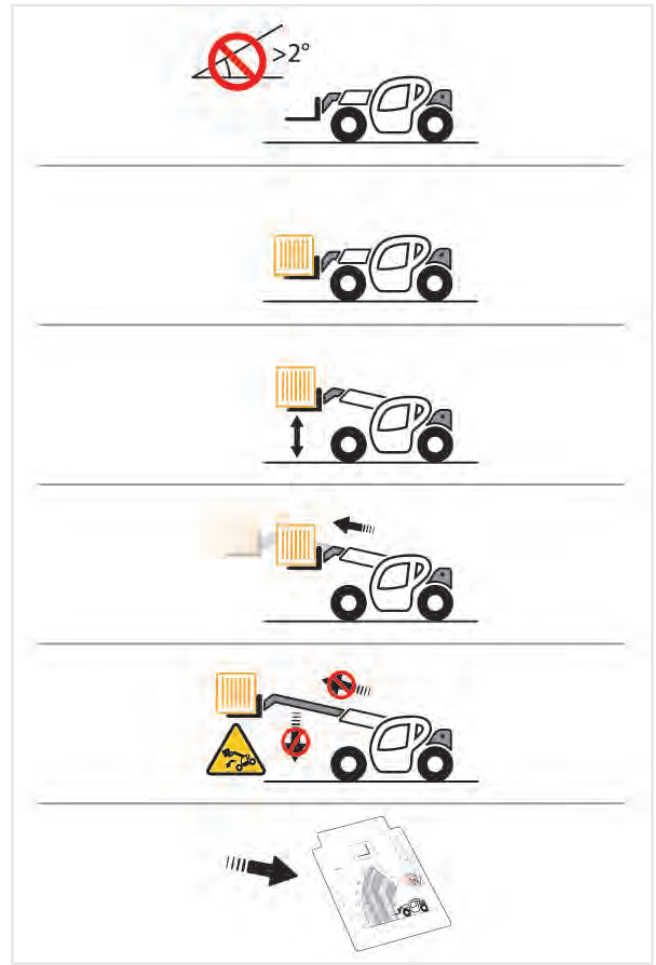


Figure: 150438-1



**DANGER**



**If there are any faults of the safety devices, stop the work until it has been repaired.**

Contact the *Dieci* service center.

7.3.12.6

Anti-tipping device errors list



**NOTE**

In case the vehicle is in error, contact a *Dieci* service center to solve the problem, indicating the error code reported.

For more information about the errors display, refer to the "Central instrument panel" chapter.

Icon	Example	Description
	000	SAR errors

Error code	Description
11	CRC error in the memory area that contains the software
12	CRC error in the memory area that contains the parameters
13	Program flow control error
14	Data exchange error between the two micro controls
15	Out of range +7Vdc, +18Vdc power supply voltage error
16	Internal power supply voltage of the first channel out of range 4.8 Vdc, 5.2Vdc error
17	Internal power supply voltage of the second channel out of range 4.8 Vdc, 5.2Vdc error
21	Cut Off1 output status consistency error
22	Cut Off 2 output status consistency error
23	WDO1 output status consistency error
24	Output 1 status consistency error
25	Output 2 status consistency error
26	WDO2 output status consistency error
31	Load cell A: CRC error of the load sensor internal parameters.
32	Load cell A: <ul style="list-style-type: none"> <li>• Off range signal reading error ( 10 - 990 )</li> <li>• With Vishay cell: <ul style="list-style-type: none"> <li>– <math>\pm 12.55</math> mV/V</li> <li>– Sensor not installed</li> <li>– Faulty sensor (power supply or CRC error sensor temperature table)</li> <li>– Sensor code not aligned with the supply voltage</li> <li>– Faulty A/D converter</li> </ul> </li> </ul>
33	Load cell A: Internal off range offset reading error (466-526)
34	Load cell A: Internal 5Vdc power supply error
35	Load cell A <ul style="list-style-type: none"> <li>• Thermal calibration not present error</li> <li>• (Valid only with Vishay cell) Temperature reading outside the permitted limits, typically <math>-20^{\circ}</math> +<math>85^{\circ}</math></li> </ul>
36	Load cell A: LIN bus message check error
37	Load cell A: Transmitted data CRC error
38	Load cell A <ul style="list-style-type: none"> <li>• LIN bus message receiving error</li> </ul>

Error code	Description
	<ul style="list-style-type: none"> <li>• (Valid only with Vishay cell) CAN-BUS messages receiving time-out</li> </ul>
39	Load cell A: LIN bus message control meter error
41	Load cell B: CRC error of the load sensor internal parameters
42	Load cell B: <ul style="list-style-type: none"> <li>• Off range signal reading error ( 10 - 990 )</li> <li>• With Vishay cell: <ul style="list-style-type: none"> <li>– <math>\pm 12.55</math> mV/V</li> <li>– Sensor not installed</li> <li>– Faulty sensor (power supply or CRC error sensor temperature table)</li> <li>– Sensor code not aligned with the supply voltage</li> <li>– Faulty A/D converter</li> </ul> </li> </ul>
43	Load cell B: Internal off range offset reading error (526-586)
44	Load cell B: Internal 5Vdc power supply error
45	Load cell B <ul style="list-style-type: none"> <li>• Thermal calibration not present error</li> <li>• (Valid only with Vishay cell) Temperature reading outside the permitted limits, typically <math>-20^{\circ}</math> +<math>85^{\circ}</math></li> </ul>
46	Load cell B: LIN bus message check error
47	Load cell B: Transmitted data CRC error
48	Load cell B: <ul style="list-style-type: none"> <li>• LIN bus message receiving error</li> <li>• (Valid only with Vishay cell) CAN-BUS messages receiving time-out</li> </ul>
49	Load cell B: LIN bus message control meter error
51	Too big difference between the readings of load cells A and B
52	Too big difference between load rates detected by channels 1 and 2
61	Outriggers on the ground double safety input consistency error.
62	Closed boom reading safety double input consistency error
63	Mode selector inputs consistency error
64	Exclusion key active at the start up error
65	Movements in block reset input active at the start up error.
66	Frequency feedback signal reading error



Error code	Description
67	External actuator 1 feedback signal reading error
68	External actuator 2 feedback signal reading error
71	Analog signal from joystick out of range reading signal error
72	Pressure transducer for joystick reset check reading error
73	CAN BUS messages receiving from the optional external unit error
81	Buttons pressed at the start up error
90	Message Counter error (10FF80E3)
91	Message Timeout error (10FF80E3)
92	Message Counter error (18FFF0E3)
93	Message Timeout error (18FFF0E3)
94	SARL response error, different response value
95	Calibration pin not connected any more during the calibration phase
96	Safe Road Traveling Position inconsistency error
97	Internal errors to the panel available
98	Internal errors to the panel available
99	Internal errors to the panel available

## 7.4 Mechanical steering selector

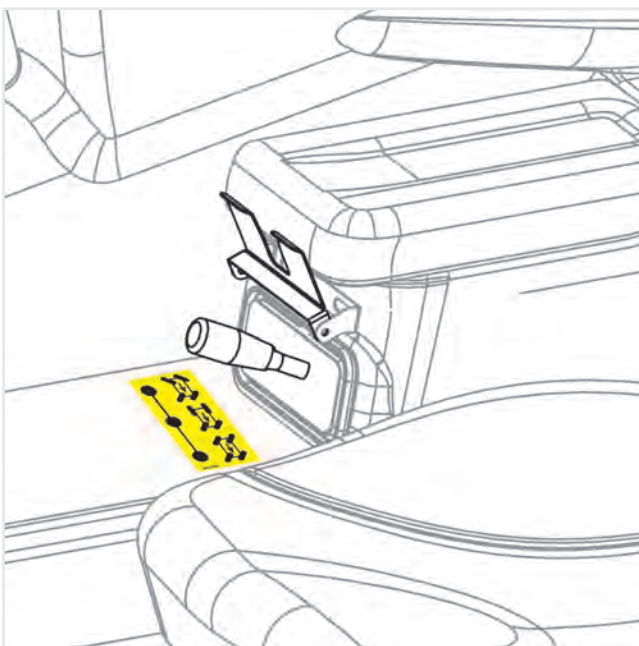


Figure: 150313-1

The steering selector (fig. 150313-1) is used to change the wheels steering mode:

To select a steering mode, move the lever indicating the corresponding symbol:

### A - Front-steering wheels

This type of steering allows to carry out a steering with only the 2 front wheels.

### B - Four-steering wheels

This type of steering allows to carry out the steering with all 4 wheels, so as to have the smallest turning radius possible.

### C - Transverse

This type of steering allows a transverse or crab steering, so as to have a lateral displacement of the vehicle.



## DANGER

**Make the steering selection only with the vehicle stopped.**

Before selecting a new type of steering, align the wheels with stopped vehicle.



## WARNING

When the transverse steering is selected, always operate at low speed.



## ATTENTION

For road travel is mandatory to select the 2-wheel steering mode and lock the selector with the dedicated fastener "2".

### Manual wheel alignment



## ATTENTION

Perform the wheel alignment periodically (every 8-10 hours) depending on the continuous use of the vehicle.

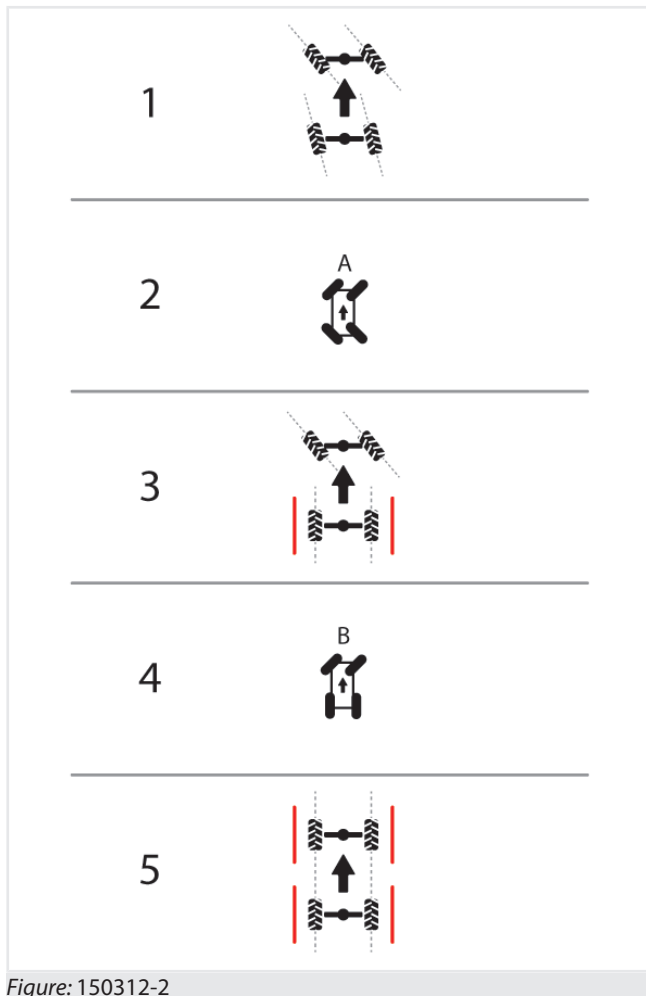


Figure: 150312-2

During normal use of the vehicle, frequently changing the steering modes, it is possible that the wheels are no longer perfectly aligned with each other.

To perform a proper wheel alignment, perform the following steps:

1. Stop the vehicle on a level ground.
2. Select the **B** or **C** steering mode
3. Turn the steering wheel until the rear wheels are aligned to the machine.
4. Select the **A** steering mode
5. Turn the steering wheel until the front wheels are aligned to the machine.
6. Try to move slowly for a few meters to verify that the vehicle travels properly in a straight line.

**If at the end of the alignment the machine still does not proceed in a straight line, repeat the wheels alignment.**

## 7.5 Wheels alignment \*



### NOTE

The automatic wheels alignment is an optional accessory.



### ATTENTION

Perform the wheel alignment periodically (every 8-10 hours) depending on the continuous use of the vehicle.

During normal use of the vehicle, frequently changing the steering modes, it is possible that the wheels are no longer perfectly aligned with each other.

The automatic wheels alignment allows to quickly and accurately align the wheels.

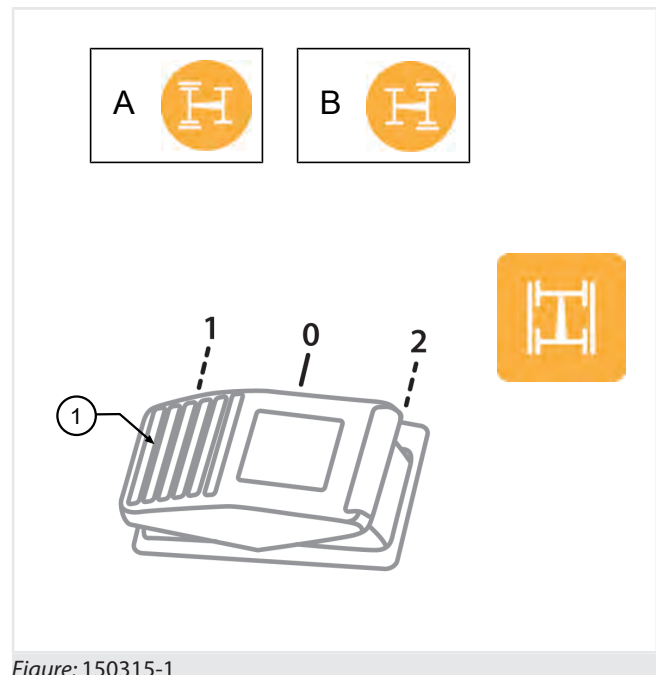


Figure: 150315-1

To align the wheels using the automatic wheel alignment, it is necessary to (fig. 150315-1):

- Stop the vehicle on a level ground.
- Select the 4-wheel or transverse steering mode.
- Press the button. After pressing the buttons the indicator lights "A" and "B" will start flashing.
- Turn the steering wheel to bring the rear wheels aligned to the vehicle, until the indicator light "A" stops flashing.
- Select the "front steering wheels" steering mode.
- Turn the steering wheel to bring the front wheels aligned to the vehicle, until the indicator light "B" stops flashing.

The wheel alignment is now completed, the steering wheel will return to the mode originally selected.



**WARNING**

Do not use the vehicle until the alignment procedure has been completed.



**NOTE**

Press the button "1" for more than 3 seconds to activate the display mode. In display mode all the indicator lights "A" and "B" will turn on only if the wheels are aligned to the chassis.

**7.6 Joystick**

**7.6.1 Joystick with capacitive deadman sensor**

The Joystick allows you to operate all the telescopic boom movements.

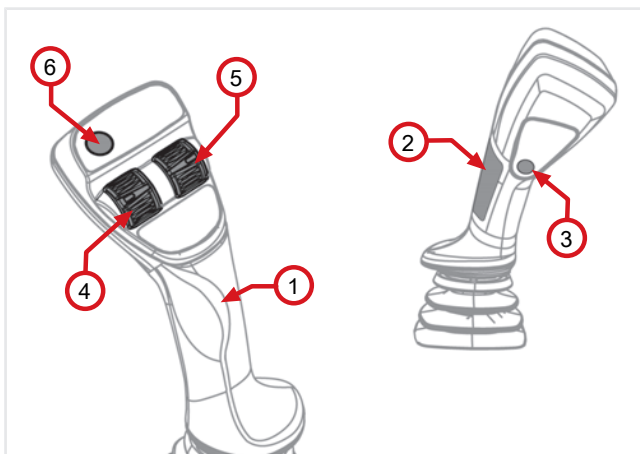


Figure: 150450-1

It consists of (fig. 150450-1):

1 Grip	2 Capacitive sensor
3 Deadman button	4 Extension/retraction roller
5 Services roller	6 Continuous oil function button **

\*\* Components depending on optional equipment or pre-arrangements.



**ATTENTION**

**The deadman joystick function prevents any accidental movements of the boom.**

The Joystick features a "deadman" capacitive sensor: to enable it to function you need to place your hand on the grip "1" correctly so as to activate the capacitive sensor "2".

If your hand is not resting on the capacitive sensor "2", boom movements are disabled.



**WARNING**

Before operating the boom, make sure that the area around the vehicle is clear.

Make sure that the loads to be lifted are included in the vehicle load charts.

Adjust the seat so you can hold the joystick correctly (fig. 150450-2).

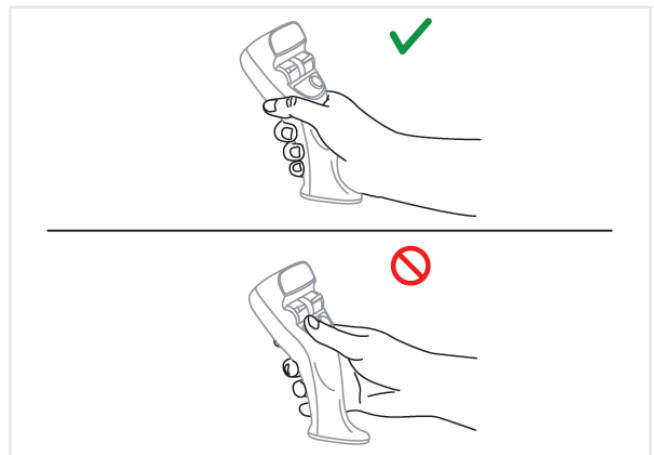


Figure: 150450-2

It is possible to use the deadman button "3" if the sensor "2" fails to work properly.

Unless you hold the joystick correctly or press the deadman button, all the joystick functions are disabled.

The movements that are possible using the joystick are:

CONTROL	MOVEMENT	
Grip forwards	Boom lower	
Grip backwards	Boom up	
Grip to the left	Tilt upwards	
Grip to the right	Tilt downwards	

CONTROL	MOVEMENT	
Extension/ retraction forwards	roller	Boom extension
Extension/ retraction backwards	roller	Boom retraction
Services forwards	roller	Oil to the hydraulic socket selected (color <b>blue</b> or sign "+")
Services backwards	roller	Oil to the hydraulic socket selected (color <b>red</b> or sign "-")



### NOTE

The joystick controls correspond to proportional movements of the vehicle.

## 7.6.2

### Joystick with capacitive deadman sensor with FNR function

The Joystick allows you to operate all the telescopic boom movements.

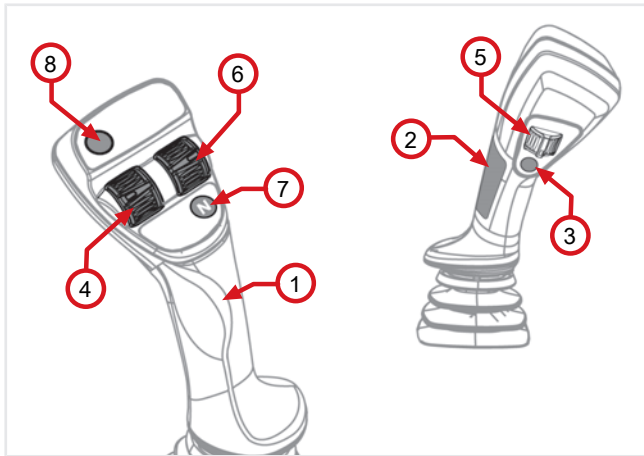


Figure: 150450-3

It consists of (fig. 150450-3):

1 Grip	2 Capacitive sensor
3 Deadman button	4 Extension/retraction roller
5 Services roller	6 F/R roller (forward/backward)
7 N button (idle)	8 Continuous oil function button **

\*\* Components depending on optional equipment or pre-arrangements.



### WARNING

The F/R roller and the N button do not need the deadman enable to operate

To enable the F/R roller (forward / backward) is necessary to maintain the movement selection lever in N.

The controls given by the movement selector lever will have priority over those of the joystick.



### ATTENTION

**The deadman joystick function prevents any accidental movements of the boom.**

The Joystick features a "deadman" capacitive sensor: to enable it to function you need to place your hand on the grip "1" correctly so as to activate the capacitive sensor "2".

If your hand is not resting on the capacitive sensor "2", boom movements are disabled.



### WARNING

Before operating the boom, make sure that the area around the vehicle is clear.

Make sure that the loads to be lifted are included in the vehicle load charts.

Adjust the seat so you can hold the joystick correctly (fig. 150450-4).

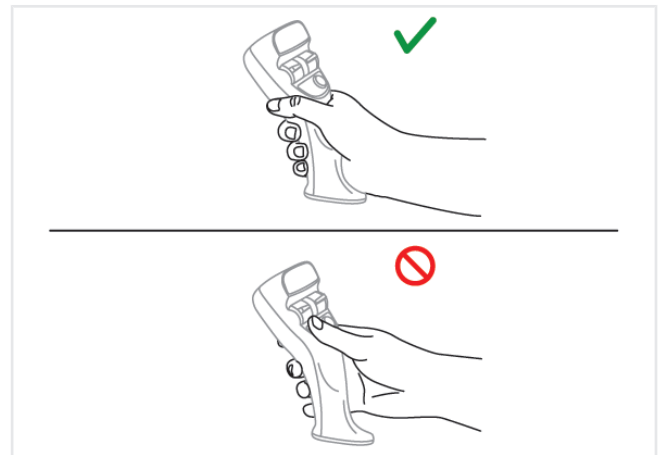


Figure: 150450-4

It is possible to use the deadman button "3" if the sensor "2" fails to work properly.

Unless you hold the joystick correctly or press the deadman button, all the joystick functions are disabled.

The movements that are possible using the joystick are:

CONTROL	MOVEMENT	
Grip forwards	Boom lower	
Grip backwards	Boom up	
Grip to the left	Tilt upwards	
Grip to the right	Tilt downwards	
Extension/retraction roller forwards	Boom extension	
Extension/retraction roller backwards	Boom retraction	
Services roller forwards	Oil to the hydraulic socket selected (color <b>blue</b> or sign "+")	
Services roller backwards	Oil to the hydraulic socket selected (color <b>red</b> or sign "-")	
F/R roller forwards	The vehicle runs in forwards gear ( <b>F</b> )	
F/R roller backward	The vehicle runs in reverse gear ( <b>R</b> )	
N button pressed	The F/R function is deactivated and the vehicle returns to neutral ( <b>N</b> )	



**NOTE**

The joystick controls correspond to proportional movements of the vehicle.

**7.6.3**

**Joystick with mechanical deadman button**

**Joystick with standard mechanical deadman button.**

The Joystick allows you to operate all the telescopic boom movements.

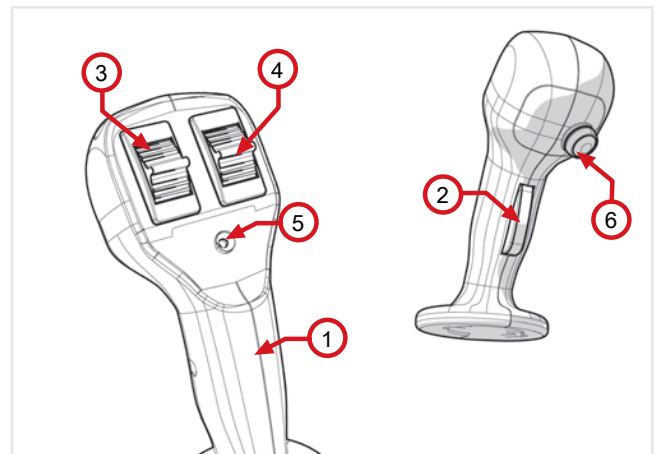


Figure: 150451-1

It consists of (fig. 150451-1):

1 Grip	2 "Deadman" button
3 Extension/retraction roller	4 Services roller
5 Continuous oil function button **	6 Continuous oil function active led **

\*\* Components depending on optional equipment or pre-arrangements.



**ATTENTION**

**The deadman joystick function prevents any accidental movements of the boom.**

The Joystick is with mechanical "deadman" sensor: to enable its operation it is necessary to hold down the deadman button "2" on the joystick grip for the duration of the operation.

Without pressing the Deadman button, all joystick functions are disabled.



**WARNING**

Before operating the boom, make sure that the area around the vehicle is clear.

Make sure that the loads to be lifted are included in the vehicle load charts.

The movements that are possible using the joystick are:

CONTROL	MOVEMENT	
Grip forwards	Boom lower	
Grip backwards	Boom up	
Grip to the left	Tilt upwards	

CONTROL	MOVEMENT	
Grip to the right	Tilt downwards	
Extension/retraction roller forwards	Boom extension	
Extension/retraction roller backwards	Boom retraction	
Services forwards	Oil to the hydraulic socket selected (color <b>blue</b> or sign "+")	
Services backwards	Oil to the hydraulic socket selected (color <b>red</b> or sign "-")	



**NOTE**

The joystick controls correspond to proportional movements of the vehicle.

**Joystick with capacitive deadman switch with FNR function.**

The Joystick allows you to operate all the telescopic boom movements.

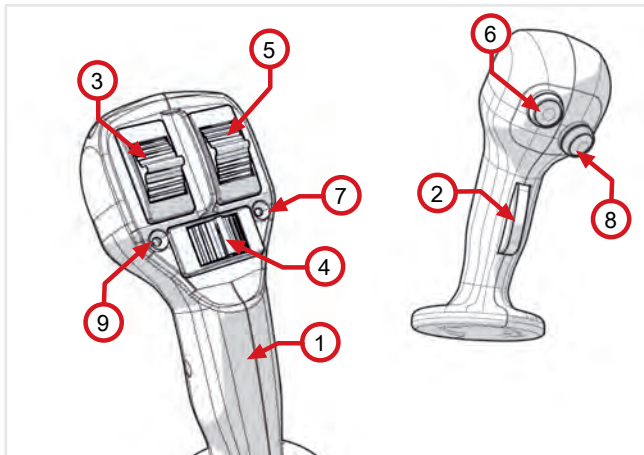


Figure: 150451-2

It consists of (fig. 150451-2):

1 Grip	2 "Deadman" button
3 Extension/retraction roller	4 Services roller
5 F/R roller (forward/backward)	6 N button (idle)
7 Active F/R led	8 Continuous oil function button **

9 Continuous oil function active led \*\*

\*\* Components depending on optional equipment or pre-arrangements.

The active F/R function LED "9" and the active continuous oil function LED "8", flash when the related function is being used.



**WARNING**

The F/R roller and the N button do not need the deadman enable to operate

To enable the F/R roller (forward / backward) is necessary to maintain the movement selection lever in N.

The controls given by the movement selector lever will have priority over those of the joystick.



**ATTENTION**

**The deadman joystick function prevents any accidental movements of the boom.**

The Joystick is with mechanical "deadman" sensor: to enable its operation it is necessary to hold down the deadman button "2" on the joystick grip for the duration of the operation.

Without pressing the Deadman button, all joystick functions are disabled.



**WARNING**

Before operating the boom, make sure that the area around the vehicle is clear.

Make sure that the loads to be lifted are included in the vehicle load charts.

The movements that are possible using the joystick are:

CONTROL	MOVEMENT	
Grip forwards	Boom lower	
Grip backwards	Boom up	
Grip to the left	Tilt upwards	
Grip to the right	Tilt downwards	
Extension/retraction roller forwards	Boom extension	

CONTROL	MOVEMENT	
Extension/retraction roller backwards	Boom retraction	
Services forwards roller	Oil to the hydraulic socket selected (color <b>blue</b> or sign "+")	
Services backwards roller	Oil to the hydraulic socket selected (color <b>red</b> or sign "-")	
F/R roller forwards	The vehicle runs in forwards gear ( <b>F</b> )	
F/R roller backward	The vehicle runs in reverse gear ( <b>R</b> )	
N button pressed	The F/R function is deactivated and the vehicle returns to neutral ( <b>N</b> )	



**NOTE**

The joystick controls correspond to proportional movements of the vehicle.

**7.6.4**  
Joystick for man basket prearrangement

Joystick with standard mechanical deadman button.

The Joystick allows you to operate all the telescopic boom movements.

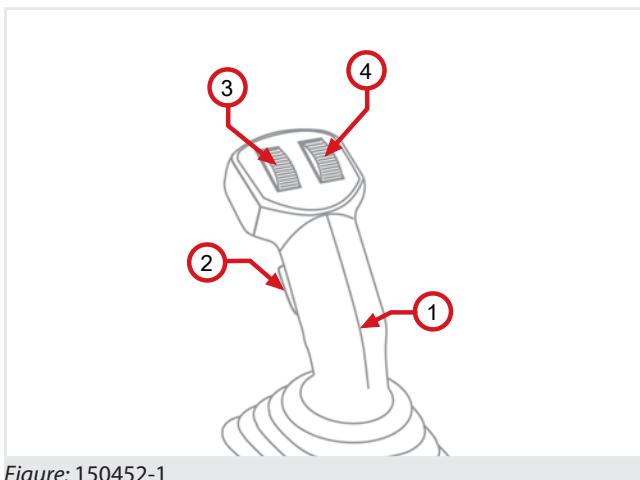


Figure: 150452-1

It consists of (fig. 150452-1):

1 Grip	2 "Deadman" button
3 Extension/retraction roller	4 Services roller



**ATTENTION**

**The deadman joystick function prevents any accidental movements of the boom.**

The Joystick is with mechanical "deadman" sensor: to enable its operation it is necessary to hold down the deadman button "2" on the joystick grip for the duration of the operation.

Without pressing the Deadman button, all joystick functions are disabled.



**WARNING**

Before operating the boom, make sure that the area around the vehicle is clear.

Make sure that the loads to be lifted are included in the vehicle load charts.

The movements that are possible using the joystick are:

CONTROL	MOVEMENT	
Grip forwards	Boom lower	
Grip backwards	Boom up	
Grip to the left	Tilt upwards	
Grip to the right	Tilt downwards	
Extension/retraction roller forwards	Boom extension	
Extension/retraction roller backwards	Boom retraction	
Services forwards roller	Oil to the hydraulic socket selected (color <b>blue</b> or sign "+")	
Services backwards roller	Oil to the hydraulic socket selected (color <b>red</b> or sign "-")	



## NOTE

The joystick controls correspond to proportional movements of the vehicle.

### 7.6.5

#### Joystick error list



## NOTE

In case the vehicle is in error, contact a *Dieci* service center to solve the problem, indicating the error code reported.

For more information about the errors display, refer to the "Central instrument panel" chapter.

Icon	Example	Description
	000.E4	Joystick errors

CODE	COMPONENT	ALARM
006.E4		Power supply voltage 5V low with Engine ON
007.E4		Power supply voltage 5V high with Engine ON
010.E4	SAR	Invalid input voltage
011.E4		Invalid input voltage
015.E4		SLOW MOTION signal inconsistent with the active SAR alarm Pre-Alarm not active
016.E4		SAR alarm active
017.E4		SLOW MOTION pre -alarm active
018.E4		Inconsistency between 2 CUT OFF signals
025.E4	Hand Throttle	One of the 2 switches pressed or broken at the ENGINE START
026.E4		Pressed simultaneously
030.E4	Pedal Throttle	Redundancy control out of tolerance
031.E4		At least one signal out of range
041.E4	Swiveling Rod Microswitch	ENGINE START with mechanical lever not released or broken microswitch
050.E4	FNR	Invalid input voltage

CODE	COMPONENT	ALARM
090.E4	Power supply +5Vdc	Output voltage lower than the lower limit of operation of the Joystick and of the rotation sensor (Control Unit Malfunction)
091.E4		Output voltage higher than the upper limit of operation of the Joystick and of the rotation sensor (Control Unit Malfunction)
101.E4	SWITCH JOYSTICK	ENGINE START with deadman switch not released or broken
110.E4	Roller JOYSTICK	Redundancy control out of tolerance
111.E4		At least one signal out of range
114.E4		Redundancy control out of tolerance
115.E4		At least one signal out of range
118.E4		Redundancy control out of tolerance
119.E4		At least one signal out of range
140.E4	Low Idle Up solenoid valve	Output not commanded but a too high current consumption has been detected
141.E4		Output commanded but a too low current consumption has been detected
142.E4		Output commanded but a too high current consumption or a short circuit have been detected
145.E4		Button pressed during the engine starting
150.E4	Solenoid valve Distributor	Not commanded but a current consumption exceeding the threshold has been detected (Control Unit Malfunction)
151.E4		Commanded but the control unit does not detect a current consumption exceeding the threshold (Control Unit or Distributor Malfunction)
152.E4		Output commanded but the control unit detects a high consumption (Control Unit or Distributor Malfunction)
160.E4	Solenoid valve Servo control	Not commanded but a current consumption exceeding the threshold has been detected (Control Unit Malfunction)



CODE	COMPONENT	ALARM	CODE	COMPONENT	ALARM
161.E4		Commanded but the control unit does not detect a current consumption exceeding the threshold (Control Unit or Distributor Malfunction)	210.E4	Extension IN distributor solenoid valve command	Not commanded but a current consumption exceeding the threshold has been detected (Control Unit Malfunction)
162.E4		Output commanded but the control unit detects a high consumption (Control Unit or Distributor Malfunction)	211.E4		Commanded but the control unit does not detect a current consumption exceeding the threshold (Control Unit or Distributor Malfunction)
170.E4	Forward Command	Not commanded but a current consumption exceeding the threshold has been detected (Control Unit Malfunction)	212.E4		Output commanded but the control unit detects a high consumption (Control Unit or Distributor Malfunction)
172.E4		Output commanded but the control unit detects a high consumption (Control Unit or Distributor Malfunction)	220.E4	Auxiliary distributor A solenoid valve command	Not commanded but a current consumption exceeding the threshold has been detected (Control Unit Malfunction)
180.E4	Reserve Command	Not commanded but a current consumption exceeding the threshold has been detected (Control Unit Malfunction)	221.E4		Commanded but the control unit does not detect a current consumption exceeding the threshold (Control Unit or Distributor Malfunction)
182.E4		Output commanded but the control unit detects a high consumption (Control Unit or Distributor Malfunction)	222.E4		Output commanded but the control unit detects a high consumption (Control Unit or Distributor Malfunction)
190.E4	Transmission Disconnect Command	Not commanded but a current consumption exceeding the threshold has been detected (Control Unit Malfunction)	230.E4	Auxiliary distributor B solenoid valve command	Not commanded but a current consumption exceeding the threshold has been detected (Control Unit Malfunction)
192.E4		Output commanded but the control unit detects a high consumption (Control Unit or Distributor Malfunction)	231.E4		Commanded but the control unit does not detect a current consumption exceeding the threshold (Control Unit or Distributor Malfunction)
200.E4	Extension OUT distributor solenoid valve command	Not commanded but a current consumption exceeding the threshold has been detected (Control Unit Malfunction)	232.E4		Output commanded but the control unit detects a high consumption (Control Unit or Distributor Malfunction)
201.E4		Commanded but the control unit does not detect a current consumption exceeding the threshold (Control Unit or Distributor Malfunction)	240.E4	Hydraulic power function	Output not commanded but a too high current consumption has been detected
202.E4		Output commanded but the control unit detects a high consumption (Control Unit or Distributor Malfunction)	242.E4		Output commanded but an anomalous current consumption or a short circuit have been detected

## 7.7

### Continuous oil function \*



#### NOTE

The oil continuous function is an accessory option.

The continuous oil function allows to maintain a constant volume of oil passing through the hydraulic sockets without acting consistently on the selector of the joystick.



#### DANGER

**Do not change the hydraulic sockets selection while using the continuous oil function; the hydraulic coupler would begin to work directly according to the flow set by the function.**

Risk of damage to things, people and mechanics of the machine or equipment.



#### ATTENTION

With the continuous oil function enabled do not move away from the driver's cab.



#### NOTE

With the continuous oil function active it is still possible to use the joystick to move the boom.

#### 7.7.1

### Continuous oil function on Joystick with capacitive deadman

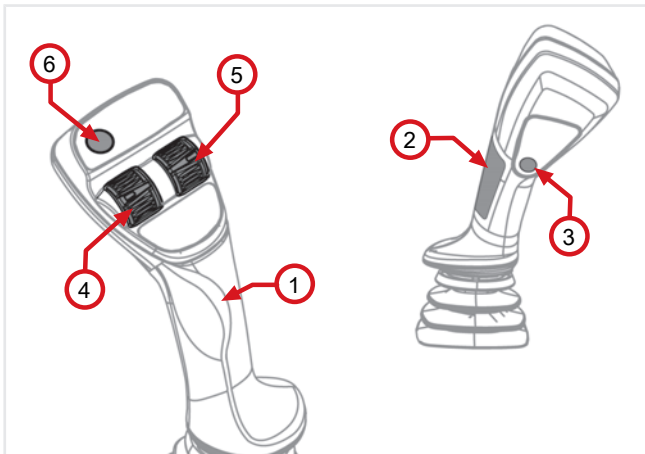


Figure: 150455-1

**To activate the function it is necessary to (fig. 150455-1):**

- Select, using the hydraulic socket switches and the Switches switch on the boom head (if installed), the desired hydraulic socket on which to activate the function.
- Use the services roller on the joystick to set the desired flow of oil.
- Maintain the flow of oil through the services roller and simultaneously press the button "6" to activate the continuous oil function.

When light of button "6" is on, on the joystick, it indicates that the continuous oil function is active.

**To disable the function it is necessary to:**

- Press the button "6".

When the light of button "6" on the joystick goes off, it indicates that the continuous oil function is disabled.

#### 7.7.2

### Continuous oil function on Joystick with mechanical deadman

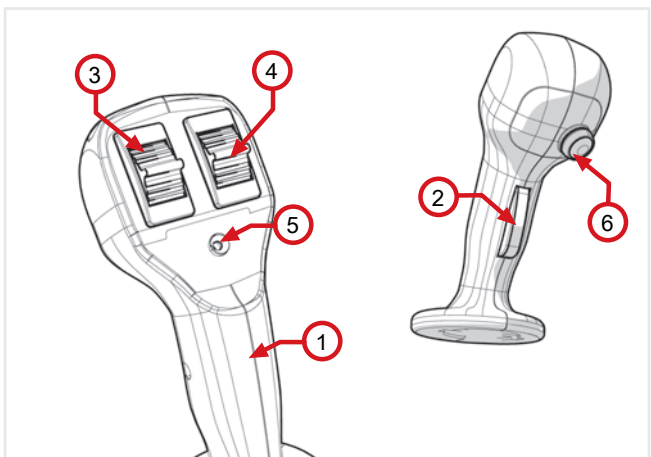


Figure: 150456-1

**To activate the function it is necessary to (fig. 150456-1):**

- Select, using the hydraulic socket switches and the Switches switch on the boom head (if installed), the desired hydraulic socket on which to activate the function.
- Use the services roller on the joystick to set the desired flow of oil.
- Maintain the flow of oil through the services roller and simultaneously press the button "6" to activate the continuous oil function.

The LED "5" coming on, on the joystick, indicates that the continuous oil function is active.

**To disable the function it is necessary to:**

- Press the button "6".

When the LED "5" on the joystick goes off it indicates that the continuous oil function is disabled.

### 7.7.3 Continuous oil function for vehicles with man basket function

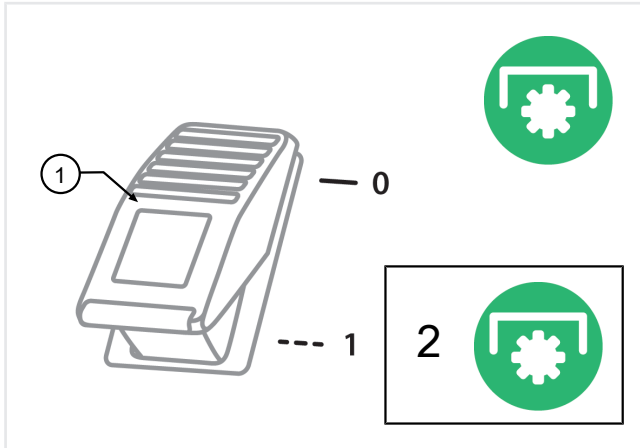


Figure: 150457-1

To enable the continuous oil function it is necessary to (fig. 150457-1):

- Select, using the hydraulic socket switches and the Switches switch on the boom head (if installed), the desired hydraulic socket on which to activate the function.
- Use the joystick control used for services (service roller or lever) to set the desired oil flow rate.
- Press the switch "1" to enable the continuous oil function.

When the indicator light "2" next to the button "1" flashes it indicates that the continuous oil function is active.



#### WARNING

The continuous oil function is disabled temporarily when the joystick is moved without pressing the "Deadman" button.

The continuous oil function will resume as soon as the joystick returns to the rest position.

## 7.8 Rear hydraulic sockets \*



#### NOTE

\* The presence and number of rear hydraulic sockets present on the vehicle may vary depending on the optional equipment.

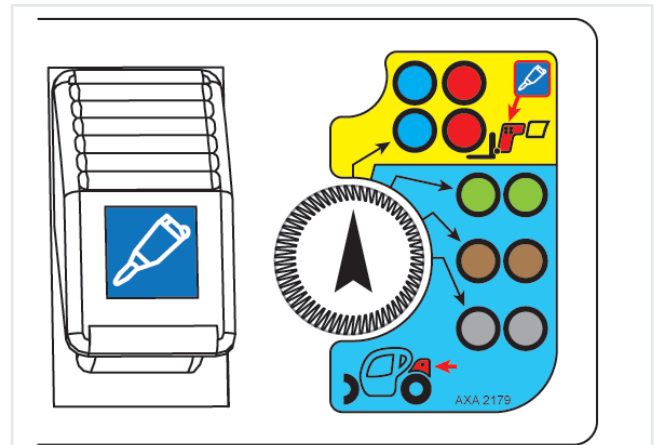


Figure: 150202-1

The hydraulic sockets switch allows to select which hydraulic sockets must be operated by the joystick and is present only on vehicles that are equipped with rear hydraulic sockets and on the telescopic boom head.

Turn the knob "1" (fig. 150202-1) to activate the different hydraulic sockets on the vehicle:

- A - Sockets on boom head
- B - Rear Green sockets
- C - Rear Brown sockets
- D - Rear Gray sockets

The selection of any optional outlets located on the boom is performed with the hydraulic sockets on the boom head "2" - See the next chapter.



#### NOTE

If there are no rear brown and gray sockets, if selected through the knob "1", the green socket will be activated.



#### DANGER

**Danger of moving the wrong hydraulic socket.**

Do not operate the hydraulic sockets using the joystick during the selection of the hydraulic socket. Make the selection of the hydraulic socket and use the joystick to control the hydraulic socket selected only at a later time.

After connecting the equipment to the hydraulic sockets before starting the job, check in a safe location that all the controls are working properly. During the test, be careful not to create danger or damage to persons, animals or things.



**WARNING**

Pay attention to the connections of the hydraulic socket: moving the service lever placed on the joystick forward, towards the open padlock (see Joystick chapter) oil will be sent to the sockets marked with the symbol "+".



**DANGER**

**Danger of moving the wrong hydraulic socket.**

Do not operate the hydraulic sockets using the joystick during the selection of the hydraulic socket. Make the selection of the hydraulic socket and use the joystick to control the hydraulic socket selected only at a later time.

After connecting the equipment to the hydraulic sockets before starting the job, check in a safe location that all the controls are working properly. During the test, be careful not to create danger or damage to persons, animals or things.

7.9

**Hydraulic sockets and electrical contact on boom head \***



**NOTE**

\* The presence and number of hydraulic sockets and electrical contacts present on the boom head may vary depending on optional equipment.



**WARNING**

Pay attention to the connections of the hydraulic socket: moving the service lever placed on the joystick forward, towards the open padlock (see Joystick chapter) oil will be sent to the sockets marked with the color **BLUE**.

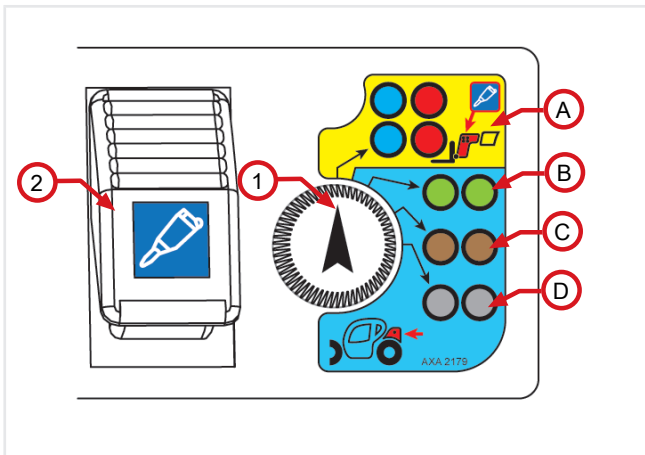



Figure: 150203-1

If there are also rear hydraulic sockets on the vehicle, in order to activate the hydraulic sockets and electrical sockets placed on the telescopic boom head it is first necessary to select the couplings on boom head through the hydraulic couplings selector "1" (fig. 150203-1) - See the previous chapter.

The sockets switch on the boom head "2" has several functions and positions depending on the optional attachments installed on the vehicle.


Once selected the desired hydraulic socket, it is necessary to use the services lever on the joystick to operate the desired movement.

**Standard hydraulic socket + Electrical contact**

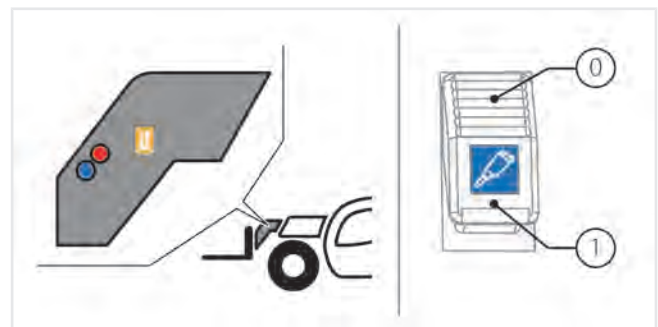

- 0 Electrical contact off
- 1 Electrical contact on


**Standard hydraulic socket + Additional hydraulic socket + Electrical contact**

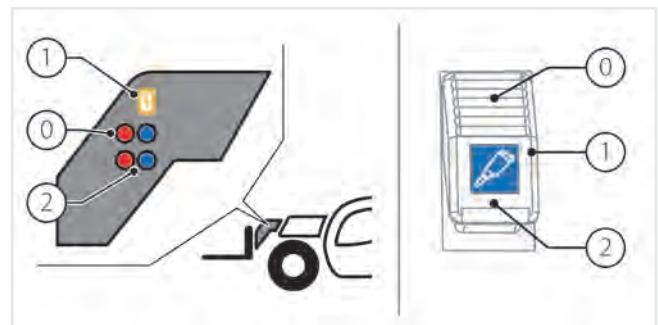

- 0 Standard hydraulic socket

- 1 Electrical contact on
- 2 Additional hydraulic socket

**Standard hydraulic socket + Additional hydraulic socket + Electrical contact / Second additional hydraulic socket**

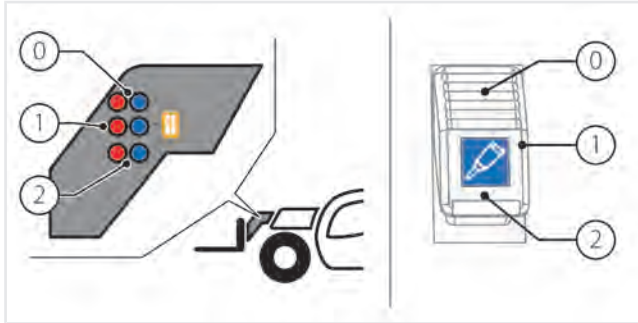

- 0 Standard hydraulic socket
- 1 Electrical contact on (In case the plug of the valve is connected to the socket of the electrical contact, Second additional hydraulic socket is enabled)
- 2 Additional hydraulic socket

**7.10 Electrical contact on boom head \***



**NOTE**

\* The electric contact on the boom head is an optional accessory.

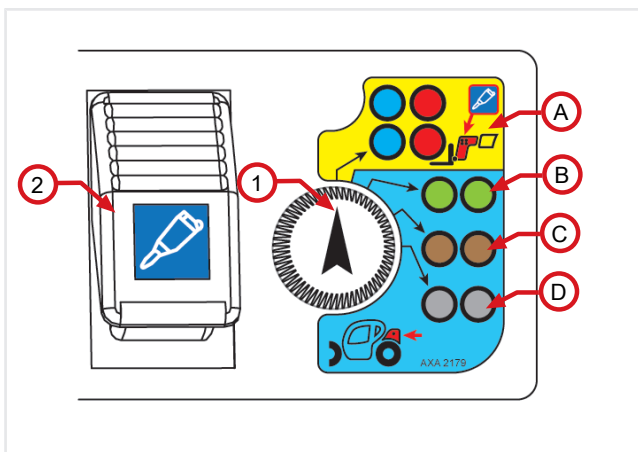


Figure: 150204-1

At the socket of the electric contact on the telescopic boom head (fig. 150204-1) it is possible to connect:

- The plug of the solenoid valve of the Second Additional hydraulic socket

- The plug of any equipment installed on the attachment holding plate.

To activate the electric contact, place the Sockets switch on the boom head in position "1" - See table in the previous chapter.



**NOTE**

For information on how to make the connections to the electrical socket, refer to the "Electrical connections" chapter.



**WARNING**

**Do not connect users with nominal voltage greater than 12 V and amperage greater than 3 A.**

Risk of damage to the electrical system.

**7.11 Equipment quick coupling \***



**NOTE**

\* The equipment quick coupling is an optional accessory.

The equipment quick coupling allows the operator to install and fasten the equipment to the attachment holding plate.

There are different models of quick couplings for equipment, they can be with a single lock cylinder lock or double lock cylinder, the procedures for use change according to the type of hydraulic system of the vehicle.

## 7.11.1

## Quick coupling with single lock on closed circuit vehicle

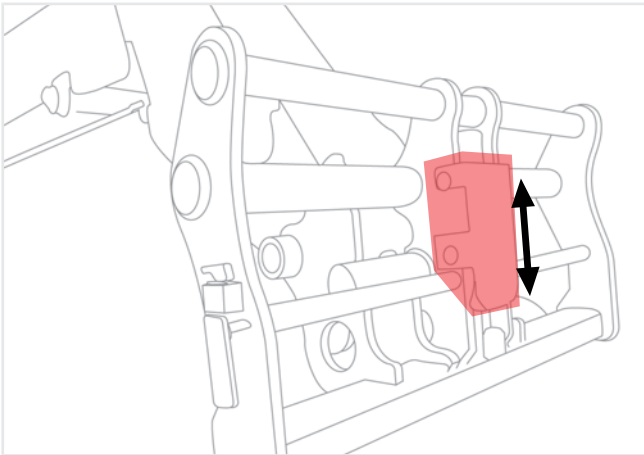


Figure: 150206-1

## 7.11.2

## Quick coupling with single lock on open circuit vehicle



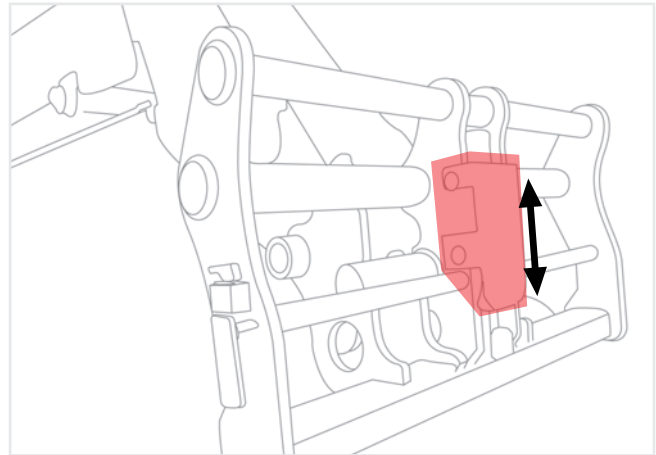



Figure: 150206-4

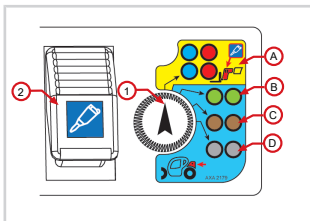


150206-2

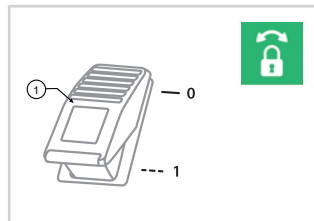

150206-3

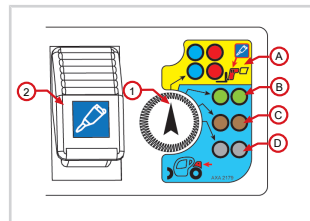

150206-5

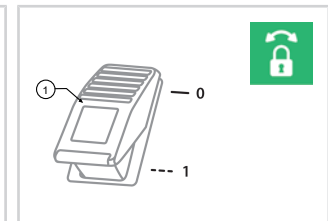

150206-6

To use the quick coupling (fig. 150206-1) for the equipment installation it is necessary to:

1. Carry out the normal hooking operations set out in paragraphs 1, 2, 3 and 4 of the chapter "Equipment installation".
2. Select the sockets on the boom head "A" (fig. 150206-2) through the Hydraulic sockets selector "1" (if present).
3. Press the Quick Coupling button "1" (fig. 150206-3) and at the same time operate the roller on the services joystick to open the quick coupling.
4. Tilt the plate upward to make sure that the equipment is fully resting on the attachment holder plate.
5. Press the Quick Coupling button "1" and at the same time operate the roller on the services joystick in the opposite direction, to close the quick coupling and lock the equipment.
6. If the equipment is not properly fastened, repeat the installation.


**DANGER**

Do not operate without having properly secured the equipment to the plate, danger of load and equipment falling.

To use the quick coupling (fig. 150206-4) for the equipment installation it is necessary to:

1. Carry out the normal hooking operations set out in paragraphs 1, 2, 3 and 4 of the chapter "Equipment installation".
2. Select the sockets on the boom head "A" (fig. 150206-5) through the Hydraulic sockets selector "1" (if present).
3. Press the Quick Coupling button "1" (fig. 150206-6) and at the same time operate the roller on the services joystick to open the quick coupling.
4. Keep the quick coupling open, tilt the plate upward to make sure that the equipment is fully resting on the attachment holding plate.
5. Release the roller on the services joystick and the Quick coupling button "2" to close the quick coupling and lock the equipment.
6. If the equipment is not properly fastened, repeat the installation.


**DANGER**

Do not operate without having properly secured the equipment to the plate, danger of load and equipment falling.

**7.11.3**  
Quick coupling with double cylinder


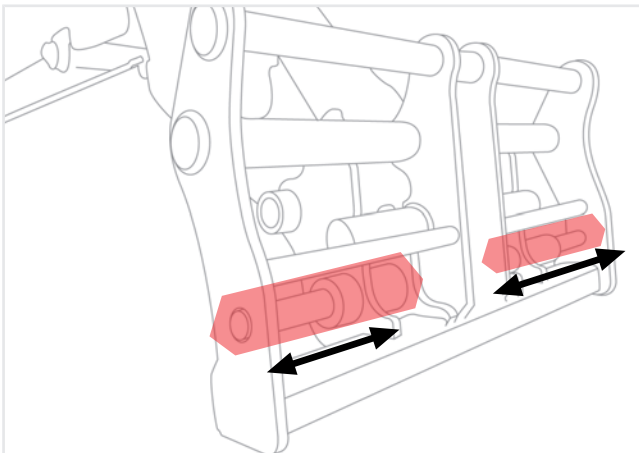


Figure: 150206-7

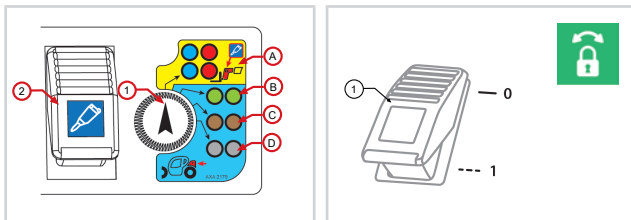

150206-8

150206-9

To use the quick coupling (fig. 150206-4) for the equipment installation it is necessary to:

1. Carry out the normal hooking operations set out in paragraphs 1, 2, 3 and 4 of the chapter "Equipment installation".
2. Select the sockets on the boom head "A" (fig. 150206-5) through the Hydraulic sockets selector "1" (if present).
3. Press the Quick Coupling button "1" (fig. 150206-6) and at the same time operate the roller on the services joystick to open the quick coupling.
4. Keep the quick coupling open, tilt the plate upward to make sure that the equipment is fully resting on the attachment holding plate.
5. Release the roller on the services joystick and the Quick coupling button "2" to close the quick coupling and lock the equipment.
6. If the equipment is not properly fastened, repeat the installation.



**DANGER**


Do not operate without having properly secured the equipment to the plate, danger of load and equipment falling.

**7.12**  
Plate translation unit\*



**NOTE**

\* The plate translation unit is an optional accessory.

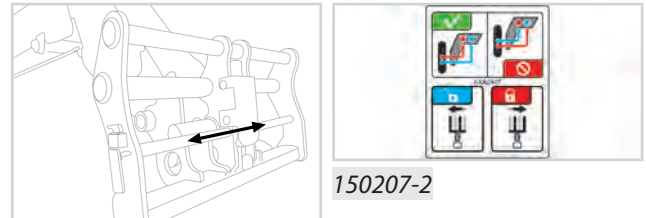

150207-1

150207-2

The plate shifting unit (fig. 150207-1) allows the attachment holding plate and related equipment installed, to make small lateral movements.

To use the plate shifting unit, one of the two operations must be carried out (depending on the other options installed on the vehicle):

- Select the sockets on the boom head to which the Plate shifting unit is connected through the button marked with the symbol (fig. 150207-3),
- Press and hold the button marked with the symbol (fig. 150207-4).



150207-3



150207-4

With the boom head socket active, use the services roller on the joystick to move the plate to the right or left. Refer to the instructions shown in the figure (fig. 150207-2) and the "Joystick" chapter.



**WARNING**

Before starting to work, make some test movements in an area free of people or things.

## 7.13 Transmission

### 7.13.1 Movement selection lever



#### ATTENTION

In order to select a direction of movement, it is necessary to move the movement selection lever towards the steering wheel. This shifting protects the lever from accidental operation.

With the movement selection lever in position other than "N", it is not possible to start the vehicle engine.

The movement selection lever, at the left of the steering wheel (fig. 150457-1), allows to set the direction of travel of the vehicle.

- Pull the lever towards the steering wheel and push it forward ("F" direction) to proceed forward.
- Pull the lever towards the steering wheel and pull it back ("R" direction) to proceed in reverse. When driving in reverse, an alarm sounds intermittently.

While holding the lever in an intermediate position ("N") the transmission is in neutral and the vehicle is partially braked.

With the forward/reverse movement gear selection lever in position other than "N", the engine will not start.

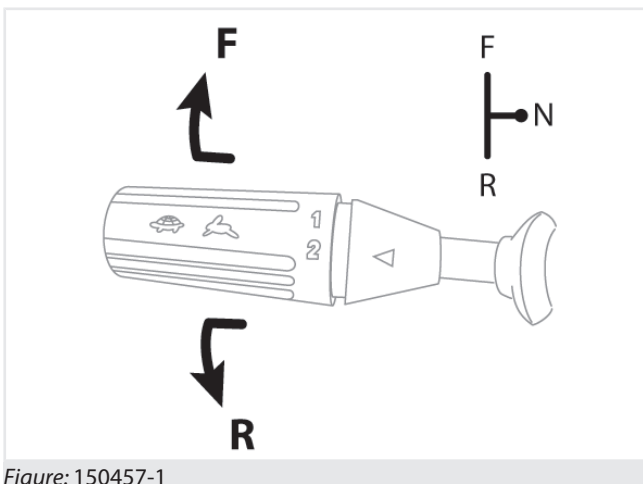


Figure: 150457-1

After selecting a direction of movement, the corresponding indicator lights on the instrument panel turn on:



"F" forward movement



"R" reverse movement

- While holding the lever in the intermediate "N" position the transmission is in neutral and both indicator lights will turn off.

The movements of the lever are not active when:

- The handbrake is engaged
- The operator is not properly seated in the driver's seat



#### NOTE

**If the operator is not sitting properly in the driver's seat, the transmission is automatically switched off.**

To continue moving the vehicle, the operator must sit in the driver's seat and set the movement selection lever in position "N".



#### WARNING

**After selecting the vehicle movement direction, it starts suddenly to move in the selected direction.**

Before selecting the movement direction make sure that nobody is standing near the vehicle.



#### WARNING

**It is dangerous to operate the movement selection lever with the engine at high rpm or at a speed higher than 2 km/h (1.2 mph).**

Before reversing the direction of movement, minimize the engine speed and select the new direction. Danger of vehicle overturning severe breakage of mechanical parts.



### 7.13.2 Manual gear shift selection

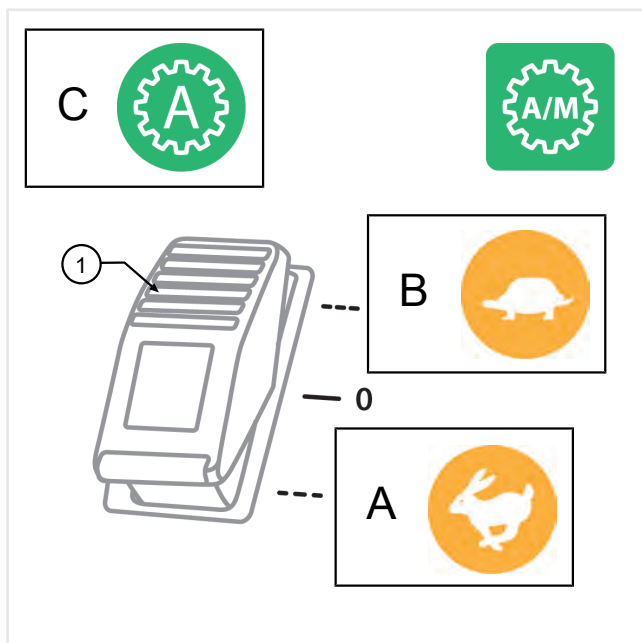


Figure: 150458-1

The "1" button (fig. 150458-1) allows changing the manual gear shift.

**To change the manual gear shift:**

- Stop the vehicle completely.
- Press the inching and brake pedals and hold.
- Press "1" for a few seconds:
- Down to shift the **Fast** gear, the indicator light "A" on the instrument panel turns on to indicate its selection.
- Up to shift the **Slow** gear, the illumination of the "B" on the instrument panel turns on to indicate its selection.
- Wait that the related indicator light turns on.
- Release the inching and brake pedals.
- Drive slowly and gradually to allow the gear to fit properly. The indicator light "C" indicates the gear properly shifted.



**NOTE**

Shift the first gear to operate on the work site.  
Shift the second gear for long trips with no load, at clear work sites, with good visibility, in the absence of obstacles, with consistent and level ground floor, without transit of people.



**WARNING**

Never try to shift gears with the vehicle in motion.



**NOTE**

The "1" and "2" gear selection on the movement selection lever is not active.

### 7.13.3 Service braking pedal

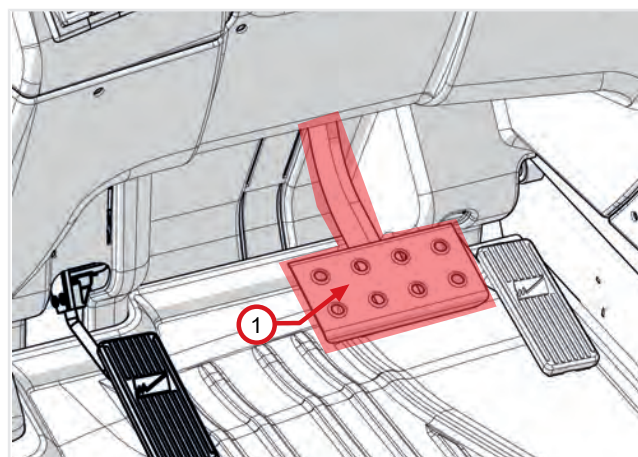


Figure: 150311-1

Press the service brake pedal "1" (fig. 150311-1) to slow down or stop the vehicle.

The pedal acts directly on the service brakes inside the differential axles.

When the brake pedal is pressed the stop lights of the rear lights go on. The lights remain in operation until the pedal is released.

Periodically check that both lights are working.



150311-2



**WARNING**

In the case of restricted use of the pedal periodically check its proper operation. In case of problems contact the *Dieci* service center.



## DANGER

If the warning light (fig. 150311-2) turns on intermittently, it indicates a low brake fluid level.

If the warning light (fig. 150311-2) turns on in a fixed way, the parking brake is stuck or damaged.

Do not use the vehicle until the problem has been solved. Contact a *Dieci* service center.

### 7.13.4 Inching Pedal

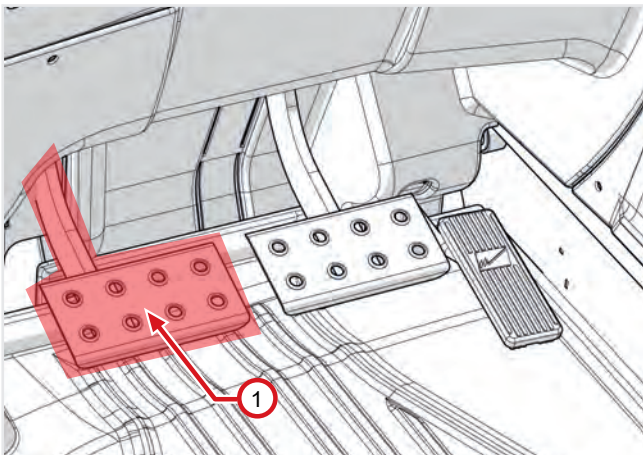


Figure: 150740-1

The inching pedal "1" (fig. 150740-1) acts directly on the hydrostatic transmission and allows to slow down the vehicle forward movement.

The pedal allows slow and precise forward movements with high rpm heat engine.

With pedal fully pressed, the vehicle stops the forward movement.



## DANGER

Do not press the inching pedal at high speeds, the vehicle brakes suddenly and the diesel engine risks over-revving.

### 7.13.5 Accelerator pedal

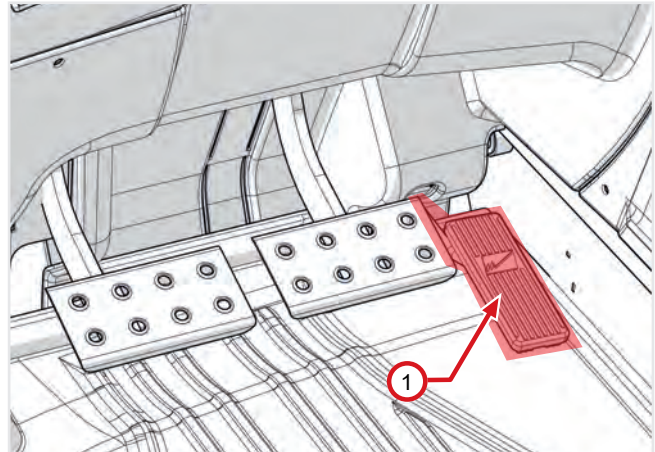


Figure: 150741-1

Press the accelerator pedal "1" (fig. 150741-1) to increase the engine speed, when the pedal is released the engine rpm will decrease.

The pedal acts directly on the injection pump of the engine.



## WARNING

**If while driving, the vehicle exceeds the maximum allowed speed, the "Over speed protection" transmission electronic control goes into operation. The function automatically limits the vehicle speed in order to prevent transmission and diesel over revving. Triggering of the "Over speed protection" function is signaled by the general alarm indicator light switching on and the intermittent acoustic signal.**

If the function intervenes, the operator must lift his foot from the accelerator pedal and reduce the speed of the vehicle.



## NOTE

The maximum speed of the vehicle varies with the inflation pressure and the size and wear of the tires.

7.13.6

Manually disable off the 2-gear hydrostatic transmission



**DANGER**

Deactivate the traction only in case it is necessary to tow the vehicle in case of damage to the engine and/or transmission.

In case it is necessary to tow the machine with the engine and/or transmission failure, it is possible to manually disable the transmission.

Carry out the following operations:

- Make sure that the vehicle engine is turned off
- Place chocks under the wheels to prevent sudden movements of the vehicle
- Turn the lever of the hydraulic valve (fig. 150745-1), to turn off the hydraulic supply to the reduction gear (the valve is located under the vehicle, near the reduction gear).

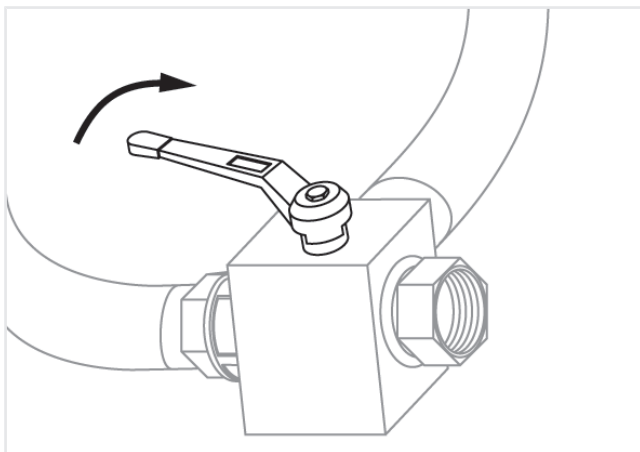


Figure: 150745-1

**DANGER!** Rotating the handle a jet of oil under pressure may leak out from the valve. Use appropriate safety equipment to protect eyes and skin from hot oil under pressure.

- Using a screwdriver, move the gear selection pin in neutral, at half stroke "2" (fig. 150745-2)
- If possible, before towing the vehicle turn on the instrument panel and check that the indicator lights of the forward and reverse gear are off.

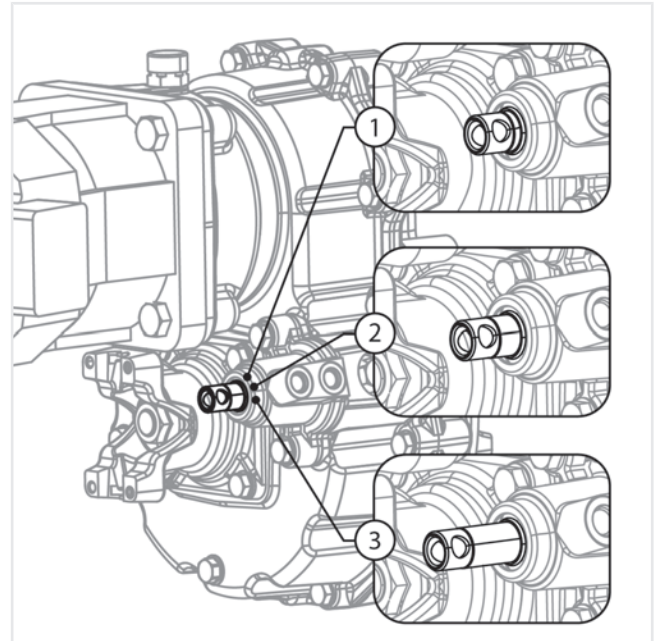


Figure: 150745-2



**ATTENTION**

Once the towing operations are completed open the valve again returning the lever (fig. 150745-1) to the starting position.

7.14

Electronic hand throttle

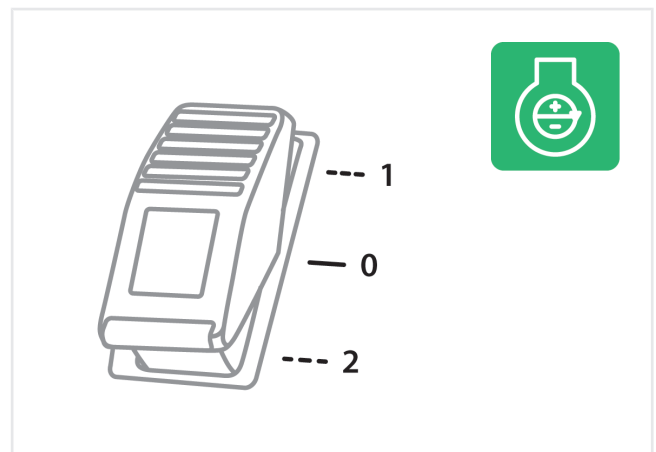


Figure: 150743-1

The hand throttle (fig. 150743-1) allows to maintain constant engine revolutions, without pressing the accelerator pedal.

- Press the Hand throttle on the top "1" to increase the engine revolutions of 200 rpm.
- Press the hand throttle on the bottom "2" to decrease the engine revolutions of 200 rpm.

To deactivate the function, press the accelerator pedal.



### ATTENTION

With the hand throttle in operation, the vehicle travel is disabled.



### ATTENTION

When turning off the machine, the function must be disabled and the engine must be brought to the minimum speed.



### WARNING

Do not use the electronic throttle in the cab during the use of the basket and/or of the remote control.



### WARNING

#### DANGER OF CRUSHING

In case of maintenance to the boom lifting cylinder or the relative block valve it is required to support the boom by means of an appropriate lifting device with minimum capacity of at least 3000 kg (6613.87 lb).

## 7.15 Safety rod

The safety rod must be used as a safety measure during maintenance operations, to prevent the descent or fall of the boom in case of failures.

To insert the safety rod "1" (fig. 150459-1) operate as follows:

- Lay a load on the ground
- Completely close the extensions of the telescopic boom
- Lift the boom to the minimum height necessary to apply the safety rod
- Apply the safety rod around the lifting cylinder rod

Lock the safety rod by means of the appropriate hooks "2".

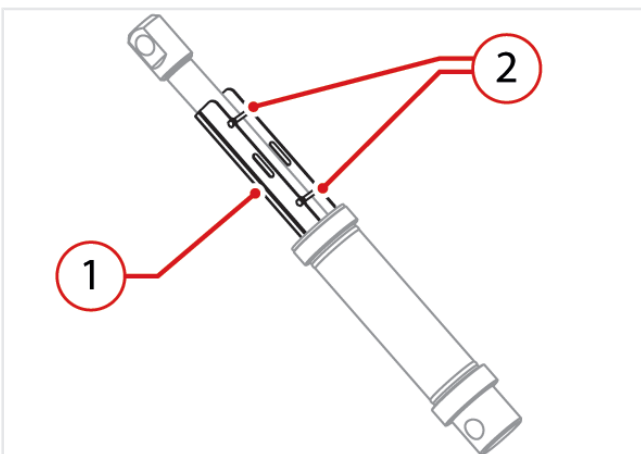


Figure: 150459-1

## 7.16 Wheel wedge

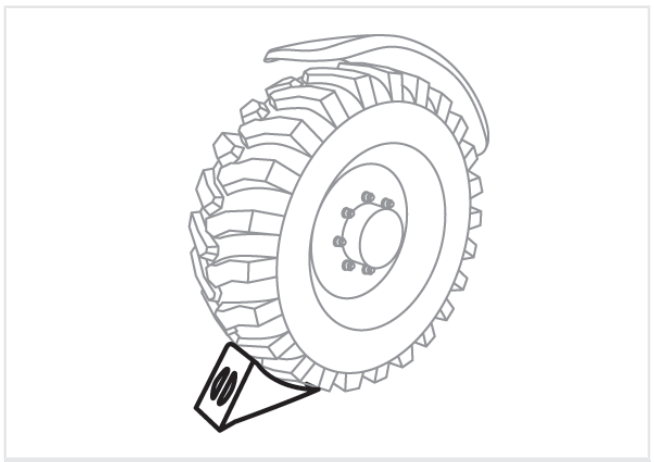


Figure: 150460-1

The wheel wedge (fig. 150460-1) must be used as a safety measure to prevent accidental or unwanted movements of the vehicle.

It is advisable to use them when parking the vehicle during stops along slopes or during maintenance operations.

## 7.17 Block valves

The block valves (fig. 150461-1) for cylinders prevent uncontrolled movement of the pistons of the cylinders in the event of hydraulic pressure failure or bursting of a flexible pipe.

The valves are installed directly on all the cylinders.

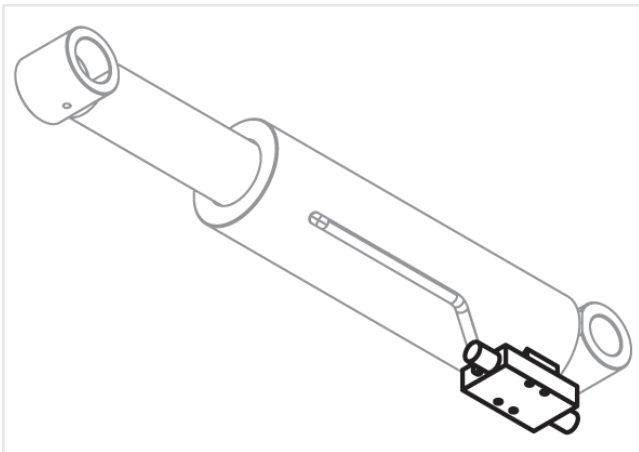


Figure: 150461-1

## 7.18 Diagrams notebook

The diagrams notebook (fig. 150462-1) summarizes the main information for safe use of the vehicle for easy reference by the operator during the various processing phases.

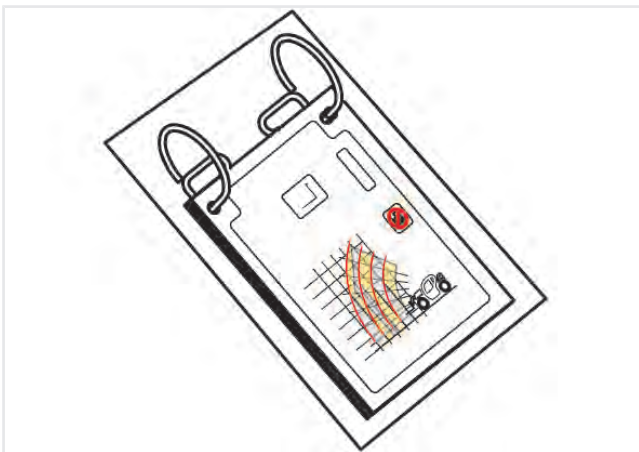


Figure: 150462-1

### 7.18.1 Load Charts

The Safe Working Load (SWL) of the vehicles depends on the extension extent and the boom angle.

The load charts show the maximum height and extent allowed by certain equipment and loads, in order to work safely, without the risk of tipping of the vehicle during work operations.

This vehicle is however equipped with an anti-tipping device that monitors in real time the status of the load and the risk of tipping of the vehicle (see the "Anti-tipping device" chapter in the vehicle manual). It is however necessary to use and adhere to the load charts in relation to the load and type of accessory used.



#### ATTENTION

**It is mandatory to have in the cab, the load chart referred to the equipment and the vehicle that is being used.**

Refer to the correct load chart before handling a load.



#### DANGER

**Danger of tipping.**

Do not raise or extend the boom when the vehicle is in motion. Fully lower and retract the boom before moving a load.



#### ATTENTION

The load charts refer to stopped and leveled vehicle.



#### ATTENTION

**The diagrams of the vehicle and equipment being used must always be present in the Diagram notebook found in the cab, used by the operator.**

Replace the load charts if they deteriorate, are damaged or lost.

The load charts are ordered just like spare parts (make sure you provide the relative identification code when placing the order).

Before handling a load it is necessary to:

- Have read and understood the use and maintenance manual of the vehicle and equipment.
- It is mandatory to know the weight of the load that must be handled.
- Locate the center of gravity of the load to be moved. The center of gravity may not be at the center of the load.

7.18.1.1  
Read the load charts

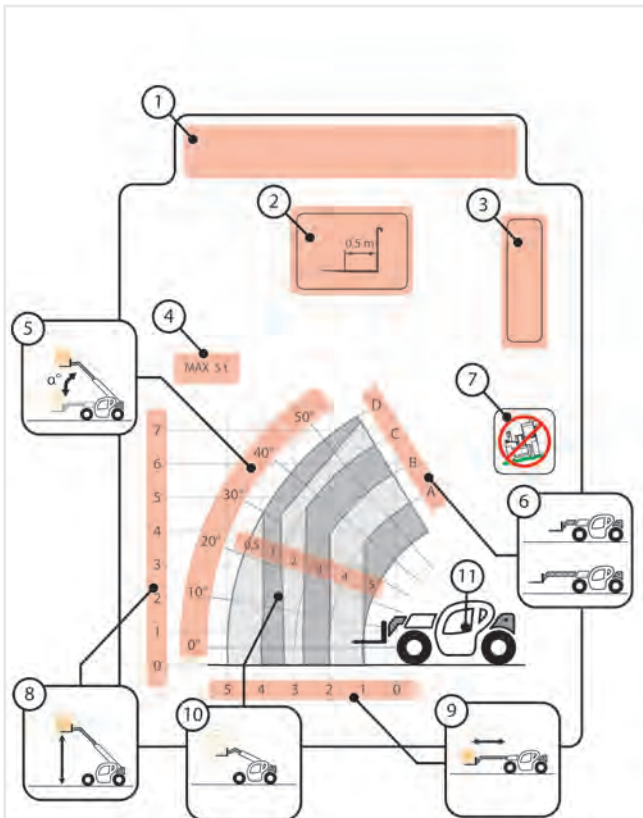


Figure: 150464-1 - Load Chart

1	<b>Vehicle name and model</b>
2	<b>Equipment model</b> Equipment model with the indications of center of the load. For more information, see the Equipment legend for load charts [▶ 111] chapter.
3	<b>Load Chart code</b>
4	<b>Equipment maximum capacity</b> The maximum Capacity of the equipment is also reported by the sticker placed on the equipment itself.
5	<b>Boom angle</b> The boom angle is indicated by the inclinometer on the left side at the end of the boom (if any), or on the display of the anti-tipping device (if present).
6	<b>Boom extension</b> The boom extension is indicated by letters of the alphabet ("A", "B", "C", "D", etc...). The same letters are shown as stickers on the boom extension, so that the user in the cab can know the boom extension by reading the letters on it.
7	<b>Vehicle operating mode</b> For more information, see the Operating modes legend for load charts [▶ 112] chapter.

8	<b>Load height from ground</b>
9	<b>Horizontal distance of the vehicle load</b>
10	<b>Load weight</b>
11	<b>Vehicle position</b>

7.18.1.2  
Use the load charts

The Load charts indicate the areas in which it is possible to operate with the vehicle and load in safe conditions.



**DANGER**



**Danger of tipping.**

Operating the vehicle without observing the Load charts related to the equipment installed may result in hazardous conditions, up to the tipping limit and the operation of the Anti-tipping device.

The whole working area of the boom is divided into these areas (position "1", fig. 150465-1). Each area corresponds to a maximum capacity. The area closest to the vehicle will have a capacity equal to the maximum loading capacity of the vehicle; as moving away from the vehicle, the maximum capacity of the areas decreases.

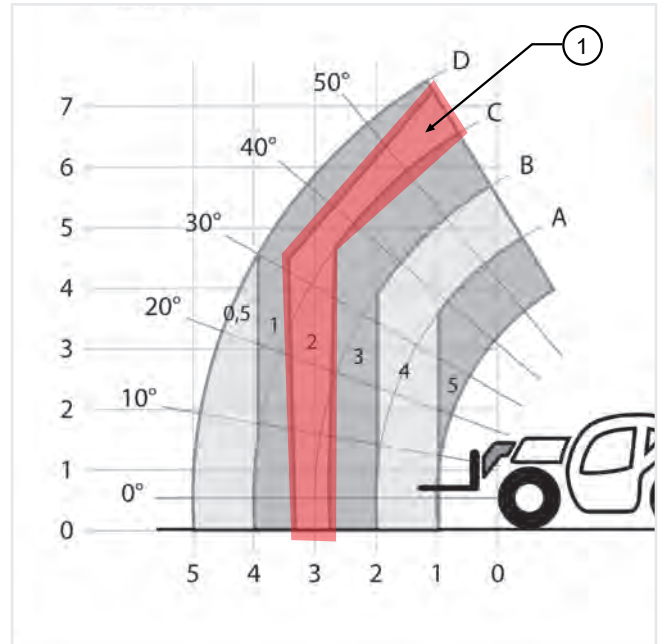


Figure: 150465-1

Before starting to work, it is necessary to know:

- Load weight
- Height from ground at which the load must be handled
- Distance from the vehicle at which the load must be handled

Locate the area of the load charts, showing a value just above the weight of the load to be handled; for example if the load should weigh 1.5 tons, the area to which it is necessary to refer is the area with a capacity of 2 tons (position "1").

Knowing the area, the following will be known:

- the vertical and horizontal distance to which it will be possible to handle the load
- the boom extension and angle values at which it is possible to operate.

In order to know the vertical and horizontal distance to which it will be possible to handle the load, use the horizontal and vertical lines that cross the reference area; for example, it will be possible to carry the load at a distance of 3 m from the vehicle and 4 m in height remaining in safety conditions (position "2", fig. 150465-2).

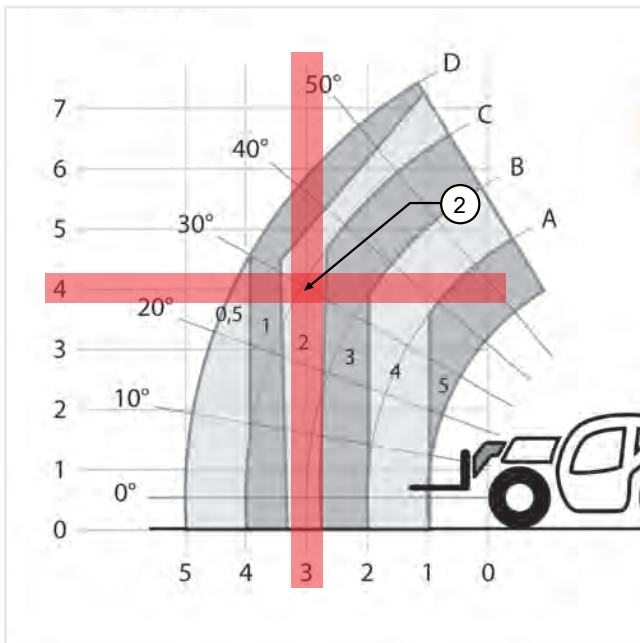


Figure: 150465-2

To avoid operating in conditions of tipping danger, use the boom angle and extension indications. For example, we could operate with the boom extended to letter C at an angle of 30° (position "3", fig. 150465-3).

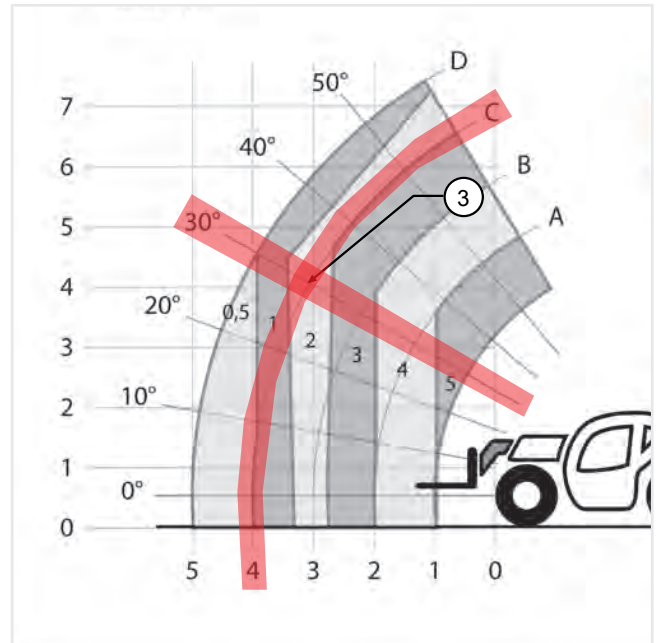


Figure: 150465-3



**DANGER**



**Taking the load beyond the permissible area, we would enter in danger conditions of tipping over and the anti-tipping device, locking all the movements considered aggravating to the stability of the vehicle and of the load.**

Use the load charts for each load handling to determine the working area.

It is possible to start operating only under safety conditions and if within the predetermined safe work area.

7.18.1.3

Equipment legend for load charts

	Forks xxx = Center of gravity of the load
	Forks Spreader / Shifter xxx = Center of gravity of the load
	Winch xxx = Capacity
	Crane extension xxx = Center of gravity of the load

	"Gooseneck" jib (Dimensions) xxx = Center of gravity of the load
	Hook for fork carrier plate
	Gripper for pipe with pipe locker xxx = Center of gravity of the load
	Cylinders manipulating gripper
	Wheels manipulating gripper
	Sheets holding gripper
	5 teeth orange-peel grabber
	Centering layer
	Negative jib
	Positive jib
	Fixed front basket xxx = length, yyy = width
	Extensible front basket xxx = length, yyy = width, zzz = maximum width
	Fixed trilateral basket xxx = length, yyy = width
	Extensible trilateral basket xxx = length, yyy = width, zzz = maximum width
	Front basket for tunnels xxx = length, yyy = width
	Fixed trilateral basket for tunnels xxx = length, yyy = width

### 7.18.1.4 Operating modes legend for load charts

	Prohibited to work on tires
	Prohibition of operating with unlevelled vehicle
	Crossbeam outriggers lowered, 0% extended
	Crossbeam outriggers lowered, 50% extended
	Crossbeam outriggers lowered, 100% extended
	Crossbeam outriggers lifted
	Flap down outriggers lifted
	Flap down outriggers lowered
	On wheels
	Front position
	In non-continuous Rotation
	In continuous Rotation

### 7.19 Water heater \*

**NOTE**  
The Water heater is an optional accessory.



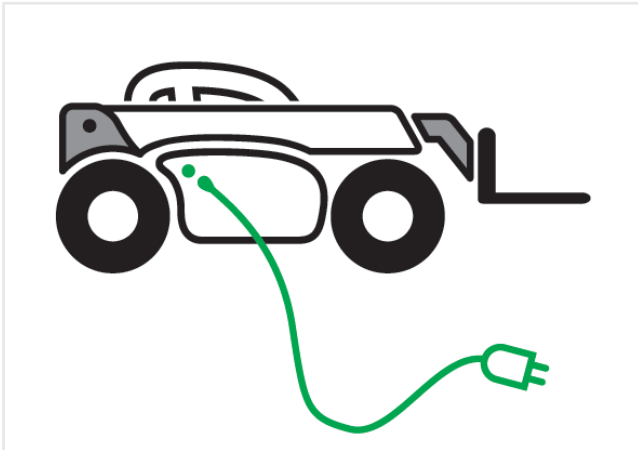


Figure: 150493-1

The water heater is connected to its own control unit and is used to facilitate the ignition of the engine in the winter period or in case of cold climates.

The water heater is placed in the rear side of the hood.

To use the water heater it is necessary to:

- Make sure the vehicle is off.
- Enter the extension in the socket at the rear of the hood.
- Enter the extension in the **220 V** socket.
- Wait until the water is adequately heated.
- Remove the water heater extension from the socket and from the socket on the hood.



**DANGER**

Do not use the water heater with the engine running or the machine in travel.



**WARNING**

**Remove the water heater power connections before turning on and/or moving the machine.**

Check the good condition of the power cord before starting up the device.



**NOTE**

In case of malfunction contact the *Dieci* service center.

**7.20 Fan reversal \***

**★ NOTE**

The fan reversal is an optional attachment.

The fan reversal allows precisely the radiator fan reversal to clean the radiator from any dirt deposits such as dust and straw.

The reversal is carried out automatically every 20 minutes, without having to stop the vehicle.

To activate the fan reversal manually operate on the dedicated button "1" (fig. 150306-1). The cleaning cycle is activated automatically pressing the button, which should therefore not be held down. The automatic fan reversal timer is also reset when the button is pressed.

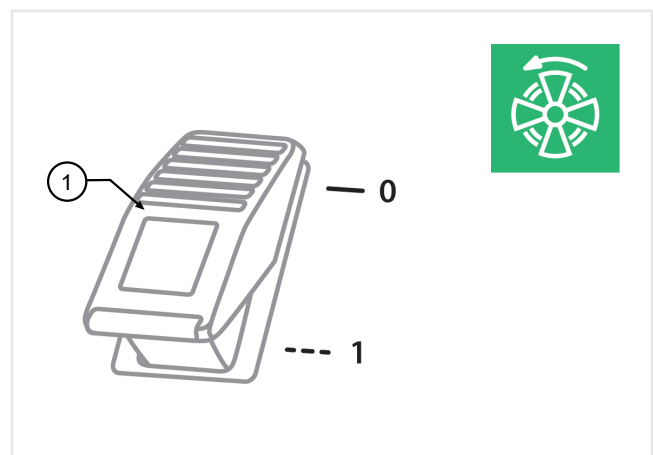


Figure: 150306-1

The fan will remain in the "cleaning" position (reversed motion) for a time set by the manufacturer.

**! ATTENTION**

The fan reversal presence does not exempt the user from cleaning the fan, radiator and engine compartment, at the intervals indicated by regular maintenance.

**7.21 Boom suspension \***

**★ NOTE**

\* The boom suspension is an optional accessory.

The boom suspension allows to make movements with the vehicle without being affected by the strong oscillations and jolting, caused by the boom, in the case of uneven ground.

The switch boom suspension has a safety lock to prevent accidental activation.

To activate the boom suspension, move the block "1" and simultaneously press the switch (fig. 150310-1).

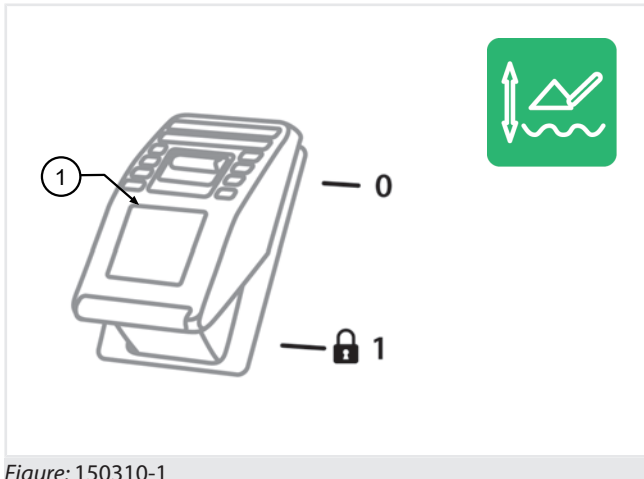


Figure: 150310-1

The warning light on the switch indicates its operation.

The boom suspension is activated only if the telescopic boom is in horizontal position.

The boom suspension is automatically deactivated by pressing the "deadman" button on the joystick.

The suspension may also be used during the transport of loads, with the boom in transport position (fully retracted and in horizontal position).



## WARNING

**Activating the boom suspension, the boom may have a slight but sudden upward movement.**

Before activating the boom suspension, make sure that the installed equipment and any load are properly secured to the vehicle and that there are no people, animals or objects within the operating range of the vehicle.

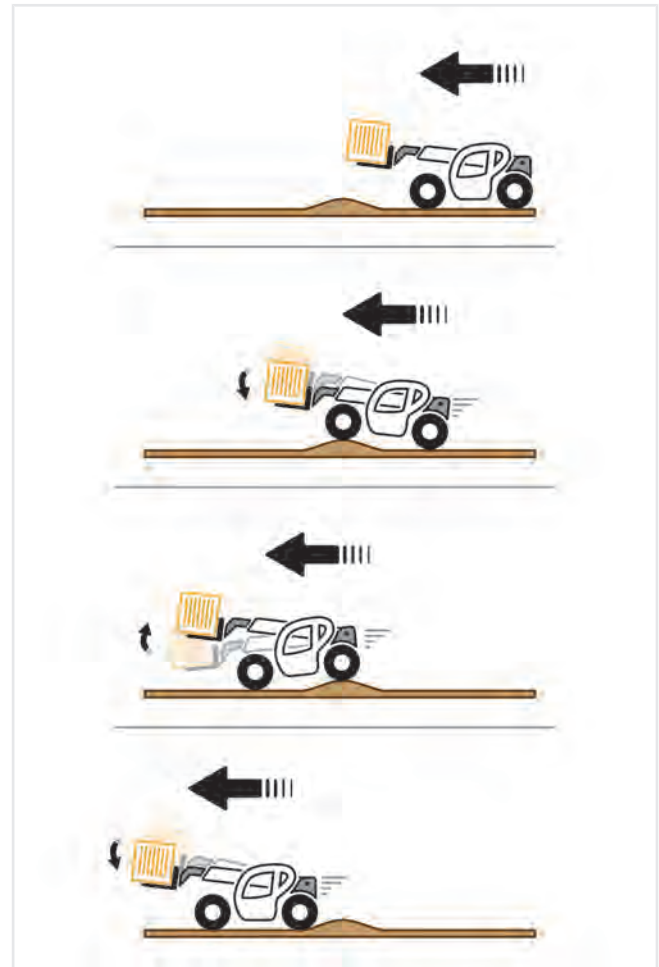


Figure: 150310-2



## ATTENTION

The presence of the boom suspension does not involve the increase of the transport speed and vehicle movement. The speed must always be proportional to the ground, to the place of use and to the atmospheric conditions.



## NOTE

The boom suspension is a device which entails an increase in the comfort of the vehicle, but it does not increase its safety characteristics.

## 7.22 Remote Control \*



### NOTE

\* The Remote control is an optional accessory.

### 7.22.1 Remote Control: Description

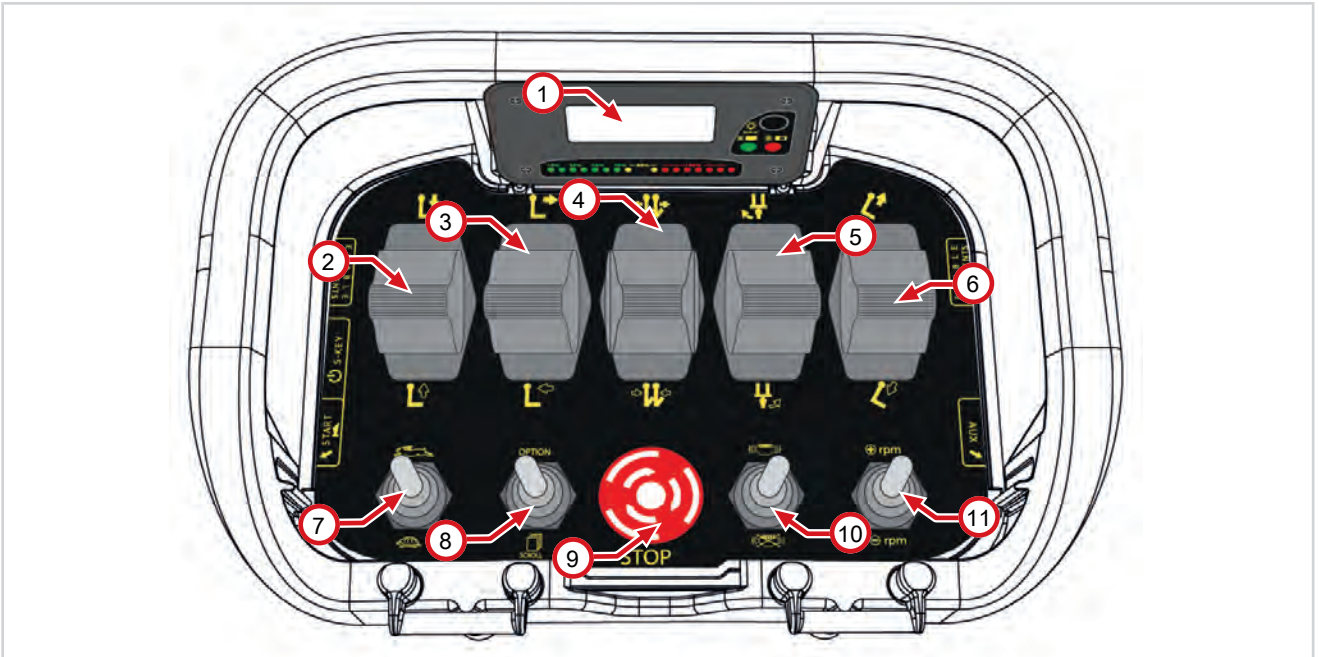


Fig. 160601-1

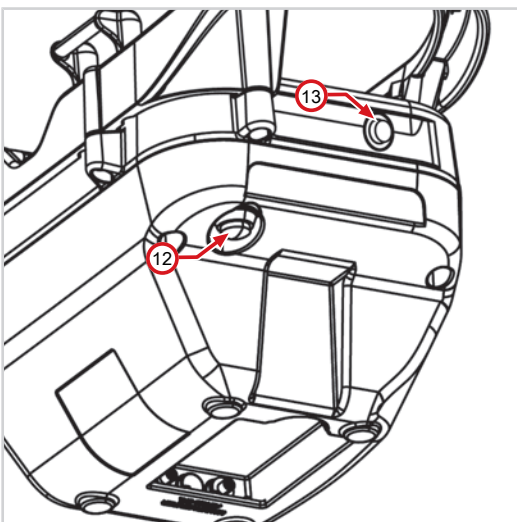


Fig. 160601-2

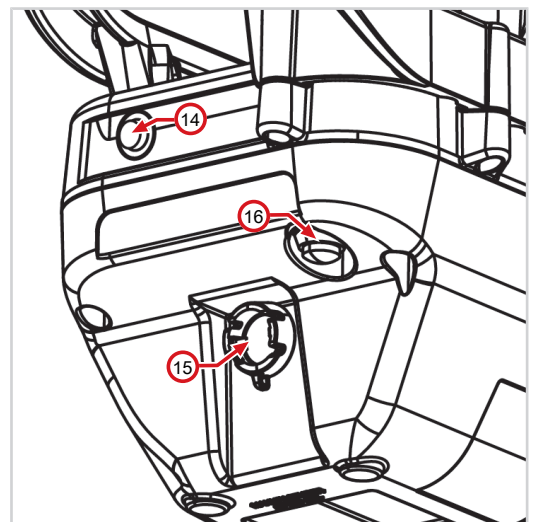



Fig. 160601-3

1	LCD display	9	Emergency stop button
2	Boom up /down lever	10	Vehicle ignition switch
3	Boom extension / retraction lever	11	Accelerator lever

4	Services lever	12	Boom head electrical contact button
5	Turret rotation lever (for rotating vehicles)	13	Not used
6	Up / down tilting lever	14	Not used
7	Movements speed lever	15	Remote control on/off key
8	Boom head solenoid valve lever	16	Remote control and horn enable button

Table 1: Radio control description

### 7.22.1.1 Remote control display

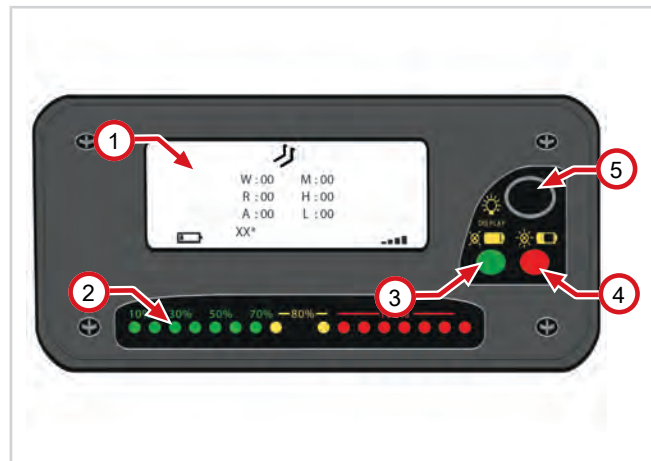

	Description
1	LCD display
2	Anti-tipping led signaling
3	Remote control status LED
4	Remote control battery status LED
5	Not used
W	Current weight
M	Maximum weight
R	Radius
H	Load height from the ground
A	Boom angle
L	Boom extension length
xx*	Installed equipment code
	Forks operating mode icon
	Hook operating mode icon
	Basket operating mode icon
	Battery charge level
	Remote control signal level













Description	
	Fuel low level icon
	General alarm icon
	Active electric contact icon
	Solenoid valve on boom head icon
	F1 function icon (optional depending on the equipment installed)
	F2 function icon (optional depending on the equipment installed)
	F3 function icon (optional depending on the equipment installed)
	F4 function icon (optional depending on the equipment installed)
	High particulate accumulation in the DPF icon
	AdBlue low level icon
	Chains error icon (present if the vehicle is prearranged with PLE)
	Levelness icon (present if the vehicle is prearranged with PLE)

Table 2: Display description and legend

### 7.22.1.2

#### Remote control emergency stop button

The emergency stop button "9" (fig. 160601-1) turns off the diesel engine of the vehicle and the remote control, stopping all movements of the vehicle and of the equipment.

### 7.22.1.3

#### Movements speed lever

The movements speed lever "7" (fig. 160601-1) allows to set the vehicle boom speed.



Move the lever up to set the fast movements (hare symbol)



Move the lever down to set the slow movements (snail symbol)

### 7.22.1.4

#### Accelerator lever

The throttle lever "11" (fig. 160601-1) allows to maintain constant diesel engine revolutions of the vehicle.



Move the lever forward to increase the engine rpm of 200 rpm.



Move the lever backward to decrease the engine rpm of 200 rpm.

Press a deadman button on the remote control to reset the settings made with the throttle lever.

The throttle lever is not active when one of the deadman buttons is pressed.

### 7.22.1.5

#### Remote control on/off key

The on/off key "15" (fig. 160601-3) allows to turn on and turn off the remote control. To turn on the remote control, turn the knob from position O to position I.

### 7.22.1.6

#### Remote control and horn enable button

The button "16" (fig. 160601-3) is used both to enable the remote control commands and to operate the horn of the vehicle.

### 7.22.1.7

#### Boom control levers

The boom control levers are used to carry out various movements:

#### Boom lowering / lifting lever "2" (fig. 160601-1)



Boom down



Boom up

#### Boom extension / retraction lever "3" (fig. 160601-1)



Boom extension



Boom retraction

#### Services lever "4" (fig. 160601-1)



Services



Services

#### Turret rotation lever "5" (fig. 160601-1) [if present]



Turret counterclockwise rotation



Turret clockwise rotation

#### Swivel lever "6" (fig. 160601-1)



Tilting downwards



Upwards Tilting

**7.22.1.8**  
**Electric contact on boom head button**

The button "12" (fig. 160601-2) allows to activate the electrical contact on the boom head (if present). Press again the button to disable the electrical contact on the boom head.

**7.22.1.9**  
**Boom head solenoid valve lever**

The lever "8" (fig. 160601-1) allows to activate the solenoid valve on the boom head (if present).

**7.22.2**  
**Remote Control: Use**

The vehicle, if prepared, can be used by the remote control.

The movements that can be performed from the remote control are:

- Telescopic boom extension/retraction.
- Telescopic boom Up/Down movement.
- Tilting.
- Turret rotation
- Services.

To use the vehicle by remote control carry out the following operations:

**Operations on the vehicle:**

Assemble the equipment on the vehicle, if not already installed. (Refer to the chapter "Equipment installation" and set the correct mode of use of the vehicle)

- Lay the load on the ground.
- Level the vehicle (if available).
- Place the vehicle on outriggers.
- Place the gear lever to neutral "N" position.
- Engage the parking brake.
- Press the switch "1" (fig. 150912-1) to enable the controls from the remote control. Pressing the switch will automatically shut down the vehicle engine.

Turn the vehicle ignition key in position "I" without starting the engine.

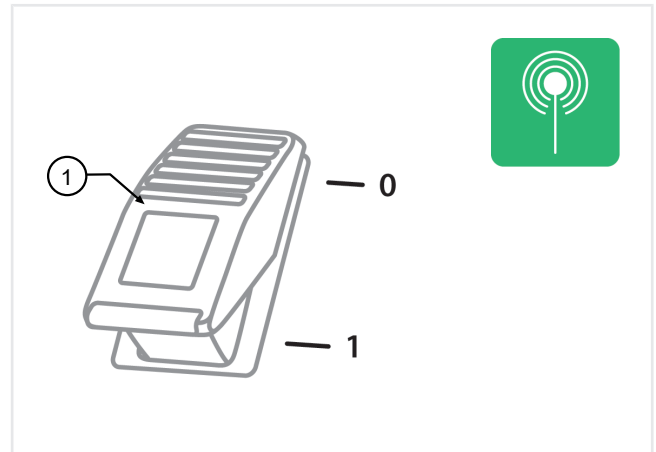


Figure: 150912-1

**Operations on the remote control:**

- Turn the remote control on/off knob "15" (fig. 150912-2) to position "I".
- Press the remote control on/off button "16" to enable the remote control.
- Move the vehicle on/off lever "4" (fig. 150912-3) up and hold it for 2 seconds.

The ON remote control indicator light will flash green until the remote control will remain on.

When switching on the remote control, it will emit an alert tone.

If the gear lever of the vehicle is not in position "N", the vehicle will not turn on.

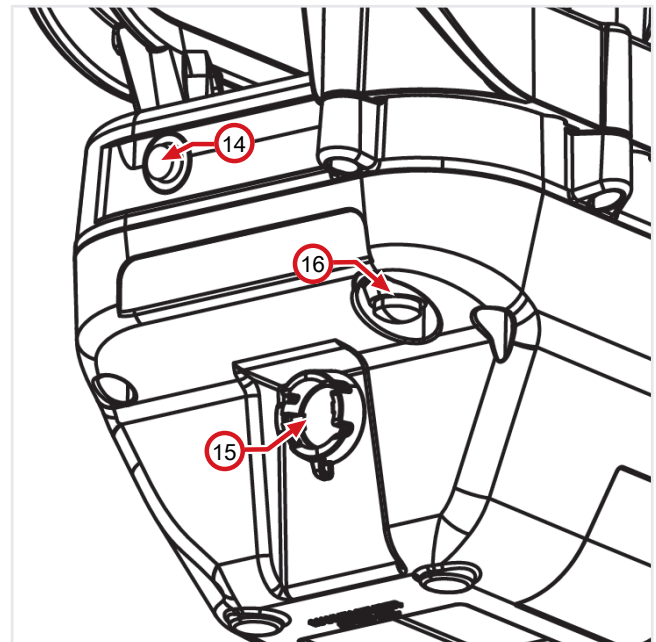


Figure: 150912-2

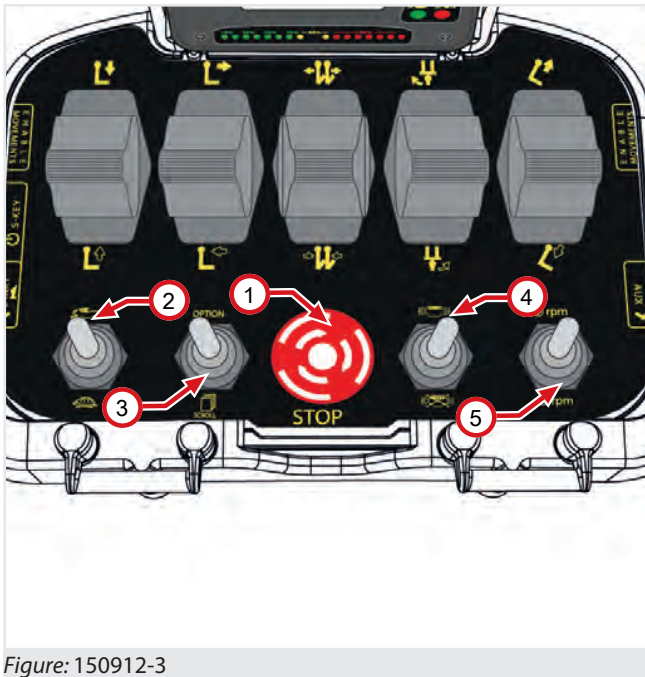


Figure: 150912-3



## WARNING

Always remain at a safe distance from the vehicle and from the load, outside the area that would be occupied in case of vehicle overturning and load fall.

When using the vehicle with remote control:

- The emergency button in the cab is always active.
- The gear of the vehicle is inhibited.



## NOTE

After 4 min of non-use of the remote control, the remote control and the vehicle will turn off.



## ATTENTION

**When using the vehicle with remote control, a red flashing light on the vehicle comes into operation when the vehicle reaches the tipping limit.**

To reset the vehicle in safe conditions, make movements that do not aggravate the stability depending on the type of equipment currently used.

### 7.22.3

## Remote Control: Turn off the vehicle and the remote control

To turn off the vehicle engine and the remote control, turn the ignition knob "1" (Fig. 10-G2303) to position "0".

### 7.22.4

## Remote Control: Receiver

The remote control receiver is installed on the rear of the vehicle. When the remote control is selected in the cab, the receiver turns on. For the operating specifications carefully read and learn the use and maintenance instructions of the remote control manufacturer.

### 7.22.5

## Remote Control: Recharge

At the seat side there is the remote control battery charger.

### 7.22.6

## Remote Control: Back-up

If the transmitter unit can not be used, it can be replaced by a Transmitting Unit called "BACK-UP UNIT", to be requested to Autec.

It is identical to the Unit that can no longer be used and is distinguished only by the presence of the word "BACK-UP UNIT" in the battery housing.



## ATTENTION

Insert the "Key ID 0-1" or the "ID internal tx memory" of the transmitting unit that is no longer usable in the "BACK-UP UNIT" and perform the procedure for storing the address described below.

### Storing the address

With the battery charged and the ignition key inserted in the "BACK-UP UNIT", carry out the following procedure:

- press the STOP button,
- Press the START button and keep it pressed until the green LED turns off,



- disengage the STOP button.

Now it is possible to start the Remote control and command the vehicle with the "BACK-UP UNIT" transmitting unit.

### 7.22.7

#### Remote Control: Additional information



#### NOTE

For additional information on the use and maintenance of the remote control, refer to the specific manual of the remote control.

### 7.23

#### Outriggers \*



#### NOTE

The outriggers are an optional attachment for the construction sector.

### 7.23.1

#### Outriggers warnings



#### NOTE

The Outriggers are present on the vehicle according to the model or of optional attachments.

The Outriggers feet allow to increase the stability of the vehicle during the working operations.

When using the vehicle with outrigger feet properly lowered, use the relative load charts.



#### WARNING



#### Danger of transverse tipping

It is allowed to operate only if the machine transverse inclination is less than 2°.



#### DANGER

**The sinking of the feet leads to the destabilization of the vehicle or of the load and consequent danger of vehicle tipping or load falling.**

Before lowering the outrigger feet, place the vehicle in working position, make sure that the ground is firm and can support the weight of the vehicle without the outrigger feet sinking into the ground. See the chapter "Assessing the consistency of the work ground".



#### ATTENTION

Before proceeding with the transfer on road, lift and retract completely all outriggers.



#### NOTE

It is allowed to move the outriggers only with boom retracted at a height lower than 2.5 m (8.2 ft).

Only for machine with man basket pre-arrangement, it is possible to move the outriggers with the boom extended not more than 500 mm (19.69 in) and at a height less than 2.5 m (8.2 ft).


### 7.23.2

#### Outriggers movement

To move the outriggers it is necessary to:

- Lay the load on the ground.
- Lower and fully retract the telescopic boom.
- Press the button "1" (fig. 150744-1) to enable the use of buttons "A" and "B".
- Keep the button "1" pressed, and press the button "A" or "B", depending of the outrigger to be moved, until it reaches the desired position (fig. 150744-2):
  - **A1** (high side): Lift the left outrigger
  - **A2** (low side): Lower the left outrigger
  - **B1** (high side): Lift the right outrigger
  - **B2** (low side): Lower the right outrigger
- Check the correct leveling of the machine using the spirit level in the cab. The machine is correctly positioned on the outriggers when:
  - Both outriggers are lowered to the ground.
  - Both front wheels are off the ground.

The machine has a transverse slope less than 2°.

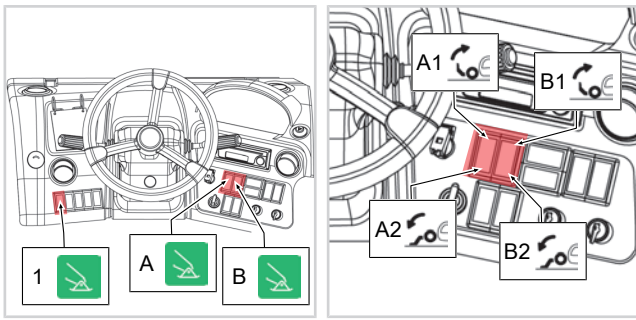

150744-1

150744-2

The Outriggers indicator light on the instrument panel has different statuses:

Icon	Outriggers	Condition
	Fixed	Outriggers completely lowered
	Flashing	Outriggers lifted
	Fixed	Outriggers in transport mode
		Movement allowed only on public roads **

\*\* Refer to the regulations in force in the country of use of the machine.

## 7.24 Transverse levelling device \*



### NOTE

The transverse levelling device is an optional accessory.

The transverse levelling device allows to adapt the vehicle to the transverse inclination of the ground.

To level the vehicle it is necessary to:

- Position the load on the ground.
- Lower and fully retract the telescopic boom.
- Press the transverse levelling device button (fig. 150316-1):
  - From the left side "1" to tilt the vehicle to the left.
  - From the right side "2" to tilt the vehicle to the right.

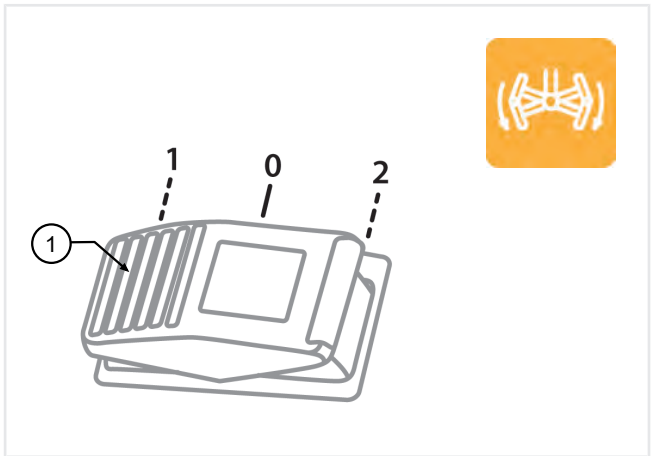


Figure: 150316-1



### DANGER



**It is not possible to work with tilting greater than 2°. Danger of transverse tipping.**

Use the spirit level in the cab to check the inclination of the vehicle.

## 7.25

## Kubota engine Stage IIIA - Tier 3



### NOTE

The use and maintenance manual of the engine is an integral part of the documentation supplied with the machine.

Consult the engine manual or contact an authorized workshop for maintenance.

We recommend that you carefully read the information contained in the instruction manual and comply with them: in this it is possible to avoid accidents, enjoy the manufacturer's warranty and always have an engine in peak operating condition.

# 8 Description of agriculture components



## NOTE

The following chapters refer to vehicles for the agricultural sector.

The optional attachments for the agricultural sector are marked with the symbol (\*\*).

## 8.1 Agricultural applications



### WARNING

The vehicle is not provided with a protective structure against harmful dust, aerosols and vapors. Adopt appropriate personal protective equipment even when using the vehicle in the cabin.

Refer to the packaging of the product used to use the appropriate protective equipment.



### ATTENTION

The vehicle described in this manual is not designed for use with sprayers for noxious or hazardous substances; it is prohibited to use the vehicle for this purpose without adopting the proper protective equipment for the operator.



### DANGER



Inhalation danger for operators and bystanders. For protection against harmful dust, aerosols and vapors, refer to the instructions provided by the manufacturer of chemicals, by the manufacturer of the sprayer and to the basic rules contained in this manual.

## 8.2 Forest and forestry applications



### WARNING

The vehicle is not provided with a protective structure against penetration of objects (OPS).

There are no optional attachments for its use in forestry applications.



### DANGER

The main risks if the vehicle is used in forestry applications are falling trees on the cab and the penetration of objects in the space reserved to the operator.

The vehicle described in this manual is not designed for heavy-duty forestry use; it is forbidden to use it for this purpose.

## 8.3 Caisson descent \*\*



### NOTE

The Caisson descent is an optional attachment for the agricultural sector, available only on vehicles with open center distributor.

The Caisson Descent allows to use equipment or trailers with single-acting cylinders, if connected to the rear **YELLOW** hydraulic socket.

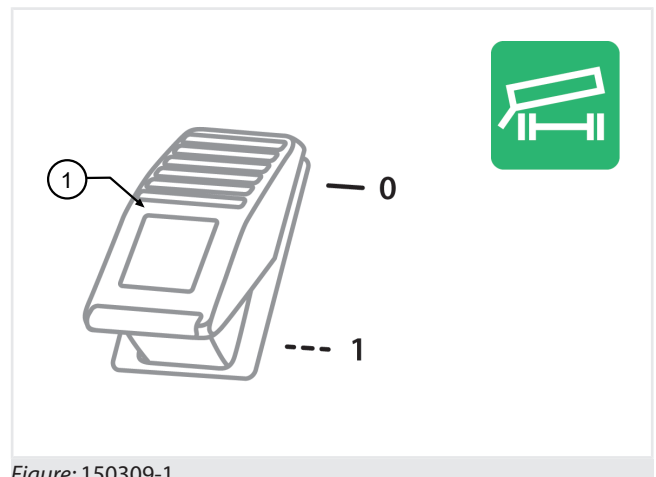


Figure: 150309-1

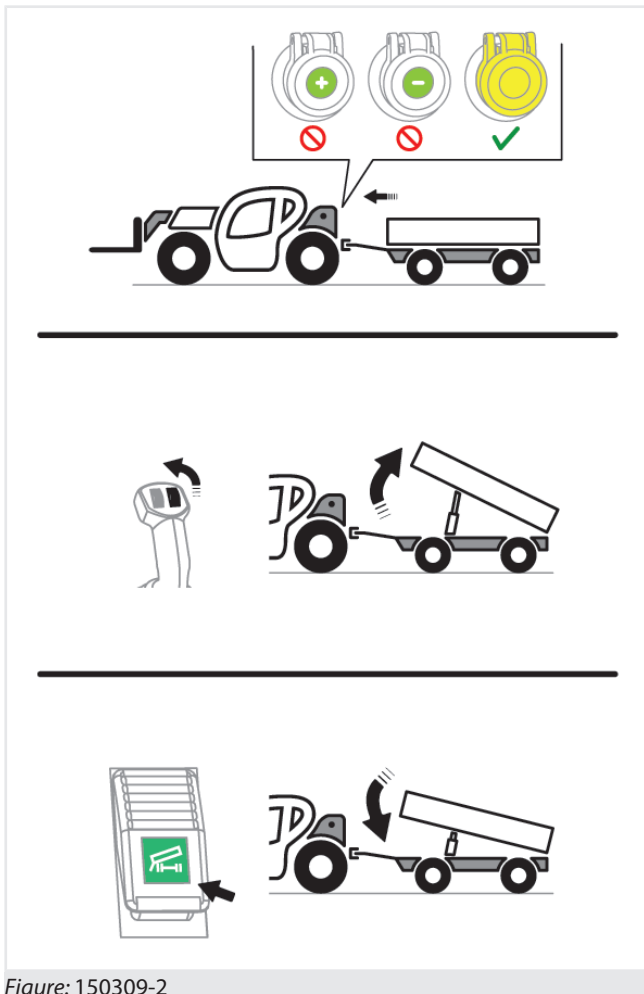


Figure: 150309-2

**To put the coupler under pressure it is necessary to:**

- Select the rear **GREEN** coupler with the selector hydraulic coupler selector.
- Use the services control to lift the caisson.
- After reaching the desired height release the control. The trailer will remain stationary in that position.

**To relieve pressure from the coupler it is necessary to:**

- Press the Caisson descent button (fig. 150309-1) and hold down until needed.



## DANGER

When using the Caisson Descent, make sure that nobody is in range of the vehicle and if the trailer is connected to it. Danger of crushing.



## ATTENTION

When using the Caisson Descent (YELLOW rear hydraulic socket), it is not allowed to use the GREEN rear hydraulic couplers.

## 8.4

### Trailer descent \*\*



## NOTE

The Trailer descent is an optional attachment for the agricultural sector, available only on vehicles with closed center distributor.

The Trailer Descent allows to use trailers or equipment with single-acting cylinders, with any hydraulic coupler on the vehicle.

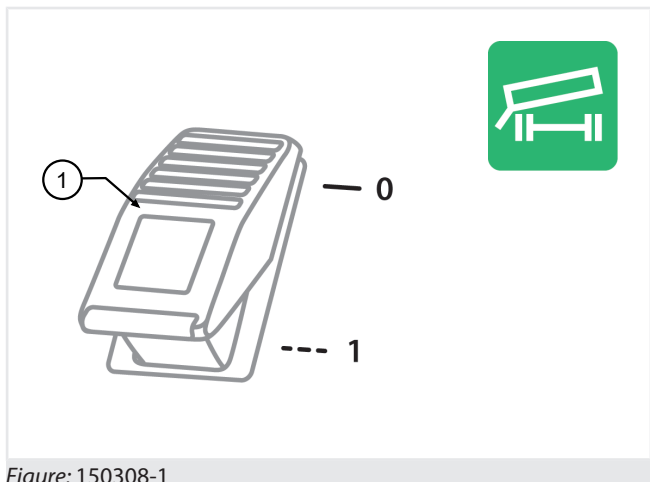


Figure: 150308-1

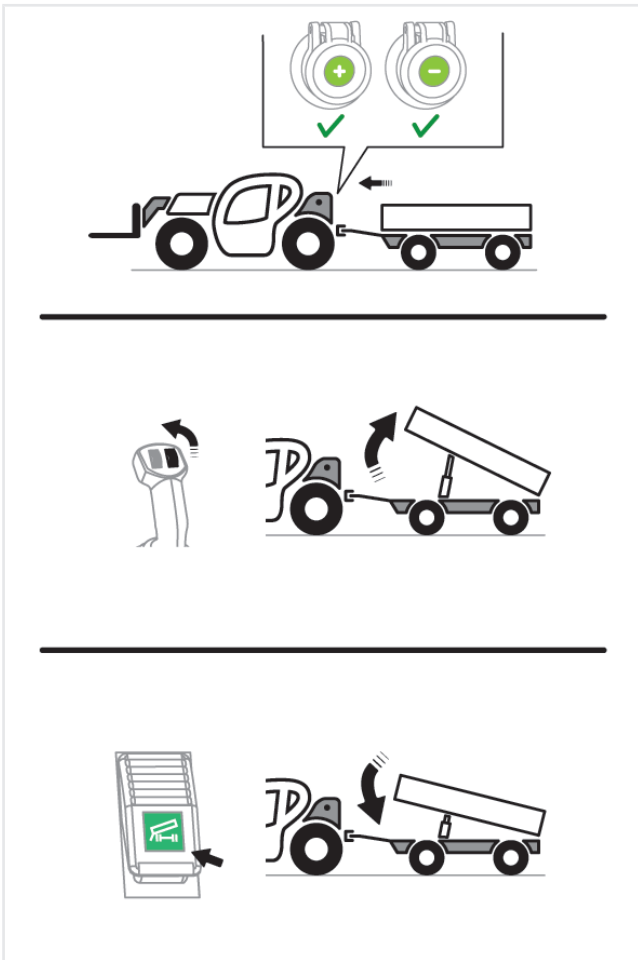


Figure: 150308-2

**To put the coupler under pressure it is necessary to:**

- With the hydraulic couplers switch, select the rear coupler on which the equipment or the trailer is installed.
- Use the services control to lift the caisson.
- After reaching the desired height release the control. The trailer will remain stationary in that position.

**To relieve pressure from the coupler it is necessary to:**

- With the hydraulic couplers switch, select the rear coupler on which the equipment or the trailer is installed.
- Press the Trailer Descent button (fig. 150308-1) and hold down until needed.



**DANGER**

**Danger of crushing.**

When using the Trailer Descent, make sure that nobody is in range of the vehicle and if the trailer is connected to it.

**8.5 Hydraulic Power Take Off (PTO)\*\***



**NOTE**

The Hydraulic Power Take Off (PTO) is an optional attachment for the agricultural sector.

**8.5.1 Warnings for the Power Take Off PTO use**



**ATTENTION**

**It is forbidden to use the vehicle or the equipment and trailers installed unless all instructions have been followed.**

Carefully follow the instructions contained in the user manuals of the mounted or towed vehicles or of the trailer.

The Power Take Off fitted on the rear of the vehicle is used to transfer the motion of the engine directly to the carries or towed attachments.

Before connecting or disconnecting the equipment or replacing the Power Take Off shaft:

1. Engage the parking brake.
2. Turn the movement selection lever to "N" and set all the controls to the rest position.
3. Stop the engine and remove the ignition key.
4. Wait that the Power Take Off shaft stops before leaving cab

Deactivate the Power Take Off after each use.

Failure to observe these instructions may result in serious injury or death.



**DANGER**

**It is necessary that the Power Take Off guard is always installed, lowered and in good condition when using the equipment activated by the Power Take Off.**

Use only power take-offs and universal joints with appropriate protective equipment.



## DANGER

### Risk of being trapped.

Do not wear loose clothing while using equipment activated by the Power Take Off.



## WARNING

Do not use the tool with a Power Take Off speed higher than recommended. This may damage the vehicle due to vibration, resulting in loosening of the parts and launch of debris.



## WARNING

The technically possible inclination of cardan joints depends on the shape and dimensions of the protective shield.



## DANGER

### It is strictly forbidden to:

- Adjust, lubricate, clean or disconnect vehicle with the engine running.
- Operate the vehicle connected to the Power Take Off at speeds higher than those specified.
- Step on the Power Take Off guard.
- Connect the equipment to the Power Take Off with the vehicle in motion or moving.
- Act simultaneously on the controls in the cab and on the external controls of the Power Take Off.
- Stay near the Power Take Off during its use.

## 8.5.2

### Use of hydraulic power take off

The task of the Power Take Off fitted on the rear of the vehicle is to operate, through a rotary motion, the carried or trailed tools.

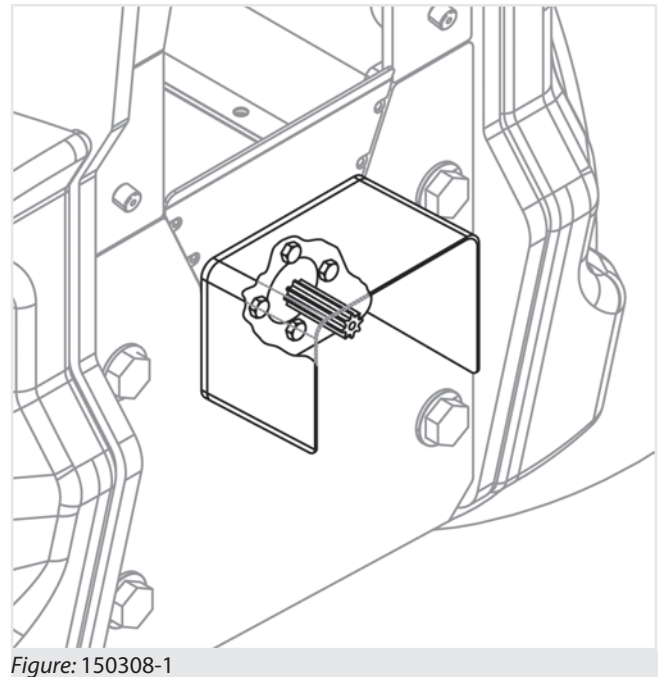


Figure: 150308-1

The hydraulic Power Take Off is constituted by a hydraulic motor connected to the rear hydraulic sockets through quick couplings.

### To properly activate the Power Take Off hydraulic it is necessary to:

- Verify that the quick couplings of the hydraulic Power Take Off are properly connected to the rear hydraulic sockets.
- Select the rear hydraulic sockets to which the hydraulic Power Take Off is connected through the rear sockets selector.
- Bring the vehicle engine between 1000 rpm and 2000 rpm.
- Press the "Deadman" button on the joystick and adjust the rotation speed of the hydraulic Power Take Off roller moving forward the services roller.
- The Power Take Off rotation will remain active as long as the services roller is activated on the joystick.



## NOTE

If the continuous oil function option is present, it is possible to maintain a constant volume of oil passing through the hydraulic sockets without acting consistently on the selector of the joystick.

Refer to the related chapter to activate and deactivate the Continuous oil function.



**ATTENTION**

After activating the switch, the Power Take Off immediately begins to rotate.

Before starting the Power Take Off insert the universal joint.

Stay at a safe distance from the cardan shaft.

Before starting the Power Take Off make sure that nobody is near the PTO, the universal joint and the mechanical user of the socket.



**NOTE**

If the Power Take Off is subjected to stresses greater than the nominal ones provided by the manufacturer, the automatic deactivation occurs with rotation stop.

8.5.3

Power Take Off emergency stop

In emergency conditions, the hydraulic Power Take Off can be stopped using the Emergency stop button located on the left rear side of the vehicle (fig. 150307-1).



150307-1

The pressure exerted on the emergency stop button activates the power supply cut-off and the consequent complete shutdown of the vehicle and any connected equipment.



**WARNING**

It is recommended to use the emergency stop button only in case there is an immediate danger to the operator, to personnel near the vehicle and/or to the integrity of the vehicle.



**DANGER**

The return to normal working conditions, after a stop caused by the emergency stop button, is only possible after:

- a) Removal of the cause that caused the stop
- b) Releasing the emergency stop button
  - ⇒ To release the emergency stop button, rotate it in the direction indicated by the arrow printed on the button.

8.6

Towing a trailer \*\*



**NOTE**

The Trailer towing is an optional attachment for the agricultural sector.

8.6.1

Warnings for towing a trailer



**WARNING**

Driving on roads with trailer is permitted only to vehicles approved as "Agricultural Tractors", subject to the exceptions permitted by the Highway Code in force in the country of use of the vehicle.



**WARNING**

**Carefully follow the instructions contained in the user manuals of the mounted or towed vehicles or of the trailer.**

It is forbidden to use the vehicle or the equipment and trailers installed unless all instructions have been followed.



**ATTENTION**

Use the correct point on the tractor to connect equipment. Use the tow hitches for trailers and the 3-point elevator for mounted or semi-mounted equipment. Do not use the 3-point elevator as a towbar.



**WARNING**

**The vehicle steers more sharply than the object being towed.**

During transport, pay attention when driving through bends.



**WARNING**

Leaving too abruptly causes high risk of vehicle tipping.

Follow all precautions listed below before towing equipment or a trailer with the vehicle.

- Check the correct operation of the braking system and signaling system of the vehicle and of the trailer.
- Check that the trailer complies with all relevant regulations in the country of use.
- Make sure that the safety cotter pin is correctly inserted inside the pin used on the tow hitch.
- The tow hitch must be selected based on the type of trailer or equipment to be towed in compliance with the indications of the vehicle registration document and on the label in the cab, or in accordance with the safety standards in force in the country of use.
- The maneuverability and safety of the vehicle depends on the correct adjustment of the tow hitch. Avoid towing trailers too heavy loads or trailers.
- After startup, slowly release the clutch to avoid jerky movements of the trailer or of the tool.
- During the movement of the trailer (uphill, downhill, travel) check that no one is near it. Danger of crushing.



## DANGER

**With disconnected trailer take the necessary precautions to prevent it from moving in an uncontrolled manner.**

Do not remain in the area between the tractor and the towed vehicle.

### 8.6.2

## Towing a trailer on the road for AGRICULTURAL vehicles

It is permitted to tow a trailer on public roads with the vehicle only if all the following conditions are present:

- The vehicle is approved as an agricultural vehicle.
- The vehicle has an approved tow hitch.
- The vehicle has the label (Fig. 1-J0500) showing all the data on the hitch installed and the maximum towable weight.
- The rules regarding trailers towing on public roads, in force in the country of use of the vehicle, are observed.

### 8.6.3

## Towing a trailer on the road for CONSTRUCTION vehicles

It is not allowed to vehicles approved as construction vehicles to tow trailers on public roads, except for the cases permitted by the Highway Code in force in the country of use of the vehicle.

### 8.7

## Trailers braking \*\*



### NOTE

All the different types of trailer braking are optional accessories.

The warning light (fig. 150208-1) indicates a failure or low pressure in the trailer brake system.

The pressure gauge (fig. 150208-2) on the left instrument panel indicates the pressure of the trailer braking system.

The maximum pressure of the pneumatic system is **0.72 MPa** (104.4 psi).



150208-1



150208-2



## DANGER

Do not move the vehicle until the warning light goes off because the trailer might not brake regularly.

Attach the trailer to the tow hitch of the vehicle, and then make the connections of the braking system of the trailer.

Adjust the braking control distributor (fig. 150208-3) depending on the type of trailer and load transported. The braking control distributor is on the rear of the vehicle.

- Turn the ring nut to the "+" sign to anticipate the trailer braking.
- Turn the ring nut to the "-" sign to delay the trailer braking.



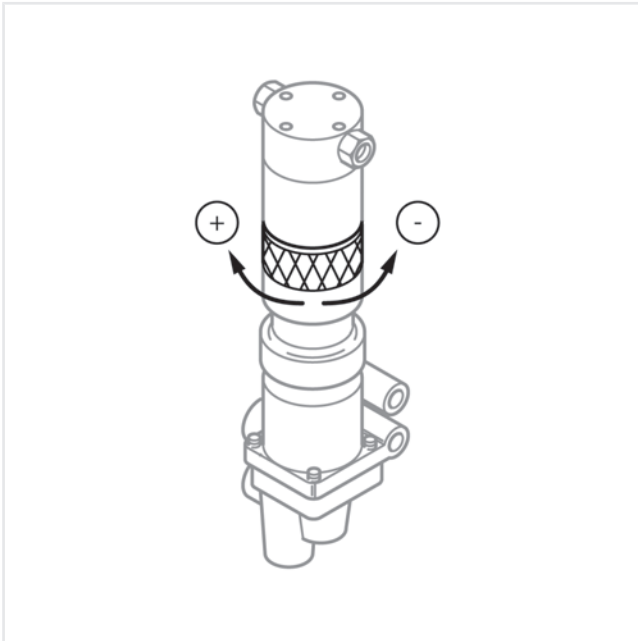


Figure: 150208-3

There are different types of trailer braking:

### 8.7.1 Pneumatic braking EEC type

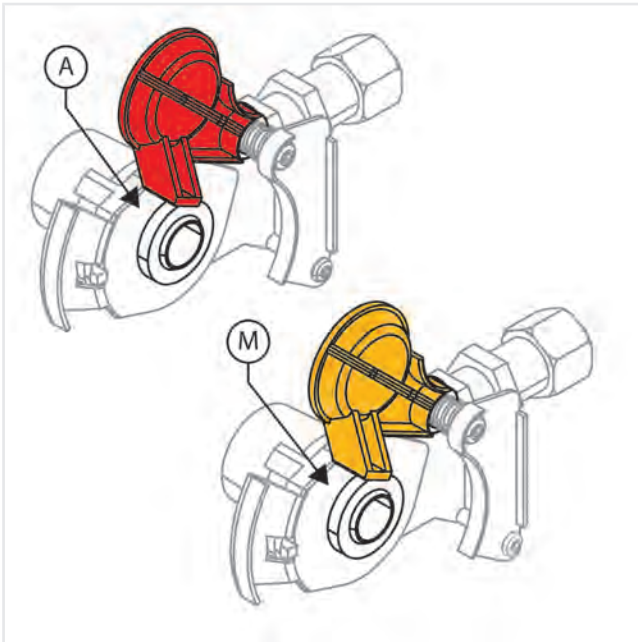


Figure: 180345-1

The pneumatic braking of EEC type includes two couplings:

Condition	Yellow (M)	Red (A)
Operator sitting with vehicle in operation	No air	Yes air
Vehicle running without operator	No air	No air

Condition	Yellow (M)	Red (A)
Operator sitting with vehicle in operation and parking brake engaged	No air	No air
Operator sitting with vehicle in operation and brake pedal pressed	Yes air	Yes air

### 8.7.2 Pneumatic braking type CUNA NC 144-04

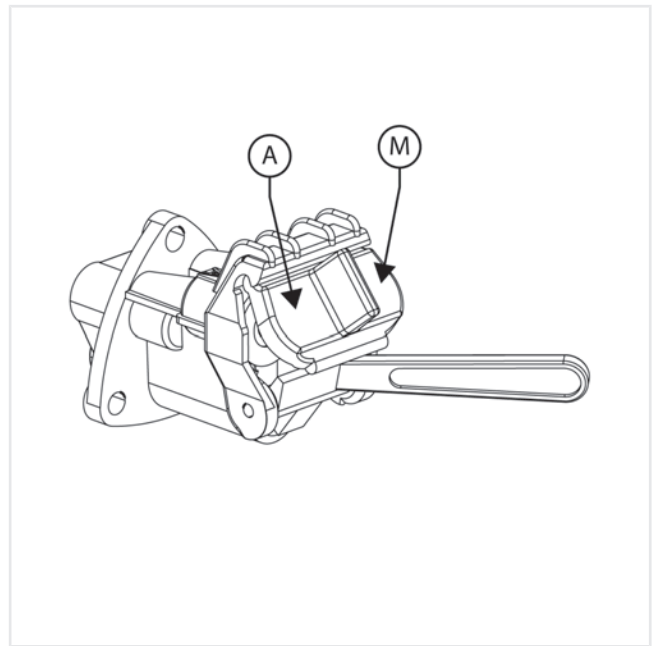


Figure: 180346-1

The pneumatic braking type CUNA has a single aluminum coupling:

Condition	M	A
Operator sitting with vehicle in operation	No air	Yes air
Vehicle running without operator	No air	No air
Operator sitting with vehicle in operation and parking brake engaged	No air	No air
Operator sitting with vehicle in operation and brake pedal pressed	Yes air	Yes air

### 8.7.3 Hydraulic braking EEC type

The trailer braking system acts proportionally to the pressure exerted on the brake pedal of the vehicle.

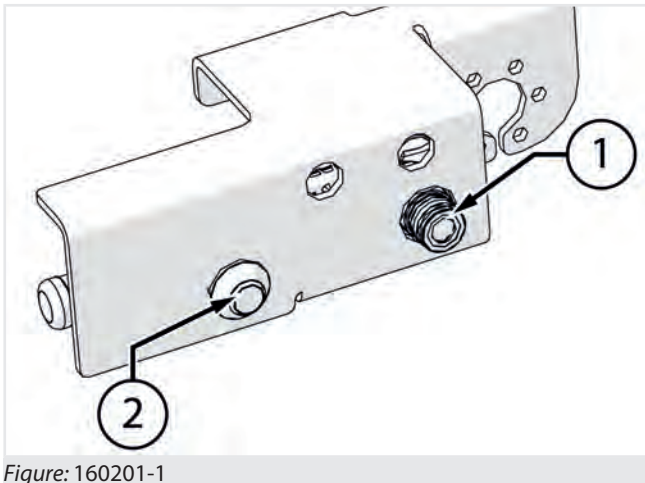


Figure: 160201-1

The trailer braking system acts proportionally to the pressure exerted on the brake pedal of the vehicle.

To connect the hydraulic braking system of the trailer to the vehicle system with engine on it is necessary (fig. 160201-1):

- Do the approaching operations to the trailer and connect it to the appropriate hitch for the vehicle trailers.
- Apply the parking brake in the cab and go out of the vehicle.
- Press and hold the button "2" to exhaust pressure from the hydraulic braking system.
- Connect the braking circuit of the trailer to the hydraulic socket "1".
- Release the button "2".

If the coupler is not used, it must be adequately protected with its cap.

To disconnect the hydraulic braking system of the trailer from the vehicle (fig. 160201-1):

- Place the vehicle and the trailer on level and non slope ground.

**DANGER! If it is not possible to place the vehicle and the trailer on non slope ground, place wedges under the wheels of the trailer and engage the negative brake of the vehicle to prevent it from moving during the operation.**

- Press and hold the button "2" to exhaust pressure from the hydraulic braking system.
- Press and hold the button "2" and remove the hydraulic connection from the socket "1".
- Continue the trailer release operations.

If the coupler is not used, it must be adequately protected with its cap.



## DANGER

By activating the parking brake on the vehicle, the trailer connected to the vehicle is braked only until the vehicle engine is on. Turning off the engine of the vehicle or pressing the "2" when the trailer braking circuit is connected to the vehicle, the trailer will be not braked; while the vehicle will continue to be braked thanks to the negative parking brake.

Pay utmost attention in the case of sloping ground. Place chocks under the trailer wheels to prevent accidental movement.

### 8.7.4

## Hydraulic braking type CUNA NC 344-05

The trailer braking operates under pressure; the hydraulic circuit of the vehicle provides a constant pressure to the trailer braking system.

By connecting the braking system of the trailer to the vehicle, the trailer is released from the brakes and can move.

The pressure is varied in proportion to the pressure exerted on the brake pedal of the vehicle.

The trailer brake valve (fig. 150212-1), located on the back of the vehicle, has a lever for the hydraulic braking activation and deactivation:

- When the lever is in "0" position the hydraulic braking is activated.
- When the lever is in "1" position the hydraulic braking is deactivated.

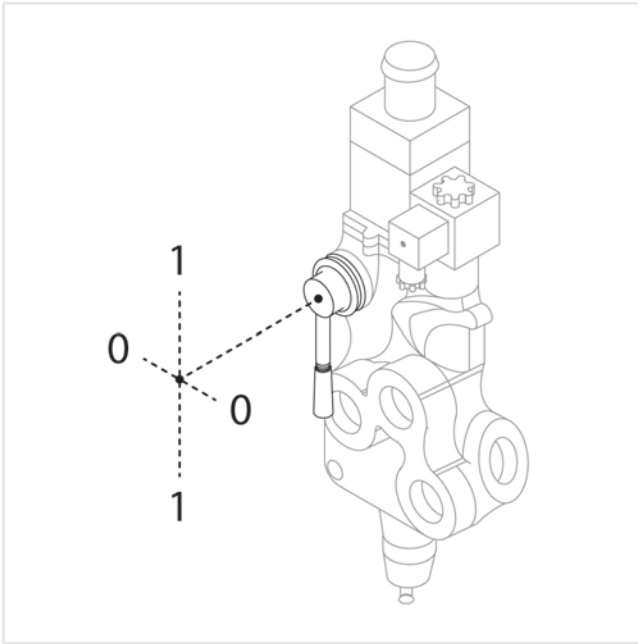


Figure: 150212-1



**WARNING**

**With the trailer connected and lever "A" in position "0", the parking brake is enabled on the trailer.**

In case of non-use of the trailer it is advisable to move the lever in the "1" position to prevent that the systems remains under pressure. Keeping the system under pressure entails an unnecessary loss of engine power, with consequent higher power consumption, and unnecessary heating of the hydraulic oil.

**8.8 Trailers electrical socket \*\***



**NOTE**

\* The trailer electrical socket is an optional accessory.

The trailer electrical socket (fig. 150220-1) allows to connect the lighting system of the trailer to the vehicle.

Connect the trailer to the vehicle through the Hitch for trailers before making the electrical connections.

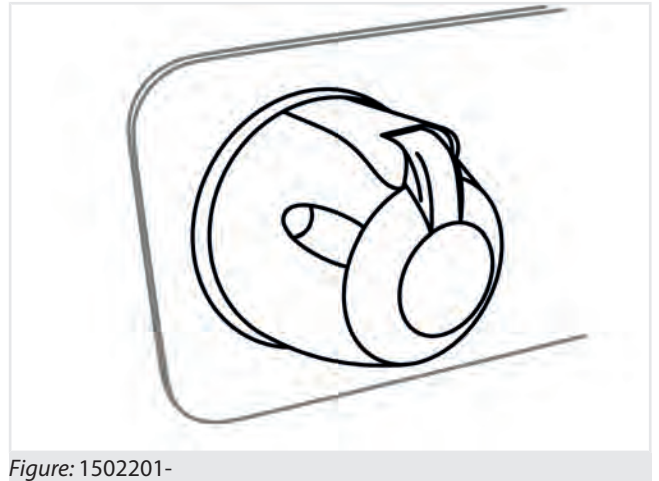


Figure: 1502201-

**8.9 Hitches for rear trailers \*\***



**NOTE**

All different types of trailer hitches are optional attachments for the agricultural sector.

The trailer hitches are located in the rear part of the vehicle and may have different capacities depending on the customer's request.

The towing capacity is limited for each vehicle in accordance with the authorized weight to be towed, the traction force and the vertical load of the tow pin. These data are shown on the vehicle registration document.

Before moving the vehicle with the trailer ensure the correct positioning of the locking pin.

The pin of the rear hitch "1" (fig. 150213-1) is correctly positioned and locked when this passes through both sides of the hook "2" and is locked by its cotter pin "3".


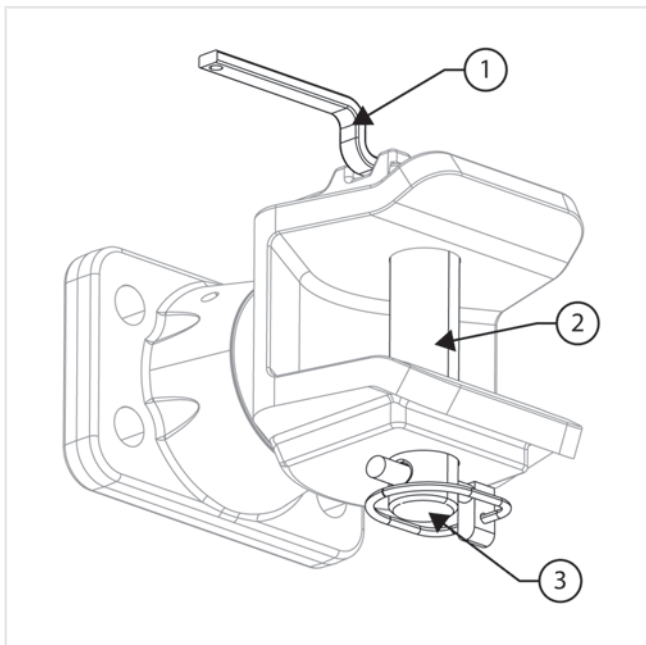


Figure: 150213-1




## NOTE

Refer to the "Technical data" chapter to know the characteristics of the towing hook installed.

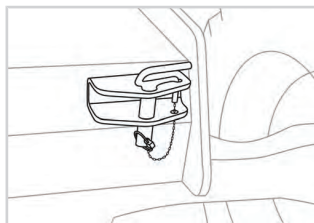

150213-2

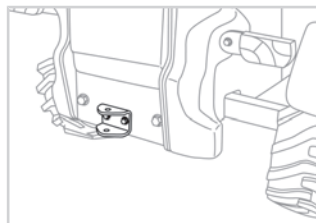

150213-3



## DANGER

**On the vehicle there are sheet metal hooks (fig. 150213-2 and fig. 150213-3) to facilitate the vehicle towing operations in case of emergency or breakdown.**

It is forbidden to use these hitches for towing trailers, danger of damage to the vehicle and to the trailer as these hitches have capacity and resistance inadequate for this purpose.

## 8.10 Height adjustable tow hitch adjustment \*\*



### NOTE

The Height adjustable tow hitch is an optional attachment for the agricultural sector.

The height adjustable tow hitch (fig. 150502-1) allows the operator to adapt the tow hitch according to the type or characteristics of the trailer towed.

To adjust the tow hitch height:

1. Hold the pin "1" and pull outward.
2. Keep the pin "1" pulled and lift the handle with safety lock "2"; in these conditions the hook is free to move in its guides.
3. Release the pin "1".
4. Lower or lift the hook "3" accompanying it by the handle "2".
5. After reaching the desired position, release the pin "1".
6. Lower the safety handle "2" until the hook "3" locks in the desired position.

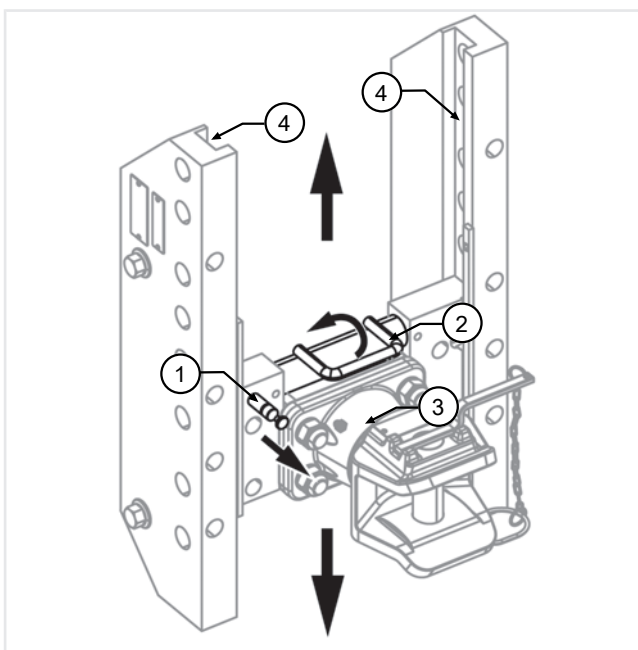


Figure: 150502-1



**WARNING**

**The vehicle driving maneuverability and safety depends on the proper adjustment of the tow hitch.**

The tow hitch located at the top increases the pulling capacity but also prevents the risk of tipping. Do not allow that the drawbar to position too tilted up.



**DANGER**

**Be careful during the tow hitch height adjustment; danger of crushing of hands or feet.**


Keep the guides "4" clean and lubricate according to the deadlines specified in the "Maintenance" chapter.

**8.11  
Pick-up hitch \*\***




**NOTE**

The Pick-up hitch is an optional attachment for the agricultural sector.

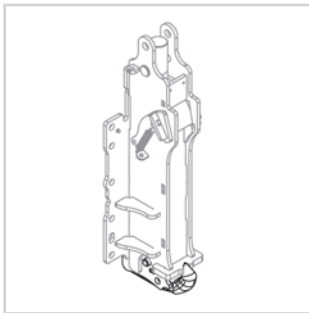

150503-1

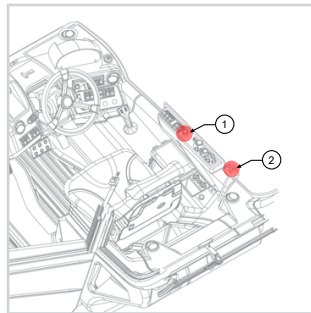

150503-2

The pick-up hitch (fig. 150503-1) is placed in the rear of the vehicle and allows connecting the trailer to the vehicle directly from the cab.

To use the Pick-up hitch it is necessary to follow this procedure (fig. 150503-2):

1. Select the rear hydraulic socket to which is connected to the Pick-up hitch through the selector "1".
2. Pull the safety release "2" in the cab (the lever position can vary depending on the model of the vehicle).
3. Move the services roller on the joystick forward to bring down the Pick-up hitch.

4. Slowly reverse the vehicle to place the Pick-up hitch under the drawbar of the trailer.
5. Move the services roller on the joystick back to lift the Pick-up hitch and hook the trailer.
6. Lift the hook until the safety lock snaps.
7. Drive slowly to check that the hooking occurred successfully.

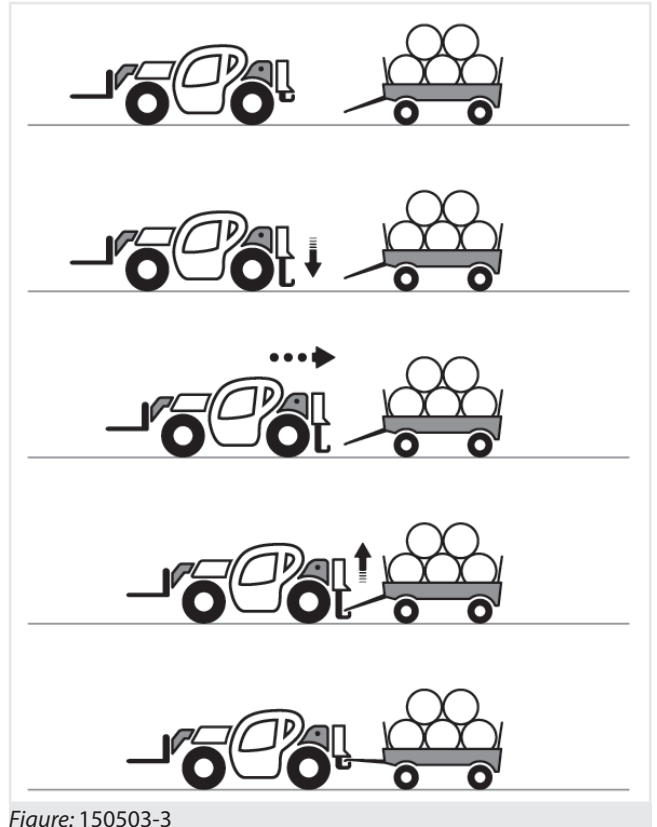


Figure: 150503-3

## 9 Equipment and tools

### 9.1 General warnings on equipment use



#### DANGER

It is strictly forbidden to modify the structure of the equipment or adjust the safety devices of the various tool components.

- Only Equipment CE certified by the relative manufacturer can be used on **DIECI** vehicles, as well as equipment approved or falling within the technical limits set out by **DIECI S.r.l.** The guarantee is void if not approved equipment is used.
- The Tool does not require CE certification.
- **DIECI S.r.l.** liability shall not be involved if equipment use or modifications do not comply with the above mentioned requirements.



#### ATTENTION

**The equipment installed on the vehicle may only be used:**

- a) on consistent ground and with vehicle level with maximum tilt of 2°.
  - b) by competent and qualified personnel who must have read this manual. In the case of road use refer to the Use and Maintenance Manual of the vehicle making sure that the operator is in possession of a valid driver's license in accordance with the laws in force in the country of use (license B or higher for ITALY), and that the vehicle boom is in the fully retracted position.
- Some equipment be accompanied by instructions related to safety standards, connection and disconnection, operation and maintenance. Carefully read and fully implement these instructions prior to installation, use and maintenance of the equipment. In case of doubt, contact your local dealer.

- Before starting to use the vehicle and related equipment, or before performing particularly complex or dangerous operations, it is absolutely necessary to practice in a clear work area free from obstructions.
- In case of poor visibility of the zone use a person on the ground to coordinate the movements and operations and that monitors the area inviting people who might come, to go away. The individual on the ground must stand at a safe distance from the vehicle in motion and alert, before any movement, any personal around.
- To prevent damaging hydraulic fittings when changing an equipment, stop the engine and wait a few seconds to remove pressure from the circuit. Always clean the fittings before their reinsertion.
- Check the cleanliness, protection and conditions of quick release joints in the equipment circuits and on the boom head daily.



#### DANGER

Never carry the equipment in the vicinity of an open flame.



#### DANGER



**When using the vehicle, carefully follow the respective Load charts.**

It is strictly prohibited to work without the respective load charts for the type of vehicle and installed equipment.

- The indications given by the anti-tipping system of the vehicle must be considered valid for standard working conditions, on flat and solid ground with well-operating and properly calibrated equipment. In any case, the values indicated by the load charts must be respected and never exceeded.
- It is mandatory, every time the equipment is used to insert the safety plugs to secure the equipment to the Attachment holding plate.
- If an attachment holding plate different from the original Dieci attachment holding plate is installed on the vehicle, a residual load will remain on the anti-tipping device of the vehicle as a safety factor.
- Refer to the manual of the manufacturer of the attachment holding plate installed if different than the original Dieci attachment holding plate.



**ATTENTION**

**When moving the vehicle with equipment or man baskets installed, maintain a speed appropriate to the type of ground.**

When driving on rough terrain it is advisable not to exceed 10 km/h (6,2 mph) to prevent vibration and pitching phenomena, damaging the equipment or the man basket installed on the vehicle.



**WARNING**

**It is possible that in certain working conditions there is no interference between the attachment holding plate and/or the equipment and the vehicle chassis or wheels.**

Pay due attention to prevent damage to the vehicle. Lift and extend the boom just enough to avoid interference.

9.1.1  
Equipment pre-use checks



**NOTE**

Refer to the pre-use safety procedures of the vehicle on which the equipment is installed.

Before every use and every time new equipment is installed on the vehicle:

- Check that the equipment is properly hooked to all the pins and the hooks are inserted in the correct position.
- There is no damage, deterioration, deformation of the equipment locking components.
- Check that the equipment and components are intact, perfectly functioning and not damaged.
- Verify that the equipment capacity is more than the weight of the load to be moved.
- Verify the correct functioning of the equipment and of the controls present in the vehicle cab on which the equipment is installed in a work zone free from personnel and obstacles.
- Verify the functioning of all indicators and lights present inside the vehicle on which the equipment has been mounted.
- Check the swiveling when empty.
- Check the oil level in the hydraulic circuit.

- Check that the safety symbols and stickers are clearly legible.
- Check the efficiency and functioning of the safety devices.
- Visually check the state of welding, inspect the vehicle and check for cavities, cracks of the welding or base metal or other inconveniences.
- Check for any deformations and/or modifications of the material due to sudden temperature changes or damage from impacts.
- Check the equipment for wear.
- Verify the use mode relating to the installed equipment has been set on the vehicle.
- Verify that the Capacity diagrams relating to the vehicle and installed equipment are present on the vehicle.

In case of equipment with hydraulic connections:

- Check that the tubes are in good conditions and do not obstruct the movements of the boom or of the equipment.
- Verify the correct connection of the hydraulic tubes (if present) ensuring that the equipment functions are not inverted.

In case of equipment with electrical connections:

- Check that the cables are in good conditions and do not obstruct the movements of the boom or of the equipment.
- Clean and fasten all the electrical connections (if present). Check before each work shift that there are no loose, twisted, hardened or damaged wires. Do not operate the operating vehicle if there are any loose, twisted, hardened or damaged electric cables.

In the event of radiocontrol pre-arrangement:

- Refer to the specific manual of the equipment for further checks.
- Verify the correct functioning of the radiocontrol/push button control panel and the charge status of the batteries.

In case lifting equipment is used

- Refer to the specific manual of the equipment for further checks.
- Verify the integrity of the lifting hook, including relative catch, and of the hook bolt to the rope.

### In case winches are used

- Refer to the specific manual of the equipment for further checks.
- Check that the rope is not damaged, cut, torn, frayed. On the contrary, do not use the equipment and replace it. (This check can be carried out by fully extending the lift boom and unrolling the winch rope). During this operation it is also possible to check the operation of the limit switch, which must lock the rope according to the procedure described in the specific paragraph.
- Verify the functioning of the extensometric transducer of the mounted equipment (if present); to do this, try to lift a load slightly heavier than the nominal maximum capacity of the equipment. In case the equipment is unable to lift the load, the transducer operates correctly, otherwise immediately interrupt the operation bringing the load to the ground and repair the equipment.

### In case of using elevating work platforms

- Refer to the specific manual of the equipment for further checks.
- Verify the operation of the emergency button of the load limiting device and of the area limiting device at the beginning of each work cycle.
- Before using the platform ensure it is not wet, dirty with grease, oil, has icy surfaces or covered with other substances that can make its surface slippery. On the contrary, accurately clean and dry the platform surfaces. Danger of slipping and falling.
- The vehicle on which the equipment is installed must be braked and stabilized on solid ground. If outriggers (optional) are present, position them correctly on the ground before starting to operate.
- Before operating, make sure that the openings for access to the platform are in the closed position; always verify the correct engagement of the safety harnesses (PPE category III).



### ATTENTION

**All checks must be carried out by adequately trained personnel and registered on the control log.**

If damage or malfunctioning is detected, comply with the instructions contained in this manual or in the manual of the equipment or basket or contact the DIECI Assistance Center to agree the actions to be taken.

If routine or extraordinary maintenance or technical adjustment of the equipment is required, contact exclusively personnel authorized by the DIECI Assistance Center and note the service intervention on the control log.

If the equipment is tampered with, the guarantee is voided and the Manufacturer is relieved of all liability.



### DANGER

Operators who note anomalies on the equipment or on the vehicle on which it is installed, and it does not conform to safety regulations must suspend use and immediately inform the Person in charge.



### NOTE

For road circulation, refer to the Use and Maintenance Manual of the vehicle on which the equipment is installed.



## 9.2 Equipment installation procedure

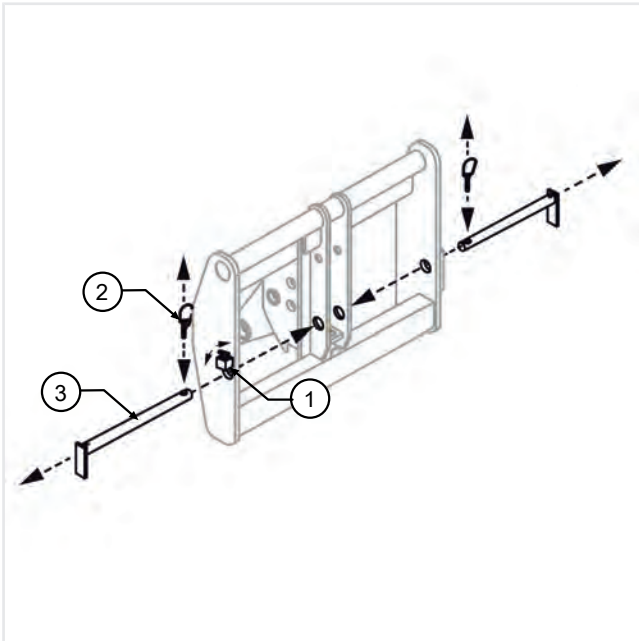


Figure: 150507-1

To properly install equipment carry out the following operations (fig. 150507-1):

1. Remove the safety plugs "3" (if installed) by removing the safety plugs "2" and lifting the lock pins "1".
2. Place the equipment on a flat not yielding surface, to be able to smoothly engage it with the attachment holding plate of the vehicle.
3. Place the vehicle with the boom lowered parallel to the tool. Approach the attachment holding plate to the accessory extending the telescopic boom. The vehicle can not extend the boom if it is completely lowered. Slightly raise the boom to be able to extend it.
4. Using the tilting movement, rotate the attachment holding plate downward. Bring the top of the plate under the locking hooks of the tool.
5. Slightly lift the boom and rotate the attachment holding plate upwards, thus making the equipment adhere to the attachment holding plate of the vehicle. During this operation, make sure that no person is in the vicinity of the equipment or the vehicle boom.
6. Turn off the engine and get out of the vehicle.
7. Lift the lock pin "1" and insert the safety pins "3" in their seats on attachment holding plate, passing through the corresponding slots of the equipment. If the two holes do not match, perform the steps described in chapter "Safety pin outline".
8. Fit the safety plug "2" on the pins just inserted.
9. In the event that the equipment needs electrical or hydraulic connections, refer to the chapters "Hydraulic connections [▶ 139]" and "Electrical Connections [▶ 143]".
10. Once properly fixed the equipment, turn on the vehicle and set the correct mode of operation of the vehicle related to the newly installed equipment:
11. Consult the use and maintenance manual of the vehicle to set the correct mode of use.
12. Check that in the cab there is the load chart related to the vehicle and to the equipment just installed.

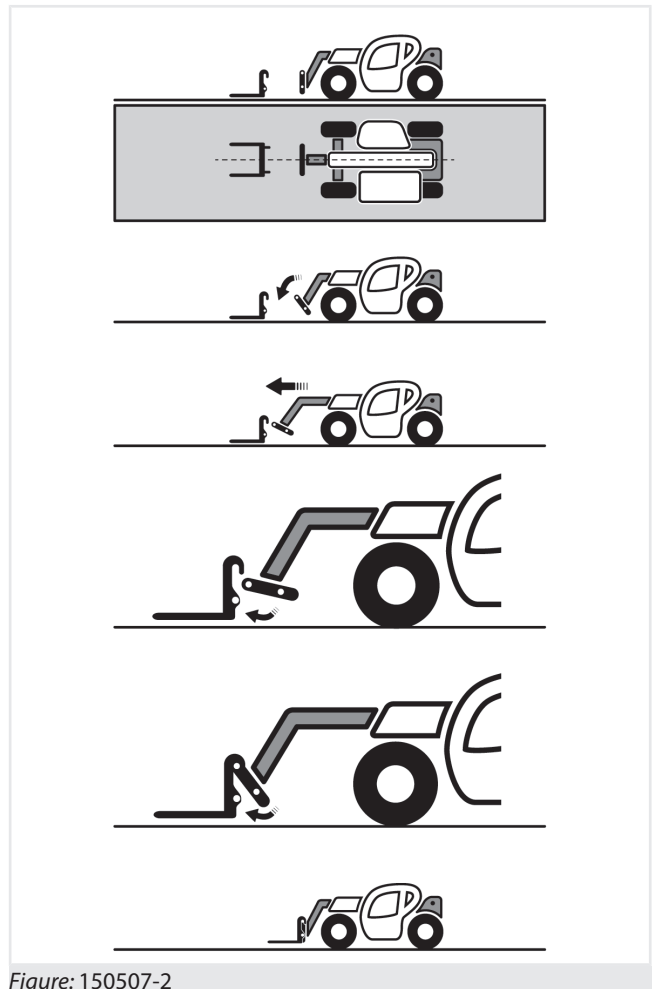


Figure: 150507-2



### **DANGER**

In case, for deformation, the pin and the related safety pin do not reach the required position, it is absolutely forbidden to use the accessory as it may come off and fall to the ground dangerously.



## DANGER

It is forbidden to operate without the safety pin installed on the attachment holding plate.



## WARNING

When using an equipment that has electrical or hydraulic connections these must always be correctly connected to the vehicle. Failure to connect does not allow the proper operation of the safety devices with risk of damage to property and persons and risk of vehicle tipping.



## DANGER

It is forbidden to operate with a mode of use of the vehicle not suitable for the type of equipment installed. The electro-hydraulic equipment will not work correctly and safety devices will not be in operation creating a risk of damage to property and people and the vehicle risk of tipping.



## DANGER

**It is forbidden to operate without the proper load chart related to the vehicle and to the equipment installed.**

For more details on the accessory installation procedures or warnings, consult the use and maintenance manual of the accessory.



## ATTENTION

### Before each use, check that:

- a) The equipment is properly hooked to all the pins and hooks are inserted in the correct position.
- b) There is no damage, deterioration, deformation of the equipment locking components.
- c) If present, the electric cables or hydraulic hoses are in good condition and do not create hindrance while using the equipment.
- d) The mode of operation of the vehicle is consistent with the type of equipment installed.
- e) In the cab there are the load charts related to the vehicle and to the equipment installed.

## 9.3 Hydraulic connections

### 9.3.1 Warnings for hydraulic connections



#### NOTE

Before making the hydraulic connections, perform the "Equipment installation procedure" and check the equipment is correctly fixed to the vehicle.

Check the hydraulic tubes do not obstruct the movements of the vehicle or of the equipment as it may be damaged.

Consult the equipment manual to verify correct operation.



#### WARNING

When using an equipment that has electrical or hydraulic connections these must always be correctly connected to the machine. Failure to connect does not allow the proper operation of the safety devices with risk of damage to property and persons and risk of machine tipping.



#### NOTE

Always accurately clean the hydraulic connections before each coupling. If not used, both the hydraulic connections must be protected with adequate plastic caps.



#### WARNING

Do not use the vehicle or the equipment if the hydraulic tubes are worn or damaged, but repair or replace them.



#### WARNING

**Once the hydraulic connections have been made, it is compulsory to verify that the controls are consistent with the operations carried out on the vehicle.**

By inverting the connections, the accessory functions may be inverted compared to normal use, therefore, after having completed the equipment installation procedure, test the various functions in a free zone.



#### DANGER

##### Hydraulic liquid under pressure

Fine jets of hydraulic oil at high pressure can penetrate the epidermis. Keep hands and face at a safe distance from the pressurized fluid and wear goggles and protective gloves. Bring a piece of cardboard to the area of the suspected leak and then check for traces of liquid on the cardboard. If the liquid penetrates the skin immediately seek for medical advice.



#### DANGER


##### Hydraulic pressure

The leakage of hydraulic oil at operating pressure can cause injury: before connecting or disconnecting the hydraulic hoses, release the residual pressure from the hydraulic circuit. Prevent starting the engine with disconnected hoses.


### 9.3.2

#### Type of hydraulic quick couplings

The hydraulic quick couplings at boom head can be of two types:

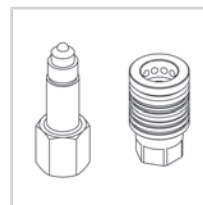

Push-Pull (fig. 150509-1)

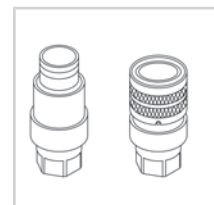

Flat-Face (fig. 150509-2)

### 9.3.3

#### References for correct connection

To make the correct connection of the hydraulic fittings, each hydraulic plug or socket is marked with a color or symbol.

- The **red** plugs must be connected to the **red** sockets or those with the "+" mark.
- The **blue** plugs must be connected to the **blue** sockets or those with the "-" mark.

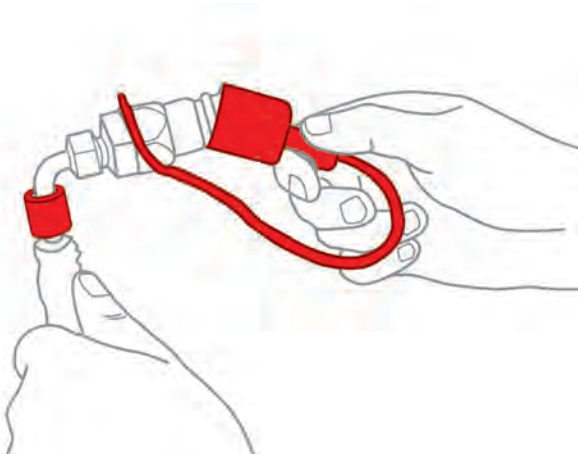


Figure: Cap and mark on the hydraulic sockets



Figure: Hydraulic sockets on boom head

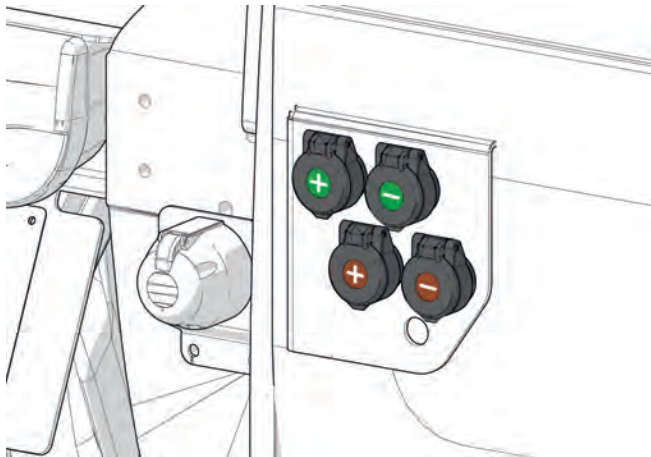


Figure: Rear hydraulic sockets




## WARNING

Equipment with hydraulic connections made incorrectly have movements or functions that do not agree with the operator's controls and can cause damage to other operators, material handled or to the vehicle and equipment.

Always make sure that the hydraulic connections follow the indications given above for proper connection and that the movements and functions of the equipment comply with the operator controls.

### 9.3.4

#### Push-Pull couplings connection

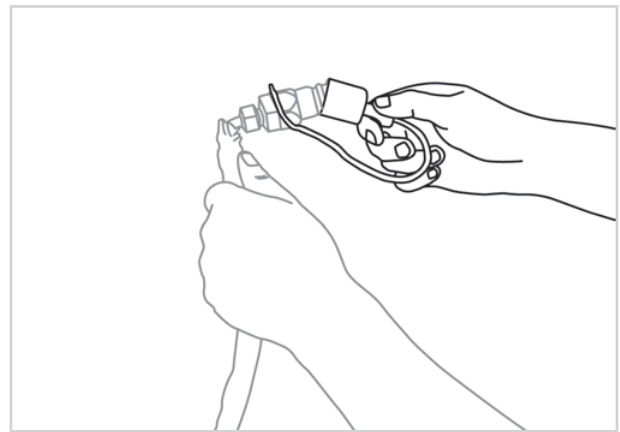

150510-1

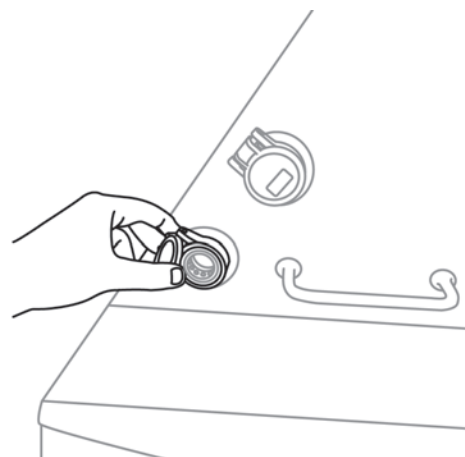


Figure: 150510-2

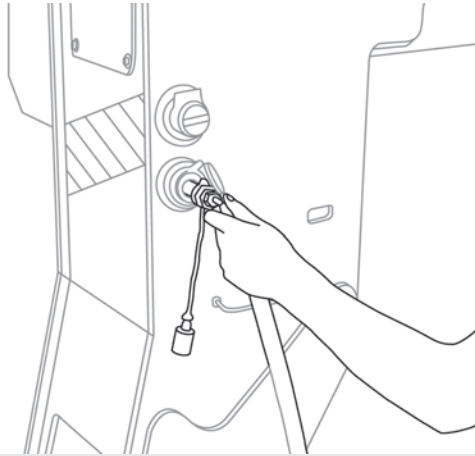


Figure: 150510-3

To connect the Push-Pull quick couplings to the sockets on the boom head:


1. Perform the equipment installation procedures described in the chapter: "Equipment installation procedure".
2. Turn off the vehicle.
3. In case of closed center distributor, discharge the system residue pressure (refer to chapter Closed center distributor: Relieve the pressure through the trailer Descent button \* [▶ 143]).
4. Remove the protection cap from the equipment hydraulic plugs (fig. 150510-1).
5. Lift the protective cover for the hydraulic socket present on the boom head (fig. 150510-2).
6. Clean the plug and socket, if soiled.
7. Fit the plug inside the socket and press until the pipe is blocked (fig. 150510-3).
8. Check that the hydraulic pipe is correctly fixed.
9. Carry out the same operation for both pipes.



**NOTE**

Consult the equipment manual to verify correct operation.

9.3.4.1  
Push-Pull couplings connection when connected to a valve

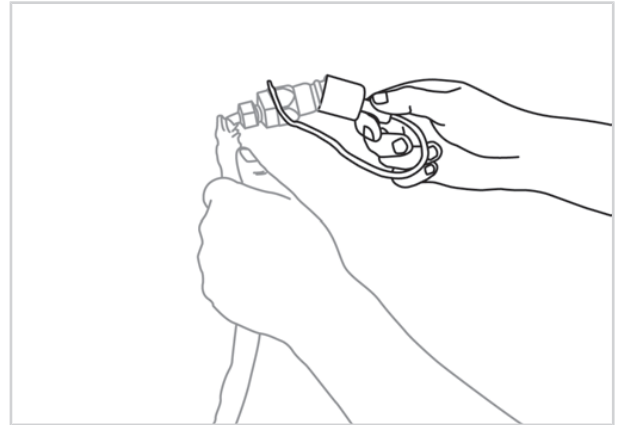

150511-1

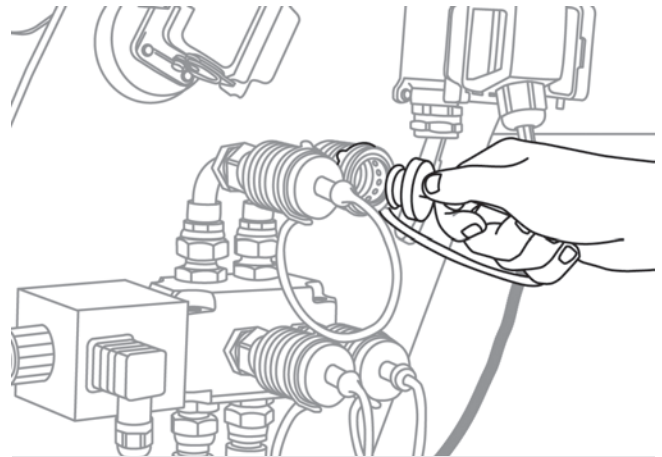


Figure: 150511-2

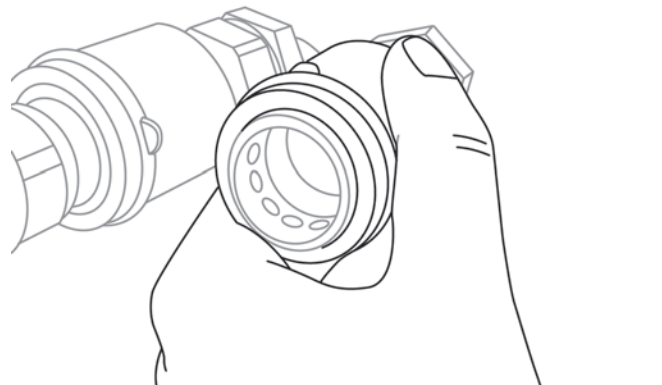


Figure: 150511-3

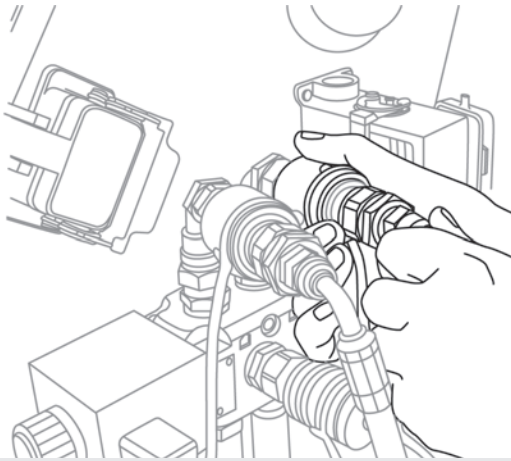


Figure: 150511-4

To connect the Push-Pull quick couplings to the valve on the boom head:

1. Perform the equipment installation procedures described in the chapter: "Equipment installation procedure".
2. Turn off the vehicle.
3. In case of closed center distributor, discharge the system residue pressure (refer to chapter Closed center distributor: Relieve the pressure through the trailer Descent button \* [▶ 143]).
4. Remove the protection cap from the equipment hydraulic plugs (fig. 150511-1).
5. Remove the protection cap from the hydraulic sockets installed in the valve on the boom head (fig. 150511-2).
6. Clean the plug and socket, if soiled.
7. Push the ring on the valve socket towards the boom (fig. 150511-3).
8. Place the plug fully inside the socket and release the ring of the valve (fig. 150511-4).
9. Check that the hydraulic pipe is correctly fixed.
10. Carry out the same operation for both pipes.



## NOTE

Consult the equipment manual to verify correct operation.

## 9.3.5 Flat-Face couplings connection

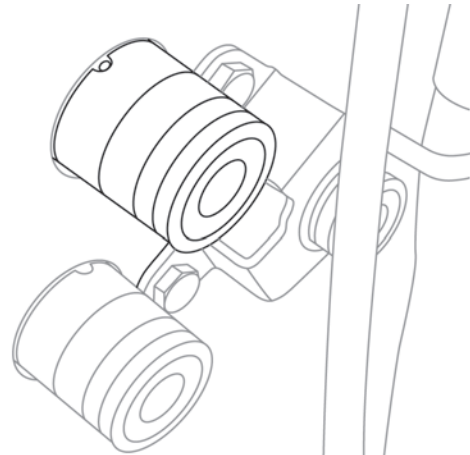


Figure: 150512-1

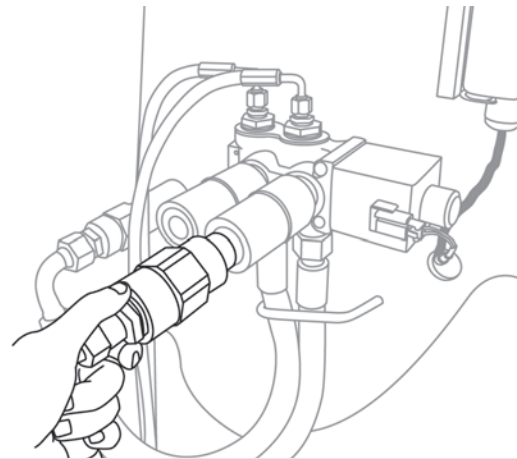


Figure: 150512-2

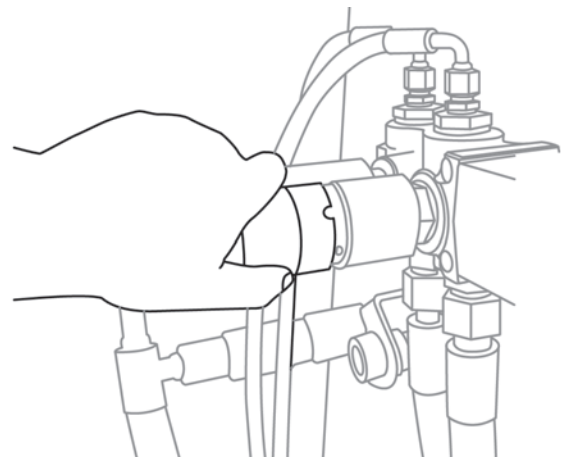


Figure: 150512-3

To connect the Flat-Face quick couplings:

1. Perform the equipment installation procedures described in the chapter: "Equipment installation procedure".
2. Turn off the vehicle.

3. In case of closed center distributor, discharge the system residue pressure (refer to chapter Closed center distributor: Relieve the pressure through the trailer Descent button \* [▶ 143]).
4. Clean the plug and socket, if soiled.
5. Rest the plug at center of the socket and push the fully plug (fig. 150512-2), until the socket ring is lifted.
6. Turn the ring to block the plug inside the socket (fig. 150512-3).
7. Check that the hydraulic pipe is correctly fixed.
8. Carry out the same operation for both pipes.



**NOTE**

Consult the equipment manual to verify correct operation.


9.3.6

Closed center distributor: Relieve the pressure through the trailer Descent button \*



**NOTE**

This operation is possible and it may be required only for vehicles fitted with "Closed center distributor" and "Trailer descent".

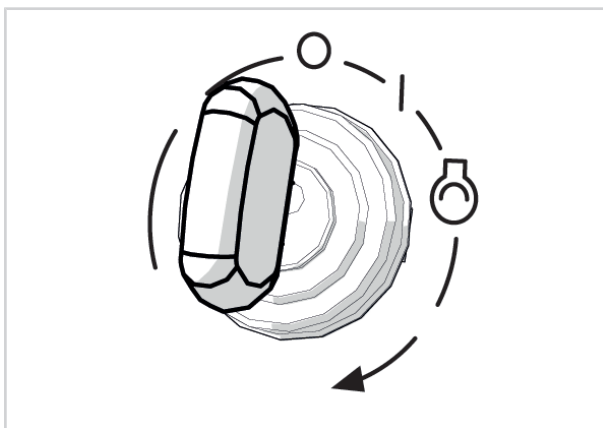

150501-1

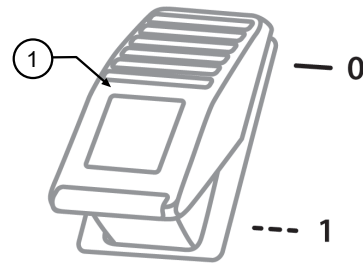


Figure: 150501-2

To relieve pressure it is necessary to:

1. Move the ignition key of the vehicle to position "I" (fig. 150501-2).
2. Select the hydraulic socket still under pressure (if there is more than one hydraulic socket refer to the vehicle manual, chapter "Hydraulic sockets selection").
3. Press the "Trailer descent" button (fig. 150501-2) to release the residual pressure of the selected hydraulic press.
4. Proceed with the hydraulic couplers connection operation.

9.4

Electrical Connections

9.4.1

Warnings for electrical connections



**DANGER**

**Before making the electrical connections, switch off the vehicle.**

Do not use the vehicle or the equipment if the electrical cables are worn or damaged, but repair or replace them.



**WARNING**

Do not leave the boom plug hanging from the chain during work operations as this may be damaged impairing the vehicle correct operation when used without equipment.



## ATTENTION

Before making the electrical connection, perform the "Equipment installation procedure" and check the equipment is correctly fixed to the vehicle.



## WARNING

**When using an equipment that has electrical or hydraulic connections these must always be correctly connected to the vehicle. Failure to connect does not allow the proper operation of the safety devices with risk of damage to property and persons and risk of vehicle tipping.**

Consult the equipment manual to verify correct operation.



## ATTENTION

Check that the electrical cable is not in a position that hampers the movements of the operating vehicle and of the equipment as it could be damaged.

### 9.4.2

## Procedure for connecting electrical connections

The electrical connections on the boom head may be at 6 or 24-pole, but the connection procedure is the same for both.

For equipment provided with electrical system carry out the following operations:

1. Perform the equipment installation procedures previously described.
2. Turn off the vehicle.
3. Disconnect the cover from the socket on the boom "1" (fig. 150512-1) lowering the 2 safety levers "2".

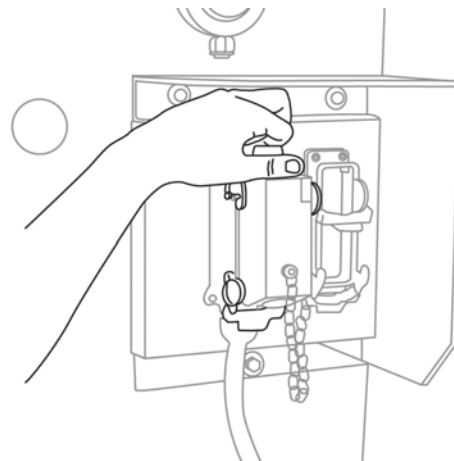


Figure: fig.150512-1

4. Remove the cover located on the boom socket and fit it in the dummy socket aside (fig. 150512-2) and fasten it with the appropriate levers.

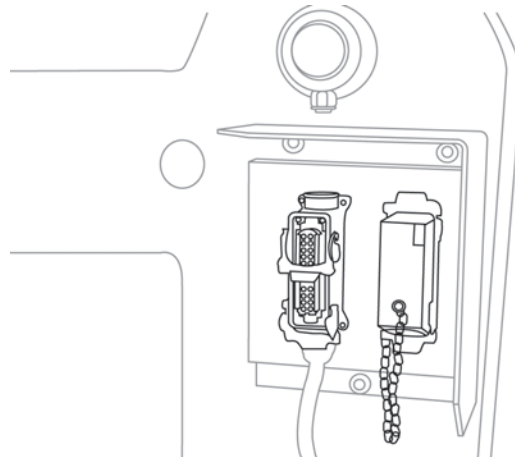


Figure: fig. 150512-2

5. Disconnect the plug from the dummy socket on the equipment "1" (fig. 150512-3) lowering the 2 safety levers "2" (fig. 150512-3).

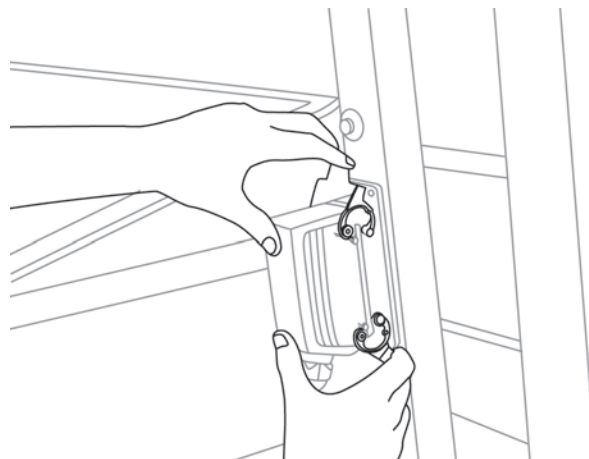


Figure: fig. 150512-3

6. Connect the plug of the equipment on the electrical socket of the boom, fastening it by lifting the 2 safety levers "1" (fig. 150512-4).



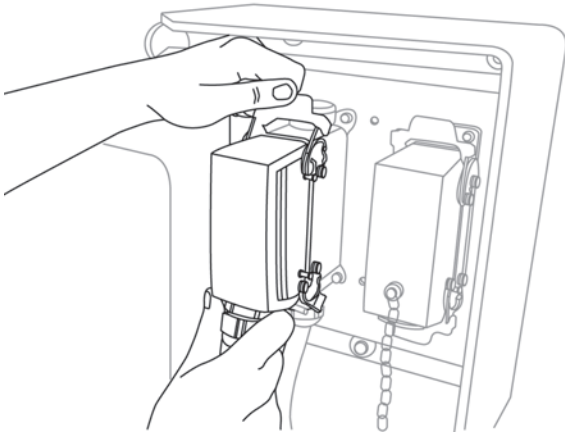


Figure: fig. 150512-4

7. Once the equipment is properly fixed, turn on the vehicle and set the correct mode of operation of the vehicle related to the newly installed equipment.
8. Check that in the cab there is the load chart related to the vehicle and to the equipment just installed.

## 9.5 Equipment removal


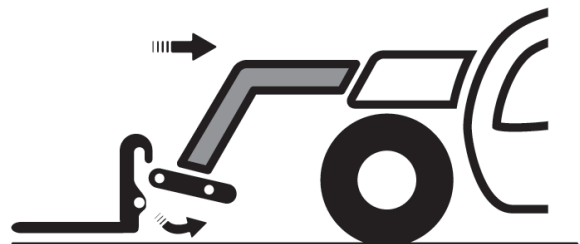


Figure: 150604-1

To store the accessory, once you finished using it, carry out the following operations:

1. Place the vehicle on a solid and level ground.
2. Position the equipment above a support platform to facilitate the handling and transportation of the single piece of equipment.
3. Lower and extend the vehicle boom of about one meter.
4. Turn off the engine.
5. Remove the electrical connections, if any (see the following chapter).
6. Remove the water connections, if any (see the following chapter).

7. Release the equipment following the reverse procedure of the equipment installation in accordance with the type of plate installed on the vehicle.
8. Turn on the vehicle and swing down in order to release the attachment holding plate from the equipment.
9. Once released the attachment holding plate, retract the vehicle boom.

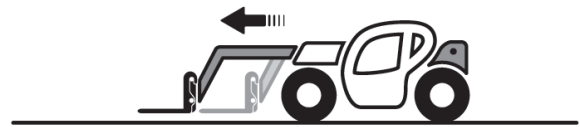

## NOTE

The accessory placed on the ground must always be appropriately marked and barriers and clearances must be laid on all sides of the area that it could occupy falling.




## DANGER

**After releasing the system pressure always wait for a minute before disconnecting the joints.**

Always disconnect the hydraulic pipes and electrical cables of the equipment before releasing it from the vehicle. Otherwise it is possible to damage the pipes or cables and the tool may fall and be dragged.

### 9.5.1

#### Electrical connections removal

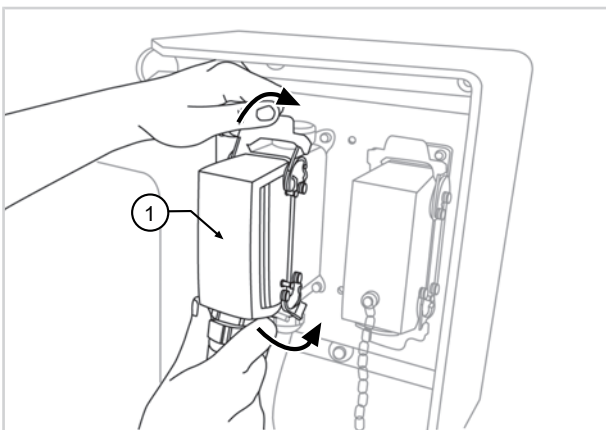

150514-1

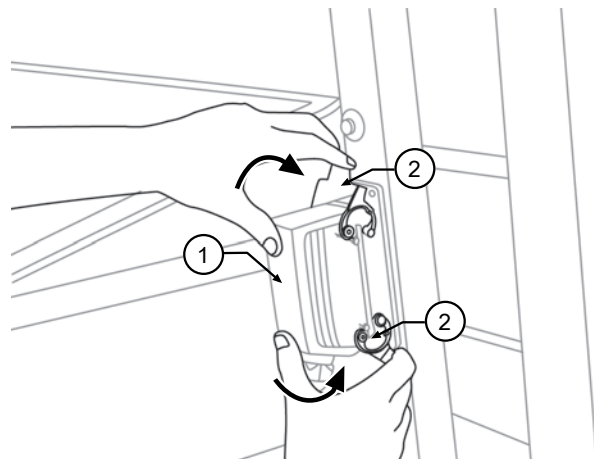


Figure: 150514-2

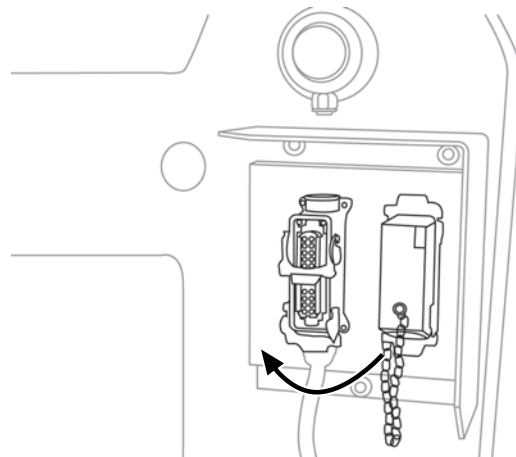


Figure: 150514-3

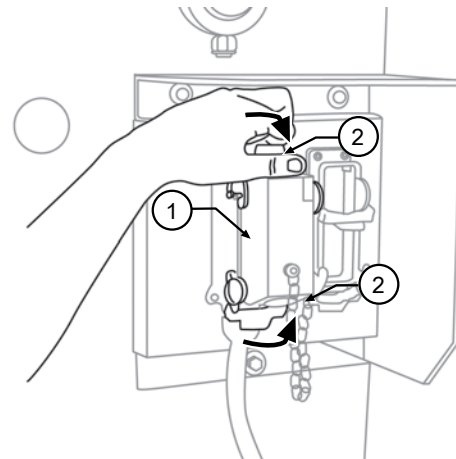



Figure: 150514-4

To remove the electrical connections from the equipment it is necessary to:


1. Follow steps 1, 2, 3 and 4 of the procedure to remove the equipment from the vehicle described in the previous chapter.
2. Disconnect the plug of the equipment from the boom lowering the two safety levers (fig. 150514-1).
3. Position the plug of the equipment on its dummy socket "1" (fig. 150514-2), fastening it with the safety levers "2".

4. Disconnect the cover located on the boom dummy socket and fit it in the electrical socket (fig. 150514-3).
5. Secure the cover to the socket on the boom "1" (fig. 150514-4) through the safety levers (fig. 150514-4).
6. Check that the electrical cables are not trapped in the attachment holding plate or that they can be crushed by the equipment when it will be placed on the floor.
7. Proceed with the subsequent operations to remove the equipment from the vehicle.

### 9.5.2 Push-Pull couplings removal

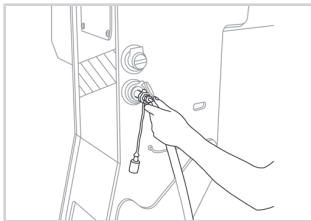

150513-1

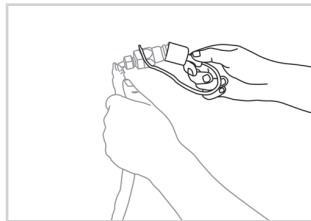


150513-2

To disconnect the Push-Pull quick couplings from the socket on the boom head it is necessary to:

1. Follow steps 1, 2, 3 and 4 of the procedure to remove the equipment from the vehicle described in the previous chapter.
2. If a closed center distributor is installed on the vehicle, carry out the procedures described in the "Closed center distributor: Relieve the pressure through the trailer Descent button \* [► 143]" chapter to release pressure in the hydraulic circuit.
3. Turn off the vehicle.
4. Pull the plug towards yourself to remove it from the socket (fig. 150513-1).
5. Clean the plug and socket, if soiled.
6. Fit the protection cap to the equipment hydraulic plugs (fig. 150513-2).
7. Carry out the same operation for both pipes.
8. Check that the hydraulic pipes are not trapped in the attachment holding plate or that they can be crushed by the equipment when it will be placed on the floor.
9. Proceed with the subsequent operations to remove the equipment from the vehicle.

### 9.5.2.1 Push-Pull couplings removal when connected to a valve

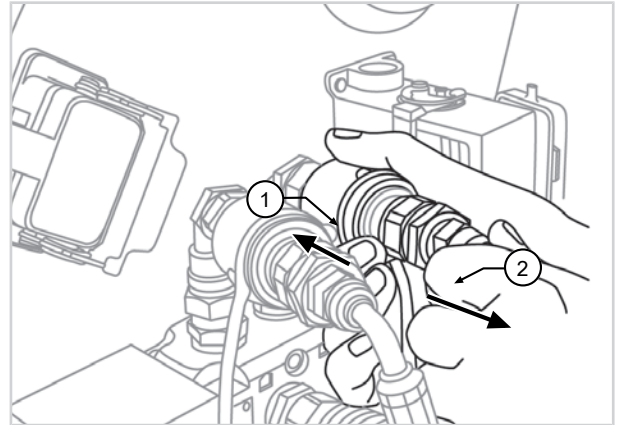

150515-1

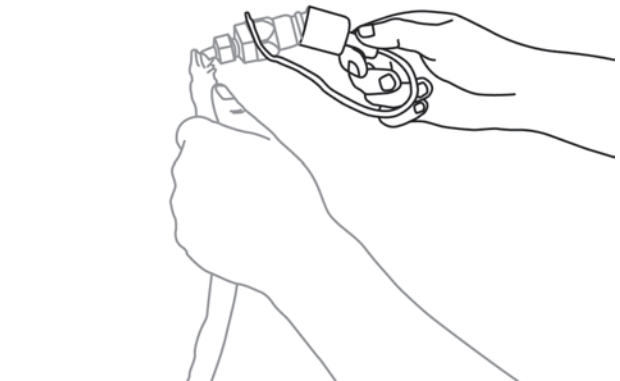


Figure: 150515-2

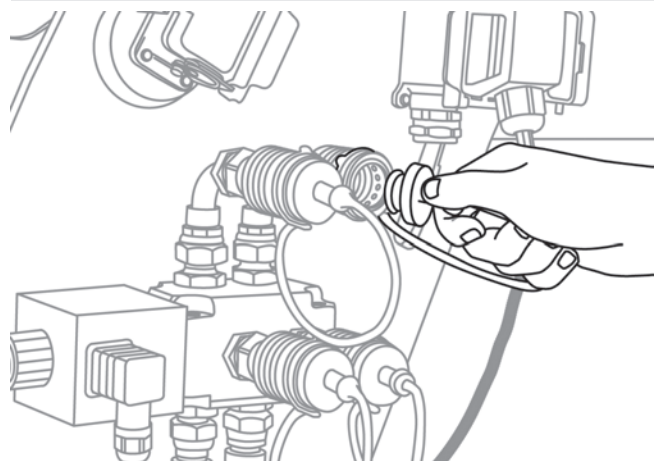


Figure: 150515-3

To disconnect the Push-Pull quick couplings from the valve on the boom head:


1. Follow steps 1, 2, 3 and 4 of the procedure to remove the equipment from the vehicle described in the previous chapter.
2. If a closed center distributor is installed on the vehicle, carry out the procedures described in the "Closed center distributor: Relieve the pressure

through the trailer Descent button \* [▶ 143]" chapter to release pressure in the hydraulic circuit.

3. Turn off the vehicle.
4. Push the ring of the socket towards the vehicle boom "1" (fig. 150515-1).
5. Pull the plug towards yourself to remove it from the socket "2".
6. Clean the plug and socket, if soiled.
7. Fit the protection cap to the equipment hydraulic plugs (fig. 150515-2).
8. Fit the protection cap to the hydraulic sockets of the valve (fig. 150515-3).
9. Carry out the same operation for both pipes.
10. Check that the hydraulic pipes are not trapped in the attachment holding plate or that they can be crushed by the equipment when it will be placed on the floor.
11. Proceed with the subsequent operations to remove the equipment from the vehicle.

### 9.5.3

#### Flat-Face couplings removal

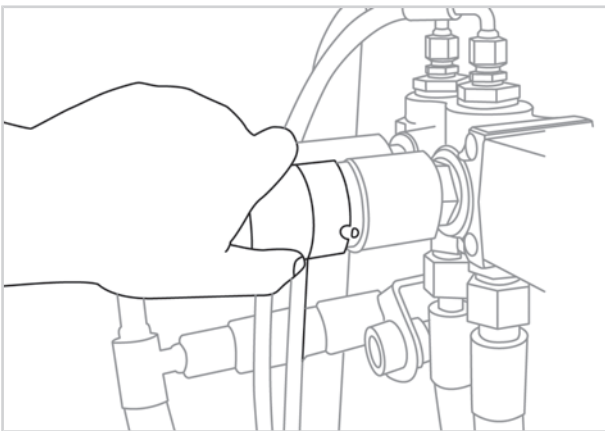

150516-1

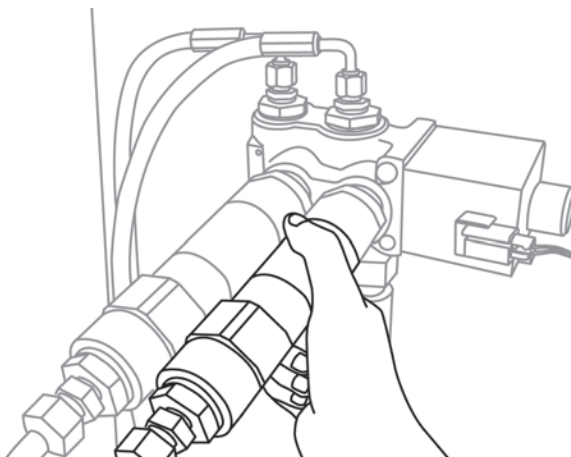


Figure: 150516-2

To disconnect the Flat-Face quick couplings:

1. Follow steps 1, 2, 3 and 4 of the procedure to remove the equipment from the vehicle described in the previous chapter.
2. If a closed center distributor is installed on the vehicle, carry out the procedures described in the "Closed center distributor: Relieve the pressure through the trailer Descent button \* [▶ 143]" chapter to release pressure in the hydraulic circuit.
3. Turn off the vehicle.
4. Turn the socket ring to match the recess with the position of the ball placed on the socket (fig. 150516-1).
5. Push the socket ring "1" (fig. 150516-2).
6. Pull off the plug "2" (fig. 150516-2).
7. Clean the plug and socket, if soiled.
8. Carry out the same operation for both pipes.
9. Check that the hydraulic pipes are not trapped in the attachment holding plate or that they can be crushed by the equipment when it will be placed on the floor.
10. Proceed with the subsequent operations to remove the equipment from the vehicle.

## 9.6 Forks

### 9.6.1 Identification

The term "Forks" means the pair of forks to be installed on the vehicle.

The purpose of this equipment is the lifting and handling of a load from the ground upwards, and vice versa.



#### NOTE

The forks may be provided with a spreader/shifter that allows to position the distance between the forks more quickly and safely.

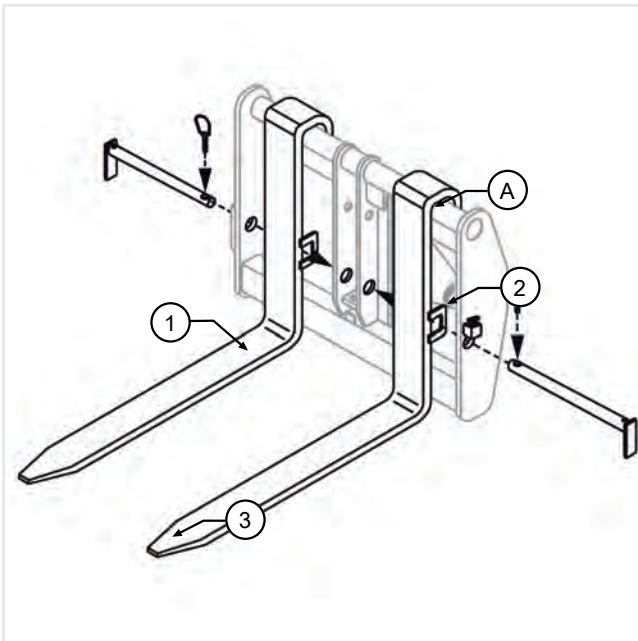


Figure: 150518-1

The data necessary for the identification of the forks are positioned on the right side of the forks, in the upper part "A" (fig. 150518-1).

Below are the identification data (their order may be different on the forks).

To ensure a prompt and efficient service when ordering parts or when requesting information or technical clarification always specify the identification details.

Therefore we recommend to note the data relating to the accessory in your possession in order to safely and quickly identify them in the future, in case of need.

<i>Dieci</i> forks code	.....
Manufacturer's Logo/Abbreviation	.....
Manufacture Date/Batch	.....
Maximum capacity (Kg)	.....
Load application center of gravity (mm) *	.....

\* There may be more than one value depending on the load.

### 9.6.2 Description

The forks (fig. 150518-1) consist of the following main components:

1. Forks

2. Eyelet
3. Hole for mounting specially designed equipment

**! DANGER**

**It is strictly forbidden to use the Hole for fastening equipment, for the installation of equipment not expressly approved by Dieci or for a use other than that intended.**

Vehicle tipping danger, damage to forks or falling materials.

### 9.6.3 Forks check

**☞ NOTE**

For the forks verification frequency refer to the "Control log".

**! ATTENTION**

During maintenance and control, it is mandatory to use the appropriate Personal Protective Equipment.

**! WARNING**

**It is absolutely forbidden to carry out maintenance on the forks (e.g. welding, drilling, engraving, etc ...).**

In the event of damage or deformation immediately replace the forks.

Check the forks thickness.

The maximum wear allowed is **10%** (fig. 150520-1).

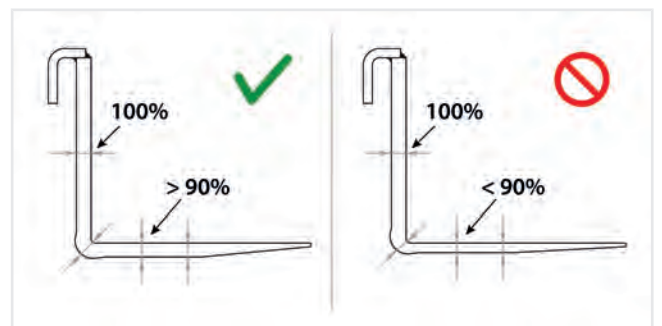


Figure: 150520-1

For example for a fork 70 mm thick, the thickness must not be less than 63 mm. ( 70 - 10% = 63 )

For a quick check of the thickness of the forks, it is necessary to measure the thickness in the vertical part of the fork "1" (fig. 150520-2); this will be the dimension to which refer for the fork thickness measurements "2" (fig. 150520-2). Make at least three measurements at several points.

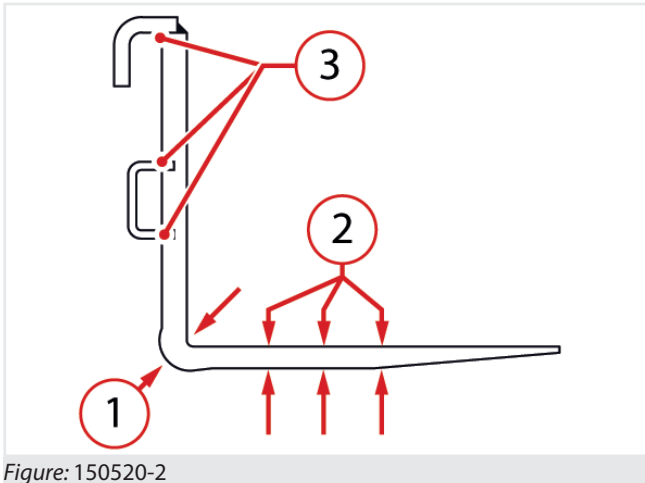


Figure: 150520-2

**Verify the deformation of the forks**

Verify that the two forks are parallel between them and that the distance from the ground is the same for both, or with difference of less than 3% of the length of the fork (fig. 150520-3).

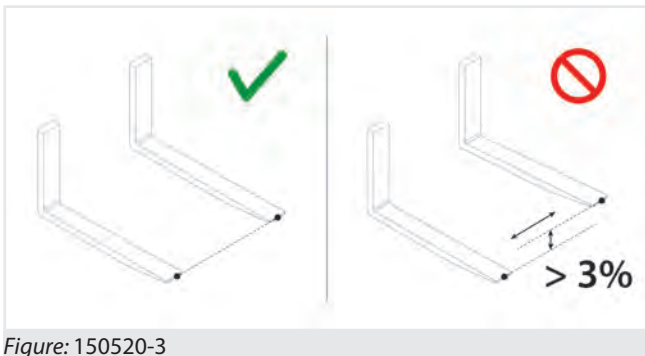


Figure: 150520-3

For example, for a fork 1800 mm long, the difference between the maximum permissible deformation of the fork tips will therefore be of 54 mm ( $1800 \times 3/100 = 54$ ).

**Check the integrity of the welds**

Check that all the welds on the forks "3" (fig. 150520-2) are in good conditions and have no cracks or anomalies.

9.6.4  
Forks use

**ATTENTION**

Before starting to use the equipment, inspect and test it as described in the section "Equipment pre-use check".

**WARNING**

It is absolutely forbidden to use the forks or any type of equipment, without securing it to the attachment holding plate with the appropriate safety plugs.

**DANGER**

**Before each use, check the wear status of the forks, they could be worn out and not hold the load to be handled creating a dangerous situation.**

Before starting to use the equipment, refer to the chapters:

- a) "Safety regulations"
- b) "Forks safe working procedures [▶ 152]"
- c) "Forks check [▶ 149]"

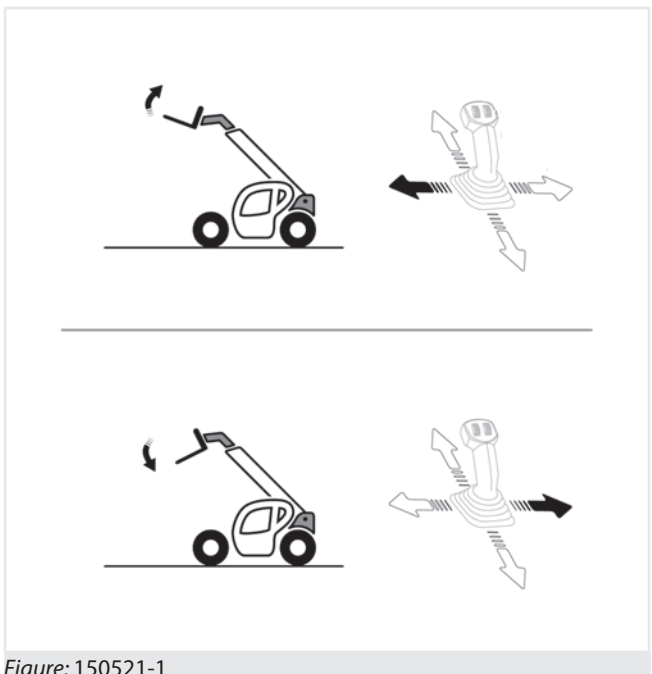


Figure: 150521-1

To use the forks it is sufficient to move the controls for the plate tilting.

By moving the joystick to the left, the tips of the forks will rise; by moving the joystick to the right, the tips of the forks will drop.

### 9.6.5 Forks adjustment

To adjust the position of the forks it is necessary to:

- Deposit a load to the ground.
- Lower and fully retract the boom moving the forks to about 1 m above the ground.
- Turn off the vehicle.
- Get off the vehicle and manually move the forks to the desired width.

### 9.6.6 Fork block

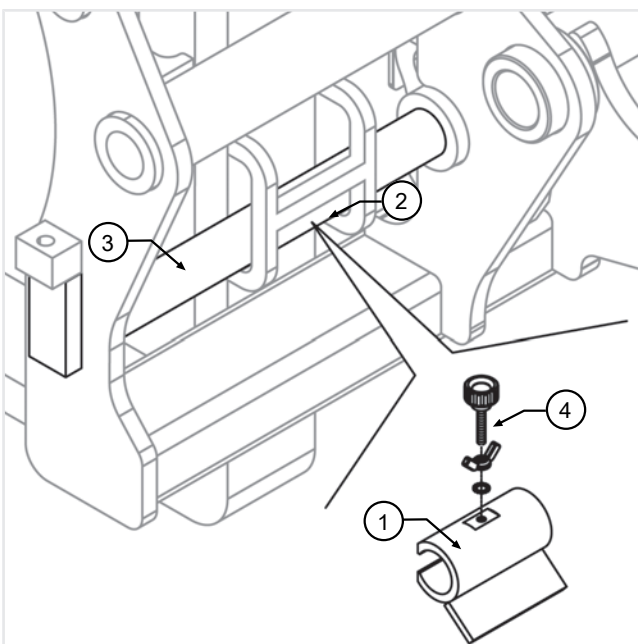


Figure: 150517-1

The Forks block prevents lateral movement of the forks once the desired setting has been chosen.

To engage the forks block (fig. 150517-1):

1. Perform the forks installation procedure on the fork carrier plate.
2. Place the forks block "1" in the eyelet of the forks "2".
3. Insert the plug "3" completely down in order to fit the eyelet "2" and the fork block "1".
4. Fasten the plug with the related safety stops.
5. After moving the fork laterally to the desired position, fix the position by tightening the screw "4".

### 9.6.7 Fork extensions



#### ATTENTION

**Before starting to use the equipment, inspect and test it as described in the section "Forks Safe Working Procedures".**

Before starting to use the equipment, refer to the "Safety regulations" and "Safe Working Procedures" described in the manual of the vehicle on which the equipment is installed.

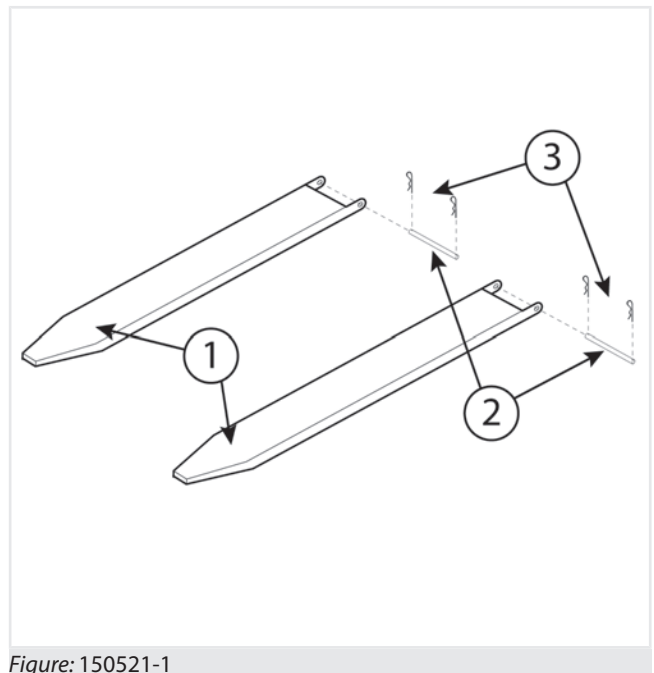


Figure: 150521-1

The fork extensions consists of the following main components (fig. 150521-1):

1. Extension
2. Fastener pin
3. Safety plug

#### Warnings for use

- Use the extensions only with the forks for which they were constructed.
- Before use, check their integrity.
- Always apply the pin with the related cotter pin.
- Do not use loads exceeding those indicated by the forks on which the fork extensions are mounted.
- Refer to the load chart of the forks to which are applied the fork extensions.
- Make sure of the load stability.
- Do not take the load with a single extension.

- Do not use extensions for purposes other than those for which they were constructed.

## Installation

- Fit the extension on the forks after establishing the integrity of the extension and the forks.
- Put the fastener pin "2" with the related safety plug "3".



### DANGER

Never use if the forks or the extensions if they are defective or show tampering signs.

## Forks extension check

- At each use check the integrity of welds and repair if necessary.
- When the thickness of the lower metal sheet reaches 80% of its original thickness, the extension must be replaced.

## 9.6.8

### Forks safe working procedures

#### 9.6.8.1

##### General instructions on forks use



### DANGER

**Never lift a load slung with a single fork or with a board.**

It is absolutely forbidden to use the forks with hooks, straps or other materials for handling suspended loads. Use the appropriate accessories (hook, winch, jib).

- Always set the forks fully under the load and move it to the transport position (forks at 300mm from the ground and tilted backwards, with fully retracted boom).
- The load diagrams are valid for centers of gravity indicated on the diagram. For a center of gravity at a greater distance, contact your dealer.
- Pay attention to the risk of crushing limbs when adjusting the forks manually.
- It is absolutely forbidden to increase the length or width of the forks with extensions not provided directly by the Manufacturer. In this case DIECI is raised from any responsibility regarding their use.
- Forks overloading and transverse stress are strictly prohibited.

- Place the forks to their maximum possible width depending on the load to be moved. Before lifting a load make sure that the width of the forks corresponds to that of the pallet or that these can withstand the weight of the load on the pallet. Forks set wide apart maintain a stable load.
- Place loads evenly on the forks, to obtain a stable balance. When lifting wide loads, or not centered and that are impossible to center, maneuver the vehicle with caution in order to prevent this from tipping. Use caution when lifting bars of considerable length.
- Do not raise the load with the tip of the forks facing downwards. The forks must always be with the tips pointing upwards; in this way the load will lean against the plate of the forks. A lifted load can be tilted forward only if it must be placed on a stack or directly on a discharge surface.
- Do not use the vehicle to transport or move persons when the forks are assembled on it. Use suitable interchangeable equipment approved by Dieci.

#### 9.6.8.2

##### Load transport position with forks

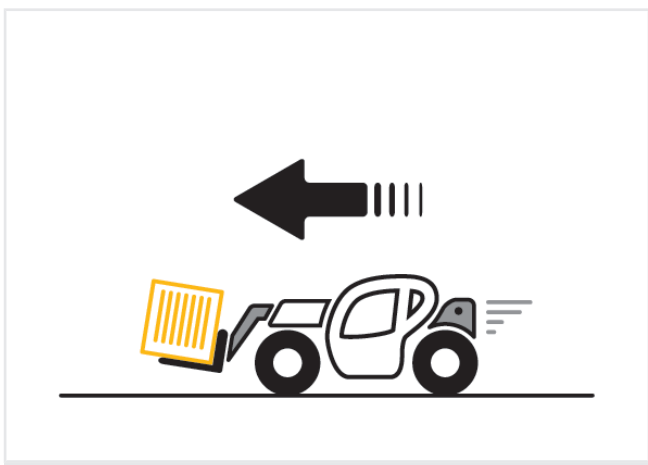


Figure: 150527-1

To correctly transport a load with forks it is necessary to:

1. Fully retract the boom.
2. Lower the boom fully down so that the forks are at about 300 mm from the ground.
3. Tilt the fork tips upward.



9.6.8.3

Picking up a load from the ground

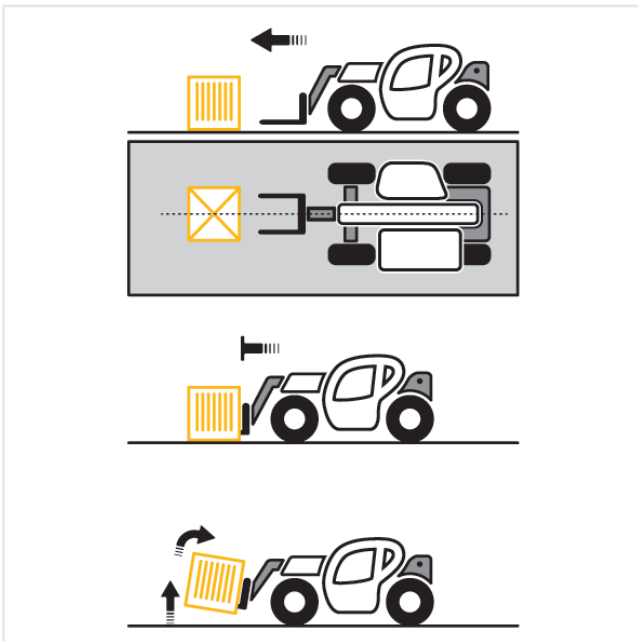


Figure: 150528-1

1. Slowly move the vehicle to the load to be lifted with the boom fully retracted and the forks in a horizontal position at the height of the lifting position. Keep the forks raised just enough to avoid contact with the ground.
2. Bring the forks under the load to be lifted up to the contact with the attachment holding plate.
3. Press the brake pedal and move the gear selector in neutral.
4. Slightly lift the load and tilt the attachment holding plate backward setting it in the transport position.



**WARNING**

Always observe the center of gravity of the load, tilt the forks enough to ensure stability and prevent the loss of the load during braking.



**DANGER**

Never carry a load with boom raised and/or removed.

9.6.8.4

Picking up a load from a high position

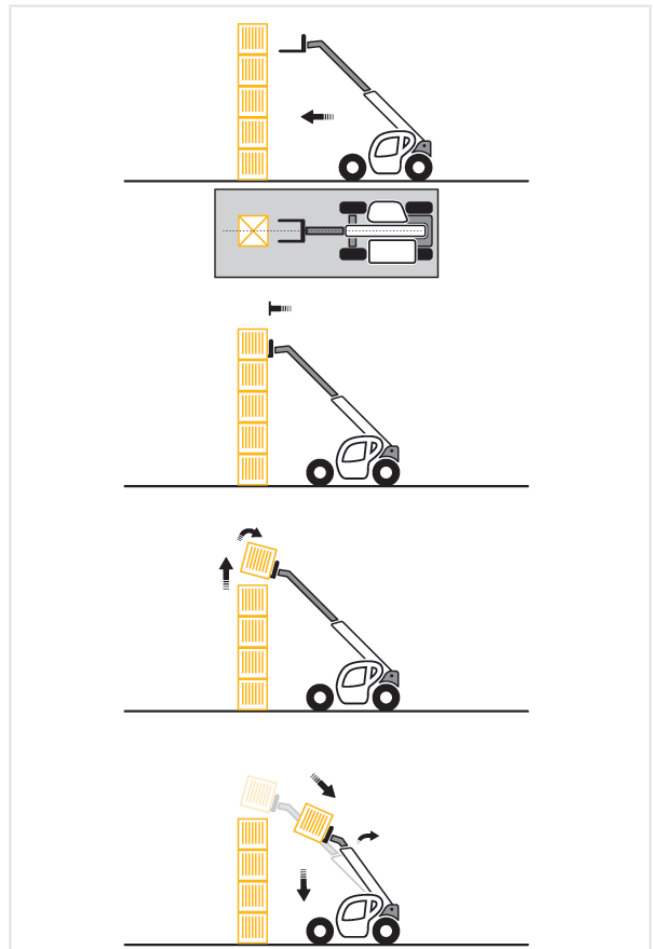


Figure: 150529-1

1. Make sure that the forks pass easily under the load.
2. Drive slowly and cautiously approaching the vehicle to the load placing it perpendicular to this with the forks horizontal. If necessary, use the inching pedal to approach slowly.
3. Always remember to keep the distance required to insert the forks under the load, between the stack and the vehicle.
4. Extend the boom for the shortest possible length.
5. After bringing the forks under the load to be lifted until it is in contact with the fork holding plate, press the brake pedal and move the gear selector in neutral.
6. Lift the load and tilt the fork holding plate to the transport position.
7. If possible lower the load without moving the vehicle.
8. Lift the boom to move the load away, then retract the extensions and lower the boom to set the load in the transport position.

- If not possible, move the vehicle backward very slowly and very carefully, after moving the load away properly retract the extensions and lower the boom to set the load in the transport position.



**WARNING**

Always observe the center of gravity of the load, tilt the forks enough to ensure stability and prevent the loss of the load during braking.



**DANGER**

**Danger of tipping**

It is absolutely forbidden to pick up a load if the vehicle is not level.

Never carry a load with boom raised and/or removed.

- Lift and extend the boom to take the load above the stack. If necessary, move the vehicle towards the stack very slowly and very carefully. If necessary, use the inching pedal to approach slowly.
- Press the brake pedal and move the gear selector in neutral.
- Place the load horizontally and lay it on the stack, lower and retract the extensions to properly position the load.
- Release the forks alternately retracting the extensions and lifting the boom; if possible make the vehicle move back very slowly and very carefully.



**WARNING**

Always observe the center of gravity of the load, tilt the forks enough to ensure stability and prevent the loss of the load during braking.



**DANGER**

**Danger of tipping**

It is absolutely forbidden to pick up a load if the vehicle is not level.

Never carry a load with boom raised and/or removed.

9.6.8.5  
Positioning a load in a high position

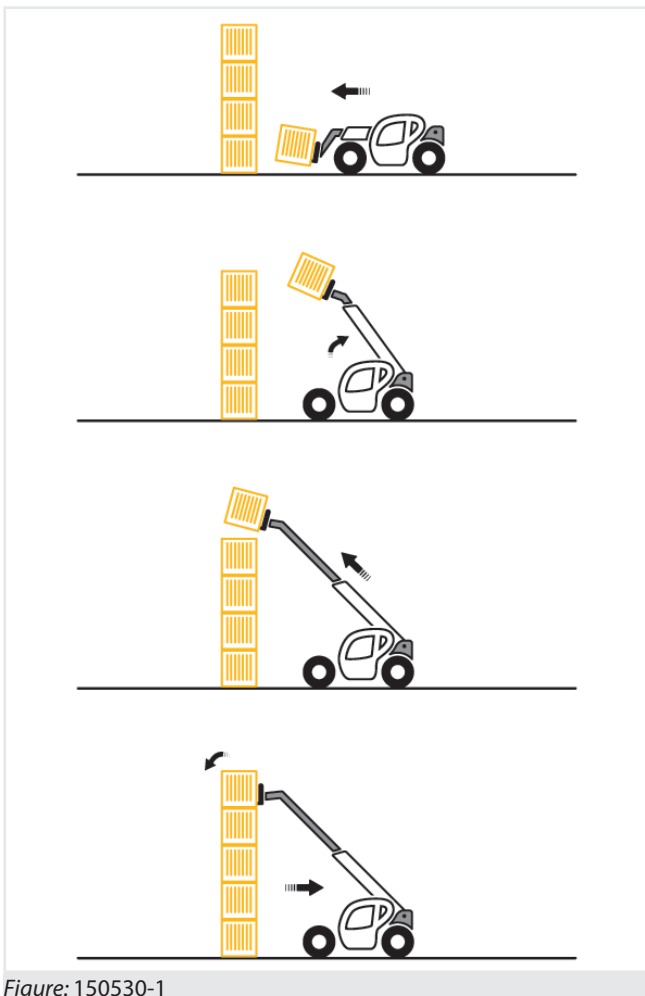


Figure: 150530-1

- Bring the load in the transport position in front of the stack.

9.6.8.6  
Picking up a round load

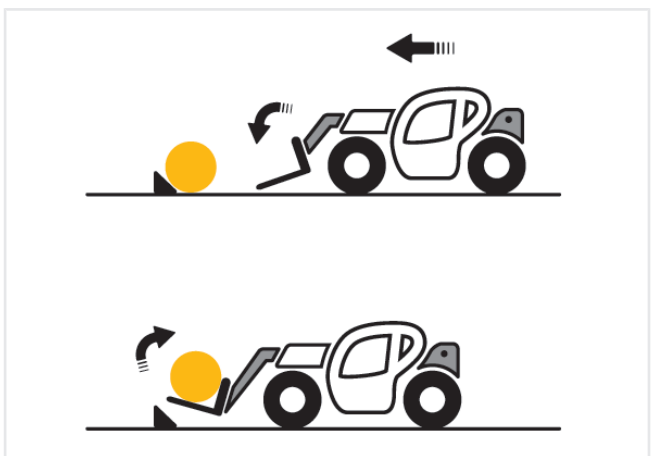


Figure: 150531-1

- Tilt the forks forward and retract the telescopic boom, while inserting the forks under the load.
- Rotate the fork carrier plate backward to slide the load. If necessary secure the load with wedges.



**WARNING**

Always observe the center of gravity of the load, tilt the forks enough to ensure stability and prevent the loss of the load during braking.



**DANGER**

Never carry a load with boom raised and/or removed.



**NOTE**

There are various interchangeable equipment such as grippers to facilitate the work with objects which are round, contact your DIECI dealer.

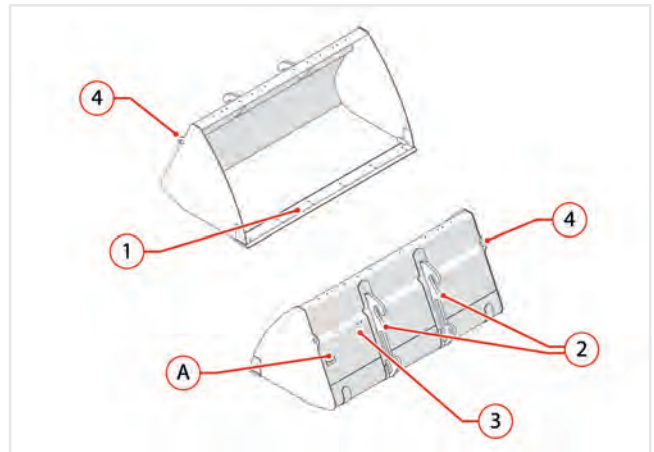


Figure: 150522-1

**9.7  
Bucket**

On DIECI vehicles it is recommended to use only Buckets manufactured or approved by Dieci Srl.

The use of buckets not approved by Dieci Srl may void the warranty.

Dieci Srl buckets have connections, dimensions and working angles optimized for DIECI machines.

**9.7.1  
Buckets identification**

Buckets allow handling inert material.

To ensure a prompt and efficient service when ordering parts or when requesting information or technical clarification always specify the serial number.

Therefore we recommend to note the data relating to the accessory in your possession in order to safely and quickly identify them in the future, in case of need.

The data necessary for the identification of the buckets are positioned on the right side, in the upper part "A" (fig. 150522-1).

**9.7.2  
Buckets description**

All the buckets (fig. 150522-1) consist of the following components:

1. Blade
2. Hooks for plate connection
3. Tilt indicator
4. Hooks for lifting

**9.7.3  
Buckets safety stickers**

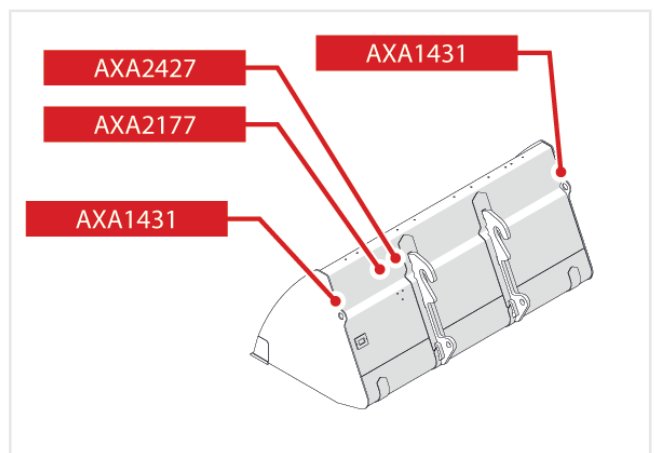


Figure: 150524-1

Safety stickers on buckets (fig. 150524-1):

- AXA2427 – Keep the safety distance from the equipment
- AXA2177 – Read the use and maintenance manual.
- AXA1431 – Lifting hook

### 9.7.4 Bucket use



#### WARNING

**Before starting to use the equipment, inspect and test it as described in the section "Equipment pre-use check".**

It is absolutely forbidden to use the forks or any type of equipment, without securing it to the attachment holding plate with the appropriate safety plugs.



#### DANGER

Before each use, check the wear status of the equipment, they could be worn out and not hold the load to be handled creating a dangerous situation.

Before starting to use the equipment, refer to the chapters:

- a) "Safety regulations"
- b) "Buckets Safe Working Procedures [▶ 157]"
- c) "Equipment pre-use checks [▶ 135]"



#### ATTENTION

Set the appropriate working mode of the vehicle during the bucket use. If this is not done properly, the anti-tipping device could start up and the movements will consequently stop during the bucket excavation or the loading.

To use buckets with Pegasus model vehicles, it is necessary to select the equipment on the anti-tipping device (fig. 171070-1). For the load charts of the Pegasus vehicle when using the bucket, refer to the fork diagram. Extending the boom beyond the letter "A", the loads are halved with respect to those shown on the fork diagram.



To use the buckets it is sufficient to move the plates tilting controls.

Moving the joystick to the left, the tip of the bucket will move up; moving the joystick to the right, the tip of the bucket will move down.

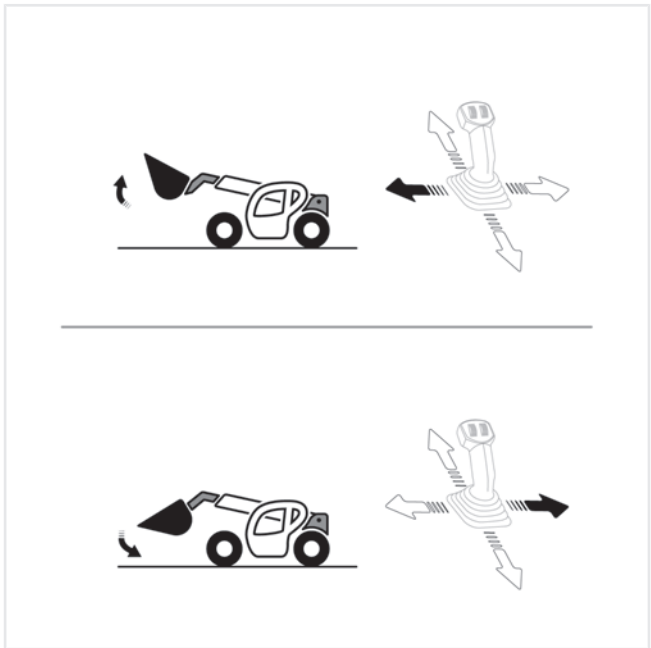


Figure: 150630-1



#### WARNING

Given the large size of the buckets, for some movements it will be necessary to remove the boom to prevent contact of the bucket with other parts of the vehicle. It is advisable to operate with the minimum possible extension of the boom.

### 9.7.5 Fixed tilt indicator use

In the left part of the bucket there is the fixed tilt indicator (fig. 161030-1), this tool allows to know the angle of the bucket during use.



Figure: 161030-1

The bucket position can be determined based on the face shown by the fixed tilt indicator:

- **Upper visible face:** the bucket blade is turned upward

- **Face parallel to the ground:** the bucket is aligned to the ground
- **Lower visible face:** the bucket blade is turned downward

During the bucket loading phase, to obtain the maximum efficiency of the bucket it is appropriate to use the bucket aligned to the ground.

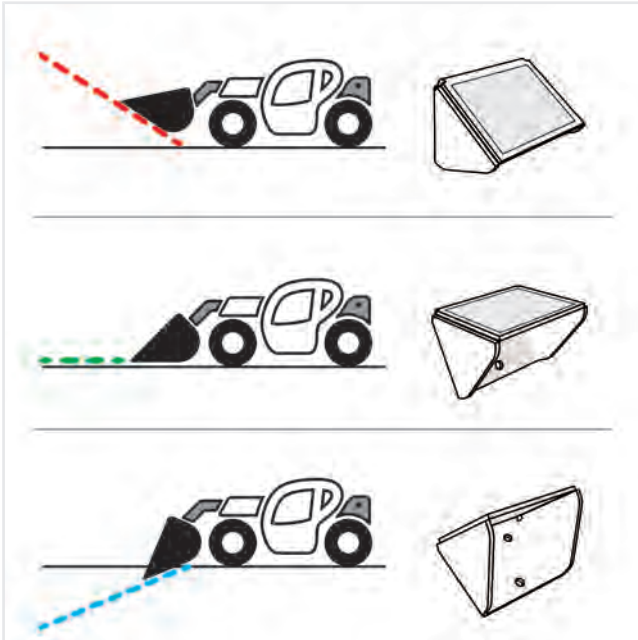


Figure: 161030-2

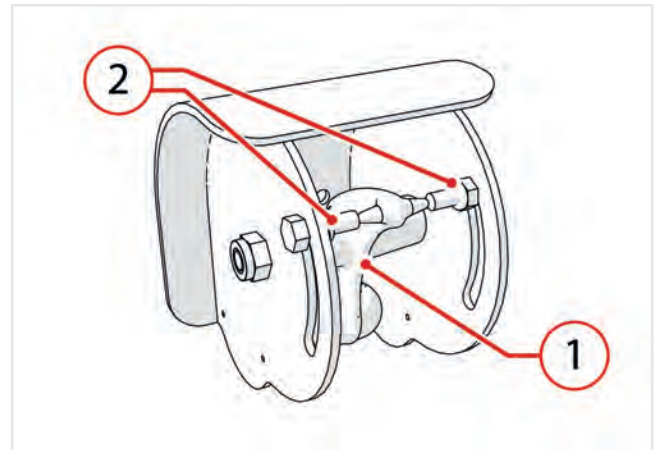


Figure: 161031-1

The bucket position is determined according to the position of the pendulum "1" compared to the indicators "2":

- **Pendulum above the indicators:** the bucket blade is turned upward
- **Pendulum at indicators level:** the bucket is aligned to the ground
- **Pendulum below the indicators:** the bucket blade is turned downward

During the bucket loading phase, to obtain the maximum efficiency of the bucket it is appropriate to use the bucket aligned to the ground.

### 9.7.6 Movable tilt indicator use \*



#### NOTE

The movable tilt indicator is an optional accessory.

In the left part of the bucket there is the movable tilt indicator (fig. 161031-1), this tool allows to know the angle of the bucket during use.

It is composed of a pendulum "1" and by two indicators "2".

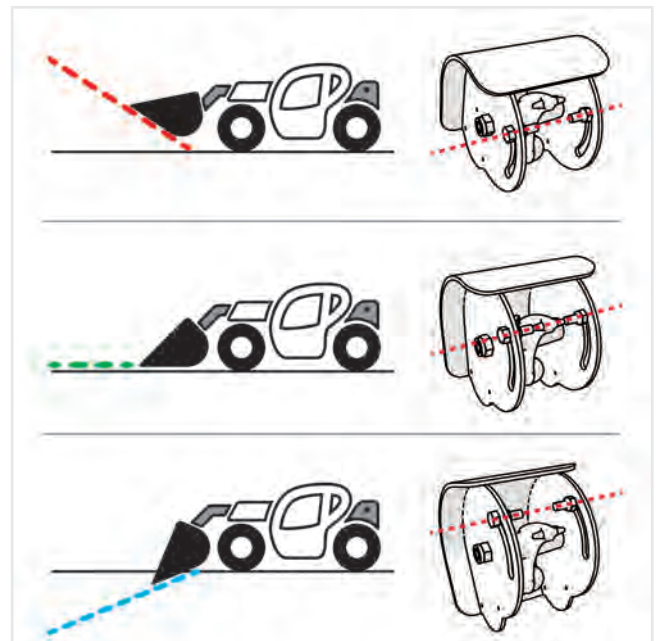


Figure: 161031-2

### 9.7.7 Buckets Safe Working Procedures



#### DANGER

Do not change the structure of the equipment.



## DANGER

Do not use the equipment for lifting persons, animals or things other than those specified.

### 9.7.7.1

#### Checks before lifting

Before starting the operations, perform these checks and inspections to ensure greater safety for operators.

- Positioning of the machine and ground conditions.
- Check the dimensions and characteristics of the work area and complete visibility of the load and of the surrounding area. Otherwise use a person on the ground assigned for signaling.

### 9.7.7.2

#### Danger zones

The danger zones of the vehicle can be identified in the work area of the vehicle and of the bucket.

This area varies in size depending on:

- Load characteristics and size
- Load lifting height

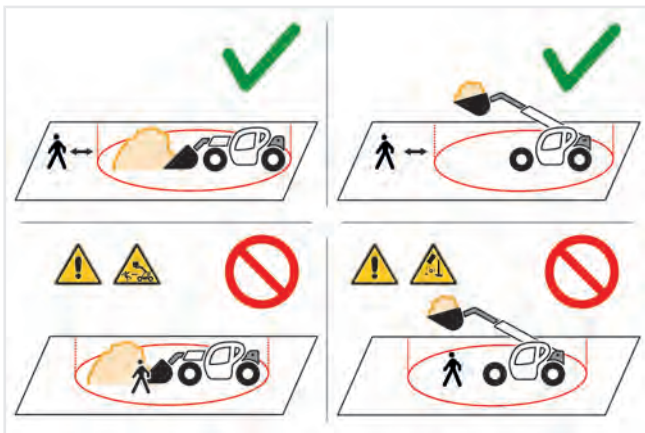


Figure: 150631-1



## DANGER

Keep away from the vehicle during operation and from the aggregates to be moved, or from the excavation.

### 9.7.7.3

#### Bucket load

It is strictly forbidden to push or stack inert material with extended boom. It can cause serious damage to the vehicle.

It is strictly forbidden to push or stack material using the boom extension. It can cause serious damage to the vehicle.

It is strictly forbidden to make leveling or digging operations in reverse. It can cause serious damage to the vehicle.

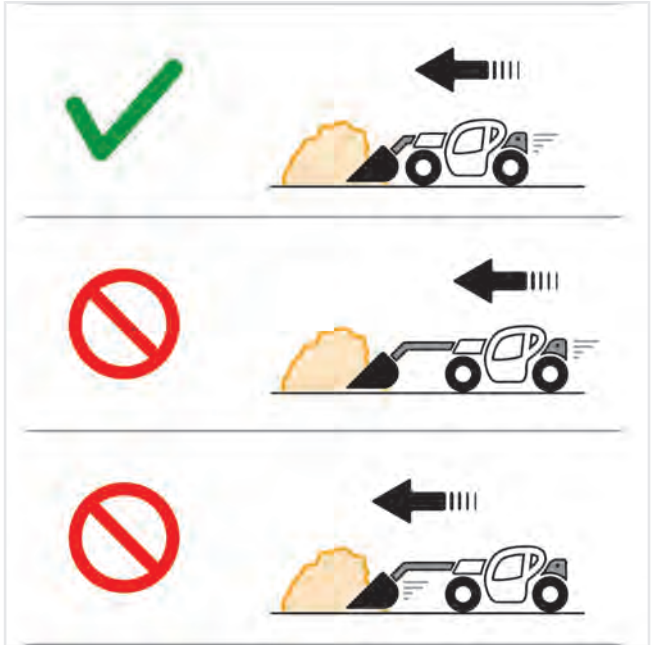


Figure: 150632-1

It is strictly forbidden to push or stack material with the vertical bucket planted in the ground.

### 9.7.7.4

#### Bucket unloading



## WARNING

It is strictly forbidden to repeatedly beat the swinging cylinder at closing limit switch to detach material attached to the bucket.

It can cause serious damage to the vehicle



Figure: Vertical bucket use

### 9.7.7.5

#### Carry a load with bucket

The correct vehicle movement position with the bucket equipment installed is:

- Bucket as close as possible to the ground
- Boom retracted as much as possible

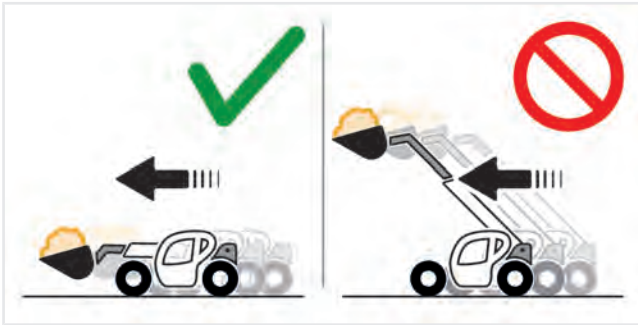


Figure: 150633-1



**WARNING**

It is advisable to keep the bucket at a height sufficient to be able to avoid roughness of the terrain along the way.

**9.8 Equipment lifting**



**WARNING**

**Make sure that the lifting device is adequate for the weight of the equipment to be lifted and that each device used for lifting and every accessory used is CE marked.**

Make sure that the ropes, chains, straps and hooks are in good condition and with capacity adequate to the weight of the equipment to be lifted.

The weight of the equipment is shown on a special riveted metal plate; check the overall dimensions for the maximum and minimum height values from the ground and the weight allowed.

Position the hooks into the holes for the lifting locates at the top, at the center of gravity of the equipment.



**DANGER**

It is absolutely forbidden to transport the vehicle with the equipment still installed on it.

**9.9 Equipment transport**



**WARNING**

Make sure that the capacity of the means of transport is adequate for the weight of the equipment to carry.

When loading or unloading an equipment from a means of transport, there is always the danger of vehicle overturning.

Use a truck or a trailer suitable for transport of the equipment.

When transporting the equipment it is advised to use a support platform for easier handling.

Then fasten the equipment with appropriate slinging systems, check that they are in good condition and appropriate for the weight and dimensions of the equipment.



**DANGER**

**It is absolutely forbidden to transport the vehicle with the equipment still installed on it.**

For details on the procedures to be followed during transport of the vehicle, refer to the Use and Maintenance Manual of the vehicle on which the equipment will be installed.

# 10

## Emergency procedure

### 10.1

#### Emergency procedures list

Emergency procedure	Additional information
Emergency procedure	7.1.22 Warnings in case of vehicle tipping
	7.2.3 Deactivating the external parking brake manually
	7.13.6 Manually disable off the 2-gear hydrostatic transmission
	10.2 Vehicle towing
	10.2.1 Vehicle towing with electrical panel on
	10.3 Man basket recovery in case of failure for fixed vehicles
	11.4.6 Start up with auxiliary batteries
	11.4.6.1 Cable connection and engine start-up
	11.4.6.2 Cables removal



## 10.2 Vehicle towing



### DANGER

**The machine towing is a delicate operation and the risks to the operator are high. The manufacturer's warranty is not applicable in case of incidents or accidents that occur during towing. If possible make repairs where the machine is located.**

It is advisable that the towing operations are carried out by skilled personnel.

#### It is absolutely forbidden:

- Ever try to start the machine by pushing or towing.
- To tow the machine on public roads and for very long paths, if possible keep the yellow flashing light and the emergency lights in operation.
- To tow the machine on a slope.
- Stand between the towing machine and towed machine.



### WARNING

With the engine off the steering wheel and brakes servo controls do not work. If it is not possible to keep the engine running while towing the vehicle take into account that the efforts to use the steering wheel will be much higher than normal.



### ATTENTION

**The machine towing can be made only in emergency conditions at a maximum speed of 4 km/h (2.5 mph) and for short distances up to 500 m (1640 ft).**

To tow the machine over longer distances, contact *Dieci* service center.



### ATTENTION

It is mandatory to tow the machine with a rigid towing bracket. The towing bracket must be designed for a tensile stress of 10 tonnes (22040 lb). Attach the towing bracket between towing vehicle and the vehicle in failure at the points prearranged for towing.



### DANGER

Make sure that the weight of a towed vehicle not equipped with brakes never exceeds the weight of the machine that tows the vehicle. The distance required to stop the vehicle increases with the increase of the speed and of the load towed, in particular in the slope sections.

## 10.2.1 Vehicle towing with electrical panel on

If it is necessary to tow the vehicle with the electrical panel in operation (for example, transmission failure) follow the following steps:

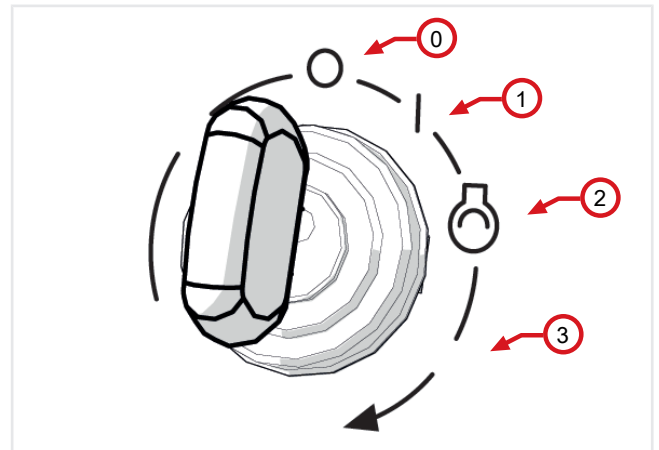


Figure: 150567-1

- Turn the vehicle off by turning the ignition key "0" (fig. 150567-1).

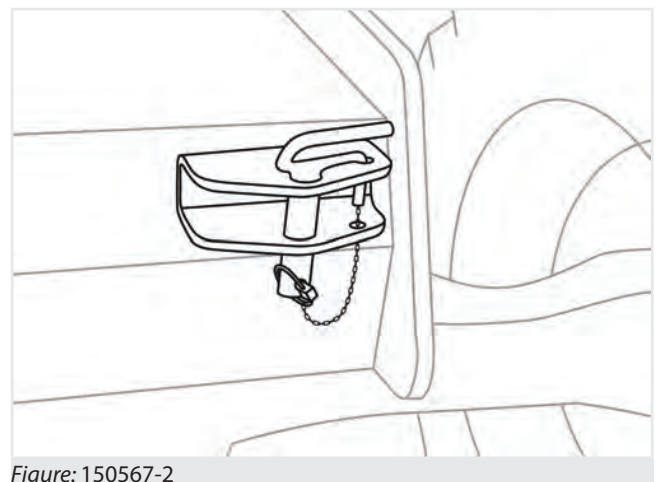


Figure: 150567-2

- Attach the towing bracket between towing vehicle and the vehicle in failure at the points prearranged for towing (fig. 150567-2).
- Make sure that the vehicle is in a stable configuration and lock the wheels with chocks to prevent accidental movement of the vehicle.

- Remove the lower protective casing by removing the screws with a wrench size **13**.
- Follow the steps described in the chapter "Manually disable the transmission".
- Switch on the electrical panel by turning the ignition key to position "1" (fig. 150567-1).
- Disengage the parking brake switch.
- Remove the wheels chock.
- During towing, remain seated in the driver's seat to prevent the parking brake from engaging automatically.

### 10.2.2

## Towing the machine with engine in failure

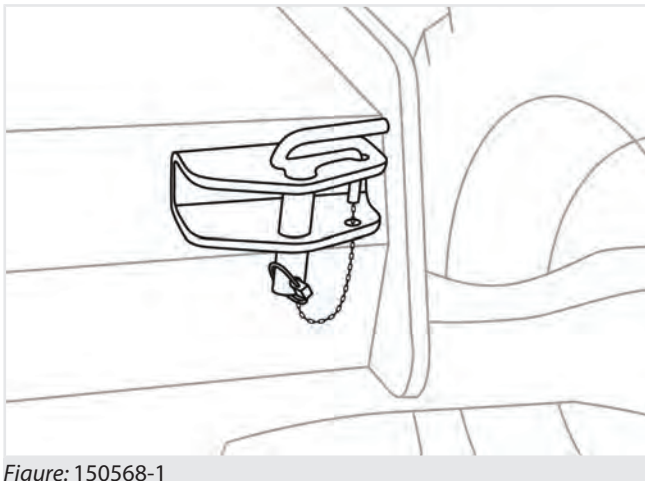


Figure: 150568-1

In case it is necessary to tow the machine with engine in failure, follow the following steps:

- Attach the towing bracket between towing vehicle and the vehicle in failure at the points prearranged for towing (fig. 150568-1).
- Make sure that the machine is in a stable configuration and lock the wheels with chocks to prevent accidental movement of the machine.
- Follow the steps in the section "Manually disable the parking brake on the vehicle front axle".
- Follow the steps described in the chapter "Manually disable the towing".



## DANGER

**With the engine off, the drive and parking brake are still active.**

Towing the machine with active drive and brake can cause serious damage to the machine and create dangerous situations.

## 10.3

# Man basket recovery in case of failure for fixed vehicles

In the case of lack of motive force during use of the vehicle with man basket, which leads to the man basket locking, it is possible to operate with the manual system to return the boom and the operators on the ground in safe conditions. In order to carry out this emergency operation use the appropriate emergency pump.



## DANGER

Under the emergency pump use conditions the anti-tipping systems are off. It is compulsory to refer to the load charts (found in the notebook in the cab and on the Use and Maintenance Manual) before performing any operation through the levers of the distributor. In this way it is possible, using the inclinometer and the letters on the boom, to know the exact location of the basket and of the work area within which it can operate. During the basket recovery there must not be no aggravating movements for the stability of the vehicle as there is a risk of tipping.



## WARNING

Two qualified and experienced operators, authorized by the security officer, are required to complete the retraction operation.




## DANGER


Do not ever try to get out of the man basket using makeshift equipment or using systems that expose to personal risk.

The operations allowed through the emergency pump are:

- retract the boom extensions
- lower the boom

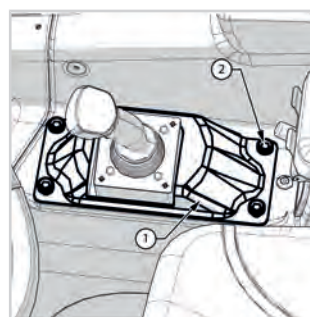

150721-1

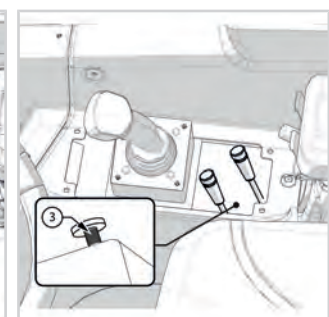

150721-2

To carry out the manual retraction of the boom, perform the following procedure:

- Turn off the vehicle engine
- Remove the plastic "1" under the joystick unscrewing the four fastening screws "2" (fig. 150721-1)
- Recover the bar for the pump activation in the tool box
- [Only for vehicles with Bucher distributors] Fully screw the screw "3" (fig. 150721-2):
- Fasten the bar to the pump "4" (fig. 150721-3)

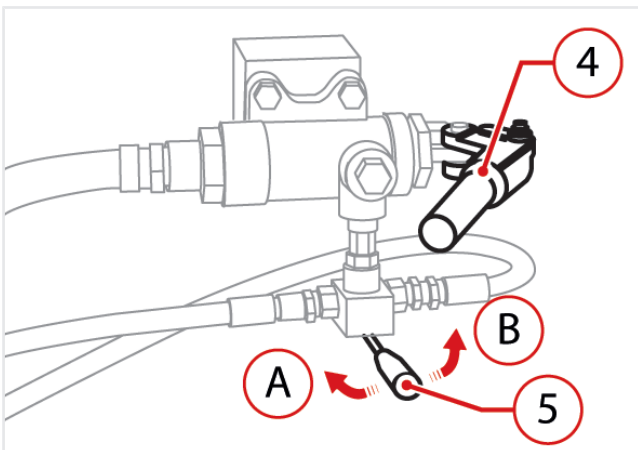


Figure: 150721-3

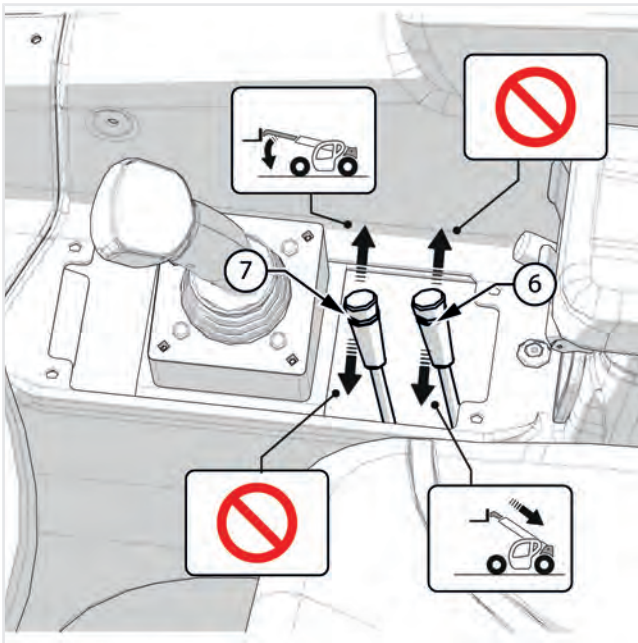


Figure: 150721-4


**To perform the boom retraction:**

- Operator 1 (fig. 150721-3):
  - Place the lever "5" in position "A"
  - Operate the hand pump by moving the lever
- Operator 2 (fig. 150721-4):


- At the same time of the pump operation move the lever "6" to the left to retract the boom extensions

**To lower the boom:**

- Operator 1 (fig. 150721-3):
  - Place the lever "5" in position "B"
  - Operate the hand pump by moving the lever
- Operator 2 (fig. 150721-4):
  - At the same time of the pump operation move the lever "7" to the right to lower the boom

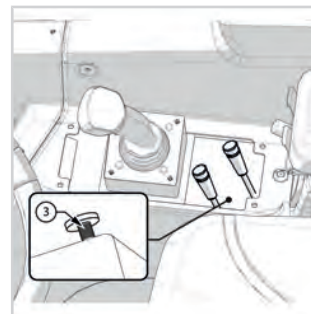

150721-5

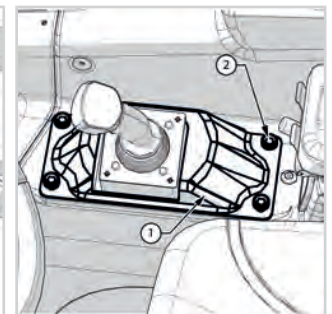

150721-6

To restore the initial conditions:

- [Only for vehicles with Bucher distributors] Fully unscrew the screw "3".
- Reassemble the plastic part "1" screwing again the screws "2".
- Put back the bar for the pump activation in the tool box



**WARNING**

Move the basket alternating movements of boom extension, retraction and lowering, always remaining within the load charts values.

# 11 Maintenance



## WARNING

**Before performing any maintenance operations set the vehicle in the maintenance position.**

Use appropriate personal protective equipment during the various checking and maintenance operation of the vehicle.

## 11.1 Maintenance warnings

This vehicle has been designed and built to provide maximum performance, savings and facilitate its operation in various working conditions. Before delivery, the vehicle and the equipment were tested both by the Manufacturer and by the Dealer to ensure their maximum condition. In order to preserve these conditions and to ensure trouble free operation, it is important to perform routine maintenance, as specified in this Manual at a **DIECI** dealer at the frequency required.

This section of the Manual provides all the maintenance prescriptions necessary for maintaining the **DIECI** in perfect working condition.

It is recommended that all services must be carried out as part of the assistance program recommended by **DIECI**. Remember that the owner and/or user is responsible of keeping the vehicle and equipment in safe operating condition and able to operate.

It should be noted, also, that proper maintenance of vehicle and equipment not only improves reliability, but preserves its value over time.



## ATTENTION

**Maintenance or repairs not covered in this chapter and in the rest of the manual should be performed only by *DIECI* Dealers.**

It is mandatory to have read and learned the "Safety" chapter before reading the "Maintenance" chapter.



## WARNING

**It is prohibited to carry out maintenance on the vehicle if this chapter has not been carefully read and learned.**

To learn about maintenance operations and time, refer to the Maintenance Log.

All maintenance operations must be recorded on the appropriate Maintenance Log.



## WARNING

When operating in corrosive environments it is important to intervene with appropriate maintenance methods and timing in order to prevent excessive wear of the vehicle.



## ATTENTION

Use appropriate personal protective equipment during the various checking and maintenance operations of the vehicle.



## WARNING

In case of malfunction do not use the vehicle until it has been repaired.

### 11.1.1

#### Avoid accidents during maintenance

- Always clean and tidy the workplace in order to carry out every operation safely.
- Do not leave tools or other instruments scattered in a disorderly manner in the workplace.
- Clean grease traces, oil or other substances that could cause you to slip.
- For the workplace safety put rags soaked with grease and/or other flammable materials in a secure container.
- Use only tools appropriate for the task and make sure to use them in the right way. The use of damaged, poor quality, faulty, makeshift tools or not suitable for use may cause serious injury.
- Do not hit the vehicle and the equipment or their parts with a hammer or any other instrument, as projected fragments could cause injury.
- If inspection or maintenance is carried out on vehicles or equipment which are still covered with mud, oil, etc., operators risk sliding or falling

and the visual analysis of components is made more difficult. Thoroughly clean the vehicle or equipment before every operation.

- Make sure about the maintenance procedures before starting the work.
- Keep the work area clean and dry.
- Replace worn or faulty components.
- Eliminate accumulations of grease oil and debris.
- The knurled plates (bulb plates) and the cab floor are the only parts of the vehicle that can be stepped on. Use a ladder (suitable for the intended purpose) for maintenance of parts that cannot be reached from the ground.



**DANGER**

**Do not carry out any maintenance operation with running engine or moving vehicle.**

Should maintenance need to be performed with the engine running, ask at least two workers for help and observe the following instructions:

- One worker must always be seated in the driver's seat, ready to switch off the engine at any time.
- All workers must remain in contact with one another.
- Take care not to remain entrapped in components during the execution of operations performed on the fan, fan belt or other rotating parts.
- Do not touch levers or control pedals. Should a lever or pedal need to be moved, always warn operators first so they can move out of the dangerous area.
- Do allow instruments or other objects to fall into the vehicle rotating parts, as these parts may break and be projected out.
- The vehicle must be outdoors when the engine is running. The vehicle can be kept in a closed area only if it is properly ventilated and the vehicle is equipped with specific purifiers.



**WARNING**

**In the case of operations to be performed by holding the boom raised, install the safety rod on the boom shaft.**

If you need to perform repair or maintenance work under the vehicle, firmly support the movable parts with blocks and supports that are solid enough to support the weight.

- Store attachments removed from the vehicle in a safe place where they do not risk falling. Take precautions to prevent unauthorized persons from approaching the storage area.



**DANGER**

Do not rest metal parts on the battery.



**DANGER**

**Danger of entanglement.**

Damage may be caused by entanglement in moving parts. To prevent accidents it is compulsory to wear proper safety equipment for maintenance.



**DANGER**

**Exhaust gas danger**

Exhaust engine gases are toxic and can damage your health.

The vehicle must be outdoors when the engine is running.

The vehicle can be kept in a closed area only if it is properly ventilated and the vehicle is equipped with specific purifiers.



**DANGER**

**Pressurized liquids danger**

After operation, the engine cooling liquid is hot and under pressure. Contact with hot water and/or steam may cause serious burns.

- Do not attempt to loosen connections, tubes or hydraulic components when circuits are under pressure.
- Avoid possible injury caused by hot water jets.
- Do not remove the radiator cap until the engine has cooled down.
- Before removing the cap, release all of the pressure.
- Prevent burns caused by oil or other hot parts during inspection or discharge by allowing the oil and cap to cool down before beginning operation.
- Even after the oil has cooled down, slightly loosen the cover or cap before removing it to mitigate pressure inside.



**DANGER**

**Burns danger**

Attention to burns. Engine reduction gear oil and the hydraulic system, pipes, engine and other components heat up when the vehicle is used. Wait until all parts cool down before beginning maintenance or repair work.

- Fluids such as fuel or hydraulic oil under pressure can penetrate the skin and eyes causing serious injuries. Take care to avoid these risks when repairing or doing maintenance work on the vehicle.
- Discharge the pressure (using the hydraulic levers of the distributors) before disconnecting or repairing pipes and hydraulic parts.



**DANGER**

When a hydraulic pipe needs to be disconnected, slowly loosen the fittings to discharge residual pressure.



**DANGER**

**Pressurized liquids danger.**

Hydraulic energy accumulators are mounted on the vehicle. Before intervening on them, make sure to discharge any internal pressure. Danger of high pressure oil splashes.

- Before restarting the engine, ensure that all connections have been properly tightened.
- Use a piece of cardboard to check for any leaks; make sure your body is adequately protected against pressurized fluids.
- Any fluids that penetrate the skin must be removed surgically. Should there be an accident, seek medical attention immediately.



**DANGER**

**Corrosive substances danger**

Never touch air conditioning coolant.

- If it comes into contact with eyes, air conditioning coolant may cause blindness; it may cause freezing if it comes into contact with skin.
- When cleaning with compressed air, serious injury may be caused by flying particles.
- Always wear protective goggles, a dust mask, gloves and other protective equipment.



**WARNING**

**Adjusting and/or dismantling balancing and safety valves can be dangerous.**

One of the above-mentioned valves may be removed only when the concerned jack is at rest and the hydraulic circuit is not under pressure.

All other operations must be carried out by qualified, authorized personnel only.



**NOTE**

Only use lubricants suggested by DIECI; never utilize used lubricants.

11.1.2

Personal protective equipment for maintenance



**WARNING**

Always use the personal protective equipment most suitable to the checking or maintenance operation to be performed.

Icon	Description
	Wear protective goggles <ul style="list-style-type: none"> <li>• Wear protective glasses in case of operations involving the use of compressed air.</li> </ul>
	Wear safety shoes
	Wear protective gloves <ul style="list-style-type: none"> <li>• Wear nitrile gloves in case of operations with grease, hydraulic oil or fuel.</li> </ul>
	Wear protective clothing
	Wear a protective mask



**DANGER**

**Danger of crushing**

Pay attention to moving parts to avoid danger of crushing or dragging of the lower and upper limbs. Avoid wearing jewelry or pendants that

might be trapped in moving parts. Long hair must be tied back to avoid it being caught in moving parts.

Do not wear loose clothing, chains, belts or other accessories that may be caught in the control levers or in other parts of the vehicle.

## 11.2 Engine hood opening



### DANGER

**Do not open the hood with the diesel engine in motion. At the end of the maintenance operations the hood must always be closed and locked.**

Do not work with the engine hood open.

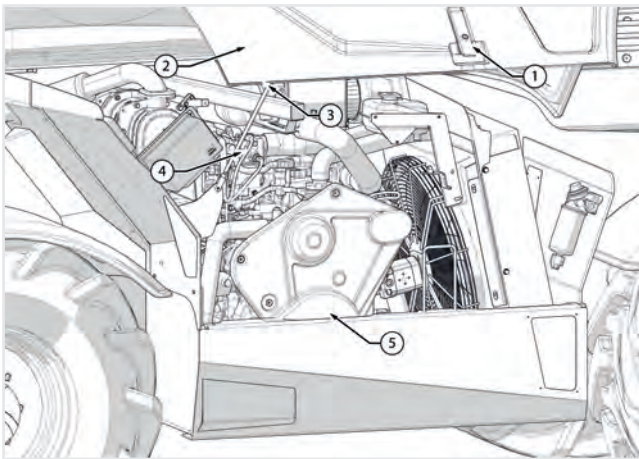


Figure: 150722

#### To open the engine hood (fig. 150722-1):

- Turn off the diesel engine.
- Remove the ignition key.
- Place in the cab a sign showing "Maintenance in progress".
- Disconnect the battery using the battery isolation switch.
- Pull the handle "1" to open the hood.
- Lift the engine hood "2" (fig. 150650-2) and fasten with the support rod "3" in the C hook on the hood "4".
- Release the hood gradually to ensure that the rod has been inserted correctly and does not release.

#### To close the engine hood (fig. 150722-1):

- Hold the engine hood "2" and release the support rod "3" from the C hook "4" on the hood.
- Put back the support rod "5" in its seat

## 11.3 Under chassis protection plate removal

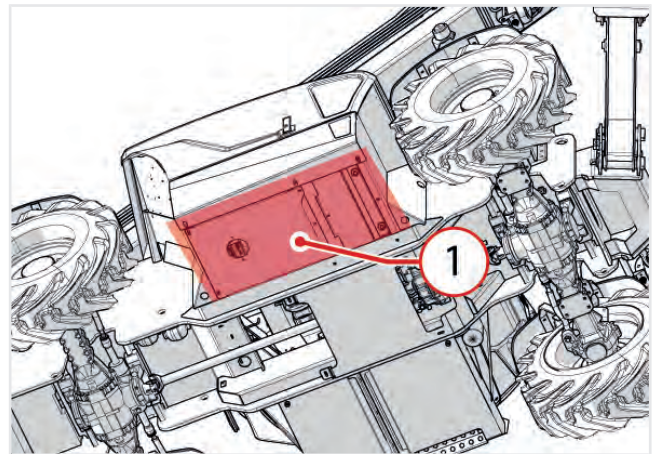


Figure: 150723-1

To perform maintenance operations it is necessary to temporarily remove the under chassis protection of the vehicle. The under chassis protection protects the bottom of the vehicle, from any bumps, collisions, dirt.

#### To remove the under chassis protections (fig. 150723-1):

- Place the vehicle in the maintenance position.
- Lock the wheels with chocks to prevent accidental movement of the vehicle.
- Unscrew the fastening bolts with a wrench size **13** and remove the engine under chassis protection "1".



### ATTENTION

At the end of the maintenance operations refit the under chassis protections.

## 11.4 Battery



### DANGER

#### To avoid the risk of explosion of the batteries:

- Keep sparks, free flames and cigarettes away from the top of the batteries because the gases that they can produce are highly flammable.
- Do not charge damaged batteries.
- Do not charge a hot battery.



### DANGER

#### Batteries contain highly polluting substances that must not be dispersed in the environment.

Dead, old, damaged, batteries etc. must be properly disposed of.



### DANGER

#### The battery contains sulfuric acid electrolyte which is a corrosive substance and must be treated with caution because it can cause poisoning and severe burns.

Keep out of the reach of children.

Avoid contact with skin and eyes.



### ATTENTION

Wear protective clothing, gloves and safety glasses. In case of contact with eyes or skin, rinse immediately with plenty of water and seek medical attention. If swallowed, contact a doctor immediately.

- Do not overturn or tilt the battery as acid could come out.
- Charge the battery in a well ventilated area and always disconnect the power before removing the terminals.
- To check the charge status always use a voltmeter or a densimeter. If it is necessary to check the electrolyte level, use a flashlight, never a flame.
- Never place a metal object between the terminals to check the battery charge.

- Do not generate sparks with the cable terminals while charging the battery or starting the engine of the vehicle with an auxiliary battery.
- Check that the vent caps or covers are fitted correctly and firmly.
- Clean the top of the battery, check that the terminals are tight and cover them with a thin layer of petroleum jelly.
- In case of frozen battery this should be stored in a warm place to defrost. Do not use and do not recharge it: risk of explosion.
- In normal conditions the battery is kept charged by the alternator of the vehicle. If this becomes completely exhausted due to prolonged disuse or because at the end of its life the alternator loses its capacity to "regenerate". The battery must be replaced and recharged using a special battery charger tool.



### WARNING

Before performing any maintenance on the vehicle, disconnect the power supply to the electric circuit of the machine by pressing the battery cut-off switch.

### 11.4.1

#### Low maintenance batteries

The low-maintenance batteries have been studied to avoid maintenance interventions in ordinary and normal use of the battery. In case of discharge check the electrolyte level. For technical specifications contact the supplier or the manufacturer.

### 11.4.2

#### "Zero" maintenance batteries

They are batteries that do not allow maintenance intervention.

When the battery is discharged it must be replaced. For technical specifications contact the supplier or the manufacturer.



### DANGER

Do not carry out maintenance or recovery operations on "zero" maintenance batteries.



### 11.4.3

#### Battery: Instructions for recharging

- A battery is fully charged if at constant temperature the density of the electrolyte and the measured voltage at the poles does not increase within 2 hours.
- Each recharge will be good as good are the general conditions of the battery. This means that an old battery, after charging, will not have the same life and efficiency of a new battery.
- The simplest charging method is to charge at constant power.
- At the end of the charging, the battery charger voltage increases and creates gasification. It is recommended to use simple battery chargers with minimum current control and timer.
- If the battery has a low electrolyte level restore it to the minimum level (just above the plates limit) then charge them. After the charging is completed, fill to the maximum level (to prevent leakage).
- Overcharging must be avoided because:
  - It is a loss of energy which causes the dissociation of water.
  - It produces loss of active mass for the electrodes deterioration
  - It creates a risk of explosion.
- If sulfated batteries are recharged without voltage limitation, they will boil and warm up with a risk of explosion.
- For old batteries (in most cases sulfated) charge with great caution. Even with 13.8 Volts there is the possibility of a temperature increase.

Follow these instructions to recharge the battery:

1. Disconnect the cables of the vehicle from the battery to protect the electrical system of the vehicle.
2. Place the battery at a safe distance from the vehicle.
3. If possible, remove the caps.
4. Check the electrolyte level, if possible.
5. Clean the poles.
6. Make sure the room is sufficiently ventilated.
7. Limit the charging current to a maximum of 1/10 of the battery capacity (Ah).
8. Connect the battery to the charger.
9. Connect the charger to the mains.
10. Turn on the battery charger.

11. The battery temperature must not exceed 55°C.
12. After finishing switch off the battery charger.
13. Disconnect the battery charger from the mains.
14. Disconnect the battery from the charger.
15. Check the electrolyte level, if possible.
16. Refit the caps.

### 11.4.4

#### Battery isolation switch



#### WARNING

Use this switch only when the engine is stopped.

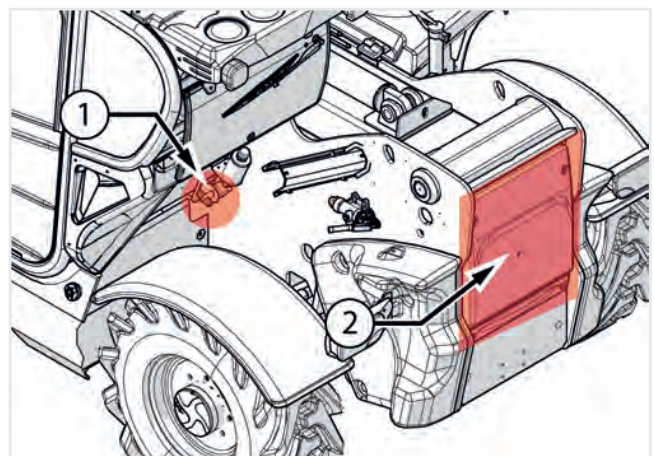


Figure: 150731-1

The battery isolation switch "2" (150731-1) allows the operator to isolate the battery from the electrical circuit in case of emergency or during maintenance operations.

To isolate the battery:

- Turn off the engine.
- Turn the ignition key to position "0".
- Turn the battery cut-off switch counterclockwise to the off position.



#### NOTE

If the vehicle is provided with the basket pre-arrangement it is also provided with a battery isolation switch with removable key, to ensure that it is not used accidentally.

## 11.4.5 Battery: Replacement

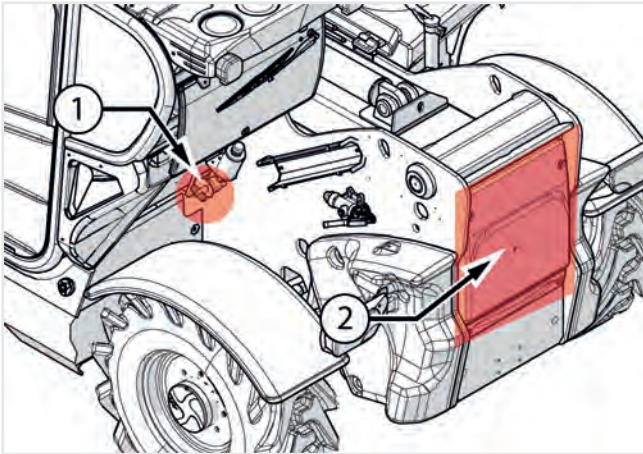


Figure: 150732-1

The vehicle is equipped with a battery located on the rear central part of the chassis "2" (fig. 150732-1).

Before removing the battery disconnect it from the electrical circuit through the appropriate battery isolation switch, following the instructions given in the relevant chapter.

To remove the battery:

- Place the vehicle in the service position as described in the "Setting the vehicle for maintenance" section.
- To access the battery it is necessary to remove the protection guards.
- Disconnect the NEGATIVE cable (black) from the battery.
- Disconnect the POSITIVE cable (red) from the battery.
- Remove the battery from the vehicle.
- Place the new battery.
- Connect the POSITIVE (red) cable to the battery.
- Connect the NEGATIVE (black) cable to the battery.
- Reactivate the battery isolation switch.
- Close the engine hood.

## 11.4.6 Start up with auxiliary batteries



### WARNING

**Start-up with auxiliary batteries is an operation that requires two properly trained and qualified operators.**

An error in executing the operations can cause serious damage to the vehicle, to property and people.

- When starting the engine using another vehicle, connect the accumulators in parallel. When connecting the cables, avoid contact between the positive cable "+" and the negative cable "-".
- Wear the necessary personal protective equipment before starting the operation.
- Take care to avoid contact between the vehicle to be started and the vehicle that must supply power to prevent sparks and explosions of hydrogen produced by the accumulators. The accumulator explosion causes serious damage and injury.
- Make sure not to exchange the ignition cables and first connect the earth cable (-) and then the positive cable (+).
- Be very careful when removing the ignition cables; to ensure that the cables disconnected from the accumulator do not touch other parts of the vehicle to avoid explosions caused by hydrogen.
- Cables and grippers must be proportional to the current load to be transferred. The accumulator to be used for the start-up must have a capacity greater than or at least equal to that of the standard accumulator installed.
- Check the cables and grippers for corrosion or damage. Make sure the grippers are tightly gripping the terminals.
- Be very careful during the different operations: direct or indirect contact with live parts can result in injury and sometimes even in death.
- When starting the engine, the operator must be in the driver's seat so as to keep the vehicle under control.
- All these operations must be carried out by skilled and trained personnel.

**11.4.6.1**  
Cable connection and engine start-up

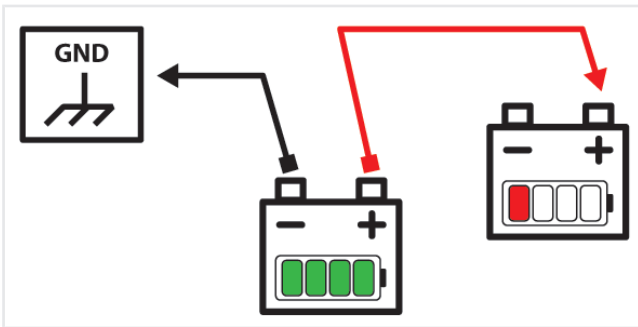


Figure: 150539-1

1. Make sure the ignition key is in position "O".
2. Connect the cable from the negative clamp "-" of the charged battery to the earth block of the vehicle to start-up.
3. Connect the positive terminals "+" of the two batteries to each other.
4. If a charged battery installed on a properly running vehicle is used, start the engine of the latter and run it at high rpm.
5. Start the engine of the failed vehicle.

**11.4.6.2**  
Cables removal

With the engine running remove the cables in reverse order of the connection.

1. Disconnect the positive cable "+" first from the battery used for starting and then from the low battery.
2. Disconnect the negative cable "-" from the earth of the running engine and therefore from the fully charged battery.

**11.5**  
Fuel



**DANGER**



Never add different types of fuel such as petrol or alcohol to diesel.



It is forbidden to refuel while the engine is running.

It is forbidden to smoke when refueling.



**DANGER**



Inhale diesel fumes for the least time possible as they are dangerous carcinogens for your health.

Before handling fuel and filling the tank, comply with the following regulations:

- Clean the area around the fuel cap. Refill the fuel tank at the end of every day to reduce condensation when the vehicle is at rest.
- Water and sediments must be removed before they reach the engine.
- Do not use antifreeze to remove water from diesel fuel.
- Do not rely on a filter to remove water from diesel fuel.
- Never leave the tank without a cap and always lock it. Should you lose the original cap, replace it with an original spare. Not just any cap is suitable.
- Keep the fuel pump gun under control while filling the tank.
- Do not inspect the tank with a flame.
- Do not fill up the tank completely. Leave room for expansion and immediately clean any spillage.
- In the event of fuel leaks due to breakage, stop the leak as quickly as possible, do not use the vehicle and contact DIECI customer service.

**11.5.1**  
Specifications for recommended fuel



**NOTE**

To achieve good performance, see the engine manual of the vehicle to know the best features.

**11.5.2**  
Cleaning and storing fuel

It is important for the fuel to be kept clean.

The advice provided below will help maintain fuel quality.

- Never use zinc-coated containers.
- Never clean the inside of containers or power supply system components with cloths that may leave deposits.
- The cistern capacity must allow intervals between refueling not to be too long. A capacity of 3000 liters is sufficient for an average sized company.
- The storage cistern must be covered and placed on a support that is high enough to allow refueling by means of gravity. A large basin must be placed under the cistern in case of fuel leakage in order to collect it. The cistern must have an opening large enough to allow someone to access it for cleaning purposes.

- The delivery tap must be larger at the bottom in order to trap any deposits; it must also be equipped with a removable filter. The cistern should be tilted 40 mm per meter towards the sedimentation drain plug.
- The fuel barrels must be covered when stored to prevent water infiltration. The barrels should be slightly tilted slightly, so that any water will run to the upper rim. The fuel barrels should not be stored for too long before being used.
- If the barrels are kept outside, their caps must be tightly closed to prevent water from seeping in.
- After refueling the storage cisterns or barrels, it is recommended to allow the fuel to set for at least two hours, thereby allowing any sediment of water and impurities to be deposited before the fuel is used.

### 11.5.3 Refueling

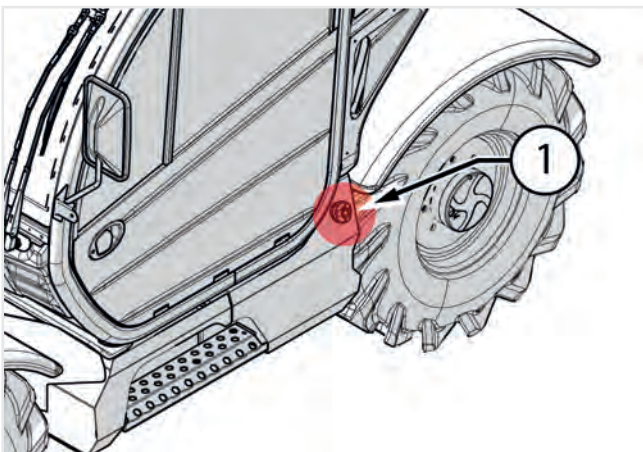


Figure: 150724-1

When refueling (fig. 150724-1) it is necessary to:

- Park the vehicle and turn off the engine
- Open the fuel cap
- Refuel
- Close the fuel cap

### 11.5.4 Fuel tank: Cleaning

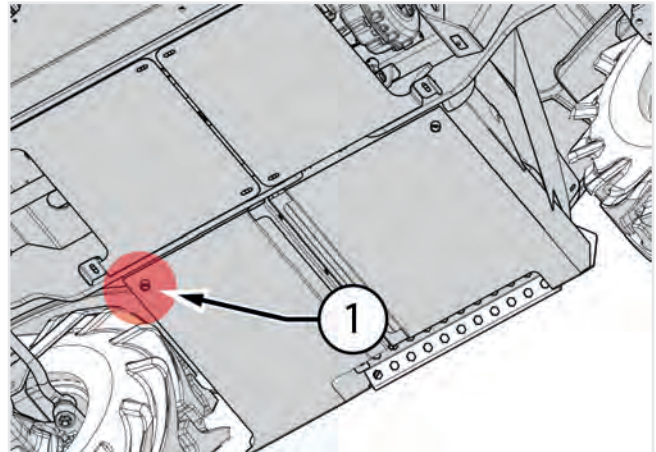


Figure: 150725-1

With the vehicle in the maintenance position:

- Place a suitable container under the fuel tank.
- Remove the plug from under the tank (fig. 150725-1) and drain the fuel to remove impurities present in the tank.
- Put back the cap and fill with clean fuel.

### 11.6 Safety stickers: Inspection

- Check that all safety stickers are intact and in good condition.




#### NOTE


Refer to the chapter "Safety Stickers Cleaning" for cleaning the safety stickers.

### 11.7 Lubrication

Lubricate the points shown in the figure until grease comes out and clean the lubricators from dirt or deposits.

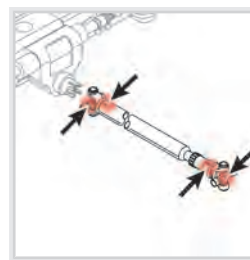


Drive shafts lubrication points.

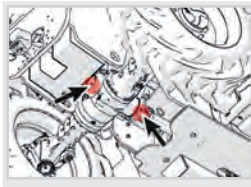


Swinging axle lubrication points.



Lifting cylinder lubrication points.

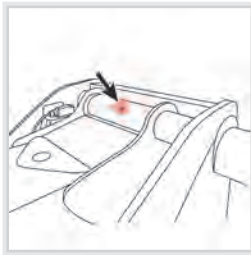


Boom-chassis pin lubrication points.

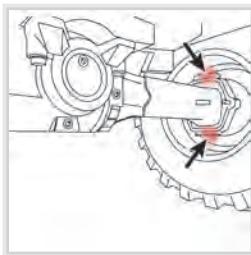


Wheels lubrication points.




Outriggers lubrication points.

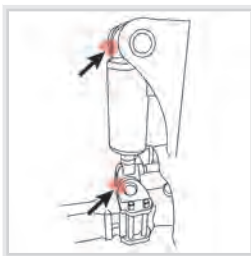

Leveling cylinder lubrication points.

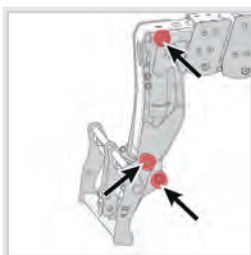

Tilting cylinder lubrication points.

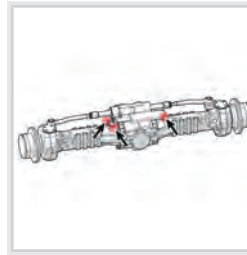

External parking brake cylinder lubrication points.

## 11.7.1 Automatic lubrication system

### ★ NOTE

The automatic lubrication system is an optional accessory.

### 11.7.1.1 Controls

The following table describes the command and control devices for the centralized lubrication systems with pause - work timer and pause - sensor timer.

The devices on the Timer are highlighted in the figure.

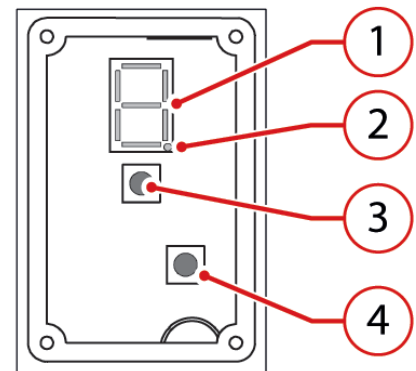


Figure: 180101-1

	Type	Description
1	Display	<ul style="list-style-type: none"> <li>• During the time setting procedure it displays the parameters set.</li> <li>• During the normal operation of the system, the LEDs that make up the display light up alternately.</li> </ul>
2	Display led	It lights up when the lubrication system is electrically powered.
3	TEST button	It can be pressed applying a light pressure, on the writing "push", on the timer access cover.

Type	Description
	<p>When pressed during the normal operation of the pump it starts the set working cycle, carrying out an operation test.</p> <p>Once the work cycle is completed, the timer returns to automatic operation.</p> <p>When pressed during the timer programming, it is possible to scroll through the selections.</p>
4 ENTER button	<ul style="list-style-type: none"> <li>Pressed for 3 seconds starts the digital programming procedure.</li> <li>Pressed briefly during the programming phase, it allows to modify the P (pause) or L (work) values.</li> </ul>

### 11.7.1.2 Timer programming

The operations that must be performed for the digital programming of the control timer are summarized below.



#### NOTE

Remember that if the power supply is interrupted, the timer will save the internal data in a digital memory with virtually unlimited duration over time. When the power supply is restored, the timer reloads the previously saved data and resumes the time counting from the point where it was interrupted, and from the condition in which it was

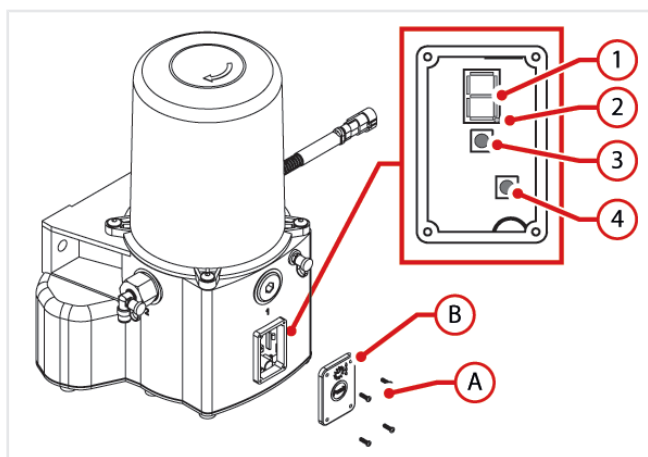


Figure: 180102-1

N	Operation	Effect
1	Loosen the fastening screws "A" and remove the access cover "B" to the timer	The Timer for digital programming is accessed.
2	Press and hold the ENTER button for 3 seconds	The display turns on and the letter P (Pause time) is displayed.
3	Briefly press the ENTER button	The display shows the value set for parameter P.
4	Pressing the TEST button changes the value of parameter P	Every time the display is pressed, the digits or letters shown in the Pause time settings table are displayed sequentially.
5	Briefly press the ENTER button to confirm the setting chosen	The value shown on the display is stored as current value of parameter P and the display shows the letter P again.
6	Press the TEST button to switch between the P and L parameters display	The display shows the letter L (Work time). NOTE: remember that pressing the TEST button alternates the display of the letters P or L.
7	Briefly press the ENTER button	The display shows the value set for parameter L.
8	Pressing the TEST button changes the value of parameter L	Each the display is pressed, the digits or letters shown in the Work time settings table are displayed sequentially.
9	Briefly press the ENTER button to confirm the setting chosen	The value shown on the display is stored as current value of parameter L and the display shows the letter L again.
10	Press and hold the ENTER button for 3 seconds	The display turns off and the timer is ready to work with the new parameters set.
11	Reassemble the timer access cover "B" and tighten the fastening screws "A"	The pump is ready to work.

The electric pump in the version with control timer is delivered to the customer with the following default settings:

Models	Pause time	Work time
Pegasus 45.30	Turret – 6	Turret – 6

Models	Pause time	Work time
	Carriage – 8	Carriage – 3
Pegasus 50.21	Turret – 6 Carriage – 6	Turret – 3 Carriage – 6
Fixed	8	2

Display	Time
0	5 min
1	10 min
2	15 min
3	30 min
4	1 h
5	2 h
6	3 h
7	4 h
8	5 h
9	6 h
A	7 h
B	8 h
C	9 h
D	10 h
E	11 h
F	12 h

Table 3: PAUSE (P) times setting table

Display	Time
0	20 sec
1	40 sec
2	1 min
3	1.5 min
4	2 min
5	2.5 min
6	3 min
7	3.5 min
8	4 min
9	4.5 min
A	5 min
B	5.5 min
C	6 min
D	6.5 min
E	7 min
F	8 min

Table 4: WORK (W) times setting table

### 11.7.1.3 Tank filling

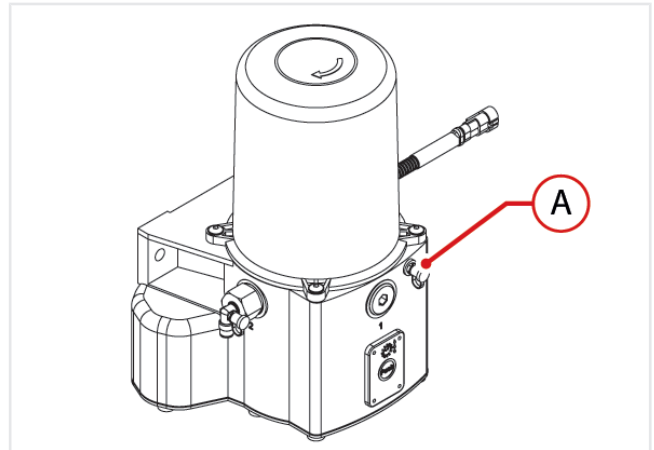


Figure: 180103-1

The pump tank is filled using the lubricator "A".

Remove the cap from the lubricator and, using the appropriate dispenser, fill the tank up to the maximum level (**MAX**) indicated by the adhesive strip attached to the tank.

For the characteristics of the lubricant to be used, refer to the following paragraph.

During the tank filling, the air contained in it is discharged to the outside through the appropriate vent. Make sure that the vent, placed at the rear of the tank, is not clogged.

### 11.7.1.4 Lubricants

It must be remembered that the automatic greasing system is designed to work with lubricants having maximum NLGI 2 grade

- Use lubricants compatible with the NBR gasket
- The components of the systems that are supplied with lubricant in them are supplied with NLGI 2 grade lubricant

A comparison table related to the classification of NLGI (National Lubricating Grease Institute) and ASTM (American Society for Testing and Materials) lubricants, limited to the values for automatic greasing systems, is shown below.

Range description	NLGI grade	ASTM penetration at 25°C in 1/10 mm
Fluid greases	0	445 – 475
Semi-fluid greases	0	400 – 430
Semi-fluid greases	0	355 – 385
Soft grease	1	310 – 340

Range description	NLGI grade	ASTM penetration at 25°C in 1/10 mm
Medium grease	2	265 - 295

Table 5: Compatible lubricants table

For more information on the technical characteristics and safety measures to be taken, consult the Product Safety Data Sheet (Directive 93/112/EEC) concerning the type of lubricant chosen and supplied by the manufacturer.

### 11.7.1.5 Operation check

Perform the following check after a long period of vehicle downtime:

- Check that the lubricant in the tank is above the minimum level.
- Disconnect one or more secondary pipes from the bearing points.
- Press the manual start button (TEST).
- Repeat the operation described in the previous step until the lubricant correctly reaches all the disconnected bearing points.
- Re-engage the piping to the bearing points.

In case the system does not work properly, consult the ANOMALIES chapter.

### 11.7.1.6 Filter replacement

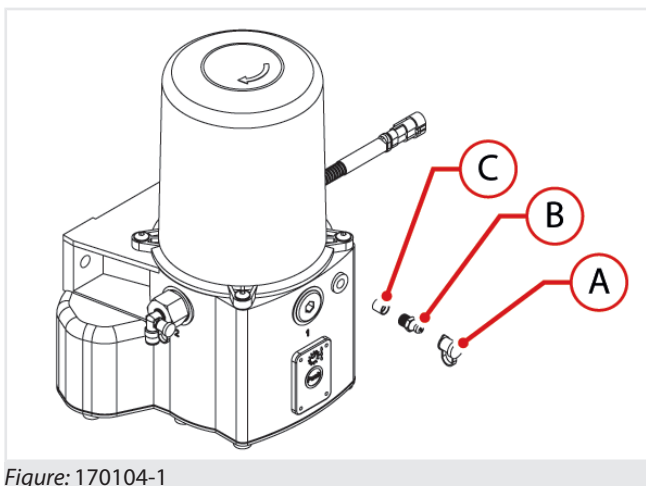


Figure: 170104-1

For maintenance of the tank filling filter, remove the plug "A", the lubricator "B" and the filter "C".

Check the condition of the filter and if necessary clean it using compressed air.

If it is still dirty after having carried out the cleaning operation, replace it.

Then, reassemble the filter "C", the lubricator "B" and the plug "A".

To tighten the lubricator "B", use a maximum torque of 6Nm.

### 11.7.1.7 Operating anomalies

This chapter informs maintenance personnel about:

- the possible anomalies that may occur during the operation of the system;
- the reason that caused the failure to start or stop the system;
- possible remedies to be adopted.

No.	Anomaly	Code	Cause	Remedy to be taken
1	The pump motor does not work	1.0	Current is not supplied	Check the power supply system, checking the status of the fuse
		1.0 2	The electronic board does not work	Replace the electronic board
		1.0 3	The gear motor does not work	Replace the gear motor
2	The pump does not send lubricant	2.0 1	The tank is empty	Fill the tank with clean lubricant
		2.0 2	Air bubbles in the lubricant	Disconnect the primary pipe from the connection fitting to the pumping element. Operate the pump according to the manual operating cycle until lubricant completely free of air bubbles comes out from the fitting
		2.0 3	Use of unsuitable lubricant	Replace the lubricant with suitable lubricant
		2.0 4	Clogged pumping element suction	Remove the pumping element and clean the suction ducts
		2.0 5	The pumping element piston is worn out	Replace the pumping element



No.	Anomaly	Code	Cause	Remedy to be taken
		2.06	The delivery valve of the pumping element is blocked	Replace the pumping element
3	The pump works but lubricant does not arrive to the bearing points	3.01	Pipes disconnected	Check the condition of the pipes and the relative connections to the fittings. Replace worn pipes
		3.02	Progressive distributor blocked	Replace the distributor or clean it
4	The lubricant is distributed to the bearing points in irregular doses	4.01	The distributor is not correctly connected to the bearing points	Check the dosages with the system diagram
		4.02	Wrong pause time setting	
5	The display LED is not turned on.	5.01	The supply voltage is not correct	Check that the supply voltage is between 20V DC and 30V DC and then intervene on the supply circuit
6	Pressing the TEST button the engine does not operate	6.01	The engine is not correctly connected to the timer	Check the wiring that connects the electric motor to the timer and then restore the correct connection
		6.02	The engine does not work correctly	Check that the motor is not short-circuited or that it absorbs a current exceeding 7A. Replace the gear motor.
7	The display leds rotate but the motor does not work	7.01	Defective engine	Contact the Assistance Service Customers

No.	Anomaly	Code	Cause	Remedy to be taken
8	The pump starts the lubrication phase but it stops immediately	8.01	Defective engine or high output absorption	Allow to cool for a few minutes and then try again: if the problem persists, contact the Customer Service

Table 6: Table of anomalies

## 11.8 Preliminary maintenance operations

### 11.8.1 Prepare the vehicle in the "Maintenance position"



#### **WARNING**

Before performing maintenance work on your vehicle, do the following:

- Park the vehicle on flat, even ground.
- Engage the parking brake.
- Lower and fully retract all mobile parts (booms, shovels, etc.).
- If the maintenance operation requires the mobile parts to remain up, apply the safety rod.
- Run the engine at a minimum for 60 seconds to cool it down.
- Release residual pressure from the hydraulic system.
- Switch off the key in the ignition switch.
- Remove the ignition key.
- Hang up a sign that indicates maintenance work is underway. This sign can be hung on the cab door and inside it on the controls.
- Set up barriers and spacers to prevent unauthorized personnel from approaching the vehicle.
- Disconnect the battery cut-off switch.
- Allow the engine to cool down.

## 11.9 Engine maintenance



### NOTE

For the engine maintenance operations, refer to it manual.

### 11.9.1 Belts: Check and adjustment

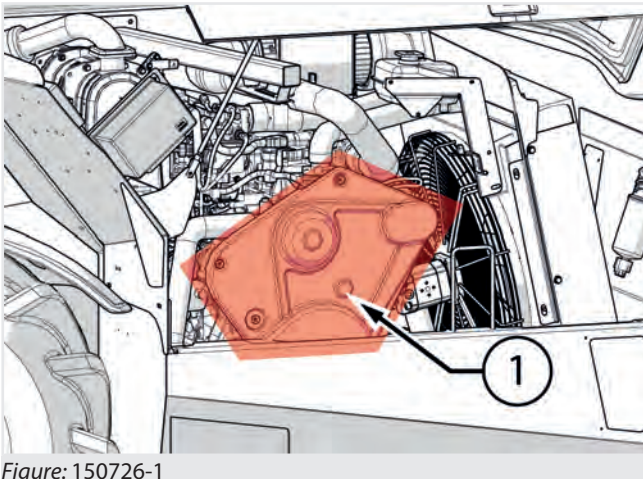


Figure: 150726-1

Check that the belt "1" (fig. 150726-1) does not have cuts, cracks or rubbing signs; when in doubt, install a new belt.

Make sure that the belt is properly fit on the pulleys and that the tensioner is working properly.

**NOTE!** If the belt does not appear in good condition, replace it with a new one.

### 11.9.2 Engine oil: Check and filling up

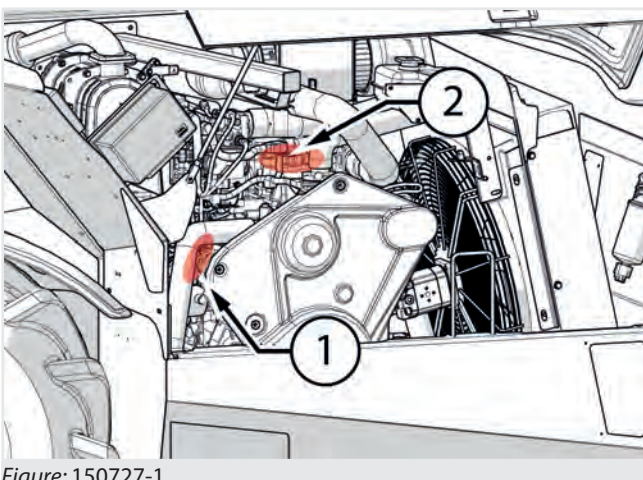


Figure: 150727-1

- Check the level with the vehicle on level ground and the engine turned off. Wait at least 5 minutes to allow the oil to settle into the sump.
- Pull out the dipstick "1" (fig. 150727-1), clean it and insert it back fully down.
- Pull out again the dipstick "1" and check that the oil level is between the "MIN" and "MAX" mark.
- Put back the dipstick and insert it fully down.
- If necessary, add oil from the cap on the engine "2".

For the amount and type of oil, refer to the engine manual.



### WARNING

**Do not fill beyond the "MAX" mark; if the amount is excessive, oil burns with production of smoke and possible damage to the DPF.**

Never operate the engine with the oil level below the "MIN" mark.

## 11.10 Air filter: Cartridges cleaning and replacement



### ATTENTION

The inspection, cleaning and replacement must be carried out with the vehicle in the maintenance position.

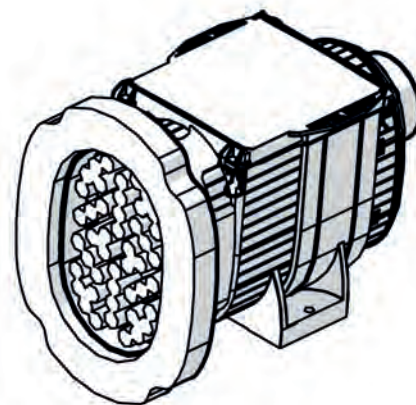


Figure: 150615-1

An air filter (fig. 150615-1) in bad conditions results in the reduction of power, excessive fuel consumption and reduced engine life.



150615-2

A clogged filter is signaled by the indicator light (fig.150615-2) located on the dashboard of the vehicle; after the clogging indication it is possible to continue operating for a period not longer than 10 hours. The maintenance must however be performed at the frequency required.



**WARNING**

When the clogging is indicated, it is possible to continue working for not more than one hour.

It is recommended to:

- Clean the filters only when the indicator light indicates clogging or at the frequency required. Unnecessary and too frequent cleaning exposes the elements to damage by handling that can allow dust and dirt to pass through the filtering stage and cause engine damage.
- In case the filter elements are in contact with liquids of any kind they must be replaced.
- Periodically check the intake sleeves, replace them immediately in case they are damaged or deteriorated.
- Periodically check the tightness of the bolts and clamps. Air must not be allowed to get into the engine circulation without having first gone through the filter.

For the complete efficiency of the filter it is recommended to operate with the filter complete with all its parts and components, assembled in the correct way.

Each deteriorated part must be replaced as soon as possible.



**ATTENTION**


**For the complete efficiency of the filter it is recommended to operate with the filter complete with all its parts and components.**

Each deteriorated part must be replaced as soon as possible.


It is absolutely forbidden to operate without the engine air filter.

The engine sucks air constantly during its use; dust particles entering in circulation may cause serious damage.

For proper cleaning of the filter it is necessary to:

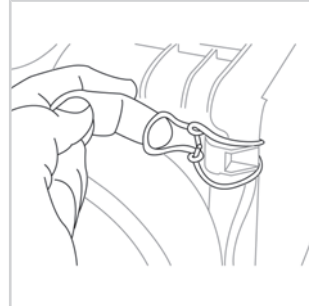

150615-3

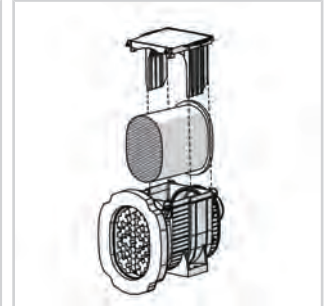

150615-4

- Prepare the vehicle in the maintenance position.
- Open and lock the hood.
- Open the filter cover (fig. 150615-3) pulling the locking levers located on the four corners.
- Lift the cover and remove the cartridge from inside the filter (fig. 150615-4).
- Use a wet lint-free cloth to clean the box and the cover.
- Clean or replace the filters. The filter cleaning is carried out with compressed air, up to **3 bar** (43.5 psi), at a distance of not less than **150 mm** (5.9 in), taking care not to damage the filtering element.
- Reassemble everything carrying out the same operations in reverse.

For a correct cleaning of the suction ducts it is necessary to:

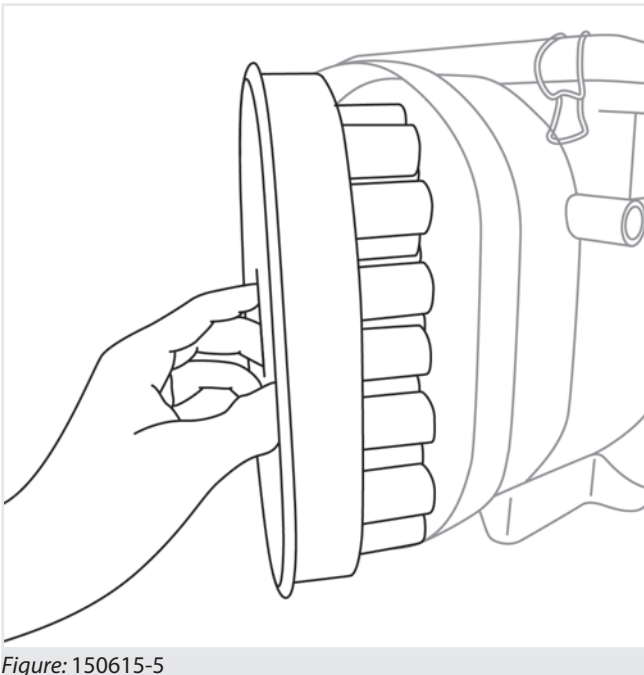


Figure: 150615-5

- Prepare the vehicle in the maintenance position.
- Open and lock the hood.
- Loosen the screw that secures the inlet honeycomb.
- Remove the air inlet honeycomb (fig. 150615-5).
- Use a wet lint-free cloth for cleaning. Clean every air inlet hole.
- Put back the inlet honeycomb in its seat.



## NOTE

In case the connection gasket between the suction duct and the filter is damaged, it must be replaced.

## 11.11 Radiator maintenance

### 11.11.1 Air recirculation grids and nets

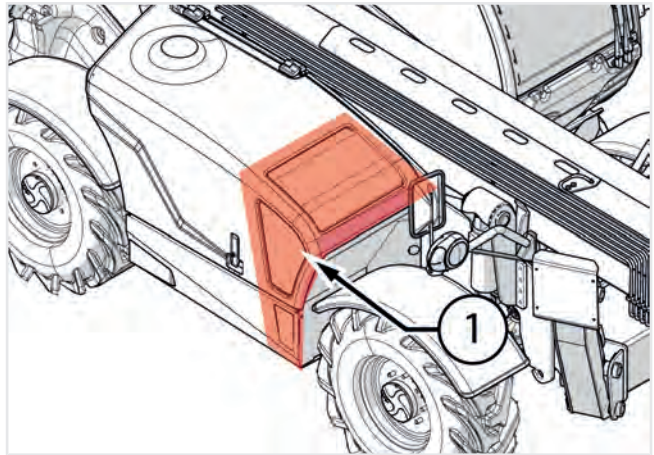


Figure: 150728-1

Check that the air recirculation networks and grids "1" (fig. 150728-1) are clean and free from dirt:

For cleaning use a jet of air at low pressure from the inside to the outside of the vehicle.

### 11.11.2 Radiator: Checking and cleaning

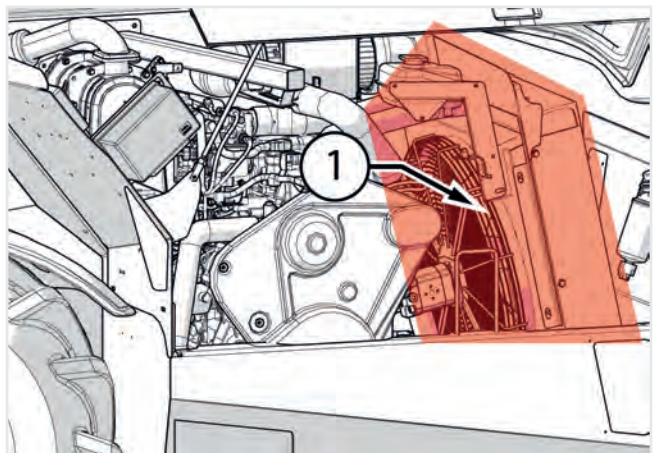


Figure: 150729-1

The oil and water radiator "1" (fig. 150729-1) involve the following steps:

#### Radiators check

Check that the fins are not deformed; in that case straighten with caution.

Check that the fins have not accumulated dirt and that they are not obstructed.

#### Radiators cleaning

Prepare the vehicle in the maintenance position.

Clean the radiator from dirt and impurities accumulated between the cooling fins. For cleaning use compressed air with pressure not exceeding 7 bar directed from the inside towards the outside.

If necessary, apply a detergent solution and then remove it with a pressure washer.

- Slowly unscrew the filler cap "1" (fig. 150730-1) counterclockwise until it reaches the safety latch.
- Exhaust the residual pressure and steam.
- Add the coolant up to the level of **30 mm** (1.2 in) below the cap.
- Put back the cap.
- Close the engine hood.

### 11.11.3

## Radiator: Liquid filling up and replacement



### DANGER

**Do not remove the filling cap of the radiator when the system is hot, otherwise it could cause leakage of boiling coolant. Once the system has cooled, turn the filling cap to the first mark and wait until the pressure has completely exhausted before proceeding.**

Risk of burns and injuries.



### DANGER

**The coolant can be toxic. Avoid contact with skin, eyes or clothing. Rinse thoroughly with water in case of contact with skin and eyes. Consult a doctor immediately.**

If not reused, dispose of in accordance with local environmental regulations.

## Coolant replacement

- Prepare the vehicle in the maintenance position.
- Open the engine hood.
- Remove the discharge sleeve "2" (fig. 150730-2) to drain water from the radiator.
- Remove the filling cap "1" to speed draining.
- Allow the cooling system to completely drain.
- Rinse the radiator with clean demineralized water introducing it from the filling cap "1" and making it flow out from the orifice of the sleeve "2". If necessary, add detergent.
- Check the condition of sleeves and their fittings, replace them if necessary.
- Once cleaning has been completed, refit the drain sleeve "2".
- Fill the cooling system from the filler cap "1" until the level is **30 mm** (1.2 in) below the cap with the coolant previously prepared.
- Close the filler cap.
- Close the engine hood.
- Start the engine at idle speed for a few minutes.
- Make sure there are no leaks, check the level and add more liquid if necessary.

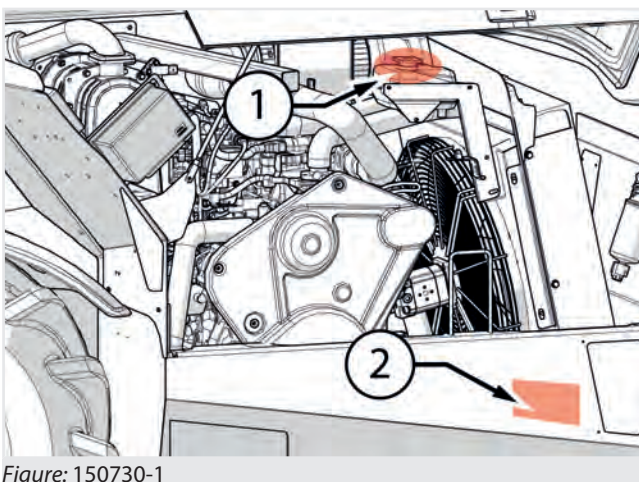


Figure: 150730-1

## Filling up

- Prepare the vehicle in the maintenance position.
- Open the engine hood.

## 11.12 Hydraulic system maintenance

### 11.12.1 Hydraulic oil: Check and replacement

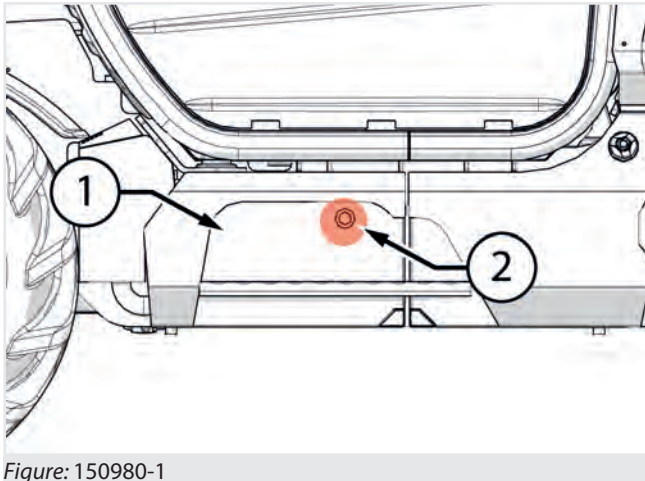


Figure: 150980-1

The hydraulic oil tank is located on the left side of the vehicle under the cab "1" (fig. 150980-1).


The level can be checked through the transparent cap placed on the left side of the vehicle "2".

The level is correct when the oil is visible from the transparent cap "2" with all the cylinders of the vehicle in the transport position.




#### NOTE

See the chapter "Technical data" to know the amount and type of recommended oil.

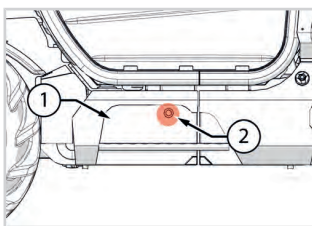

150980-2

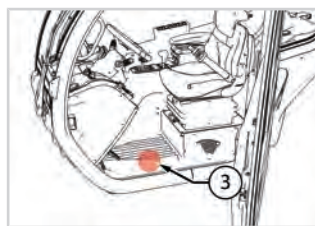

150980-3

#### Oil check

To keep the vehicle in normal operation conditions, it is necessary to keep the oil level in best conditions.

To properly check the oil level in the tank it is necessary (fig. 150980-2 and fig. 150980-3):

- Prepare the vehicle in the maintenance position.
- Make sure that all cylinders and jacks of the vehicle are retracted (e.g. telescopic boom fully retracted and lowered, attachment holding plate

tilted down as much as possible to avoid contact with chassis or tires). In this way all the oil of the hydraulic circuit will be sent in the tank.

- Check the oil level through the transparent cap "2". Under the best conditions, the oil level reaches the middle of the transparent indicator.
- If necessary, remove the cap "3" located in the cab, under the footboard, and add oil until it reaches the proper level.

#### Oil change


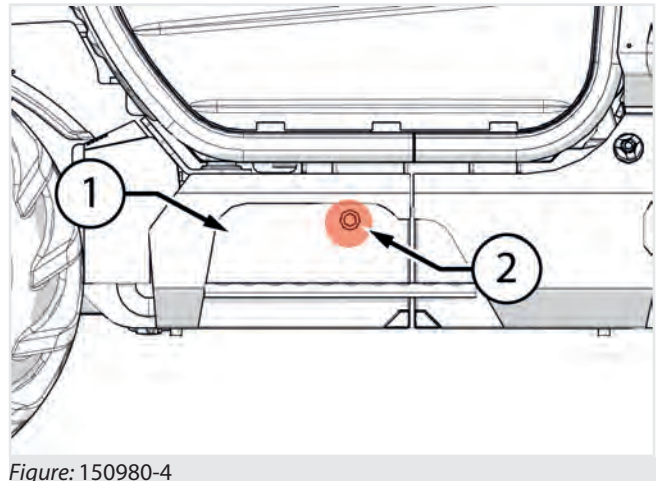


Figure: 150980-4


To remove oil in the tank (fig. 150980-2 and fig. 150980-3 and fig. 150980-4) it is necessary to:

- Prepare the vehicle in the maintenance position.
- Make sure that all cylinders and jacks of the vehicle are retracted (e.g. telescopic boom fully retracted and lowered, attachment holding plate tilted down as much as possible to avoid contact with chassis or tires). In this way all the oil of the hydraulic circuit will be sent in the tank.
- Place a container under the drain plug (located under the tank).
- Remove the filler cap "3" placed under the footboard in the cab.
- Remove the drain plug "4" to drain the oil.
- Put back the drain plug "4".
- Fill the tank with the oil indicated
- Check the level through the indicator "2" after starting the engine and operated all hydraulic controls to remove air bubbles, if any.
- If necessary, top up the level.

### 11.12.2 Hydraulic oil intake filter: Replacement

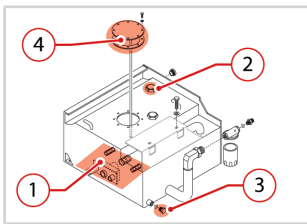

150736-1

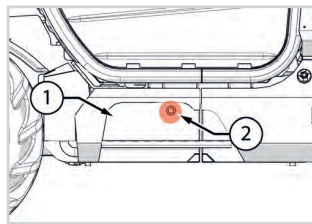

150736-2

The internal hydraulic oil intake filters "1" (fig. 150736-1) are located inside the hydraulic oil tank; to replace them, completely empty the tank. It is therefore advisable to carry out the replacement of the intake filters in conjunction with the oil change.

To replace the intake filter, carry out the following operations:

- Prepare the vehicle in the maintenance position.
- Make sure that all cylinders and jacks of the vehicle are retracted (e.g. telescopic boom fully retracted and lowered, attachment holding plate tilted down as much as possible to avoid contact with chassis or tires). In this way all the oil of the hydraulic circuit will be sent in the tank.
- Place a container under the drain plug (located under the tank).
- Remove the filling cap "2" (fig. 150736-1).
- Remove the drain plug to let the oil drain "3".
- After completely draining the oil, remove the flange "4" to access to the intake filters.
- Unscrew the intake filters "1" located inside the tank with an adjustable spanner.
- Install new filters and tighten with a wrench.
- Put back the drain plug "3".
- Fill the tank with the oil indicated.
- Check the level through the indicator "2" (fig. 150736-2) after starting the engine and operated all hydraulic controls to remove air bubbles, if any.
- If necessary, top up the level.

### 11.12.3 Hydraulic oil return filter

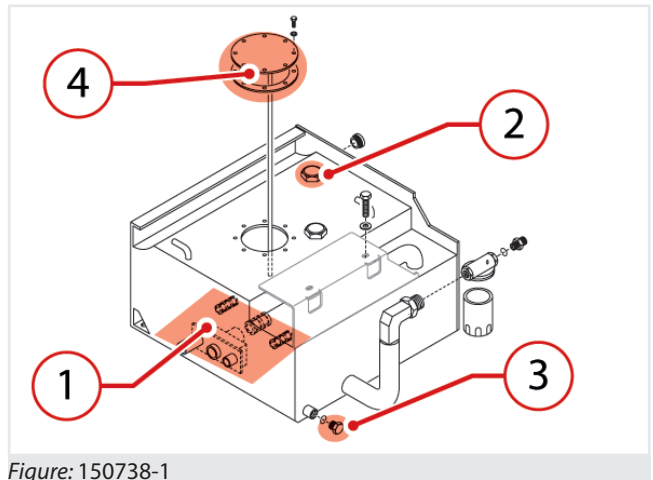


Figure: 150738-1

To replace the hydraulic oil filter (fig. 150738-1) carry out the following operations:

- Prepare the vehicle in the maintenance position.
- Turn on the vehicle and lift the boom just enough to insert the safety rod on the lifting cylinder rod.
- Turn off the engine and remove the ignition key, place a sign in the cab showing "Maintenance in progress".
- Allow engine and hydraulic oil to cool down.
- Insert the "boom support" safety rod on the rod of the lifting cylinder, apply appropriate safety supports to the telescopic boom.
- Place a container under the oil filter "5" to collect the oil that may spill during the change.
- Replace the filter "5", lightly oil the gasket and tighten by hand for 3/4 of a turn.

## 11.13 2 speed transmission maintenance

### 11.13.1 Oil change: Inspection

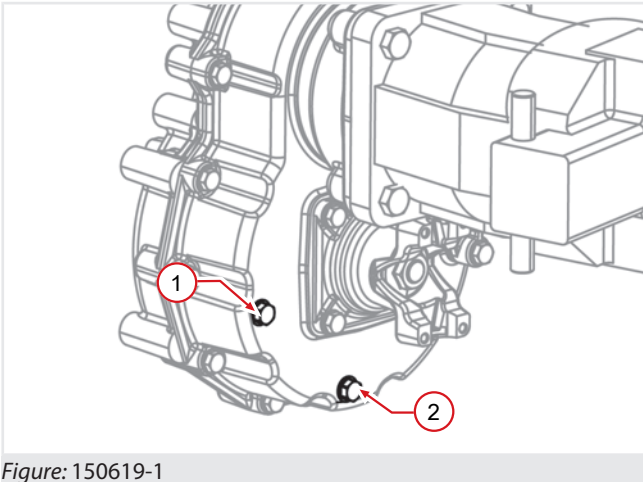


Figure: 150619-1

- Set the vehicle in the maintenance position.
- Place a container under the gearbox.
- Take the level cap off "1" (fig. 150619-1), oil must leak out from the hole.
- If necessary, top-up through the hole of the cap until the oil seeps through

### 11.13.2 Oil change: Check and replacement

- Set the vehicle in the maintenance position.
- Place a container under the gearbox.
- Remove the level cap "1" (fig. 150619-1) and the drain plug "2".
- Allow the oil to completely drain out.
- Refit the drain plug and tighten it securely.
- Top-up with approved type of oil from cap "1" until the oil seeps through.

## 11.14 Brakes maintenance

### 11.14.1 Brake: Inspection

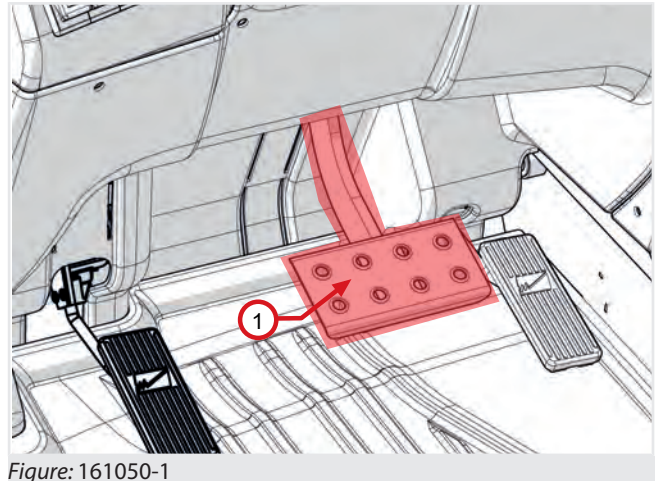


Figure: 161050-1

Visually check that the joints of the pedals (fig. 161050-1) are not damaged and that the pedal stroke is not excessive or too elastic.



### DANGER

**If irregularities in braking are noticed, contact qualified personnel to verify the cause of the trouble.**

The braking parts also safeguard the operator's safety, do not intervene personally on the braking system trying to eliminate possible anomalies.

### 11.14.2 Brakes oil: Check and replacement

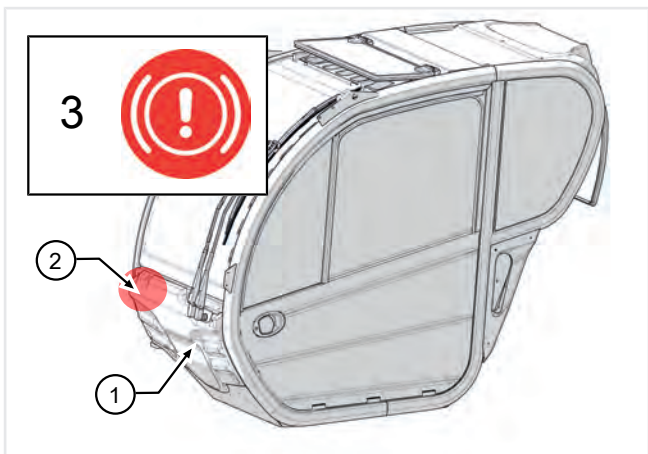


Figure: 150709-1



When the indicator light "3" (Brake fluid level low) flashes on the central instrument, it means that the brake fluid level has dropped below the minimum (MIN) and therefore it must be restored.

To access the tank, remove the front protection housing of the cab "1" (fig. 150709-1) and check that the oil level is always above the minimum level (MIN) indicated on the tank "2". If necessary top up from the cap.

**WARNING! If the light "3" stays on even after adding oil, contact a Dieci authorized service center to solve the problem.**

A slight lowering of the level is due to normal wear of the brake discs.

Do not press the brake pedal until the topping up is completed. Make sure the tank is closed before acting on the pedal.

## 11.15 Wheel maintenance

### 11.15.1 Epicycloidal reduction gear oil: Check and replacement

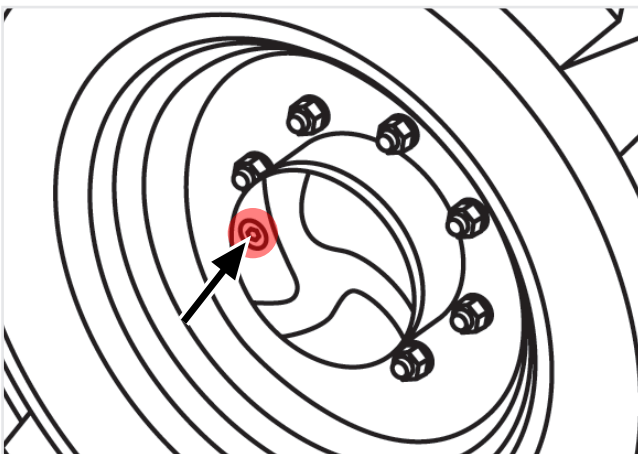


Figure: 150577-1

The oil cap of the epicycloidal reduction gear is located on the wheel hub (fig. 150577-1):

**When checking the oil level it is necessary to:**

- Prepare the vehicle in the maintenance position.
- Turn the wheel for the oil cap to be in the horizontal position (9 o'clock).
- Place a container to collect the oil.
- Remove the cap and verify that the oil seeps from the hole.
- If necessary, top-up through the same hole.
- Close the cap and tighten it securely.

**When replacing the oil it is necessary to:**

- Prepare the vehicle in the maintenance position.
- Turn the wheel for the oil cap to be in the lowest possible position (6 o'clock).
- Place a container to collect the oil.
- Remove the cap and let the oil drain completely.
- Turn the wheel and bring the cap to the horizontal position (9 o'clock).
- Fill through the same cap with new oil until it seeps through.
- Close the cap and tighten it securely.

### 11.15.2 Wheel nuts tightening



#### NOTE

Tighten the nuts at the intervals required in the maintenance table.

Use the corresponding table to know the correct tightening torque.

Always tighten the nuts in opposing position, not consecutively.

After installing the wheel, tighten the nuts between the wheel and the axles. Then check the nut torque every day until the torque is stabilized.

The number of axle columns must match the number of nuts tightened. Then all the nuts on each wheel must be installed otherwise the vehicle can not operate.

In case of wheel replacement the vehicle or the raised side can be placed on the ground only with wheels installed and properly tightened.

The nuts tightening must be made first with the vehicle, or part of it, raised from the ground then with vehicle resting on the ground.

Only use **DIECI** original nuts for tightening the wheels. If you lose even one nut contact the **DIECI** service center.

### 11.15.2.1 Wheel nuts tightening: Inspection

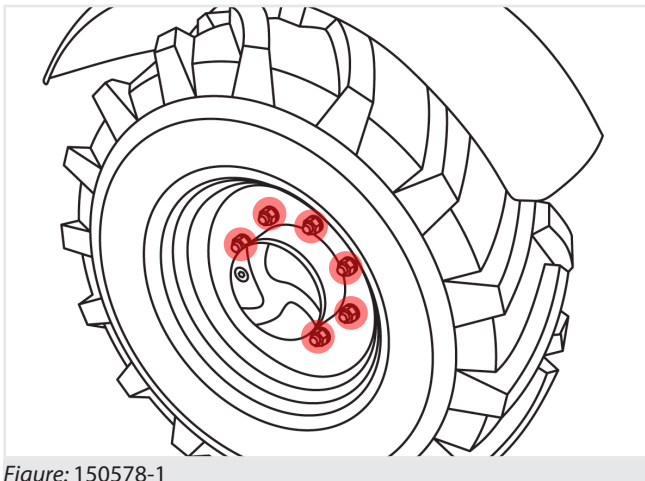


Figure: 150578-1

Check that the nuts of the front and rear wheels are tightened well, using a torque wrench (with a torque multiplier, if necessary).

Tapered nut	Torque
M18x1.5	460 N·m (339,02 ft·lbs)
M22x1.5	740 N·m (545,38 ft·lbs)

### 11.15.3 Tires



#### ATTENTION

The diagrams notebook in the cab and in the "Technical data" chapter show the tires available for your vehicle model and the relative inflation pressures.



#### ATTENTION

On receiving the vehicle check the air pressure of the tires.

- Check the tire pressure regularly. The pressure must be checked with cold tires.
- The tire pressure must always be at the levels indicated.
- Check the size of the tires installed and the canvass amount for the correct inflation pressure.



#### DANGER

Tires showing cuts or excessive wear must be replaced immediately.

- At each use, check that the tire shoulders are not damaged.

- Keep oil, grease and corrosive liquids away from the tires to avoid deterioration of the rubber.
- To obtain the maximum efficiency do not use tires with more than 80% of tread wear.



#### WARNING

**Inflating or operating on the tires can be dangerous.**

To operate on tires or install them, contact specialized personnel.

In any case, to prevent serious or fatal injuries, follow the safety precautions below.

- The vehicle wheels are very heavy. Handle with care and make sure that, once stored, they can not fall and injure someone.
- Never try to repair a tire on a public road or highway.
- Make sure the jack is placed on a solid and flat surface.
- Make sure the jack is adequate for lifting the vehicle.
- Use ratchet jacks or other locking means suitable to support the vehicle during the tires repair.
- Do not place any part of the body under the vehicle.
- Do not start the engine while the vehicle is on the jack.
- Never hit a tire or a rim with a hammer.
- Make sure the rim is clean, without rust and undamaged. Do not weld, solder, repair in any way or use a damaged rim.
- Do not inflate a tire unless the rim is mounted on the vehicle or secured in such a way that it cannot move in case the tire or rim should break suddenly.
- Do not inflate any tire over the pressure indicated by **DIECI**. If the bead chafer does not settle on the rim, when arriving to this pressure deflate the tire and lubricate again with a solution of soap and water, inflate again. Do not use oil or grease. An inflation greater than permitted with bead chafer not settled may break the bead or rim with explosive force sufficient to cause serious injury.
- After installing the wheel, tighten the nuts between the wheel and the axles. Then check the nut torque every day until the torque is stabilized.



**ATTENTION**

When fitting a new or repaired tire, use a valve adapter of spring type with distant pressure gauge that allows the operator to stay well away from the tire during inflation.

Use a safety cage.

11.15.3.1  
Tire pressure: Inspection

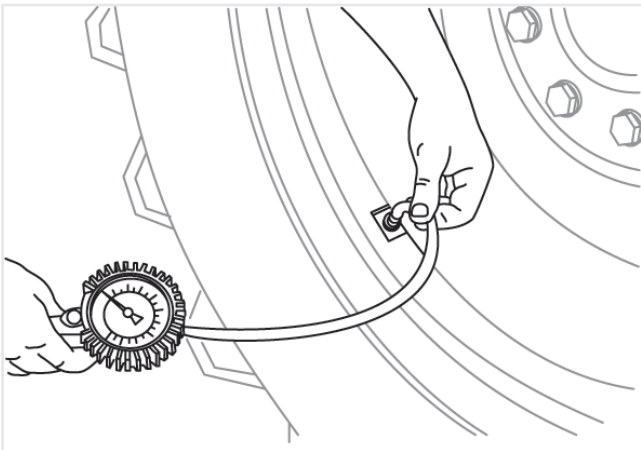


Figure: 150578-1

Verify and adjust the pressure of the front and rear tires.

Check that the tread and the sides are not damaged.

Connect a pressure gauge to the tire valve and verify that the inflation pressure is correct.

11.15.3.2  
Tires filled with urethane



**NOTE**

**Tires filling with urethane is an optional accessory.**

Consult your dealer in case of doubts or information on your vehicle.



**DANGER**

**It is not permitted to fit tires inflated with polyurethane foam unless authorized by the manufacturer.**

With tires filled with urethane it is forbidden to travel on the road.



**ATTENTION**

The maximum permitted speed with tires filled with urethane is 20 km/h (12.4 mph).

11.15.3.3  
Pneumatic symbols key

Icon	Description
	<b>Tire dimension</b> Indicate the tire pressure.
	<b>Tread pattern</b> Indicates the design with which the tire tread is carved.
	<b>Load index and Speed index</b> The load index corresponds to the maximum load that the tire can support.  The speed index indicates the maximum speed at which the tire can bear the weight corresponding to its load index.
	<b>Tire pressure</b> For most vehicle models, tire pressure is the same for all wheels.
	<b>Front axle tire pressure</b> For some vehicle models, the tires must be inflated with different pressures between the front axle and the rear axle.
	<b>Rear axle tire pressure</b> For some vehicle models, the tires must be inflated with different pressures between the front axle and the rear axle.

11.16  
Lighting

The vehicle lighting must always be efficient and fully functional. Its operation must be checked every day. In case of damage to the lighting fixture immediately replace the damaged part. Immediately replace a burned out bulb.



**ATTENTION**

Refer to the "Maintenance" chapter before making any adjustments or maintenance.



## NOTE

The bulbs are very fragile. Handle with care.

The low beam bulbs must not be handled with bare hands.

### 11.16.1 Headlight

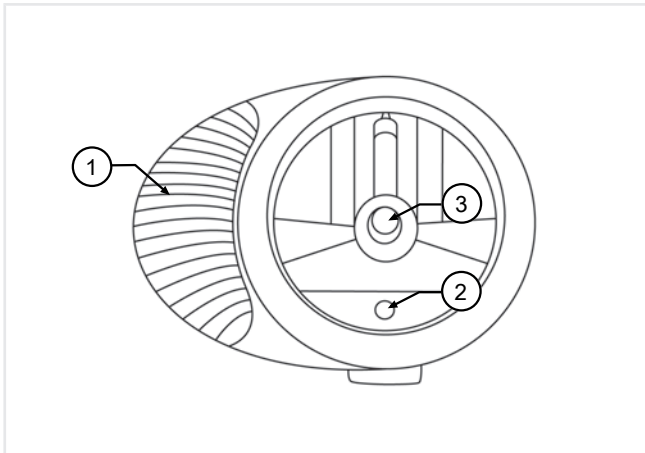


Figure: 150301-1

- |   |   |
|---|---|
| 1 | Direction indicator - 21 W                |
| 2 | Front side light- 4 W                     |
| 3 | Low beam and high beam light - 60/55 W H4 |

#### To access the bulbs:

- Prepare the vehicle in the maintenance position.
- Turn off the battery isolation switch to disconnect power to the electrical system.
- Remove the power supply connector on the back of the light.
- Remove the front of the headlight by loosening the screws placed in the rear cap.

To close the headlight operate in the reverse order, paying attention to correct positioning of the sealing gasket.

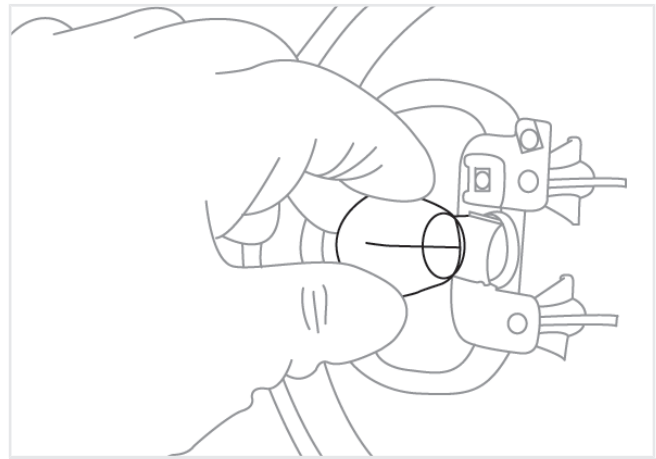


Figure: 150302-1

#### Direction indicator bulb replacement

- Press the top of the bulb (fig. 150302-1).
- Turn the bulb, keeping it pressed, to release it from the lock.
- Perform the same procedure to insert the new bulb.

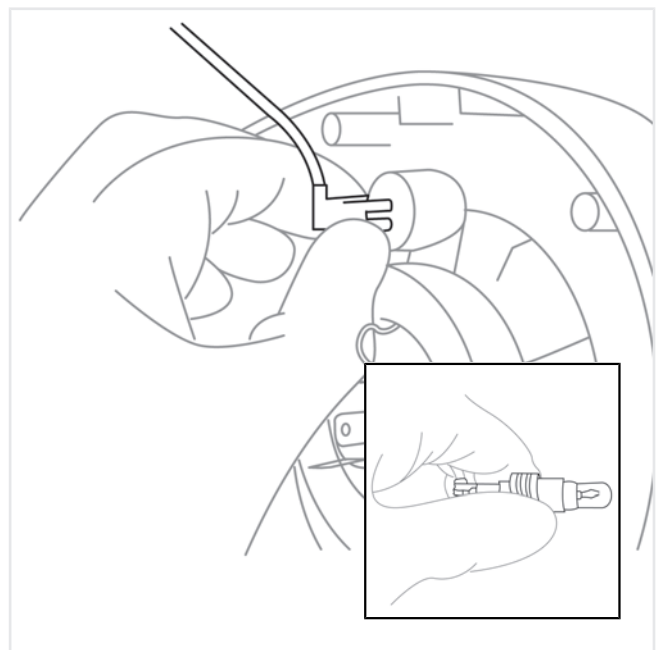


Figure: 150302-2

#### Sidelight bulb replacement

- Grasp the rear part where the electrical connections are placed (fig. 150302-2).
- Turn and pull the rear part towards you.
- Extract the support, press the top of the bulb.
- Turn the bulb, keeping it pressed, to release it from the lock.
- Perform the same procedure to insert the new bulb. Put back the support inside its seat.

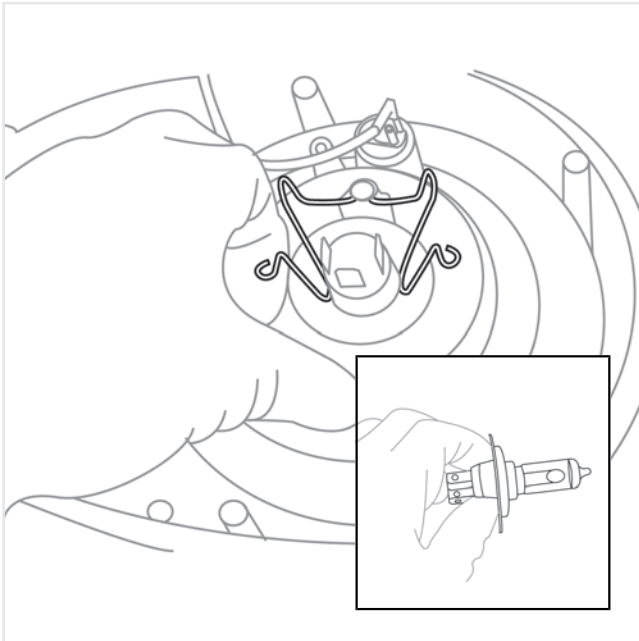


Figure: 150302-3

**Low/high beam light bulb replacement**

- Remove the electrical connector pulling it towards you.
- Lift the locking tabs (fig. 150302-3) moving them sideways to release the bulb.
- After replacing the bulb, proceed in the reverse order to lock and connect it again. Observe the joints of the lamp for proper insertion.

**11.16.2 Tail light**

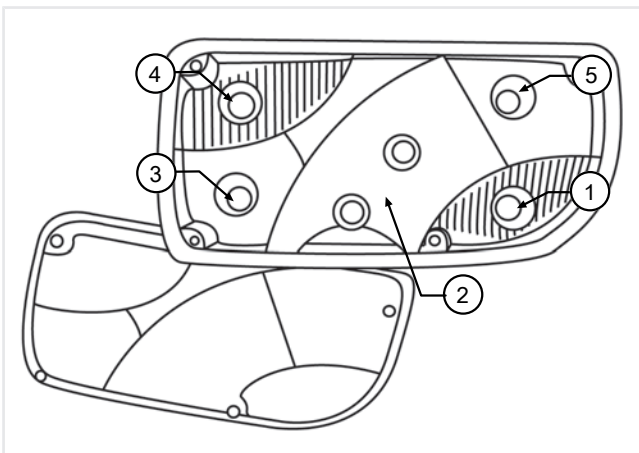


Figure: 120304-1

- 1 Reversing light - 21 W
- 2 Rear side light- 5 W
- 3 Braking light - 21 W
- 4 Direction indicator - 21 W
- 5 Rear fog light - 21 W

To access the bulbs:

1. Prepare the vehicle in the maintenance position.
2. Turn off the battery isolation switch to disconnect power to the electrical system.
3. Remove the power supply connector on the back of the light.
4. Remove the front of the headlight by loosening the screws placed in the cap.

To close the headlight operate in the reverse order, paying attention to correct positioning of the sealing gasket.

**Tail light bulb replacement.**

- Press the top of the bulb.
- Turn the bulb, keeping it pressed, to release it from the lock.
- Perform the same procedure in reverse order to insert the new bulb.

**11.16.3 Work light \***

**★ NOTE**

\* The work light is an optional accessory.

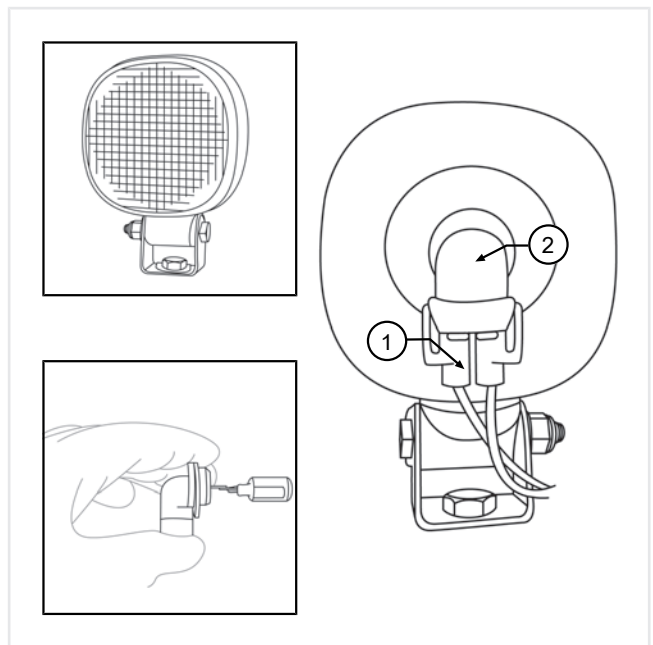


Figure: 150305-1

**Work light bulb replacement**

To access the bulbs (fig. 150305-1):

- Prepare the vehicle in the maintenance position.
- Turn off the battery isolation switch to disconnect power to the electrical system.

- Remove the power connector at the back of the light "1".
- Press the connector socket on the light "2".
- Turn the socket, keeping it pressed, to release it from the lock.

Perform the same procedure in reverse order to insert the new bulb.

### 11.16.4 Led work light\*



#### NOTE

\* The LED work light is an optional accessory.



Figure: 150303-1

The LED work light (fig. 150303-1) does not require maintenance.

## 11.17 Window washer fluid tank

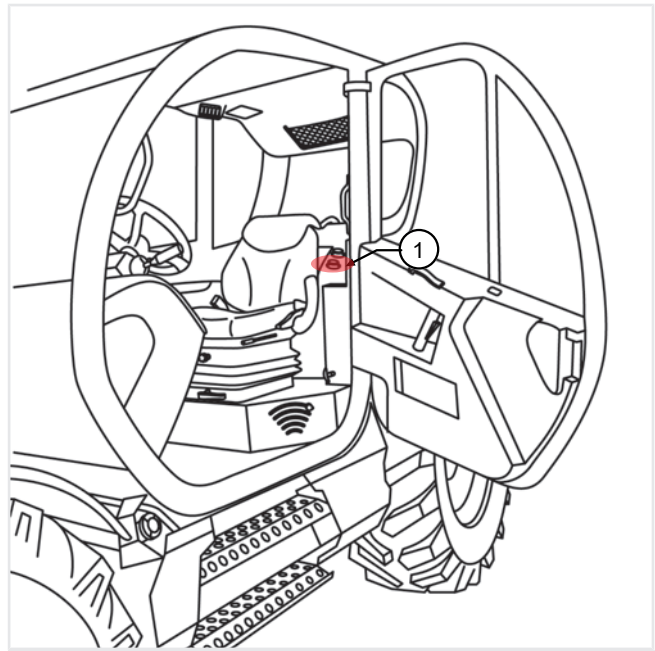


Figure: 150466-1

The washer fluid tank is located in the cab on the left side of the seat "1" (fig. 150466-1).

To add liquid to the tank:

1. Remove the filler cap.
2. Add washing fluid to fill the tank.
3. Put back the cap.



#### ATTENTION

During the winter, mix antifreeze fluid to the water.

## 11.18 Ventilation system maintenance

### 11.18.1 Cab ventilation filter: Cleaning and replacement

When changing the cab ventilation filter, clean the suction duct with a jet of air from inside the cabin to the outside.

- Prepare the vehicle in the maintenance position.

- Remove the housing "1" (fig. 150624-1), located on the left part of the seat, unscrewing the fixing screw.

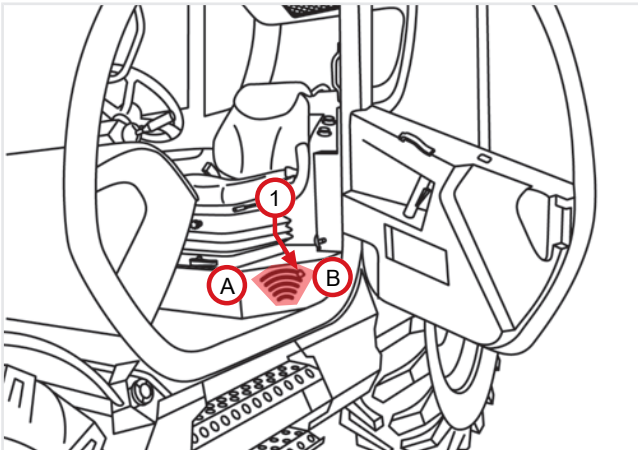


Figure: 150624-1

- Remove the filter "2" (fig. 150624-2).

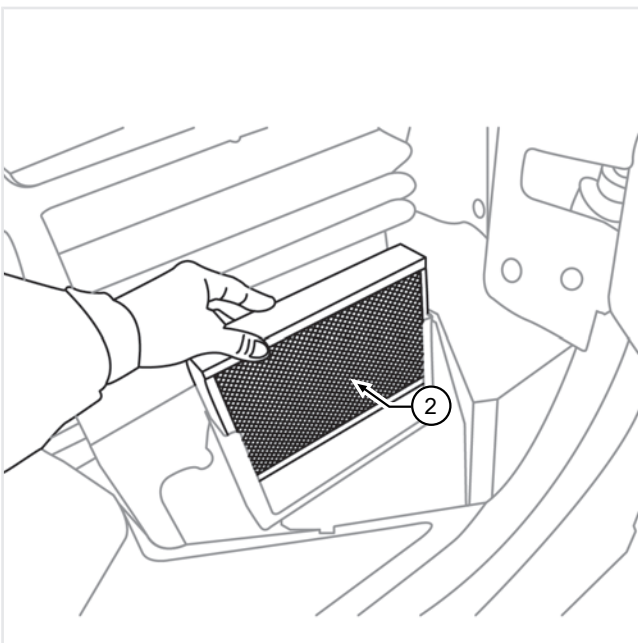


Figure: 150624-2

- Replace or clean the filter cartridge by tapping gently on a flat surface, with the outer side facing down, being careful not to damage it; or use a jet of air (less than 6.9 bar) by blowing from the inside to the outside.
- Refit the filter "2".
- Put the housing back in place "1".
- Restart the engine with the fan in motion to verify the correctness of the operations.

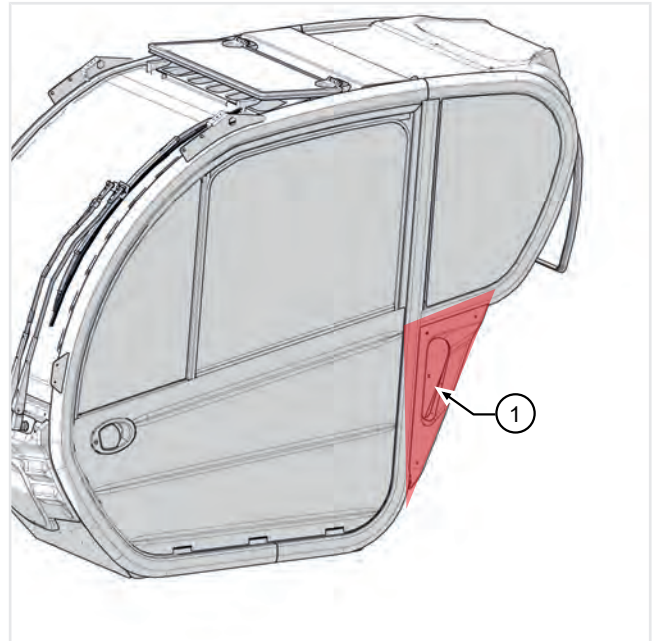


Figure: 150624-3

Clean the air intake grill "1" (fig. 150624-3) at the end of every working day using a jet of air.



**DANGER**

Do not use diesel fuel, gasoline, solvents or water to clean the cartridges, as this may damage the filtering material.



**WARNING**

If the vehicle is used in environments particularly rich of dust (barns, etc.), the filter life is reduced to 100 hours.



**WARNING**

**In case of malfunction of the ventilation system, check the filter clogging.**

In the event that the malfunction continues despite the filter replacement, contact DIECI service center.



**DANGER**

**Do not use the vehicle without a cab filter.**

The entry of dust into the cab may involve risks to the health of the operator and breakage of the ventilation system.

## 11.18.2 Air conditioning: Cleaning \*



### NOTE

Air conditioning is an optional accessory.

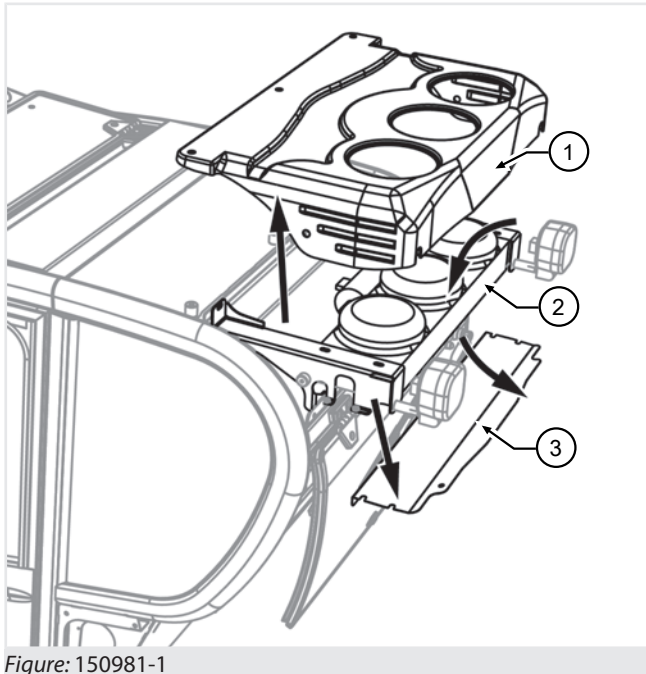


Figure: 150981-1

- Prepare the vehicle in the maintenance position.
- Remove the protection housing (fig. 150981-1).
- Clean the air conditioning radiator directing compressed air at a maximum pressure of 7 bar, from the top downwards, in the direction opposite to that of the normal flow of air. The air flow must be perpendicular to the radiator surface.
- Remove dirt from under the air conditioning radiator.
- After cleaning, refit the condenser.



### ATTENTION

**Be careful not to damage the radiator fins while cleaning.**

Check that the fins are not deformed; in that case straighten with caution.

## 11.19 Boom maintenance

### 11.19.1 Sliding blocks maintenance

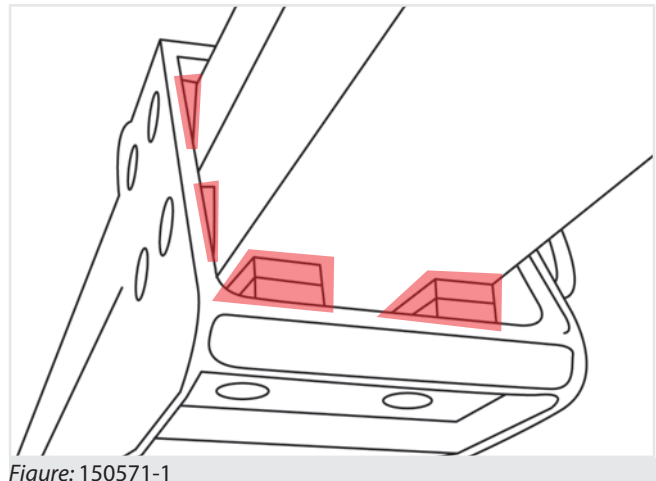


Figure: 150571-1

Worn sliding blocks can lead to oscillations and clearances between one extension and the other with consequent loss of precision in the movements and danger of load falling.

- For the deadlines see the summary table at the beginning of the chapter.
- With severe working conditions the wear is greater.



### ATTENTION

Maintenance to the telescopic boom sliding blocks must be performed by authorized **DIECI** service.



### 11.19.2 Boom lubrication with grease

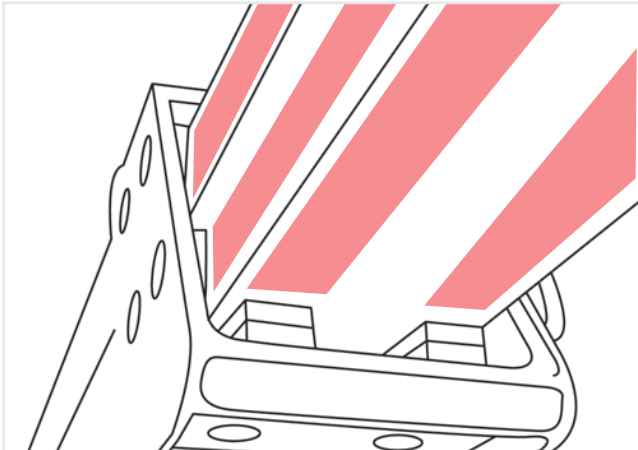


Figure: 150572-1

The boom sliding blocks must be kept lubricated to prevent as much as possible the deterioration and maintain soft movements.

- If the grease layer is thin or if impurities (sand, dust, shavings, etc ...) are present, proceed as follows:
- Prepare the vehicle in the maintenance position.
- Turn on the vehicle.
- Fully extend the boom and keep it in horizontal position.
- Turn off the engine and remove the ignition key, place a sign in the cab showing "maintenance in progress".
- Disconnect the battery using the battery cut-off switch.
- Remove the layer of grease and impurities on the surface of the extensions with a cloth.
- Use a brush to apply a layer of approved type grease on all four sides of the extensions.
- Turn on the vehicle.
- Fully retract and extend the boom several times to evenly distribute the grease.
- Turn off the vehicle.
- Remove excess grease.



### ATTENTION

Use only lubricants recommended by **DIECI**, different lubricants may cause severe damage to the sliding surfaces.



### WARNING

During the grease visual check and application the vehicle must be turned off and the key removed from the cab to avoid accidental operation.



### NOTE

See the "Maintenance Log" chapter to know the maintenance intervals timing.

When using the vehicle in severe conditions, very dusty environment requires a more frequent greasing.

### 11.19.3 Boom external chains

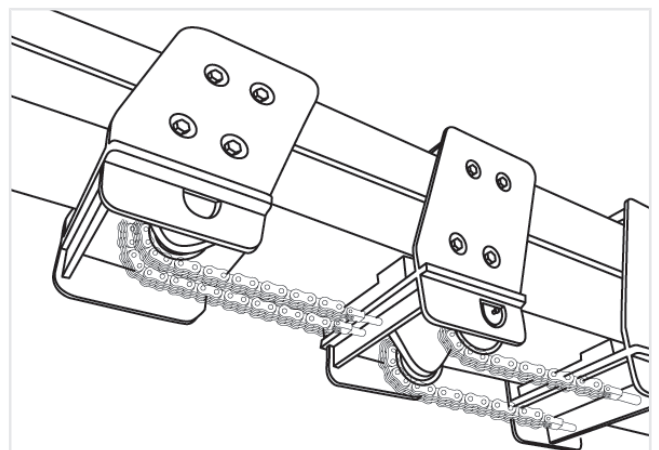


Figure: 150573-1

The external chains on the boom allow the boom extension and retraction (fig. 150573-1).

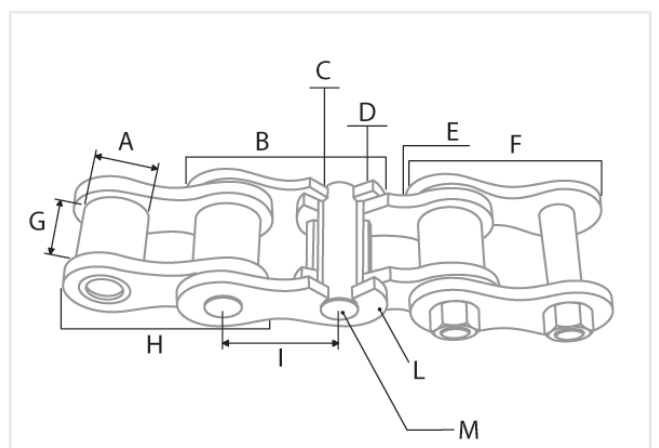


Figure: 150573-2

The chains are composed of (fig. 150573-2):

A - Roller diameter

B - External mesh

- C - Bushing
- D - Roller
- E - Internal plate
- F - Junction mesh
- G - Internal width
- H - Internal mesh
- I - Pitch
- L - External plate
- M - Pin

The oil viscosity must be suitable to room temperature. A too low viscosity facilitates the evacuation of lubricant, a too high viscosity prevents the lubricant to penetrate the joints. To know the correct viscosity refer to the following table:

Temperature	Recommended viscosity ISO VG (Cst)
-15 °C < T < 0 °C 5 °F < T < 32 °F	between 15 and 32
0 °C < T < 50 °C 32 °F < T < 122 °F	between 46 and 150
50 °C < T < 80 °C 122 °F < T < 176 °F	between 220 and 320

### 11.19.3.1 Lubrication

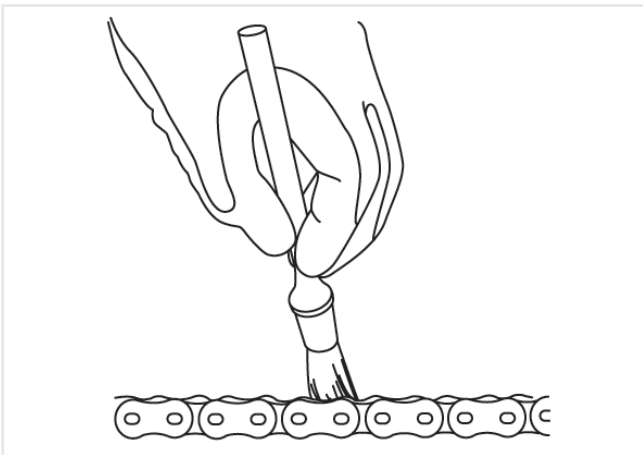


Figure: 150574-1

Lubrication during the operation allows:

- Interposing a liquid between the contact surfaces to reduce wear and prevent seizure.
- Protect the chains against corrosion.
- Reduce the noise between the surfaces subjected to shocks.

Lubrication must be carried out:

- Longitudinally, in an area where the joints are not so stressed to facilitate the lubricant penetration.
- Transversely, between the plates to facilitate the penetration of oil in the joint.



#### NOTE

In case of special applications or use in adverse conditions, consult the DIECI service center.



#### WARNING

It is absolutely forbidden to lubricate the chains using grease.

### 11.19.3.2 Wear checks

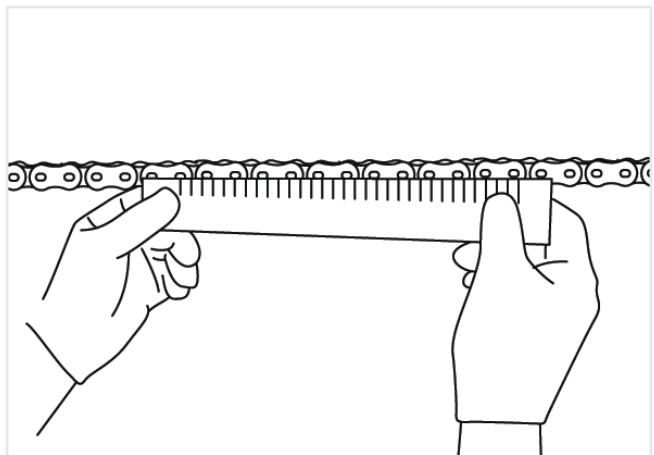


Figure: 150575-1

At the due deadlines it is necessary to check:

- The geometry of installation.
- The chain status, to analyze the traces of friction that may indicate an incorrect installation geometry.
- Wear on the profile of the lateral plates for contact with the pulleys and the guide systems.
- Wear on the outer plate sides and on the heads of pins for contact with the pulley flanges or with any guiding device.
- The chain joints wear with direct measurement of its length with measuring instrument or a checking scale, and visually.
- The Fleyer lifting chains plates wear.



**NOTE**

**The chains replacement is compulsory when wear for elongation exceeds 2%.**

When replacing the chain it is also mandatory to replace the respective rollers.

Fleyer chains	Fleyer chains	Pitch mm	Pitch inch
AL8	BL8	25,4	1
AL10	BL10	31,75	1,2
AL12	BL12	38,1	1,5
AL14	BL14	44,45	1,7
AL16	BL16	50,8	2

11.19.3.3

Determination of wear elongation

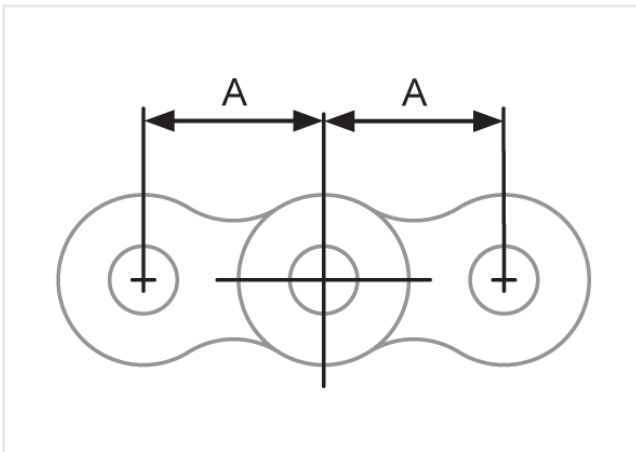


Figure: 150576-1

- Check the type of chain installed, as indicated on its external plates; if unreadable contact the DIECI service center.
- Find the pitch of the chain on the table. (e.g. Fleyer chain AL8/BL8 Pitch 25.40 mm (1 in)) and multiply by 10.
- Measure 10 pitches of the chain to be checked (fig. 150576-1).
- If the measurement is greater than 2% of the pitch shown in the table multiplied by ten, the chain is considered worn and must obligatorily be replaced.

**2% of the measurement = [ Measurement: 100 ] x 2**



**ATTENTION**

The measurement must be carried out at several points, as the wear may not be uniform, and with the chain in tension. The measurement can be performed with a caliber or millimetric ruler.

Fleyer chains	Fleyer chains	Pitch mm	Pitch inch
AL4	BL4	12,7	0,5
AL5	BL5	15,87	0,6
AL6	BL6	19,05	0,7

11.19.3.4

Check, cleaning and lubrication

- Prepare the vehicle in the maintenance position.
- Turn on the vehicle.
- Place the machine on outriggers (if installed).
- Fully extend the boom in horizontal position
- Turn off the engine and remove the ignition key, place a sign in the cab showing "maintenance in progress".
- Clean the chains with a clean, lint-free cloth to remove surface impurities.
- Brush the chains vigorously to remove impurities, using a hard nylon brush and clean diesel fuel. Subsequently blow with compressed air.
- Carefully examine the chains as described in the "Wear check" paragraph.
- Lightly lubricate the chains by using a brush soaked with oil (see the "Lubrication" paragraph).
- Remove excess oil on the entire surface of the chains with a clean cloth.
- Operate the telescopic boom several times to distribute the oil evenly.



**ATTENTION**

In case of chains replacement contact the Dieci service center.



**ATTENTION**

The chains can be weakened by hydrogen. It is absolutely forbidden to operate in acid places.

Work for the shortest time possible in oxidizing and corrosive places.

## 11.20 Cylinders block valves maintenance

The block valves for cylinders prevent uncontrolled movement of the pistons of the cylinders in the event of hydraulic pressure failure or bursting of a hose.

The valves are installed directly on the cylinders.



### DANGER

**During the checking operations do not allow any person to stay within the radius of action of the vehicle.**

Check the valves individually.

In case of malfunction do not use the vehicle until it has been repaired.

### Boom lifting cylinders:

- Start the engine. Make sure that the parking brake is engaged and the transmission is in neutral.
- Lift the boom to approximately 45°.
- With the engine running at 1400 rpm, lower the boom. During the boom movement stop the engine.

The boom movement must slow down and then stop when the engine slows down and stops.



### DANGER

**If the boom continues to move after stopping the engine, the lifting cylinders block valve is faulty.**

Remove the fault as soon as possible, contact the *DIECI* service center.

### Boom extension cylinder:

- Start the engine. Make sure that the parking brake is engaged and the transmission is in neutral.
- Lift and fully extend the boom.
- With the engine running at 1400 rpm, retract the boom. During the boom movement stop the engine.

The boom movement must slow down and then stop when the engine slows down and stops.



### DANGER

**If the boom continues to move after stopping the engine, the extension cylinders block valve is faulty.**

Remove the fault as soon as possible, contact the *DIECI* service center.

### Forks tilting cylinders:

- Start the engine, take a load on the forks (for example, a load of bricks or some bales of hay).
- Tilt the forks fully upward.
- Engage the parking brake and set the transmission into neutral.
- Tilting the boom away from the ground sufficiently to allow the forks to tilt forward.
- With the engine running at 1400 rpm, operate the control lever to tilt the plate forward. During the forks movement stop the engine.

The tilting movement must slow down and then stop when the engine slows down and stops.



### DANGER

**If the forks continue to move after stopping the engine, the tilting cylinders block valve is faulty.**

Remove the fault as soon as possible, contact the *DIECI* service center.

### Leveling and oscillating block cylinders (if any):

- Position the vehicle on a perfectly horizontal surface.
- Make sure that the parking brake is engaged and the transmission is in neutral.
- Make sure the vehicle is in carriage mode.
- Lift the boom about 15 cm from the ground and level the vehicle so that the chassis is perfectly parallel to the surface (check the level in the cab).
- Check that, without intervening on the leveling control, the vehicle maintains this position even after a prolonged use.



**DANGER**

**If the chassis continues to move after stopping the engine, the leveling cylinders block valve is faulty.**

Remove the fault as soon as possible, contact the *DIECI* service center.



**NOTE**

Do not level the vehicle with boom raised and/or removed.

Outriggers cylinders (if present)

- Start the engine. Make sure that the parking brake is engaged and the transmission is in neutral.
- Place the vehicle on outriggers.
- Level the vehicle with the outriggers.
- Fully extend the boom.
- With the engine running at idle speed, rotate the vehicle turret.



**DANGER**

**If the outriggers continue to move after stopping the engine, the outriggers cylinders block valve is faulty.**

Remove the fault as soon as possible, contact the *DIECI* service center.

**11.21 Differential Axles Maintenance**

**11.21.1 Differential axles oil: Check and replacement**

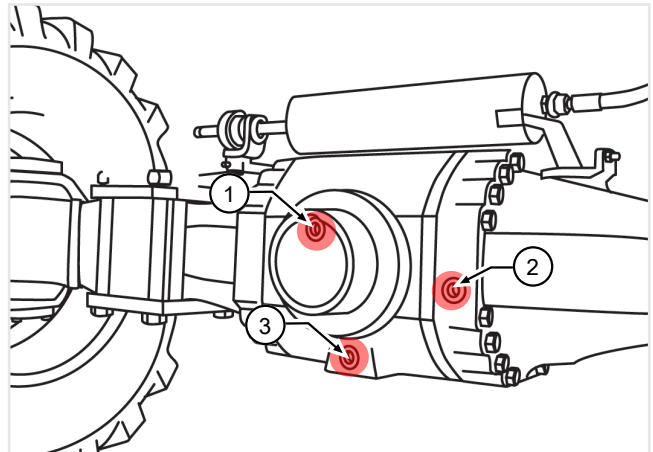


Figure: 150579-1

The filling caps, level and drain caps are located in the central part of the front and rear differential axle (fig. 150579-1):

**When checking the oil level it is necessary to:**

- Prepare the vehicle in the maintenance position.
- Place a container for the oil recovery under the level plug "2" to collect any leaks.
- Open the level cap "2". In the best conditions oil must seep out from the hole.
- If necessary, open the cap "1" and top up to make oil seep out from the level cap "2".
- Put back the caps and tighten down.

**When replacing the oil it is necessary to:**

- Prepare the vehicle in the maintenance position.
- Place a container for the oil recovery under the drain plug "3" to collect any leaks.
- Open the filling cap "1" and then the drain cap "3".
- Drain off all the oil.
- Close the drain plug "3".
- Load new oil from the filling cap "1", up to make oil seep out from the level cap "2".

Put back the caps and tighten down.

## 11.22 Hydraulic fittings tightening torques

### Inserts with 60° nose - BSP thread

Thread	1/18.28	1/4.19	3/8-19	1/2-14	5/8-14	3/4-14	1"-11	1"1/4-11	121/2-11
(N·m)	12-14	14-16	25-28	45-60	55-70	90-110	120-140	170-190	200-245

### Inserts with 60° nose - METRIC thread

Thread	10x1	12x1.5	14x1.5	16x1.5	18x1.5	22x1.5	26x1.5	28x1.5	30x1.5
(N·m)	12-14	13-15	15-18	25-28	27-30	50-60	60-75	80-100	110-130

### SERIES DIN RANGE „L“

Thread	12x1.5	14x1.5	16x1.5	18x1.5	22x1.5	26x1.5	30.2	36x1.5	45x1.5	52x1.5
(N·m)	13-15	15-18	25-28	27-30	50-60	30-75	85-105	120-140	170-190	190-230

### SERIES DIN RANGE „S“

Thread	14x1.5	16x1.5	18x1.5	20x1.5	22x1.5	24x1.5	30x2	36x2	42x2	52x2
(N·m)	15-18	25-28	27-30	43-54	50-62	60-75	90-110	125-145	170-190	200-245

# 11.23 Torque specifications - fasteners

## 11.23.1 Torque specifications - fasteners: Fine pitch

	Coefficient of friction	4.8		5.8		6.8		8.8		10.9		12.9	
		Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)
<b>M8</b>	0.10	9798	10.87	12248	13.59	14697	16.31	19596	21.75	27557	30.58	33069	36.70
	0.14	9080	13.53	11349	16.91	13619	20.29	18159	27.05	25536	38.04	30643	45.65
<b>M10</b>	0.10	15297	21.13	19121	26.41	22945	31.69	30594	42.25	43023	59.42	51627	71.30
	0.14	14175	26.27	17719	32.84	21263	39.41	28350	52.55	39867	73.89	47841	88.67
<b>M10</b>	0.10	16384	22.12	20480	27.66	24575	33.19	32767	44.25	46079	62.23	55295	74.67
	0.14	15222	27.80	19027	34.75	22833	41.70	30443	55.61	42811	78.20	51373	93.84
<b>M12</b>	0.10	22021	35.83	27526	44.79	33031	53.75	44041	71.67	61933	100.78	74320	120.94
	0.14	20406	44.53	25507	55.66	30609	66.79	40812	89.06	57391	125.24	68870	150.29
<b>M12</b>	0.10	23334	37.26	29167	46.57	35001	55.88	46667	74.51	65626	104.78	78751	125.74
	0.14	21669	46.70	27087	58.38	32504	70.06	43338	93.41	60945	131.36	73134	157.63
<b>M14</b>	0.10	31610	59.04	39513	73.80	47415	88.57	63220	118.09	88903	166.06	106684	199.27
	0.14	29346	73.92	36682	92.40	44019	110.89	58692	147.85	82535	207.91	99043	249.49
<b>M16</b>	0.10	42581	89.78	53227	112.23	63872	134.67	85163	179.56	119760	252.51	143712	303.02
	0.14	39588	113.06	49485	141.32	59382	169.59	79176	226.12	111341	317.98	133609	381.57
<b>M18</b>	0.10	51457	124.03	64322	155.03	77186	186.04	102914	248.06	144723	348.83	173668	418.59
	0.14	47752	155.02	59690	193.78	71628	232.53	95503	310.05	134302	436.00	161162	523.20
<b>M18</b>	0.10	55415	130.17	69269	162.72	83123	195.26	110830	260.35	155855	366.12	187026	439.34
	0.14	51578	164.67	64472	205.84	77366	247.01	103155	329.35	145062	463.15	174075	555.77
<b>M20</b>	0.10	65534	173.72	81918	217.16	98301	260.59	131068	347.45	184315	488.60	221178	586.32
	0.14	60886	218.17	76108	272.71	91329	327.26	121772	436.34	171243	613.61	205491	736.33

	Coefficient of friction	4.8		5.8		6.8		8.8		10.9		12.9	
		Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)
<b>M20</b>	0.10	70115	181.58	87643	226.97	105172	272.36	140229	363.15	197198	51.68	236637	612.82
	0.14	65319	230.55	81649	288.19	97979	345.82	130638	461.10	183710	648.42	220452	778.10
<b>M22</b>	0.10	81221	236.88	101526	296.10	121831	355.32	162442	473.76	228433	666.23	274120	799.48
	0.14	75534	298.75	94417	373.43	113301	448.12	151068	597.49	212439	840.22	254927	1008.27
<b>M22</b>	0.10	86164	246.02	107705	307.53	129246	369.04	172329	492.05	242337	691.94	290804	830.33
	0.14	80332	313.41	100415	391.76	120498	470.11	160664	626.82	225933	881.46	271120	1057.75
<b>M24</b>	0.10	98516	308.56	123145	385.70	147773	462.84	197031	617.12	277075	867.83	332490	1041.40
	0.14	91693	390.33	114617	487.92	137540	585.50	183387	780.67	257887	1097.82	309465	1317.38
<b>M24</b>	0.10	104079	319.62	130099	399.52	156119	479.43	208152	639.23	292723	898.92	351268	1878.71
	0.14	97096	408.12	121370	510.15	145644	612.18	194192	816.24	273083	1147.84	327699	1377.41
<b>M27</b>	0.10	127922	448.43	159903	560.54	191884	627.65	255845	896.87	359782	1261.22	431738	1513.46
	0.14	119185	569.67	148981	712.09	178778	854.51	238370	1139.34	335208	1602.20	402250	1922.64
<b>M30</b>	0.10	16818	623.80	201022	779.75	241226	935.70	321635	1247.60	452299	1754.43	542759	2105.32
	0.14	149957	795.14	187446	993.93	224936	1192.72	299914	1590.29	421754	2236.34	506105	2683.61



## 11.23.2 Torque specifications - fastners: Coarse pitch

	Coefficient of friction	4.8		5.8		6.8		8.8		10.9		12.9	
		Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)
<b>M3</b>	0.10	1220	0.54	1525	0.68	1830	0.82	2440	1.09	3431	1.53	4117	1.84
	0.14	1126	0.60	1407	0.83	1689	1.00	2252	1.34	3167	1.88	3800	2.26
<b>M3.5</b>	0.10	1638	0.84	2048	1.05	2457	1.26	3276	1.68	4608	2.36	5529	2.84
	0.14	1511	1.03	1889	1.28	2267	1.54	3023	2.05	4251	2.89	5101	3.47
<b>M4</b>	0.10	2115	1.25	2644	1.56	3173	1.88	4231	2.50	5950	3.52	7140	4.22
	0.14	1951	1.53	2439	1.91	2926	2.29	3902	3.06	5487	4.30	6584	5.16
<b>M5</b>	0.10	3462	2.46	4327	3.08	5192	3.70	6923	4.93	9736	6.93	11683	8.32
	0.14	3197	3.02	3996	3.78	4795	4.53	6394	6.04	8991	8.50	10789	10.20
<b>M6</b>	0.10	4875	4.24	6093	5.30	7312	6.35	9749	8.47	13710	11.92	16452	14.30
	0.14	4499	5.19	5624	6.48	6749	7.78	8998	10.37	12654	14.59	15184	17.51
<b>M7</b>	0.10	7135	6.97	8918	8.71	10702	10.45	14269	13.94	20066	19.60	24079	23.52
	0.14	6600	8.60	8250	10.76	9899	12.90	13199	17.21	18561	24.20	22274	29.04
<b>M8</b>	0.10	8947	10.20	11184	12.75	13421	15.30	17894	20.41	25164	28.70	30197	34.44
	0.14	8266	12.54	10332	15.67	12398	18.80	16531	25.07	23247	35.26	27897	42.31
<b>M10</b>	0.10	14245	20.11	17806	25.14	21367	30.16	28489	40.22	40063	56.56	48075	67.87
	0.14	13167	24.76	16459	30.95	19751	31.14	26335	49.52	37033	69.64	44440	83.56
<b>M12</b>	0.10	20767	34.43	25958	43.03	31150	51.64	41533	68.86	58406	96.83	70087	116.20
	0.14	19204	42.42	24005	53.03	28806	63.63	38408	84.84	54011	119.31	64814	143.17
<b>M14</b>	0.10	28390	54.77	35487	68.46	42585	82.15	56780	109.53	79847	154.03	95816	184.84
	0.14	26261	67.56	32827	84.45	39392	101.34	52522	135.13	73860	190.02	88632	228.03
<b>M16</b>	0.10	39242	85.14	49053	106.43	58863	127.72	78484	170.29	110369	239.47	132442	287.36
	0.14	36364	105.80	45455	132.26	54546	158.71	72729	211.61	102274	297.58	122729	357.09
<b>M18</b>	0.10	47533	117.48	59416	146.85	71300	176.22	95066	234.96	133687	330.41	160424	396.49
	0.14	43986	145.16	54983	181.45	65979	217.74	87972	290.32	123711	402.26	148453	489.92

	Coefficient of friction	4.8		5.8		6.8		8.8		10.9		12.9	
		Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)	Preload (N)	Tightening torque: (Nm)
<b>M20</b>	0.10	61238	166.08	76548	207.61	91857	249.13	122476	332.17	172232	467.11	206678	560.54
	0.14	56747	206.39	70934	257.98	85121	309.58	113494	412.78	159601	580.47	191522	696.56
<b>M22</b>	0.10	76305	227.22	95382	284.02	114458	340.82	152610	454.43	214608	639.05	257530	766.85
	0.14	70792	283.79	88490	352.74	106188	425.69	141584	567.58	199102	798.16	238923	957.80
<b>M24</b>	0.10	88232	287.16	110291	358.94	132349	430.73	176465	574.31	248154	807.63	297784	969.15
	0.14	81762	356.84	102202	446.05	122643	535.26	163524	713.68	229955	1003.61	275946	1204.33
<b>M27</b>	0.10	115779	420.40	144724	525.05	173668	930.06	231558	840.08	325628	1181.36	390753	1417.63
	0.14	107442	525.08	134302	656.35	161162	787.62	214883	1050.16	302179	1476.79	362615	1772.15
<b>M30</b>	0.10	141000	572.83	176249	716.03	211499	859.24	281999	1145.65	396561	1611.08	475873	1933.29
	0.14	130771	714.49	163463	893.11	196156	1071.73	261541	1428.97	367792	2009.49	441351	2411.39

## 12 Technical assistance service

Local Dealers can supply original spare parts as well as advice and instructions for their installation and use.

Use only original spare parts when they are required.

The use of non-original spare parts may cause damage to other parts of the vehicle. Customers are advised to purchase all original spare parts required only from an authorized Agent or Dealer.

**DIECI s.r.l.** does not consider itself liable for damage deriving from the use of non-original spare parts.

### 12.1 Spare parts supply

**DIECI s.r.l.** guarantees the supply of original spare parts or alternatives for 10 years from the date of the last model produced of the series concerned.

### 12.2 Assistance to owner / operator

In order to obtain a good service from your Dealer, please obtain of these fundamental data before contacting the service center:

1. Specify your name, address and telephone number.
2. Indicate the model and serial number of the machine chassis.
3. Indicate the date of purchase and the hours of operation.
4. Explain the nature of the fault.

Note that only DIECI Dealers can access the resources at DIECI site for customer service. Moreover, they are able to offer a variety of programs with regard to warranty, maintenance at a fixed price, safety checks, including tests

### 12.3 Technical Assistance Service address

#### Dieci Technical Assistance Service

Via E. Majorana, 2/4

42027 Montecchio Emilia (RE) ITALY

Tel. +39 0522 869611

Fax +39 0522 869744

service@dieci.com

# 13

## Problems diagnostics



### WARNING

The interventions for the elimination of faults can only be carried out by trained personnel.

Do not work on failures if the "Safety regulations", "Safe Working Procedures" and "MAINTENANCE" have not been read and understood before.



This symbol indicates that the trouble experienced may NOT be resolved without the intervention of a **DIECI** Service authorized workshop

## 13.1



### Engine

TROUBLE	CAUSE	SOLUTION	
It does not set in motion	Direction of travel lever engaged	Place the lever in neutral	
	Operator not properly seated in the driver's seat	Sit properly in cab	
	No fuel	Fill the tank	
	Battery cut-off switch disconnected	Connect the battery cut-off switch	
	Low Battery	Recharge the battery or replace it	
	Fuse failure	Replace the fuse	
	Other	Consult the Use and Maintenance manual of the engine	




## 13.2

### Hydraulic transmission system



TROUBLE	CAUSE	SOLUTION	
The vehicle does not go in any direction	Insufficient hydraulic oil level	Check the hydraulic oil level	
	Electronic accelerator entered (if installed)	Disconnect the electronic accelerator	
	The sensor built-in the seat does not report the presence of the operator	Sit properly at the driver's seat	
	The movement selection lever is not engaged	Engage the lever to the desired position	
	The outriggers are lowered (if installed)	Raise all outriggers fully up	
	Rear axle locked (if installed)	Release the axle	
	Parking brake in operation	Disengage the brake	

TROUBLE	CAUSE	SOLUTION	
	Electrical circuit failure	Repair the circuit	
	Hydrostatic transmission failure	Repair or replace the transmission	
	The ByPass valve for the machine towing was closed	Open the ByPass valve	
The vehicle loses speed	Hydraulic oil suction filter clogged	Remove the oil filter and replace it	
	Hydrostatic transmission failure	Repair or replace the transmission	
	Inching pedal failure	Check the correct operation of the pedal	

### 13.3 Brakes

TROUBLE	CAUSE	SOLUTION	
The vehicle does not brake	Lack of oil in the oil - brakes tank	Refill the tank and / or Purge the system	
	Loss of fluid from the circuit	Check for leaks	
	Brake discs worn	Replace the pads	
	Brakes pump failure	Repair or replace	
	Unsuitable fluid in the circuit or in the differential sump	Check the brake oil specifications indicated	

### 13.4 Steering wheel

TROUBLE	CAUSE	SOLUTION	
The machine runs sideways The wheels are not aligned	The wheels are not correctly aligned	Align them	
	Steering selection error	Put back the lever in a different steering mode	
	Control distributor failure	Repair or replace the distributor	
	Leakage from the steering wheel hydraulic cylinders	Replace the gaskets	

## 13.5 Telescopic boom

TROUBLE	CAUSE	SOLUTION	
The vehicle does not lift the load	They safety systems have activated	See the "Anti-tipping device" chapter	
	Electrical system failure	Check the fuses and electrical system	
	Hydraulic oil level in the tank insufficient	Top up	
	Relative hydraulic pump failure	Repair or replace the pump	
	Distributor low calibration	Check and re-calibrate the distributor	
	Lifting cylinders internal leak	Replace the gaskets	
The boom does not extend	"The safety systems have activated (Indicator light and audible alarm in operation)"	See the "Anti-tipping device" chapter	
The boom does not come down	"The safety systems have activated (Indicator light and audible alarm in operation)"	See the "Anti-tipping device" chapter	

# 14

## Error List

### 14.1

#### Error lists

Error codes lists	Additional information	
Errors List	7.2.2	Braking circuit errors list
	7.3.12.6	Anti-tipping device errors list
	7.6.5	Joystick error list
Brakes errors	7.2.2	Braking circuit errors list
Anti-tipping errors	7.3.12.6	Anti-tipping device errors list

## 14.2 Basket pre-arrangement error list \*



### NOTE

The Pre-arrangement for man baskets is an optional accessory.

### Alarms

CODE	DESCRIPTION
1	E2PROM error - Basket Kit Control unit MC2M
2	CRC error - Basket Kit Control unit MC2M
10	E2PROM Error - Sensor ACQ1 ch.A
11	Accelerometer Error 1 - Sensor ACQ1 ch.A
12	Accelerometer Error 2 - Sensor ACQ1 ch.A
13	Watchdog Error - Sensor ACQ1 ch.A
14	CAN communication Time-out Error - Sensor ACQ1 ch.A
15	Error for Boom angle below the minimum value entered in the table - ACQ1 ch.A sensor
16	Error for Boom angle above the maximum value entered in the table - ACQ1 ch.A sensor
20	E2PROM Error - ACQ1 ch.B sensor
21	Accelerometer Error 1 - Sensor ACQ1 ch.B
22	Accelerometer Error 2 - Sensor ACQ1 ch.B
23	Watchdog Error - Sensor ACQ1 ch.B
24	CAN communication Time-out Error - Sensor ACQ1 ch.B
25	Error for Boom angle below the minimum value entered in the table - ACQ1 ch.B sensor
26	Error for Boom angle above the maximum value entered in the table - ACQ1 ch.B sensor
30	Error for Boom extension sensor voltage below the minimum value allowed - ACQ1 ch.A sensor
31	Error for Boom extension sensor voltage above the maximum value allowed - ACQ1 ch.A sensor
32	Error for Boom extension below the minimum value entered in the table - ACQ1 ch.A sensor
33	Error for Boom extension above the maximum value entered in the table - ACQ1 ch.A sensor
34	Error for Boom extension sensor voltage below the minimum value allowed - ACQ1 ch.B sensor

CODE	DESCRIPTION
35	Error for Boom extension sensor voltage above the maximum value allowed - ACQ1 ch.B sensor
36	Error for Boom extension below the minimum value entered in the table - ACQ1 ch.B sensor
37	Error for Boom extension above the maximum value entered in the table - ACQ1 ch.B sensor
40	Error for Angle ch.A and Angle ch.B too high Differential - ACQ1 ch.A Sensor
41	Error for Extension Differential ch.A and Angle Extension ch.B too high - ACQ1 ch.A Sensor
42	Outriggers Microswitch Signal Error - inconsistent outriggers microswitch signals
43	Closed boom microswitch signal error - Inconsistent closed boom microswitch signals
44	Error for low boom microswitch signal - Inconsistent low boom (small area) microswitch signals
50	Lifting Directional Error - Inconsistent drive and directional lifting
51	Extension Directional Error - Inconsistent drive and directional extension
52	Tilting Directional Error - Inconsistent drive and directional tilting
53	Services Directional Error - Inconsistent drive and directional services
60	Lifting Signal Error - Cab Joystick
61	Tilting Signal Error - Cab Joystick
62	Extension Signal Error - Cab Joystick
63	Services Signal Error - Cab Joystick
70	Error for Pedal ch.A and Pedal ch.B Differential too high - Accelerator Pedal Sensor
71	Error for Pedal ch.A Signal below the minimum value allowed - Accelerator Pedal Sensor
72	Error for Pedal ch.A Signal above the minimum value allowed - Accelerator Pedal Sensor
73	Error for Pedal ch.B Signal below the minimum value allowed - Accelerator Pedal Sensor
74	Error for Pedal ch.B Signal above the maximum value allowed - Accelerator Pedal Sensor



CODE	DESCRIPTION
80	Error for stabilized 15V voltage output - Basket Kit MC2M control unit
81	Error for stabilized 5V voltage output - Basket Kit MC2M control unit

## Warnings

CODE	DESCRIPTION
1	No deadman consent
2	Movements stop for SARL alarm
3	Movements lock for Winch Overload alarm
5	ACQ angle channels inconsistency
6	ACQ extension channels inconsistency
7	Movement not allowed by the table
8	Lifting slowdown for angle values greater than a certain value
9	Electric movements slowdown for SARL pre-alarm
10	Movement stop for vehicle not stabilized
11	Movement stop for small area working condition
12	Equipment not recognized
13	The enable from Remote control is missing
14	Movement lock for Recover from cab working condition
15	Movement Stop for Danfoss Lifting Directional alarm
16	Movement Stop for Danfoss Lifting Module alarm
17	Movement Stop for Danfoss Extension Module alarm
18	Bypass key use not allowed
20	Movements stop for Forks equipment selected
21	Movements stop for Bucket equipment selected
22	Movements stop for Winch equipment selected
23	Movements stop for Basket equipment selected
24	Movements stop for rear transverse tipping
60	Movements stop for Danfoss Lifting module internal error
61	Movements stop for Danfoss Lifting module Directional error
62	Movements stop for Danfoss Lifting module Tension error

CODE	DESCRIPTION
63	Movements stop for Danfoss Extension module internal error
64	Movements stop for Danfoss Extension module Directional error
65	Movements stop for Danfoss Extension module voltage error
69	Movements stop for Danfoss Services module internal error
70	Movements stop for Danfoss Services module Directional Error
71	Movements stop for Danfoss Services module Voltage Error
72	Movements stop for Danfoss Tilting module internal error
73	Movements stop for Danfoss Tilting module directional error
74	Movements stop for Danfoss Tilting module voltage error
80	Power voltage error
86	Sensors error

# 15 Cleaning

Cleaning the vehicle and all its components is fundamental for it to be kept in proper working order.

## 15.1 Machine cleaning

Proceed as follows for a correct cleaning process:

- Switch the engine off, remove the ignition key and wait until the various components cool down.
- Wear the suitable protective clothing (gloves, masks, overalls, etc.).
- Do not use flammable liquids, acids or products that may chemically attack the vehicle components.
- Use water to soften dirt that sticks to the surface.
- Ask your **DIECI** dealer for touch-up paint to repair minor defects in the vehicle bodywork.
- Check that all the safety stickers are present. Replace any that have been lost or removed for cleaning purposes.
- Use a pressure washer to clean the external part of the vehicle and the engine compartment, bearing the following in mind:
  - Make sure the top-up caps (radiator, oil tank, fuel tank, etc.) are closed well.
  - Protect the control boxes and connectors from water infiltrations.
  - Do not operate with a pressure and water temperature that exceeds 100 bar and 80°, respectively.
  - Hold the washer nozzle at a minimum distance of 40 cm from the relative surface.
  - Do not direct the jet at any single point but wash with wide strokes.
  - The inside of the vehicle is delicate and cannot be cleaned with a pressure washer.

### Electrical components

- If a pressurized jet is used, try not to wet the electrical components, such as the alternator and the starter motor.
- If water accidentally falls into the electrical system, it could cause the vehicle to malfunction.
- Do not use water or steam to clean the electrical system, sensors and connectors.

### Mechanical Components

- Do not clean the moving elements or hot surfaces, allow all parts to cool as a temperature change could damage them.

## 15.2 Glasses cleaning

- The cab windows, lights and rear view mirrors must be washed often with soapy water.
- After washing has been completed, dry thoroughly; do not leave any stains or marks which may limit or obstruct the driver's visibility.

## 15.3 Cleaning the cab

- Clean soft upholstery in the cab with a cloth that has been dipped in a solution of water and detergent and then thoroughly wrung.
- The driver's seat and the floor must be cleaned with a vacuum cleaner and/or a stiff brush. If necessary, use a damp cloth to remove any stubborn stains.
- Clean the seat belt with a sponge that has been soaked in hot soapy water, and let it dry on its own.
- Fabric-covered seats must be cleaned with a stiff brush or vacuum cleaner. Plastic seats must be cleaned with a damp cloth.



### WARNING

#### Pay attention to electrical components.

Do not use water jets inside the cab.



### WARNING

Do not use products containing alcohol to clean the interior lining of the cab.

## 15.4 Safety stickers cleaning



### ATTENTION

To ensure proper interpretation verify that they are in the correct position and that they are always kept clean.

Clean the safety stickers when they are dirty, covered with mud, concrete or debris.



## WARNING

**It is absolutely forbidden to clean the messages on the vehicle and equipment using solvents or gasoline.**

The stickers may become discolored. The stickers in addition to those of care and safety must always be treated in the same way.

---

# 16

## Lifting the vehicle



### DANGER

**Always check the good condition of the anchors (ropes, chains, wedges, etc...).**

Make sure that the lifting equipment is adequate for the weight of the vehicle to be lifted.

**NOTE!** The weight and dimensions of the vehicle are shown in the “Technical data” chapter; check the overall dimensions for the maximum and minimum height values from the ground and the weight allowed.

The vehicle is fitted with lifting points, marked by special symbols (fig. 150522-1).

Attach the ropes at the points indicated in the figure, paying utmost attention during the lifting phases. Slowly proceed with the lifting.

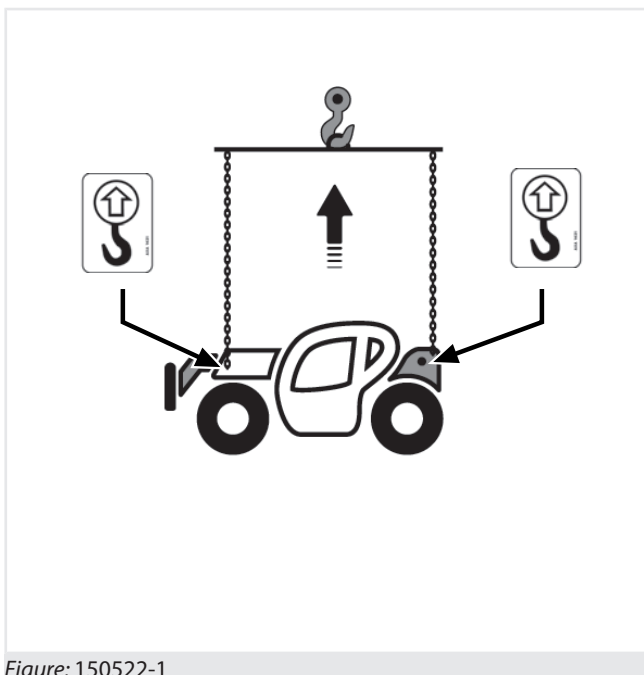


Figure: 150522-1



### DANGER

Before lifting the vehicle, make sure no unauthorized personnel are in the surrounding area.



### ATTENTION

Lifting cables with a minimum unit capacity of 6 tons (13220 lb) are required.

Before lifting the vehicle, make sure to:

- Remove any attachments installed on the vehicle.
- Retract and lower the telescopic boom completely.
- Engage the parking brake, place and the movement selection lever at “N” and switch off the vehicle.
- Close all windows and the cab door.

17

# Transporting the vehicle on a trailer



**WARNING**

Always check the good condition of the anchors (ropes, chains, wedges, etc...).

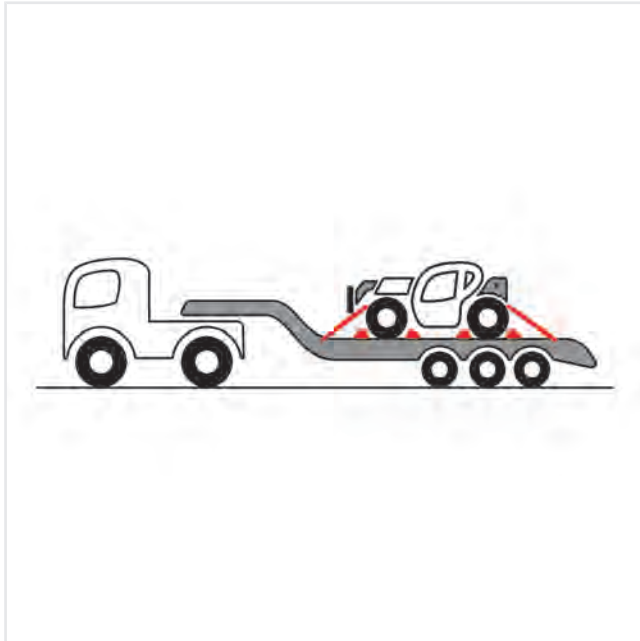


Figure: 150526-1

**NOTE!** The weight and dimensions of the vehicle are shown in the “Technical data” chapter; check the overall dimensions for the maximum and minimum height values from the ground and the weight allowed.

Pay attention to the following when loading the vehicle onto a trailer:

- Before using ramps or trailers to load the vehicle on, remove any mud, ice or oil that could cause accidents.
- Check that the axle and the transport vehicle can withstand the overall weight of the vehicle and any loaded equipment.
- Check the overall dimensions of the vehicle for minimum and maximum heights from the ground and the weight allowed.
- Carefully handle the vehicle onto the transport vehicle.
- Make sure local regulations are observed when transporting the vehicle on public roads.



**DANGER**

When loading or unloading a vehicle from a transport vehicle, there is always the risk of the vehicle overturning sideways; therefore, have another person on the ground to control the operations.

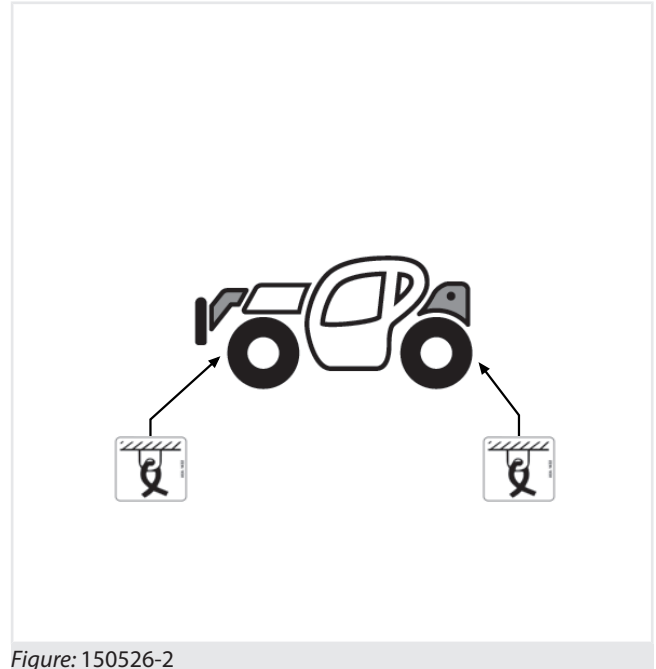


Figure: 150526-2

Take the following precautions when loading or unloading a vehicle:

1. Choose solid and level ground.
2. Remove any attachments installed on the vehicle.
3. Lower and fully retract the telescopic boom
4. Use a platform or a ramp.
5. Always select the slowest speed.
6. Load the vehicle on to the transport vehicle, making sure that the ramps are positioned properly and safely.
7. Once the vehicle is in a safe position, switch the engine off and engage the parking brake.
8. Close all windows and the cab door.
9. Anchor the vehicle to the transport vehicle with chains or cables through the relative hooks (fig. 150526-2).
10. Apply wedges to the front and rear wheels of the transport vehicle.

# 18

## Storing the vehicle

### 18.1

#### Long period of inactivity

If the vehicle must be stored for a long period of time (over a week), certain precautions must be complied with to protect it:

- Clean the vehicle.
- Lubricate all the greasers.
- Check the tires and inflate them to the recommended pressure.
- Clean the fuel system and change the filter cartridges.
- Store any equipment.
- Use the battery cut-off switch to deactivate the electrical circuit.
- Realign and lower all the mobile parts of the vehicle completely.
- Close and lock all the windows.
- Close and lock the door.

### 18.2

#### Long period of inactivity

If the machine must be stored for a long period (more than two months), certain precautions must be complied with to protect it:

- Clean the vehicle.
- Touch up the paint where necessary to prevent rust.
- Lubricate all the greasers.
- Check whether any parts are worn or damaged and replace them, if necessary.
- Check the tires and inflate them to the recommended pressure.
- Drain the oil from the engine and replace it with new oil.
- Clean the fuel system and change the filter cartridges.
- Empty the fuel tank as usual and fill it with ten liters of special fuel for prolonged inactivity. Run the engine for ten minutes so the new solution can distribute evenly.
- Store any equipment.

- Use the battery cut-off switch to deactivate the electrical circuit.
- Realign and lower all the mobile parts of the vehicle completely.
- Apply a layer of light grease on the uncovered rods of the hydraulic cylinders.
- Cover the exhaust opening.
- Close and lock all the windows.
- Close and lock the door.

### 18.3

#### Restarting the vehicle

Preparing the vehicle after a long period of inactivity:

- Inflate the tires to the correct pressure.
- Remove the jack stands from under the axles.
- Fill the fuel tank.
- Check the radiator coolant level.
- Check the level of the various oils.
- Fit a fully charged battery.
- Remove the cover of the exhaust pipe.
- Remove the layer of grease on the exposed cylinder rods.
- Start the engine and check that all the controls work properly.
- Let the engine run for a few minutes.
- Verify the efficiency of the brake system.

## 19

## Waste disposal

- Waste material should not be dispersed in the environment but rather disposed of appropriately. Used lubricants, batteries, rags dirty with grease, brake pads etc. should be handed over to specialized companies authorized to dispose of polluting waste.
- Improper waste disposal poses a threat to the environment. The following are potentially dangerous waste: lubricants, fuel, cooling, filters and batteries.
- Do not spill or pour waste onto the ground, into the sewers or into water beds.
- Contact your local authority or collection centers for information for how to recycle or dispose of waste properly.

## 19.1

## Ecological considerations

A few helpful recommendations are listed below. Learn about current legislation in force in your country.

Ask suppliers for information about lubricating oils, fuels, antifreeze products, detergents, etc., about their effects on people and on the environment as well as on information regarding the regulations to be observed when using, stocking and disposing of such products.

- Do not refill the tanks using unsuitable jerry cans or pressurized combustible fueling systems as they may cause leaks and loss of significant amounts of liquid.
- Modern lubricating oils contain additives. Do not burn contaminated combustible oils and/or oils used in conventional heating systems.
- Take care not to spill used engine cooling fluids, engine and transmission lubricating oils, hydraulic oil, brake oil etc. while pouring or draining them. Store them safely and, when it is time, dispose of them in compliance with current legislation or with local facilities.
- Modern antifreeze liquids and their solutions, such as antifreeze and other additives should be replaced every two years. Make sure such liquids are not absorbed by the soil; they should be collected and disposed of appropriately.
- Do not intervene directly with the air conditioning systems (Optional), by opening them. These systems contain gas which must not

be released into the atmosphere. Contact your dealer or an expert who has the necessary special equipment and who would, in any case, have to refill the system.

- Immediately repair any leaks or faults in the cooling or engine hydraulic systems.

## 19.2

## Protect the environment

It is illegal to pollute sewers, water sources or soil. Use only authorized dumping grounds centers, including the areas designated by the local authorities or workshops equipped with the necessary tools for the disposal of used oils. If in doubt, contact your local authority for relevant instructions.

## 20 Demolition

To demolish the vehicle or the equipment, dismantle all components and keep the different types of materials separate for sending to the relative collection centers.

The following types of materials may be present:

- Ferrous materials (carpentries and mechanical components)
- Plastic materials (gaskets, belts, protections)
- Electric materials (cables, windings and similar)
- Oils and lubricants (hydraulic oil, reduction gear lubricants, lubricating greases)



# 21 Wiring diagram

## 21.1 Components legend

Name	Sheet	Function
	11	Rotating light
	10	Warning switch
A134	12	Condenser fan reversing control unit
A151	11	Radio
A219	12	A/C Control unit
A241	7	Anti-tipping control unit
A265	10	Flasher control unit
A283	4	Multi link
A565	1	Preheating control unit
B130	3	Seat micro
B138	2	Inching microswitch
B139	10	Stop lights microswitch
B181	3	Transmission disconnect microswitch
B182	12	Temperature probe
B192	5	Brakes oil level sensor
B205	12	Air conditioning system pressure switch
B234	6	Brake pedal pressure switch
B504	6	Left front lowered outrigger microswitch
B512	5	Fuel level switch
B513	5	Hydraulic oil filter
B534	3	Engaged gear microswitch
B535	3	2nd gear pressure switch
B537	5	Water thermistor
B538	5	Engine oil low pressure pressure-switch
B542	5	Servo brake accumulator pressure switch
B550	6	Right front lowered outrigger microswitch
B554	3	Negative brake pressure switch
B558	6	Front axle alignment proximity switch
B559	7	Axle load cell sensor
B560	6	Rear axle alignment proximity switch
B561	1	Filter thermistor
B585	5	Speed sensor
B602	6	Left front closed outrigger microswitch
B603	6	Right front closed outrigger microswitch
B643	7	Closed boom microswitch
B762	8	Closed boom microswitch

Name	Sheet	Function
B763	8	30° boom microswitch
E102	11	Right front work light
E103	11	Right rear work light
E104	11	Left front work light
E118	11	Left rear work light
E147	11	Overhead Light
E522	10	Right rear headlight
E524	10	Plate light headlight
E526	10	Left front headlight
E548	10	Left rear headlight
E551	10	Right front headlight
F1	6	Outriggers consent relay
F10	3	Fuse +15 services lighting switches
F11	10	Front rh and rear lh sidelight fuses
F12	10	License plate light and headlights fuse
F14	7	Anti-tipping system fuse
F15	2	Fuse +15 radio control and rotating light switch
F16	10	Brake lights microswitch fuse
F17	11	Work lights switch fuse
F18	2	Fuse +15 radio control switch
F184	12	Heating selector fuse
F19	2	Fuse +15 basket key
F2	10	Fuse +30 warning
F20	13	Electric window relay fuse
F21	13	Fuse not used
F22	11	Work lights relay fuse
F23	10	Fuse +30 stalk switch - lights and overhead light switch
F24	13	Optional pneumatic braking relay fuse
F25	5	Fuse + 30 alga tool
F26	13	Fuse not used
F27	3	Reverse gear light and buzzer fuse
F28	8	30° boom consent relay fuse
F29	8	Basket warning light consent relay fuse
F3	10	Low beam lights fuse
F31	3	Transmission disconnect fuse
F32	8	Danfoss udc supply relay fuse
F34	13	Optional supplies fuse
F35	10	FRONT WINDOW WIPER MOTOR FUSE
F36	11	Fuse + 15 rear window wiper-radio-antenna
F37	13	Fuse not used
F38	9	Trailer and rear sv selector button fuse
F39	5	Fuse +15 sensors
F4	11	Power socket fuse

Name	Sheet	Function
F40	9	Boom head fuse
F41	2	Fuse +15 mushroom-head emergency pushbutton
F42	2	Fuse +15 anti restart - gear shifter lever supply
F43	2	Inching microswitch fuse
F5	10	High beam lights fuse
F50	7	Fuse vp mc2m
F51	12	Evaporator fan fuse
F540	1	General fuse
F6	13	Fuse not used
F693.1	1	Start fuse 50a
F693.2	1	Pre heating fuse
F7	11	Work lights relay fuse
F755	1	General fuse 2
F8	10	Horn relay fuse
FG1	1	Alternator fuse
G0	1	Battery
G529	1	Alternator
K1	2	Starter anti-restart control unit
K10	6	Outriggers consent relay
K11	2	Startup from basket relay
K12	1	Services consent relay
K13	6	Leveling from anti-tipping consent relay
K14	6	Extension relay consent relay
K15	3	Neutral gear relay
K153	1	Services relay
K16	3	Timer control unit relay
K17	1	Engine stop relay
K18	13	Optional pneumatic braking relay
K19	11	Left rear work light relay
K2	3	Timer control unit
K20	13	Relay not used
K21	8	Basket warning light consent relay
K22	8	30° boom consent relay
K23	8	Danfoss udci supply relay
K24	3	Transmission disconnect relay
K25	8	2nd pump and deadman relay
K26	8	Low boom relay
K27	8	30° boom relay consent relay
K28	8	Aux pump sv relay
K29	3	Reversing lights and reversing buzzer relay
K3	13	Electric window relay
K30	3	Forward gear relay
K302	3	Negative neutral signal relay

Name	Sheet	Function
K31	3	Reverse gear relay
K4	13	Electric window relay
K5	10	Horn relay
K530	1	Startup relay
K547	1	Thermostarter relay
K6	11	Front work light relay
K631	1	Filter preheating relay
K7	13	Relay not used
K8	10	High beam lights relay
K9	10	Low beam lights relay
M112	10	Front window wiper
M117	10	Front window washer
M119	11	Rear window washer
M122	11	Rear wiper motor
M129	12	Heating motor
M133	12	Condenser fan
M152	13	Pneumatic seat
M179	13	Electric window
M195	12	Condenser fan 2
M520	1	Startup motor
M521	12	Air conditioned compressor
P101	1	Instrument
P149	11	Right diffuser
P150	11	Right diffuser
P296	2	Kubota glow plug warning light
P328	2	Iveco glow plug warning light
P502	10	Reverse gear buzzer
P503	10	Horn
Q131	9	Rear solenoid valves
Q507	6	Left front outrigger descent solenoid valve
Q508	6	Left front outrigger lifting solenoid valve
Q509	6	Left front outrigger descent solenoid valve
Q514	6	Outrigger general solenoid valve
Q515	6	Right front outrigger lifting solenoid valve
Q516	3	1st manual gear SV
Q518	6	Left leveling SV
Q519	6	Right leveling SV
Q521	3	2nd manual gear sv
Q523	3	Parking brake SV
Q527	3	Forward gear SV
Q528	3	Reverse gear SV
Q536	1	Engine stop
Q597	9	Hydraulic power reduction sv.

Name	Sheet	Function
R218	12	A/C potentiometer
R233	7	Accelerator pedal
R510	5	Glow plugs resistor
R533	1	Filter pre-heater
S0	1	Battery isolation switch
S105	6	Outriggers consent button
S106	11	Rear work light switch
S109	6	Leveling button
S110	3	Manual gear shift button
S111	9	Boom head solenoid valve switch
S113	6	Left front outrigger
S114	6	Right front outrigger
S115	11	Rotating light switch
S120	11	Rear window wiper and washer switch
S121	3	Parking brake switch
S126	12	Fan speed selector
S131	9	Rear SV selector
S132	9	Trailer button
S136	6	Wheels alignment button
S137	3	Gear switch
S140	10	Light stalk - window wiper
S141	1	Starter panel
S143	2	Remote control switch
S145	12	A/C switch
S146	7	Selector key for operations restoring
S148	11	Front work lights switch
S169	9	Boom suspension switch
S171	9	Fans reversing button
S180	13	Electric window button
S194	2	Low idle up button
S203	10	Lights switch
S204	1	Mushroom-head emergency pushbutton
S206	11	Boom work light switch
S227	2	Accelerator switch
S243	7	Work mode switch
S295	2	Regeneration switch
S303	6	Quick coupling button
W177	11	Antenna
X165	11	Electrical socket

# 21.2 Wiring diagram sheets

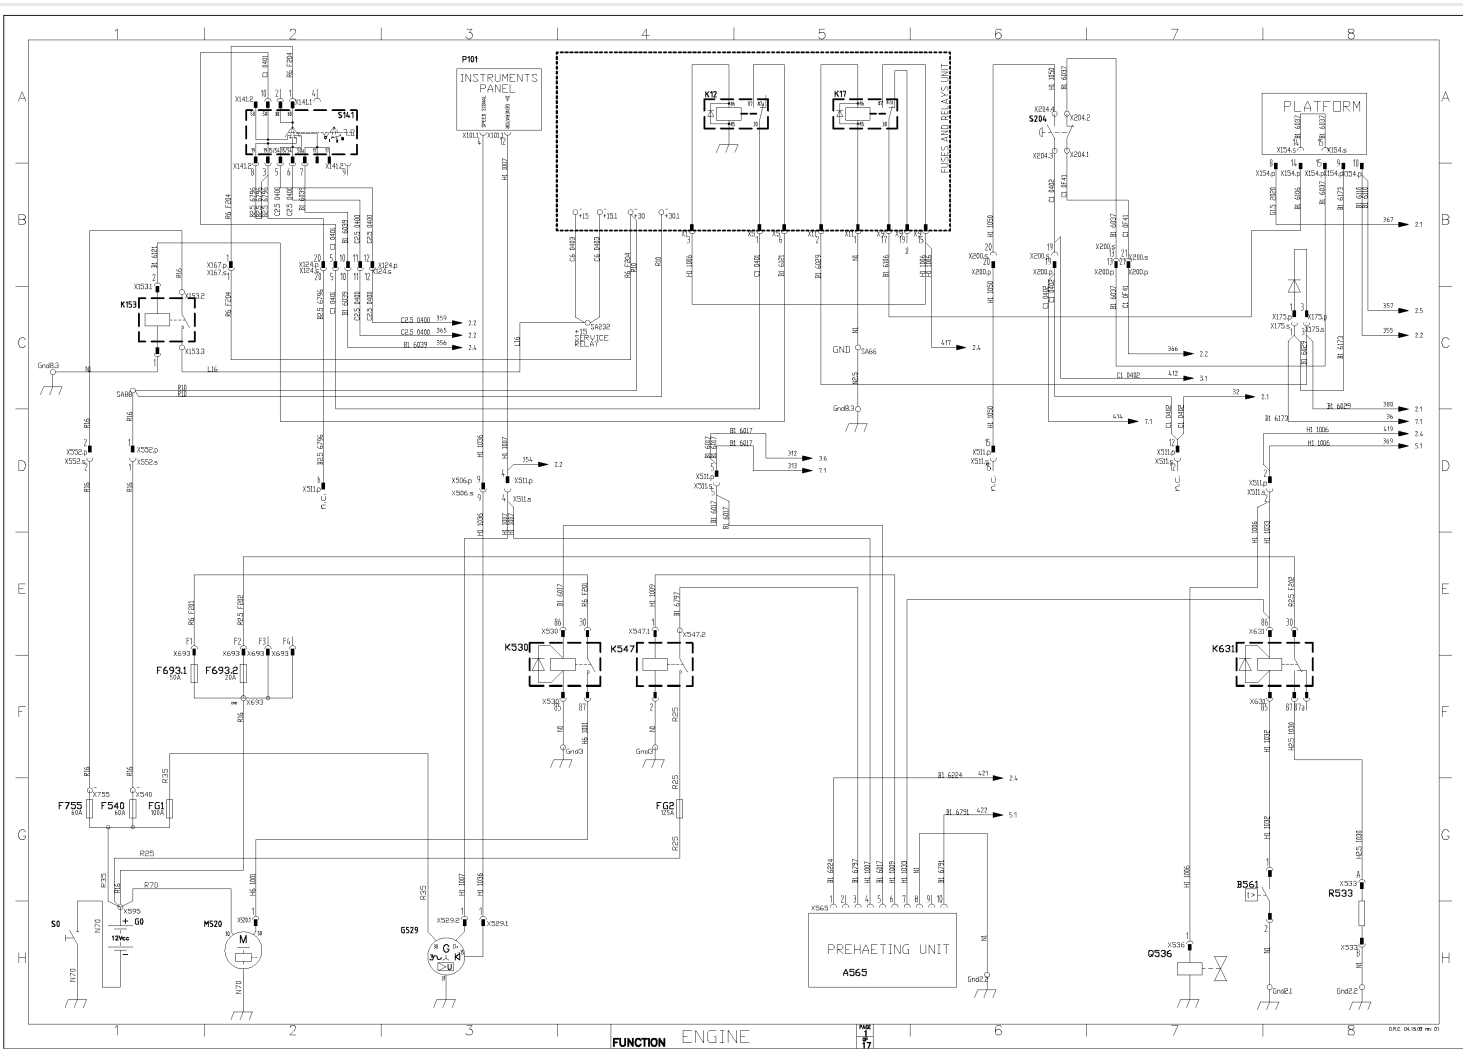


Figure: Wiring diagram - SIRZ - 20160503\_Page\_01

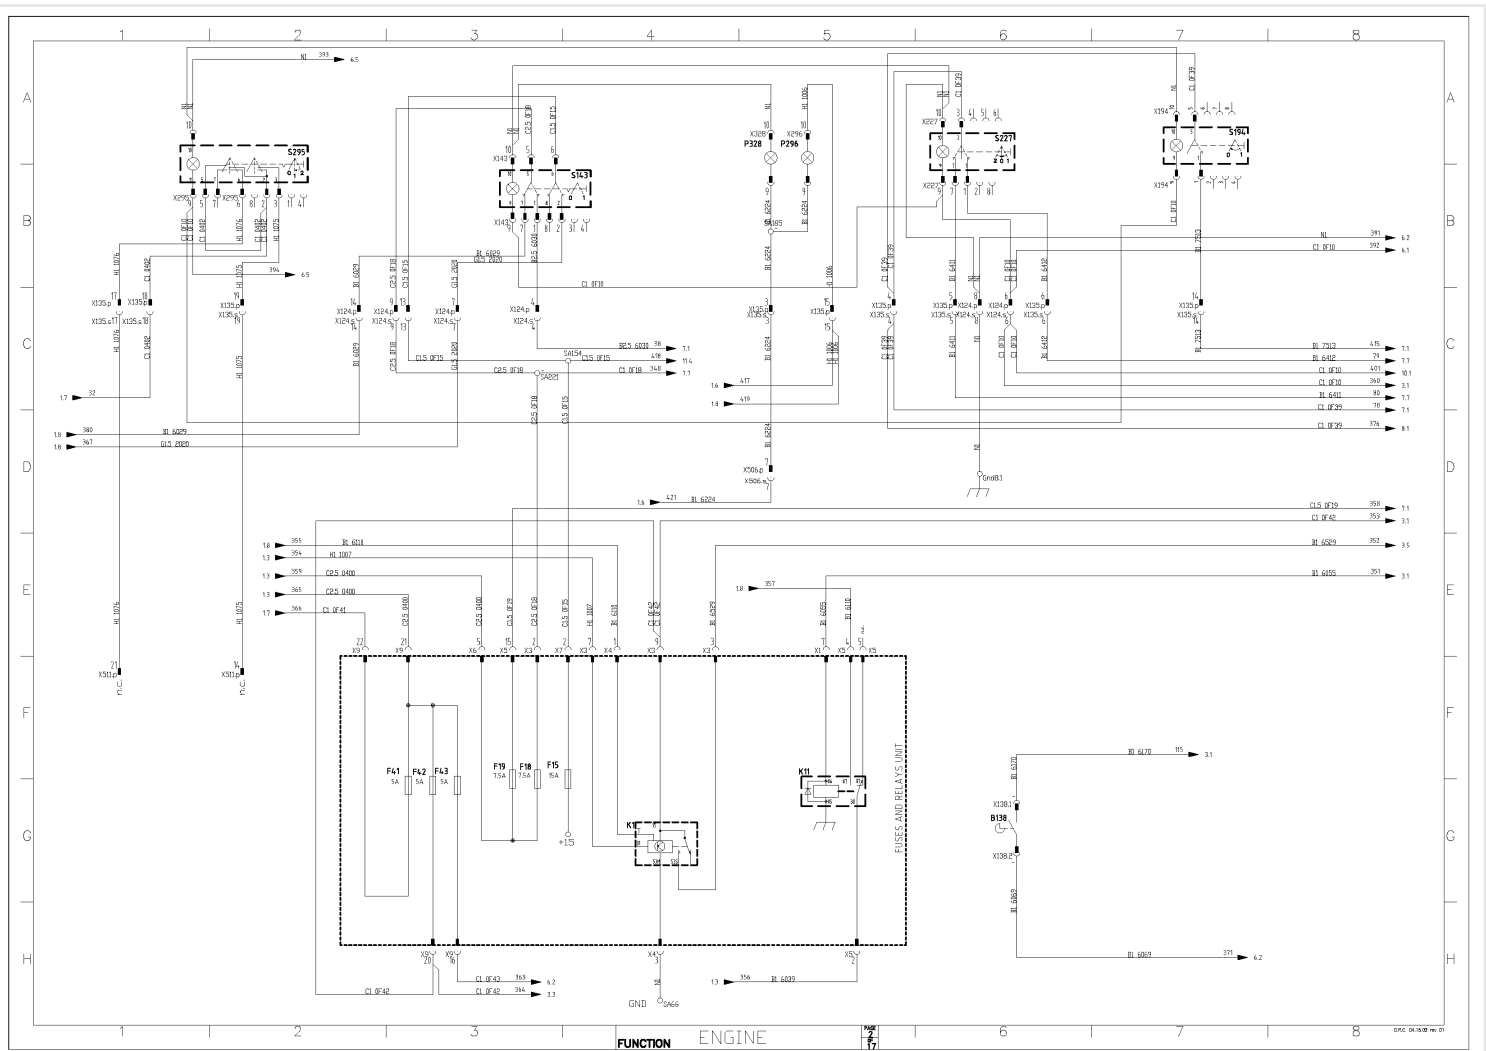


Figure: Wiring diagram - SIRZ - 20160503\_Page\_02

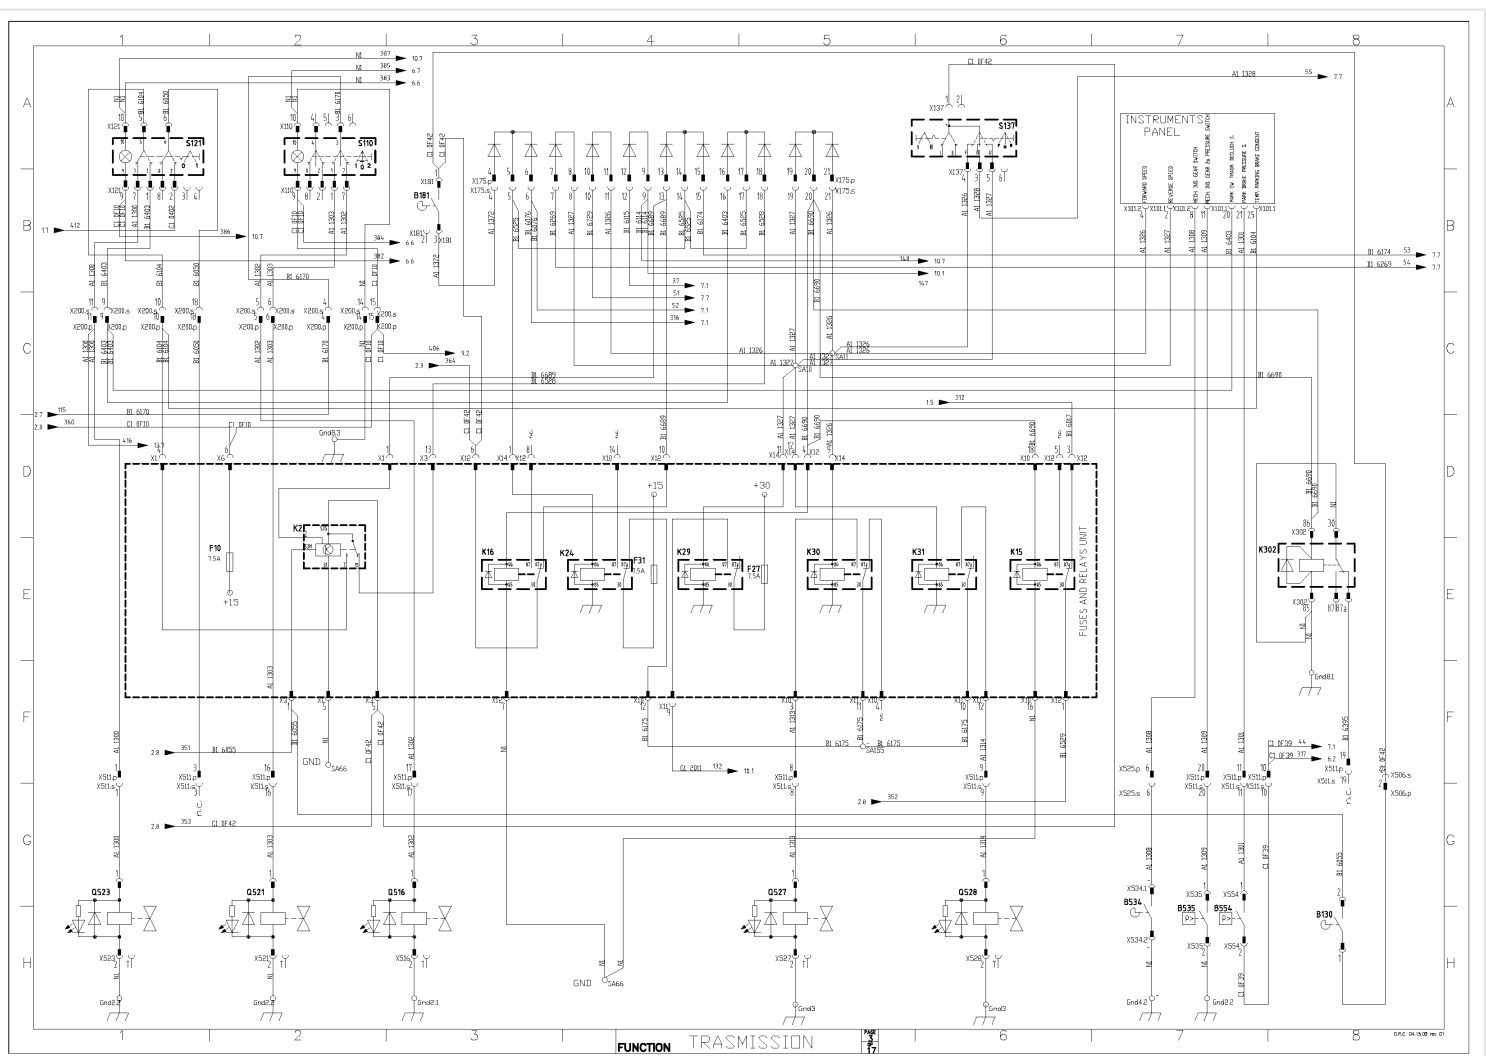


Figure: Wiring diagram - SIRZ - 20160503\_Page\_03



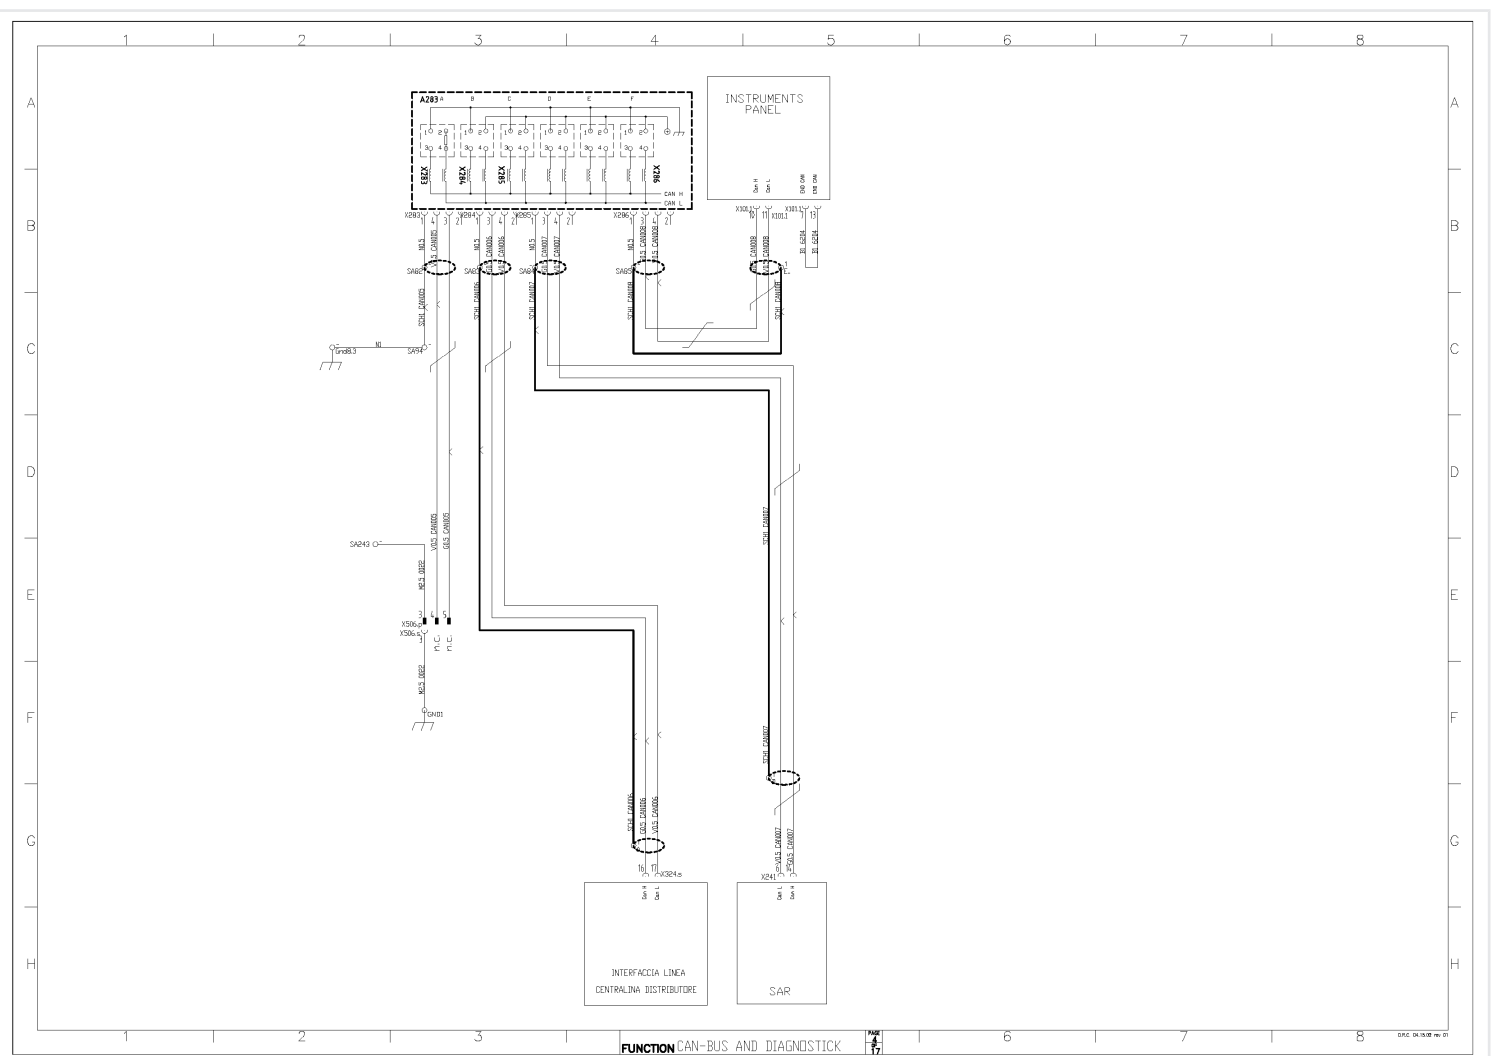


Figure: Wiring diagram - SIRZ - 20160503\_Page\_04

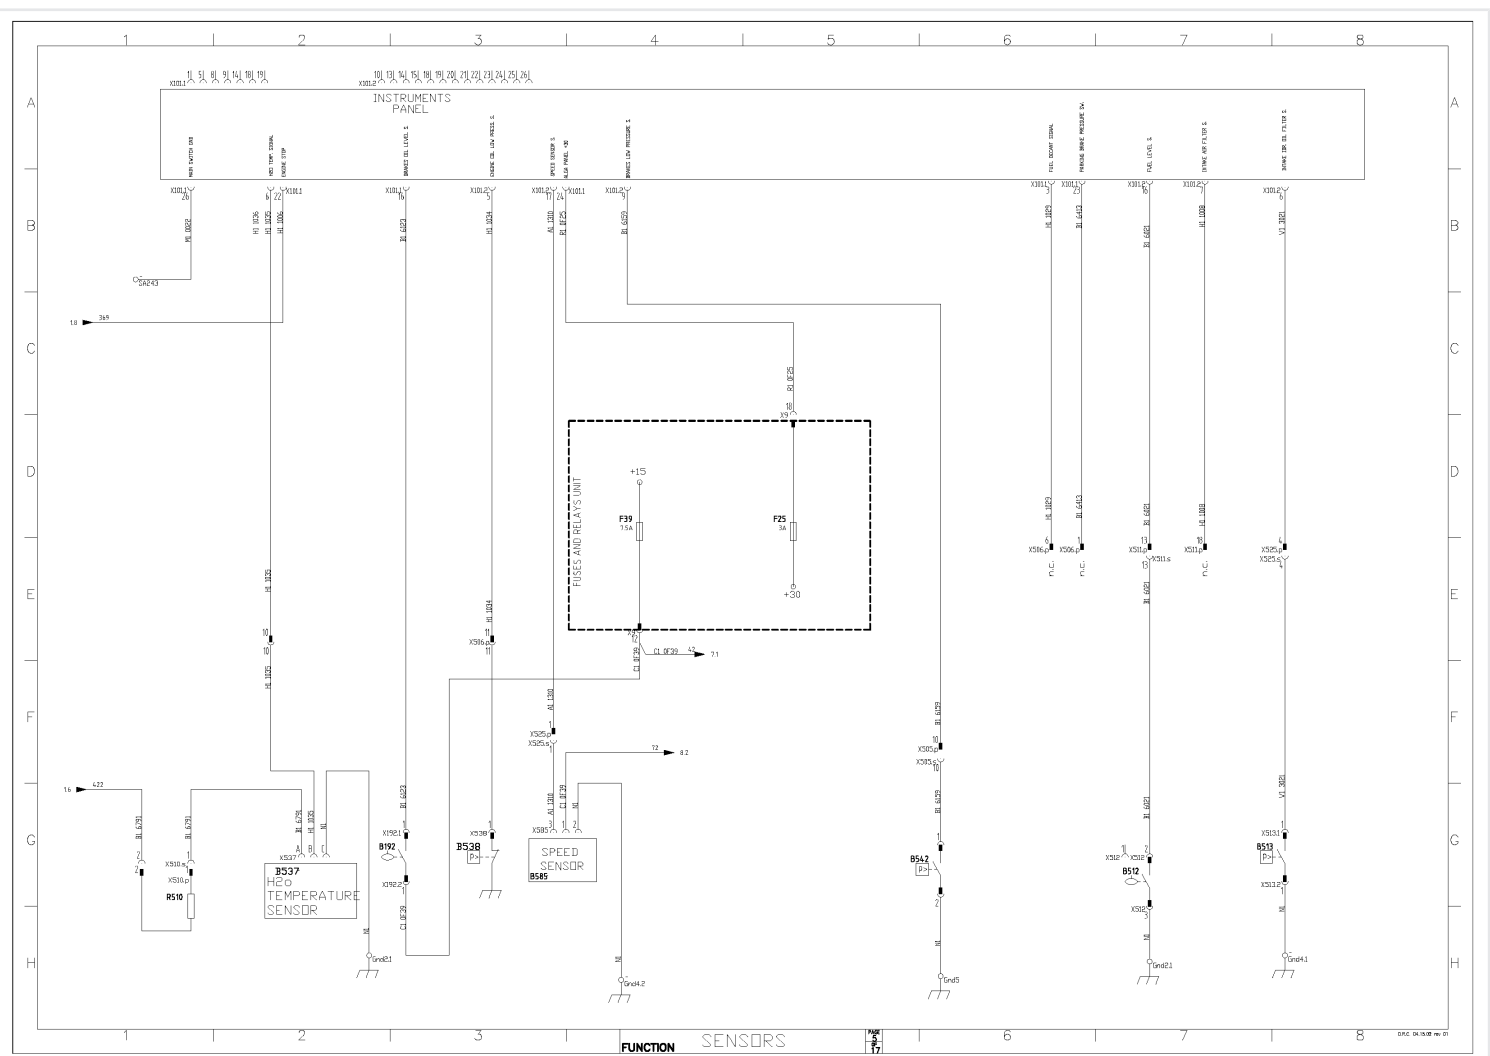


Figure: Wiring diagram - SIRZ - 20160503\_Page\_05

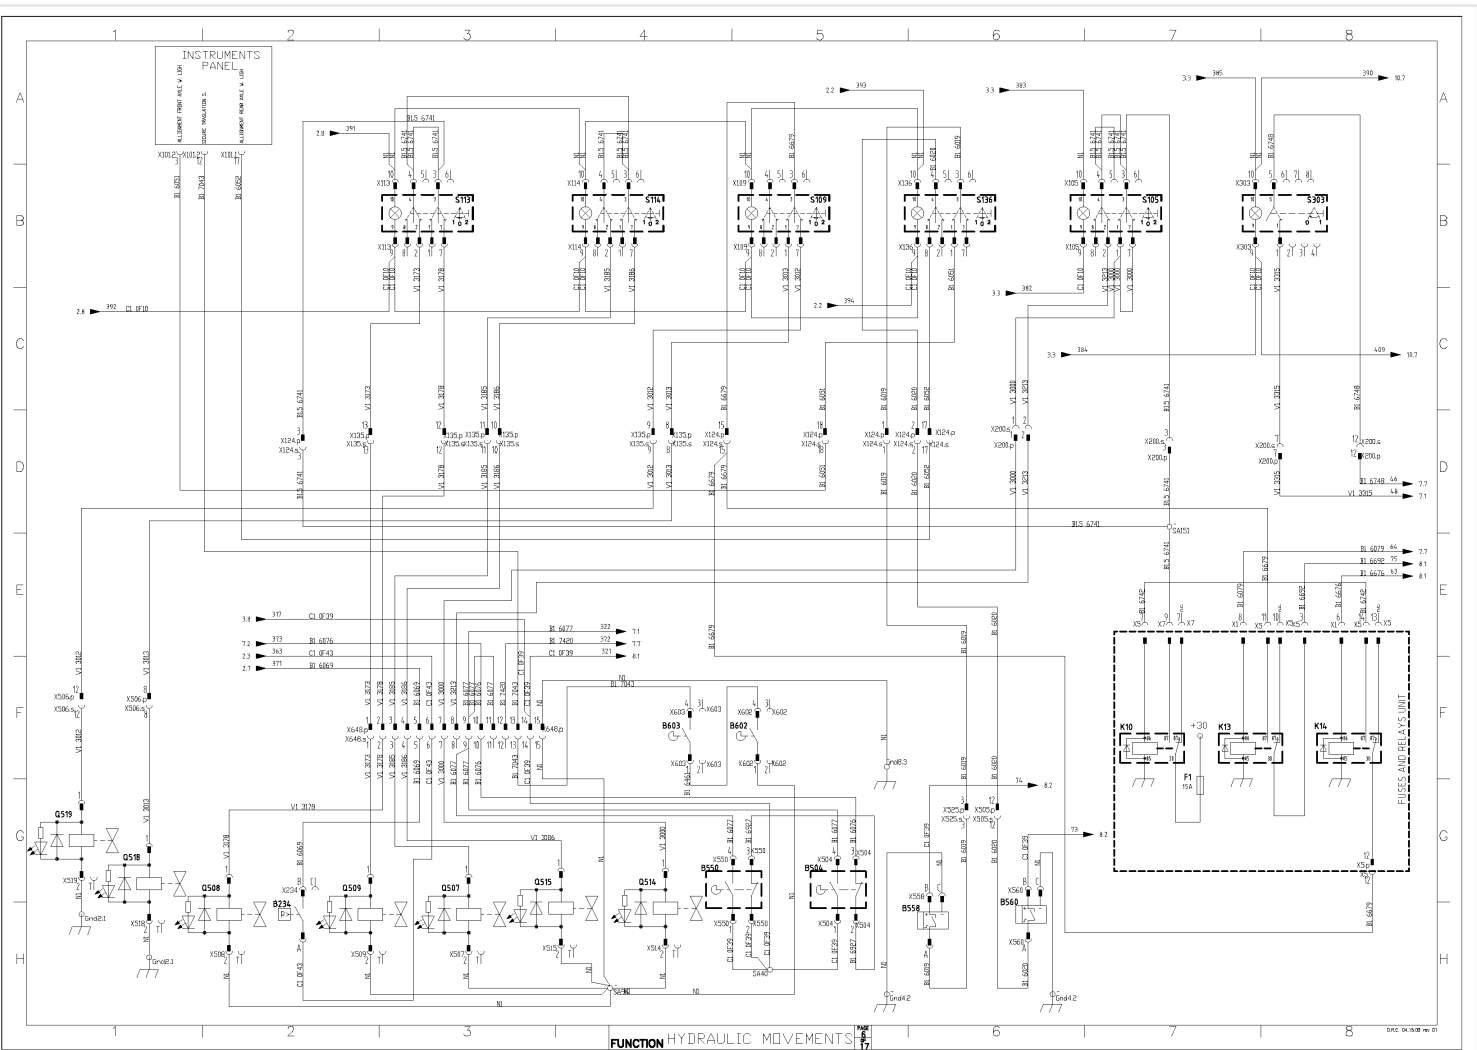


Figure: Wiring diagram - SIRZ - 20160503\_Page\_06

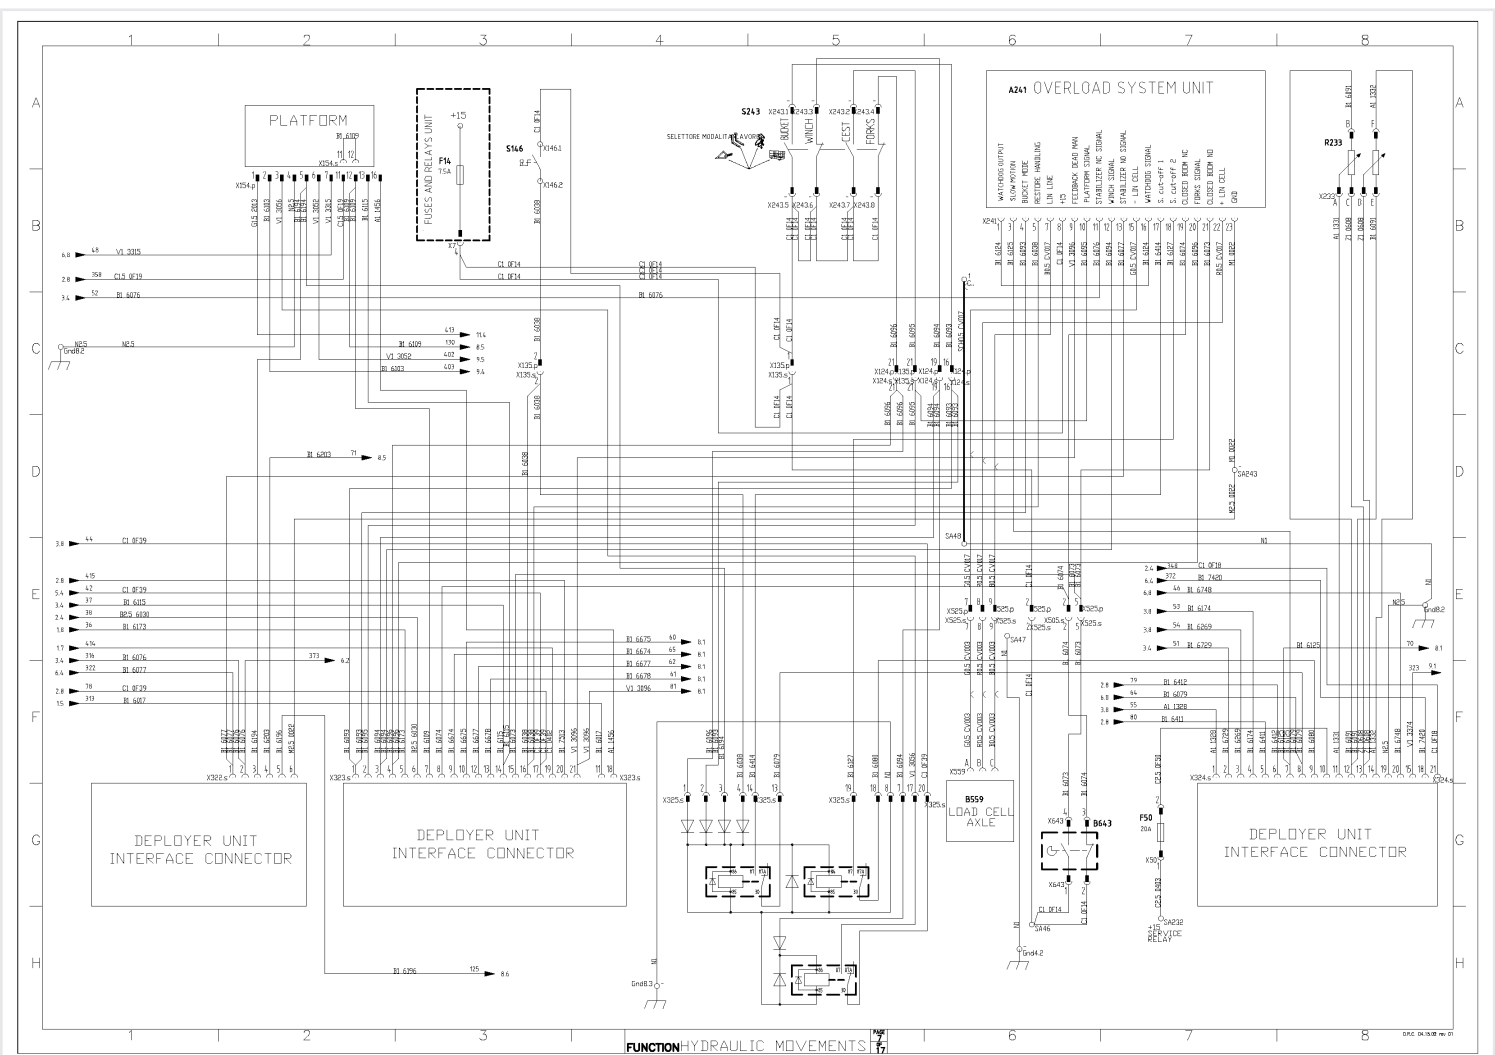


Figure: Wiring diagram - SIRZ - 20160503\_Page\_07

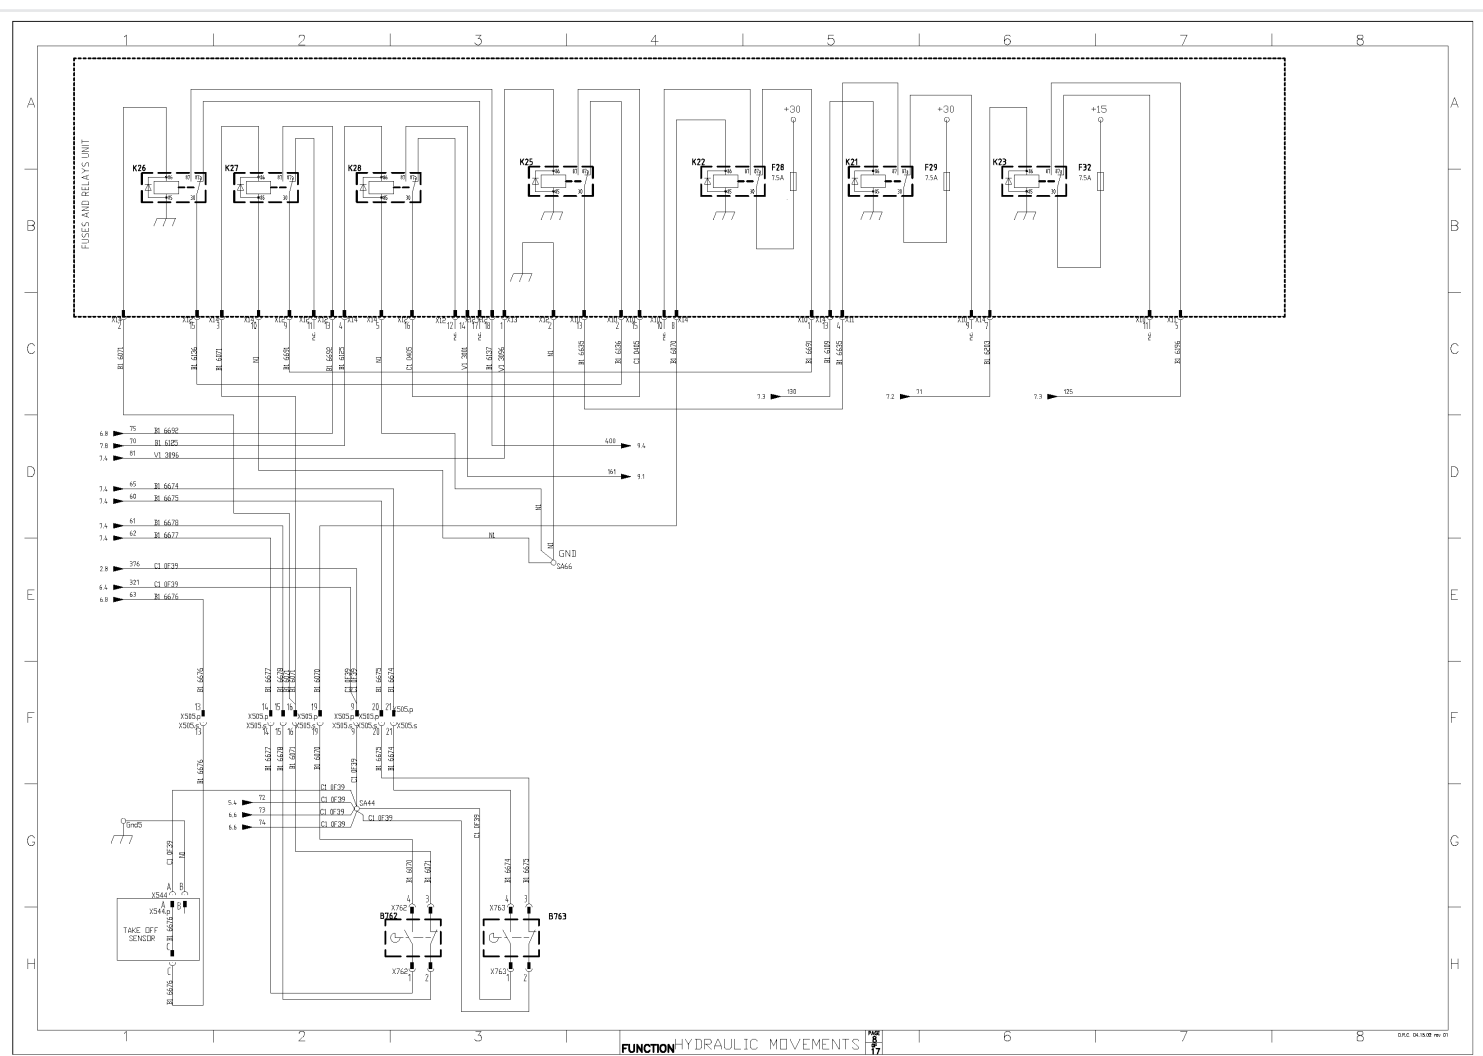


Figure: Wiring diagram - SIRZ - 20160503\_Page\_08

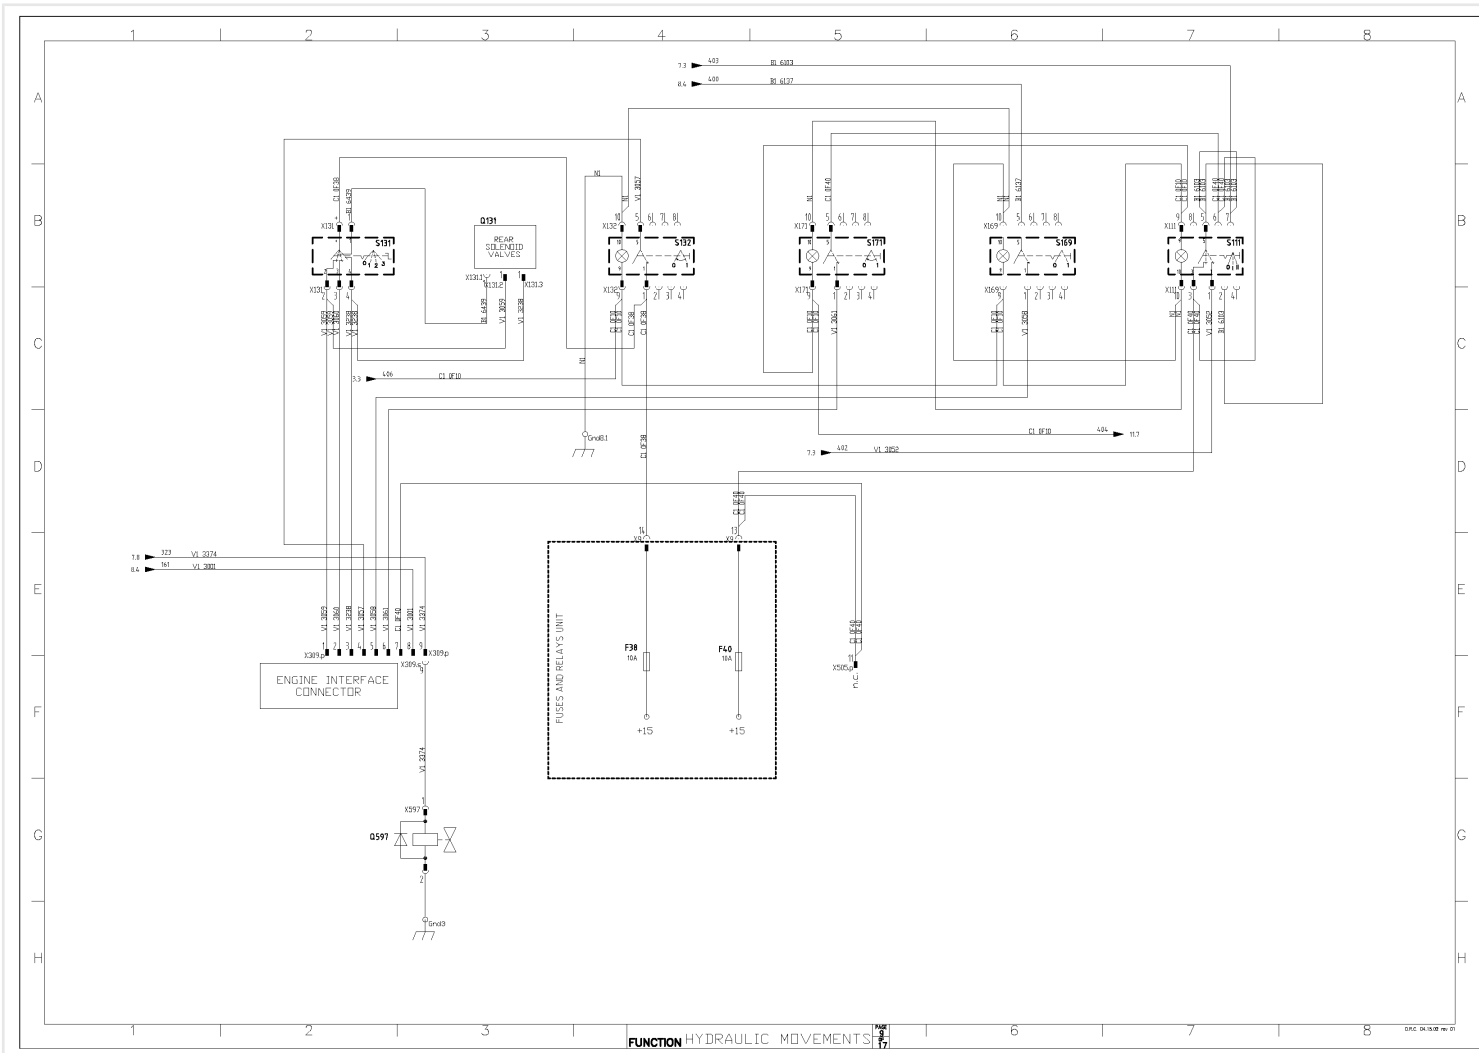


Figure: Wiring diagram - SIRZ - 20160503\_Page\_09

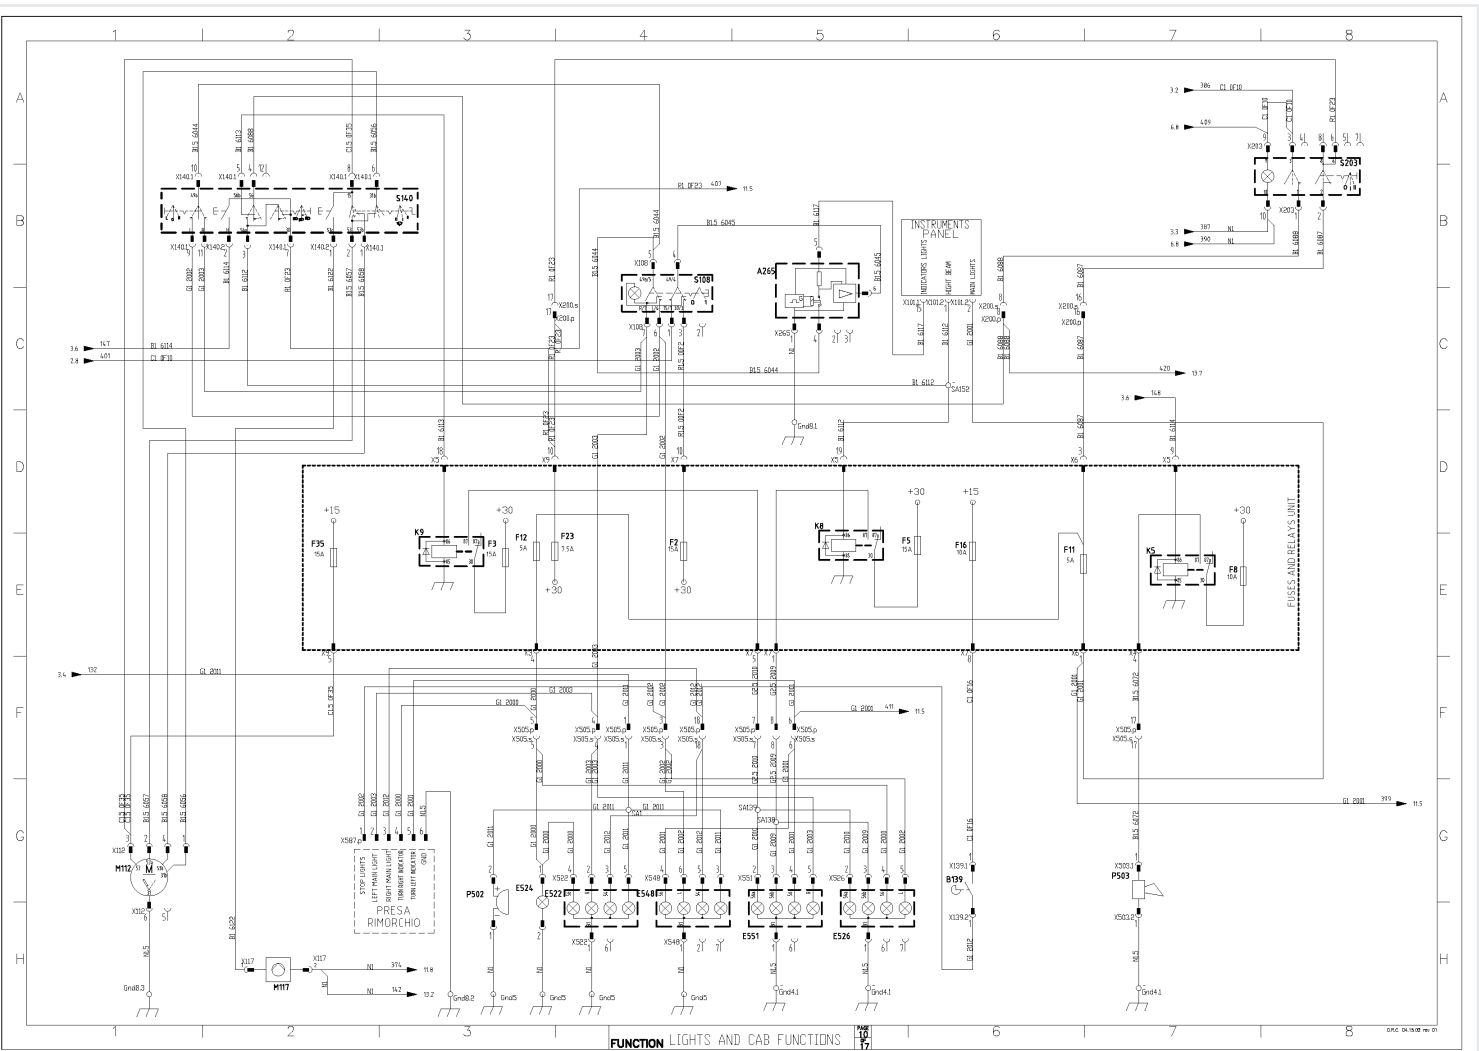


Figure: Wiring diagram - SIRZ - 20160503\_Page\_10





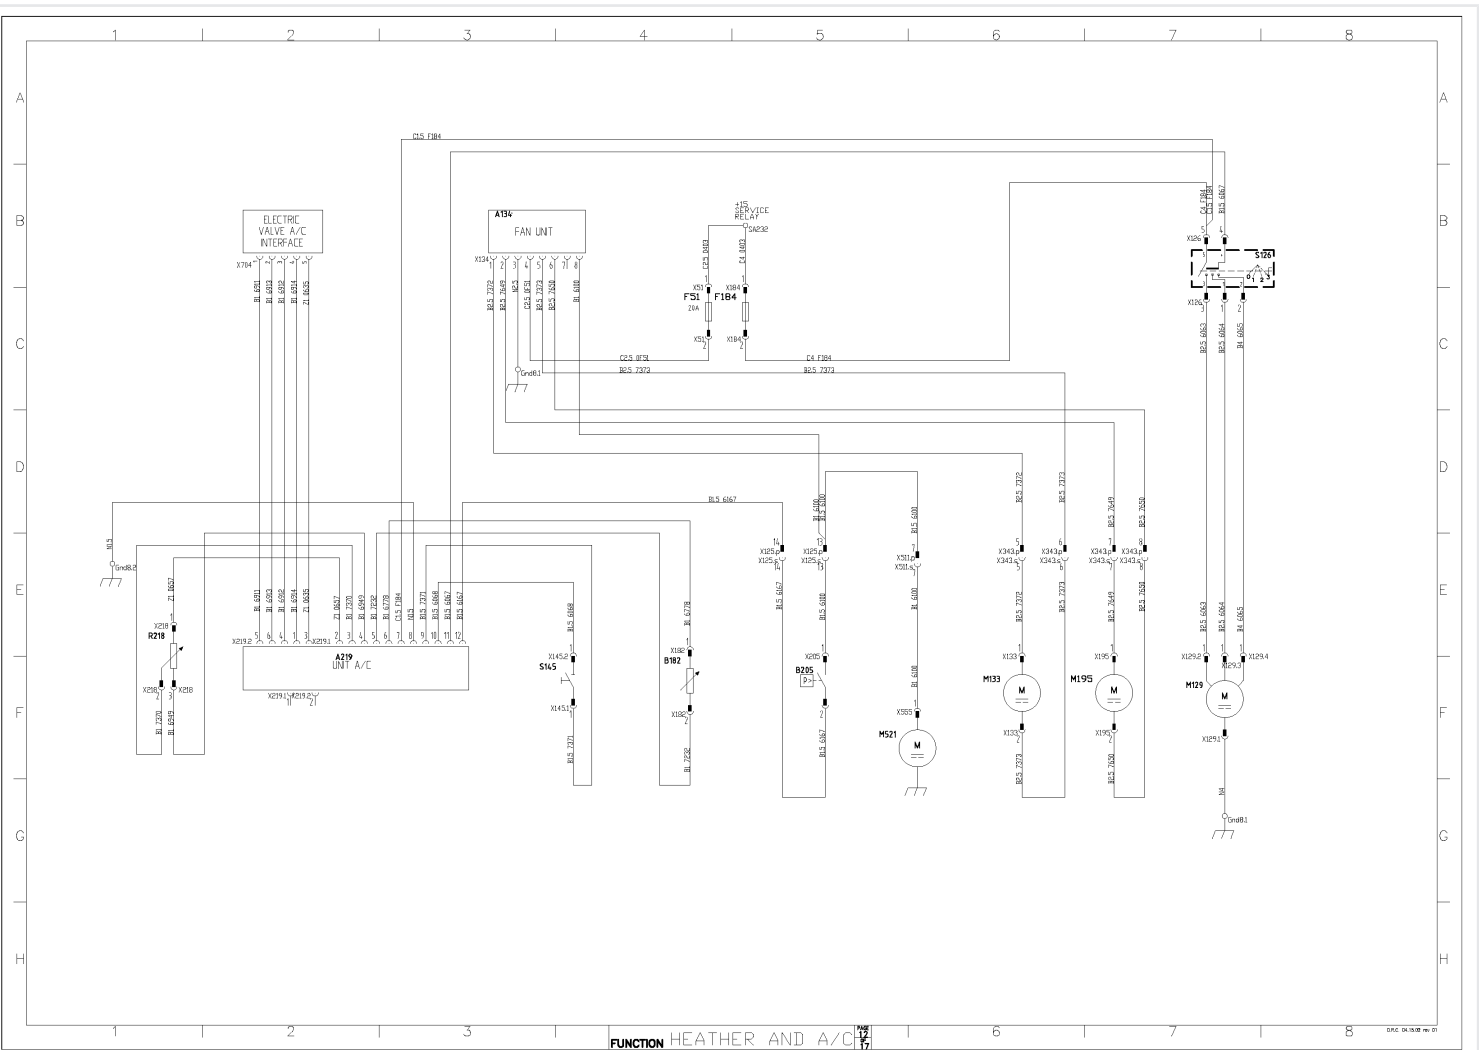


Figure: Wiring diagram - SIRZ - 20160503\_Page\_12




## 21.3 Fuse box

The main circuit is protected by fuses placed in the general electronic board (fig. 150720-1).

To access the fuse box, remove the left plastic part aside the instrument panel by unscrewing the related screws (Fig 150720-2).

In case of electrical malfunction it is necessary to check the fuses as a first troubleshooting step.

**WARNING! Before accessing the fuse box in the cab, set the vehicle in the maintenance position.**

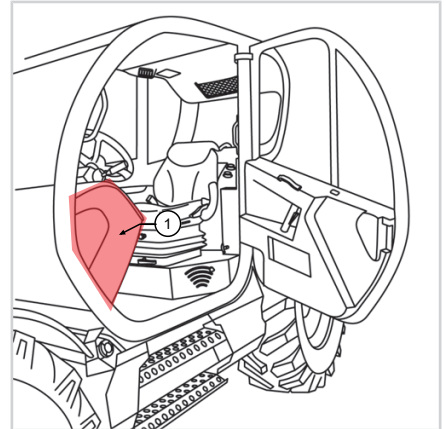

150720-2


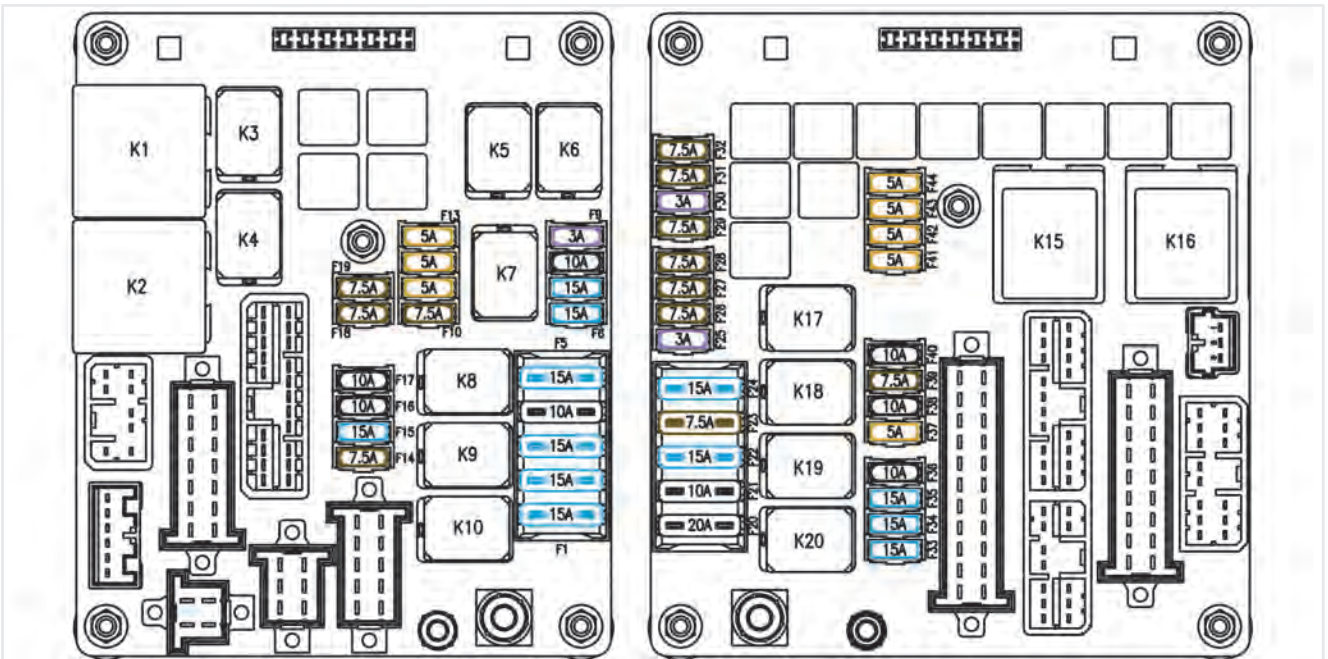


Figure: 150720-1


## 21.4 Engine compartment fuses

The electrical circuits of the engine and attached components are protected by a fuse box placed in the engine compartment (fig. 150737-1). Remove the cover of the box to access the fuses. In case of electrical malfunction it is necessary to check the fuses as a first troubleshooting step.


**WARNING! Before accessing the engine control unit set the vehicle in the maintenance position.**

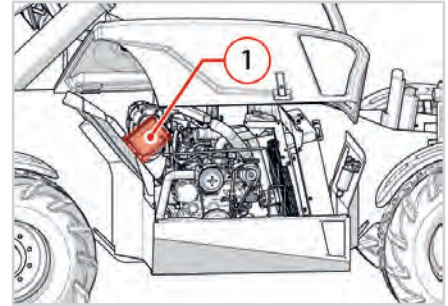

150737-1

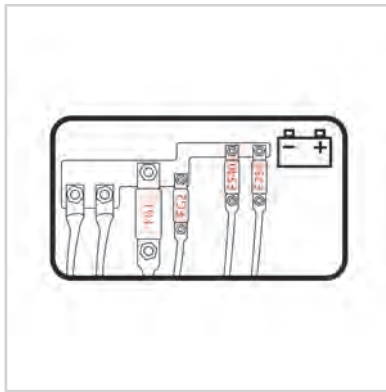

150737-2

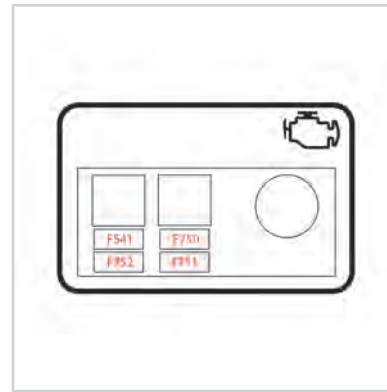

150737-3

# 22 Hydraulic diagram

## 22.1 Components legend

Reference	Description	Notes
1	Spin-on filter	
2	Tank filter	
3	Hydrostatic pump	
4	Diesel engine	
5	Services pump	
6	Hydrostatic motor	
7	Heat exchanger	
8	Negative brake solenoid valve	
9	Brake gauge	
10	Accumulator	
11	Servo brake	
12	Front axle	
13	Rear axle	
14	Steering mode solenoid valve	
15	Power steering	
16	Gear engagement cylinder	
17	Transmission gearbox	
18	Priority valve	
19	Distributor	
20	Lifting	
21	Tilting	
22	Quick couplers	
23	Extension	
24	External extension	Only Runner 40.13
25	Joystick	
A	Boom suspension	Optional
B	Trailer braking	Optional
C	Three-point elevator	Optional
D	Leveling	Optional
E	Flow Shearing Distributor	Optional
F	Fan reversal	Optional
G	Outriggers	Only Runner 40.13
H	Closed center services	Optional
L	Hand pump for emergencies	

## 22.2 Runner 35.8 and Samson 45.8 hydraulic diagram

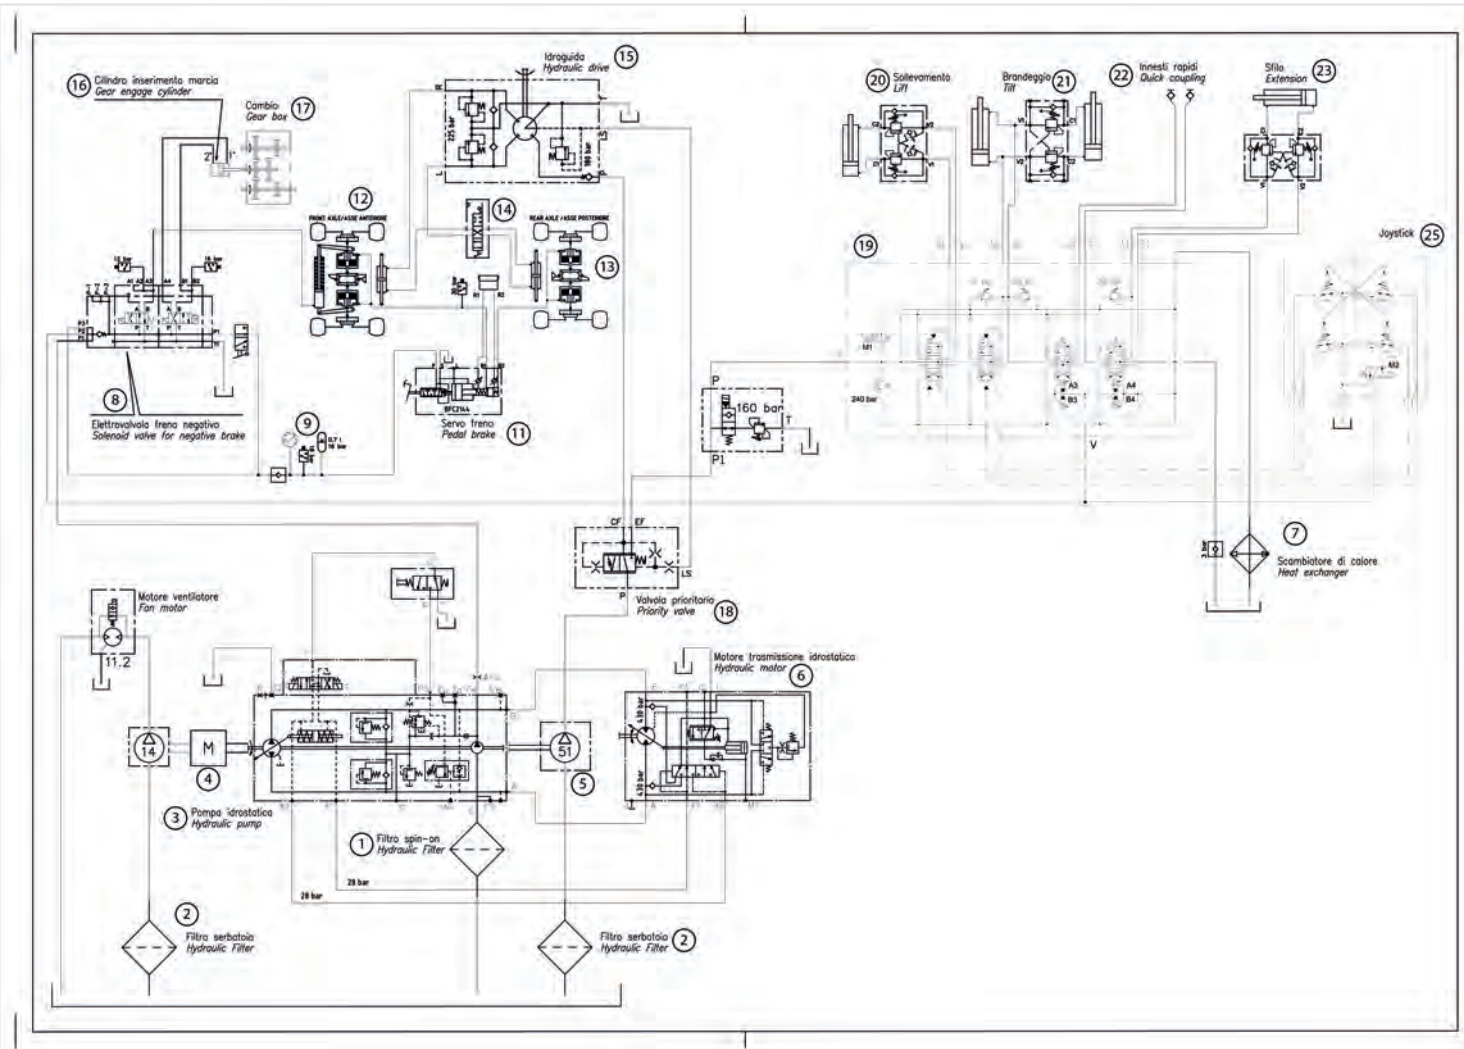


Figure: Hydraulic diagram - Runner 35.8 Samson 45.8 - HF50-08-A900 Model (2)

## 22.3 Runner 40.13 hydraulic diagram

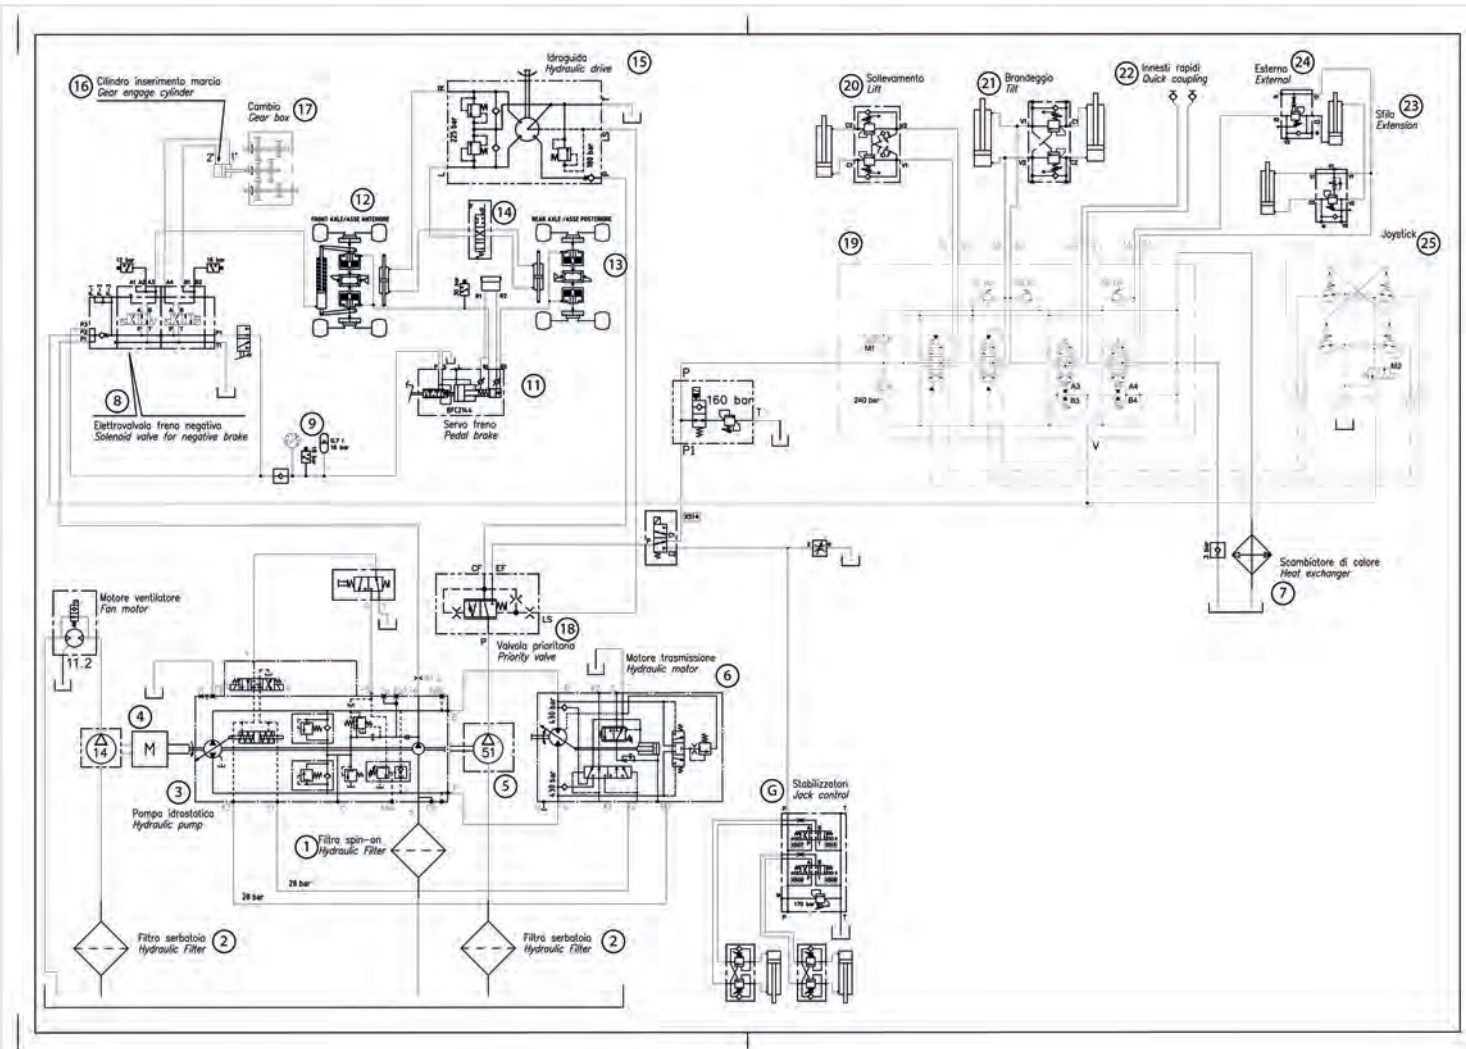


Figure: Hydraulic diagram - Runner 40.13 - HF50-08-A901 Model (2)

# 22.4 Optional hydraulic diagram

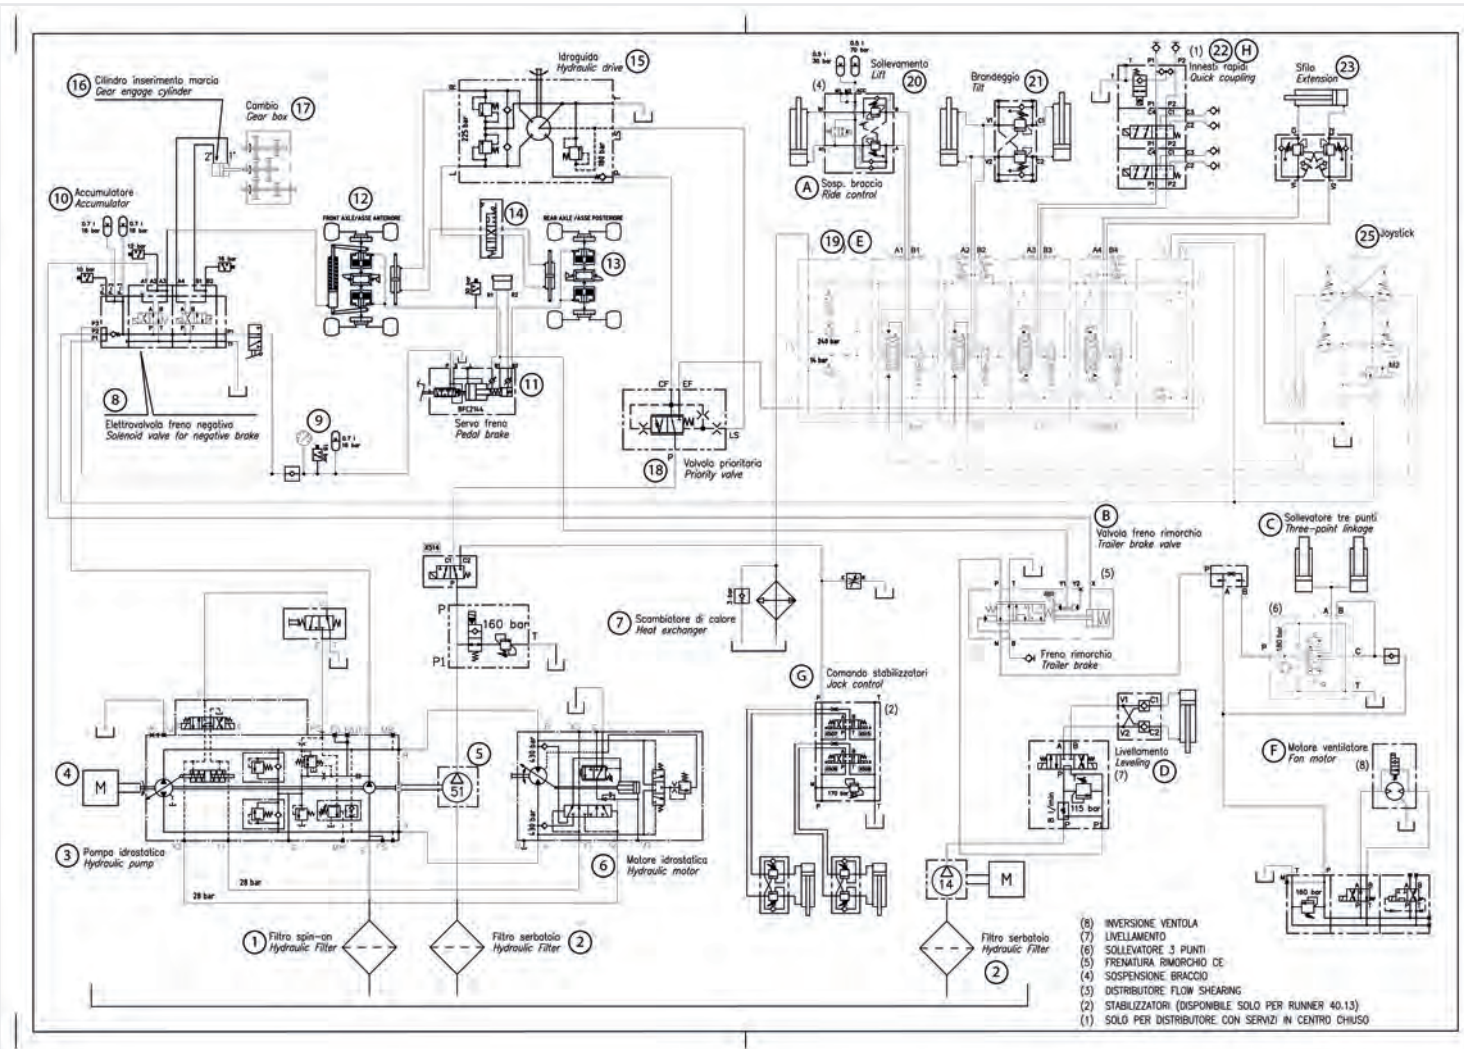


Figure: Hydraulic diagram - Optional Runner - HF50-08-A902 Model (2)



## 22.5 Basket prearrangement hydraulic diagram

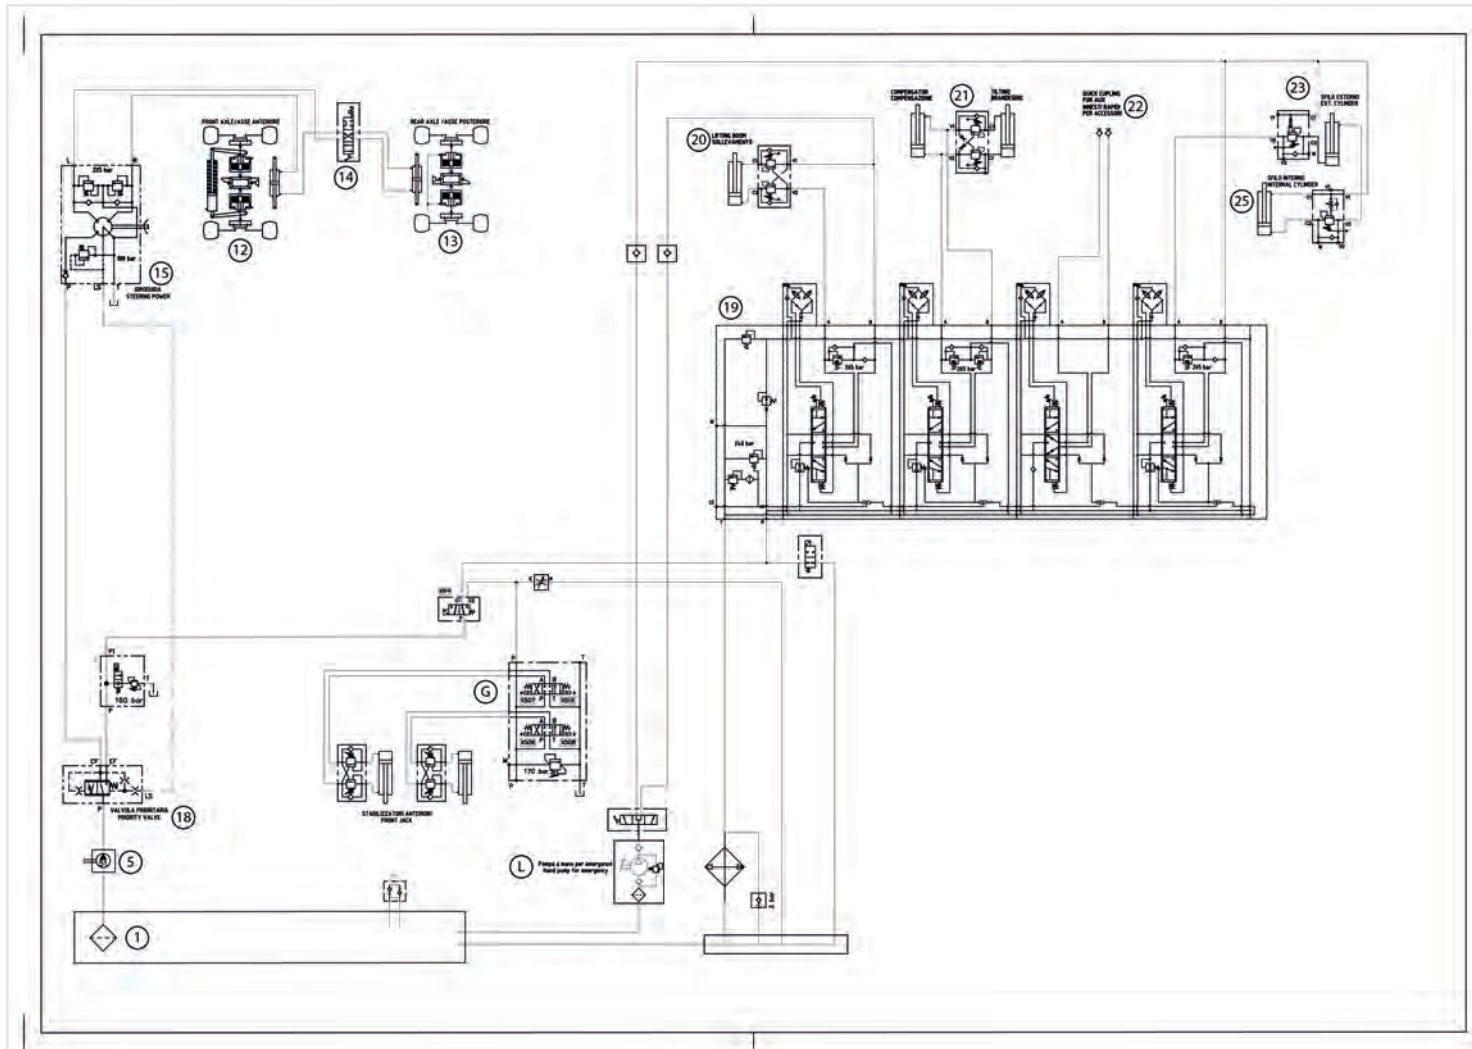



Figure: Hydraulic diagram - Runner basket prearrangement - HF50-08-A903 Model (2)

# 23

## Technical data

### 23.1

#### Runner 35.7

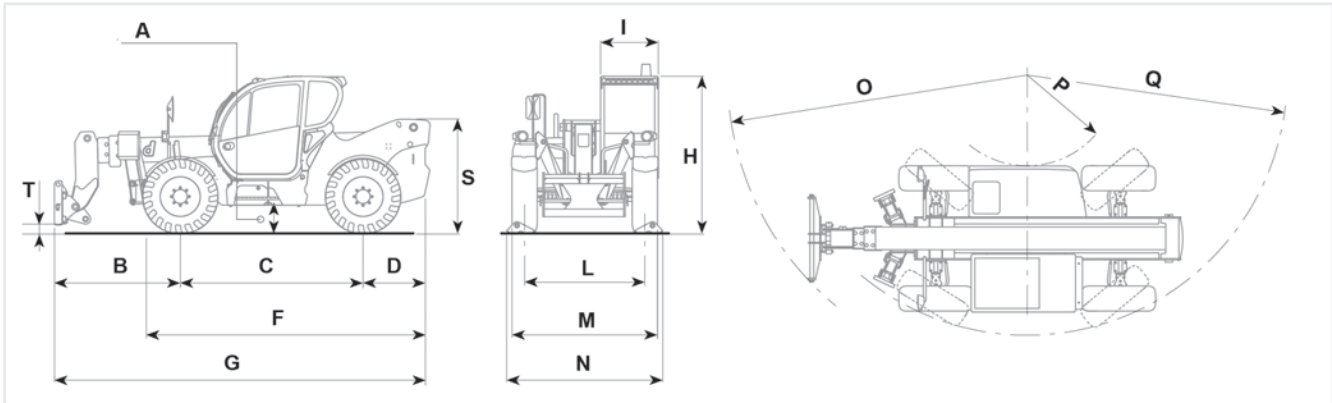

	MFE3223
Vehicle model	RUNNER 35.7
Sector	CONSTRUCTION
Homologation	XVC175
Technical type	175
Version	Operating
A	440 mm (17,3 in)
B	1180 mm (46,5 in)
C	2600 mm (102,4 in)
D	860 mm (33,9 in)
F	4000 mm (157,5 in)
G	4640 mm (182,7 in)
H	2460 mm (96,9 in)
I	940 mm (37 in)
L	1910 mm (75,2 in)
M	2310 mm (90,9 in)
O	3930 mm (154,7 in)
P	1260 mm (49,6 in)
Q	3920 mm (154,3 in)
S	-
T	100 mm (3,9 in)
U	2380 mm (93,7 in)
Z	1925 mm (75,8 in)
Maximum capacity	3500 kg (7716 lb)
Capacity at maximum height on wheels	3500 kg (7716 lb)
Capacity at maximum horizontal extension on wheels	1250 kg (2756 lb)
Maximum lifting height on wheels	7,30 m (24 ft)



	MFE3223
Maximum horizontal extension on wheels	3,85 m (12,6 ft)
Fork swiveling angle	134°
Maximum climb angle	40%
Pull-out force	5700 daN (12814 lbf)
Towing force	5700 daN (12814 lbf)
Lifting	11,8 s
Descent	6,9 s
Extension	7,0 s
Retraction	3,9 s
Forward swiveling	3,9 s
Reverse swiveling	2,4 s
Boom type	Telescopic with 1 telescopic section and boom speed supplement
Wheels maximum capacity	3500 kg (7716 lb)
Maximum mass	10900 kg (24030 lb)
Unladen weight	8020 kg (17681 lb)
Maximum permitted mass on front axle	5850 kg (12897 lb)
Maximum permitted mass on rear axle	5800 kg (12787 lb)
Brand	FPT
Model	NEF-TCA-93
Fueling	Diesel
Displacement	4485 cm <sup>3</sup> (274 in <sup>3</sup> )
Operation	4-stroke
Cooling system	Liquid
Nominal power	93 kW (125 HP)
@rpm	2200 rpm
Peak power	-
@rpm	-
Maximum torque	525 Nm (387 lbft)
@rpm	1500 rpm
Number and arrangement of cylinders	4, Vertical in line
Injection	Mechanical direct
Consumption	230 g/kWh (378,35 lb/Hp h)
@rpm	2200 rpm
Intake	Turbo compressor after-cooler
Air Filter	Replaceable cartridge for dry filter
Emission standard	Stage IIIA/Tier 3
Exhaust gas treatment	-
Overspeed protection for speed	-
@rpm	-
CO emissions	-
HC emissions	-
NOx emissions	-
Particulate emissions	-

	MFE3223
Alternator	-
Battery	-
Starter motor	-
Hydraulic pump type	Gear pump for power steering and movements
Hydraulic pump capacity	130 L/min (34,3 gal/min)
Max. operating pressure	25,0 MPa (3626 psi)
Distributor control	4in1 proportional Joystick
Optional distributor control	4in1 proportional Joystick with FNR
Boom hydraulic sockets	With quick couplings
Rear hydraulic sockets	Up to 3 (optional)
Maximum pressure at rear hydraulic sockets	25,0 MPa (3626 psi)
Transmission type	Hydrostatic with variable flow pump
Hydraulic motor	Hydrostatic with continuous automatic adjustment
Reversal	Electro-Hydraulic
Transmission gearbox	Servocontrolled 2-speed
Inching	With hydraulic pedal for controlled forward movement
Type of axles	2 steering, with 4 planetary reduction gears
Driving axles	Front and rear
Service braking	Oil bath with servo brake on front and rear axle with double hydraulic system
Parking braking	Negative actuation with electrical control
Front axle	Rigid (Levelling upon request)
Rear axle	Swinging
Type of steering	4 wheels / transversal / 2 wheels
Engine oil quantity	10,00 L (2,64 gal)
Engine oil specifications	DIECI ENGINE HP SAE 15W-40; (< -20°C / < -4°F) DIECI ENGINE EVOLUTION TIR4 SAE 10W-30
Front axle oil quantity	7,50 L (1,98 gal)
Front reduction gears oil quantity	1,25 L (0,33 gal)
Front axle oil specifications	DIECI GEAR EP/E LS 85W-90 API GL-5, MIL-L-2105D; (< -20°C / < -4°F) DIECI SPECIAL LS SYNT AXEL OIL 75W-90
Rear axle oil quantity	7,75 L (2,05 gal)
Rear reduction gears oil quantity	1,25 L (0,33 gal)
Rear axle oil specifications	DIECI GEAR EP/E LS 85W-90 API GL-5, MIL-L-2105D; (< -20°C / < -4°F) DIECI SPECIAL LS SYNT AXEL OIL 75W-90
Transmission gearbox oil quantity	1,50 L (0,4 gal)
Transmission gearbox oil specifications	(from -10°C/14°F to +35°C/95°F) DIECI UTTO FLUID WB SAE 10W/30; (from -30°C/-22°F to +10°C/14°F) DIECI MTF III FLUID
Braking circuit oil quantity	1,20 L (0,32 gal)
Braking circuit oil specifications	DEXRON II
Coolant quantity	14,50 L (3,83 gal)
Coolant specifications	Antifreeze Red
Grease quantity	4,00 kg (9 lb)
Grease specifications	NLGI - 1

	MFE3223
Hydraulic system (total)	168,0 L (44,38 gal)
Hydraulic oil type	DIECI Hydro Telehandler Fluid ISO46
Air conditioning refrigerant quantity	1,30 kg (3 lb)
Air conditioning refrigerant specifications	R134A
Fuel tank	105,0 L (27,74 gal)
Acoustic pressure: Reference standard for stopped and running vehicle	-
Acoustic pressure: Value with stopped vehicle	-
Acoustic pressure: Value with running vehicle	-
Acoustic pressure: Reference standard perceived by the operator	-
Acoustic pressure: Value perceived by the operator with open cab	-
Acoustic pressure: Value perceived by the operator with closed cab	-
Acoustic power: Reference standard	Directive 2000/14/EC
Acoustic power: Measured value	106 dB(A)
Acoustic power: Guaranteed value	107 dB(A)
Reference standard for seat vibrations	-
Value for seat vibrations	-
Uncertainty for seat vibrations value	-
Reference standard for steering wheel vibrations	-
Value for steering wheel vibrations	-
Uncertainty for steering wheel vibrations value	-
Load per wheel	8500 daN (19109 lbf)
Reference Electromagnetic compatibility standard	-
Telehandler category	-
Telehandler capacity	-
Telehandler description	-
Standard tires	400/70x20"
Optional tires	400/70x24"; 18x22.5"
Unbraked trailer	-
Inertia braking	-
Mechanical braking	-
Hydraulic/pneumatic braking	-

Diagrams

Diagrams code	Vehicle code	Vehicle model	Production equipment code	Price list equipment code	Unit of measure	Operating Mode
AXB1328	MFE3223	Runner 35.7	BUD1059	TFR0008	Metric	Wheels
DOCDI0000529	MFE3223	Runner 35.7	BUD1059	TFR0008	Imperial	Wheels

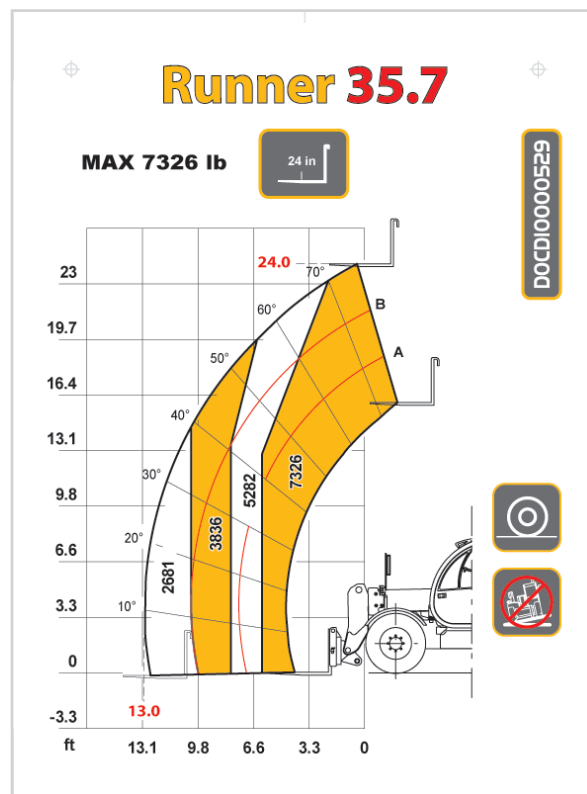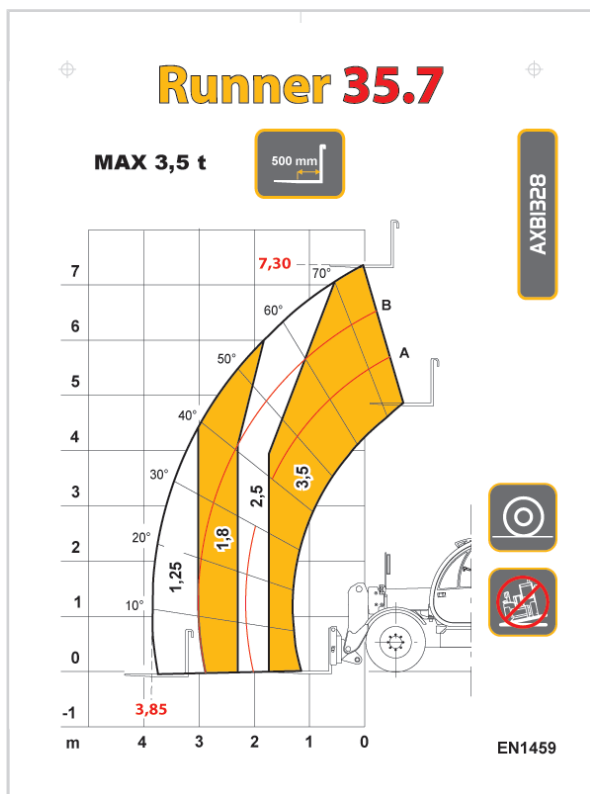


## 23.1.1 Equipment

	Production code	Description
TCV0009	BCV8092	Fork extender complete with pair of forks 120 x 45 L = 1200 mm and 3.8 t capacity
TCV0007	BCV8045, BCV8279	Fork counterplate (with pins) for use with quick attachment
TFR0008	BUD1059	Pair of floating forks mm 120 x 45 L = 1200. Capacity 3.8 t
TFR0016	BUD1190	Pair of fork extensions L = 1900 mm for forks mm 120 x 45
TFR0009	BUD1121/0G	Fork counterplate guard
TBN0030	BUB2462	Excavating bucket with teeth, m <sup>3</sup> 0.90 SAE heaped, (width 2.35 m) with teeth protection cover. (The bucket with blade protector is recommended) (Equipment approved for road use on the Italian territory)
TBN0031	BUB2462/S	Excavating bucket with teeth, m <sup>3</sup> 0.90 SAE heaped, (width 2.35 m) with protection
TBN0032	BUB2463	Excavating bucket without teeth, capacity 0.90 m <sup>3</sup> SAE heaped (width 2.35 m) with bucket blade cover. (The bucket with blade protector is recommended) (Equipment approved for road use on the Italian territory)
TBN0033	BUB2463/S	Excavating bucket without teeth, m <sup>3</sup> 0.90 SAE heaped, (width 2.35 m) with protection
TBN0020	BUB2422	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 1.00 SAE heaped (width 2,35 m) (The bucket with anti-wear blade protector is recommended) (Equipment approved for road use on the Italian territory)
TBN0021	BUB2422/S	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 1.00 SAE heaped (width 2.35 m) with blade protector
TBN0022	BUB2423	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 1.50 SAE heaped (width 2.35 m) (The bucket with anti-wear blade protector is recommended)
TBN0023	BUB2423/S	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 1.50 SAE heaped (width 2.35 m) with blade protector
TBN0026	BUB2424	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 2.00 SAE heaped (width 2.35 m) (The bucket with anti-wear blade protector is recommended)
TBN0027	BUB2424/S	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 2.00 SAE heaped (width 2.35 m) with blade protector
TBN0028	BUB2428	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 2.50 SAE heaped (width 2.35 m) (The bucket with anti-wear blade protector is recommended)
TBN0029	BUB2428/S	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 2.50 SAE heaped (width 2.35 m) with blade protector
TBN0034	BUD3060	Mixing bucket yield 350 l (Required electrical contact on boom head)
TBN0035	BUD3063	Mixing bucket yield 500 l (Required electrical contact on boom head)
TGN0012	BUD3020	Hydraulically opening ladle l 400
TGN0015	BUD3021	Hydraulically opening ladle l 600
TCS0002	BUD6218	Material basket 200 x 120 x 130 cm with side door. Capacity 1,000 kg

	Production code	Description
TSL0001	BUD4501, BUD4556	Jib (crane extension) L = 1.3 m with winch (Capacity 2.0 t). (Lifting equipment prearrangement or distributor with man basket and equipment prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0002	BUD4402, BUD4502	Jib (crane extension) L = 1.3 m with hook (capacity 2.0 t) (Lifting equipment prearrangement or distributor with man basket and lifting equipment prearrangement is compulsory, where present)
TSL0003	BUD4503, BUD4547	Jib (crane extension) L = 2.5 m with winch (Capacity 1.2 t). (Lifting equipment prearrangement or distributor with man basket prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0004	BUD4504	Jib (crane extension) L = 2.5 m with hook (capacity 1.2 t) (Lifting equipment prearrangement or distributor with man basket and lifting equipment prearrangement is compulsory, where present)
TSL0008	BUD4505	Jib (crane extension) L = 4.5 m with winch (Capacity 0.6 t). (Lifting equipment prearrangement or distributor with man basket and equipment prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0009	BUD4506	Jib (crane extension) L = 4.5 m with hook (capacity 0.6 t) (Lifting equipment prearrangement or distributor with man basket and lifting equipment prearrangement is compulsory, where present)
TSL0005	BUD4507	Winch for fork carriage (3.0 t capacity) with rope guide, double pull. (Lifting equipment prearrangement or distributor with man basket prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0006	BUD4382, BUD4496	Jib L = 1.00 m with hook (capacity 2.5 t) (Lifting equipment prearrangement or distributor with man basket and equipment prearrangement is compulsory, where present)
TSL0007	BUB2448	Hook for fork carriage with the same capacity as the vehicle



## 23.2 Runner 40.13

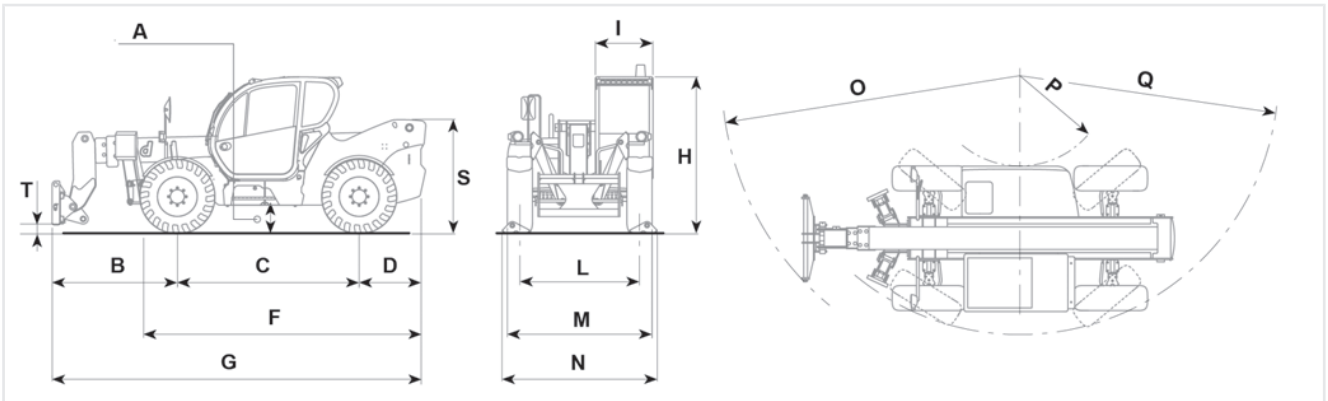

	MFG3410
Vehicle model	RUNNER 40.13
Sector	CONSTRUCTION
Homologation	XVL175
Technical type	175
Version	Operating
A	440 mm (17,3 in)
B	2110 mm (83,1 in)
C	2600 mm (102,4 in)
D	880 mm (34,6 in)
F	4080 mm (160,6 in)
G	5590 mm (220,1 in)
H	2460 mm (96,9 in)
I	940 mm (37 in)
L	1910 mm (75,2 in)
M	2320 mm (91,3 in)
O	4550 mm (179,1 in)
P	1260 mm (49,6 in)
Q	3920 mm (154,3 in)
S	-
T	110 mm (4,3 in)
U	2380 mm (93,7 in)
Z	1925 mm (75,8 in)
Maximum capacity	4000 kg (8818 lb)
Capacity at maximum height on wheels	2400 kg (5291 lb)
Capacity at maximum horizontal extension on wheels	150 kg (331 lb)
Maximum lifting height on wheels	12,20 m (40 ft)
Maximum horizontal extension on wheels	8,75 m (28,7 ft)
Fork swiveling angle	134°
Maximum climb angle	40%



	MFG3410
Pull-out force	7300 daN (16411 lbf)
Towing force	7300 daN (16411 lbf)
Lifting	10,0 s
Descent	5,9 s
Extension	18,6 s
Retraction	13,6 s
Forward swiveling	3,3 s
Reverse swiveling	2,1 s
Boom type	2-section telescopic boom
Wheels maximum capacity	4000 kg (8818 lb)
Maximum mass	10900 kg (24030 lb)
Unladen weight	10420 kg (22972 lb)
Maximum permitted mass on front axle	5850 kg (12897 lb)
Maximum permitted mass on rear axle	5800 kg (12787 lb)
Brand	FPT
Model	NEF-TCA-93
Fueling	Diesel
Displacement	4485 cm <sup>3</sup> (274 in <sup>3</sup> )
Operation	4-stroke
Cooling system	Liquid
Nominal power	93 kW (125 HP)
@rpm	2200 rpm
Peak power	-
@rpm	-
Maximum torque	525 Nm (387 lbft)
@rpm	1500 rpm
Number and arrangement of cylinders	4, Vertical in line
Injection	Mechanical direct
Consumption	230 g/kWh (378,35 lb/Hp h)
@rpm	2200 rpm
Intake	Turbo compressor after-cooler
Air Filter	Replaceable cartridge for dry filter
Emission standard	Stage IIIA/Tier 3
Exhaust gas treatment	-
Overspeed protection for speed	-
@rpm	-
CO emissions	-
HC emissions	-
NOx emissions	-
Particulate emissions	-
Alternator	-
Battery	-
Starter motor	-



	<b>MFG3410</b>
Hydraulic pump type	Gear pump for power steering and movements
Hydraulic pump capacity	130 L/min (34,3 gal/min)
Max. operating pressure	25,0 MPa (3626 psi)
Distributor control	4in1 proportional Joystick
Optional distributor control	4in1 proportional Joystick with FNR
Boom hydraulic sockets	With quick couplings
Rear hydraulic sockets	Up to 3 (optional)
Maximum pressure at rear hydraulic sockets	25,0 MPa (3626 psi)
Transmission type	Hydrostatic with variable flow pump
Hydraulic motor	Hydrostatic with continuous automatic adjustment
Reversal	Electro-Hydraulic
Transmission gearbox	Servocontrolled 2-speed
Inching	With hydraulic pedal for controlled forward movement
Type of axles	2 steering, with 4 planetary reduction gears
Driving axles	Front and rear
Service braking	Oil bath with servo brake on front and rear axle with double hydraulic system
Parking braking	Negative actuation with electrical control
Front axle	Rigid (Levelling upon request)
Rear axle	Swinging
Type of steering	4 wheels / transversal / 2 wheels
Engine oil quantity	10,00 L (2,64 gal)
Engine oil specifications	DIECI ENGINE HP SAE 15W-40; (< -20°C / < -4°F) DIECI ENGINE EVOLUTION TIR4 SAE 10W-30
Front axle oil quantity	7,50 L (1,98 gal)
Front reduction gears oil quantity	1,25 L (0,33 gal)
Front axle oil specifications	DIECI GEAR EP/E LS 85W-90 API GL-5, MIL-L-2105D; (< -20°C / < -4°F) DIECI SPECIAL LS SYNT AXEL OIL 75W-90
Rear axle oil quantity	7,75 L (2,05 gal)
Rear reduction gears oil quantity	1,25 L (0,33 gal)
Rear axle oil specifications	DIECI GEAR EP/E LS 85W-90 API GL-5, MIL-L-2105D; (< -20°C / < -4°F) DIECI SPECIAL LS SYNT AXEL OIL 75W-90
Transmission gearbox oil quantity	1,50 L (0,4 gal)
Transmission gearbox oil specifications	(from -10°C/14°F to +35°C/95°F) DIECI UTTO FLUID WB SAE 10W/30; (from -30°C/-22°F to +10°C/14°F) DIECI MTF III FLUID
Braking circuit oil quantity	1,20 L (0,32 gal)
Braking circuit oil specifications	DEXRON II
Coolant quantity	14,50 L (3,83 gal)
Coolant specifications	Antifreeze Red
Grease quantity	4,00 kg (9 lb)
Grease specifications	NLGI - 1
Hydraulic system (total)	168,0 L (44,38 gal)
Hydraulic oil type	DIECI Hydro Telehandler Fluid ISO46
Air conditioning refrigerant quantity	1,30 kg (3 lb)

	MFG3410
Air conditioning refrigerant specifications	R134A
Fuel tank	105,0 L (27,74 gal)
Acoustic pressure: Reference standard for stopped and running vehicle	-
Acoustic pressure: Value with stopped vehicle	-
Acoustic pressure: Value with running vehicle	-
Acoustic pressure: Reference standard perceived by the operator	-
Acoustic pressure: Value perceived by the operator with open cab	-
Acoustic pressure: Value perceived by the operator with closed cab	-
Acoustic power: Reference standard	Directive 2000/14/EC
Acoustic power: Measured value	106 dB(A)
Acoustic power: Guaranteed value	107 dB(A)
Reference standard for seat vibrations	-
Value for seat vibrations	-
Uncertainty for seat vibrations value	-
Reference standard for steering wheel vibrations	-
Value for steering wheel vibrations	-
Uncertainty for steering wheel vibrations value	-
Load per wheel	8500 daN (19109 lbf)
Reference Electromagnetic compatibility standard	-
Telehandler category	-
Telehandler capacity	-
Telehandler description	-
Standard tires	400/70x20"
Optional tires	400/70x24"; 18x22.5"
Unbraked trailer	-
Inertia braking	-
Mechanical braking	-
Hydraulic/pneumatic braking	-

Diagrams

Diagrams code	Vehicle code	Vehicle model	Production equipment code	Price list equipment code	Unit of measure	Operating Mode
AXB1356	MFG3410	Runner 40.13	BUD1077	TFR0007	Metric	Wheels - 0°
AXB1356/1	MFG3410	Runner 40.13	BUD1077	TFR0007	Metric	Feet - 0° - 100%
DOCDI0000530	MFG3410	Runner 40.13	BUD1077	TFR0007	Imperial	Wheels - 0°
DOCDI0000634	MFG3410	Runner 40.13	BUD1077	TFR0007	Imperial	Feet - 0° - 100%

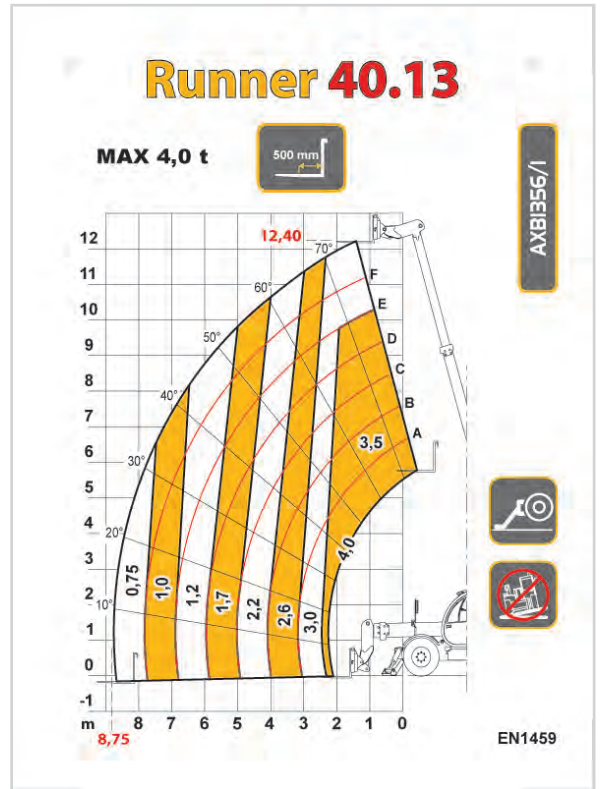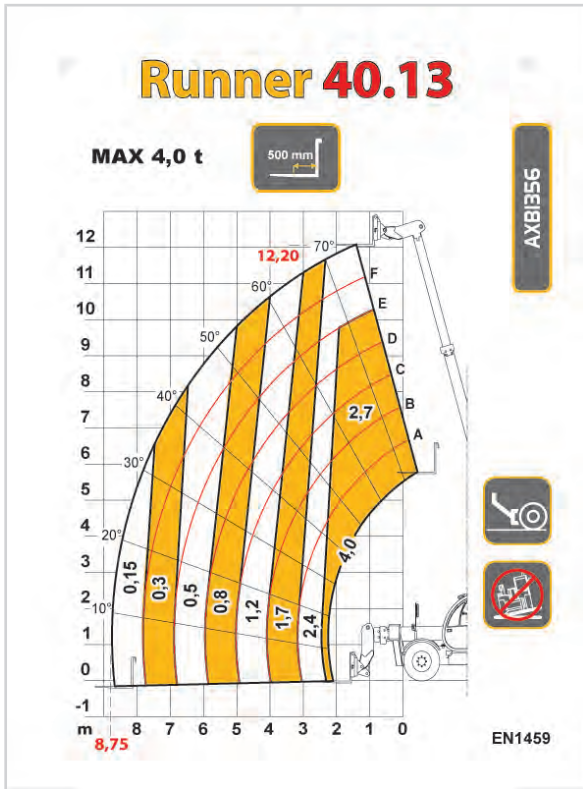

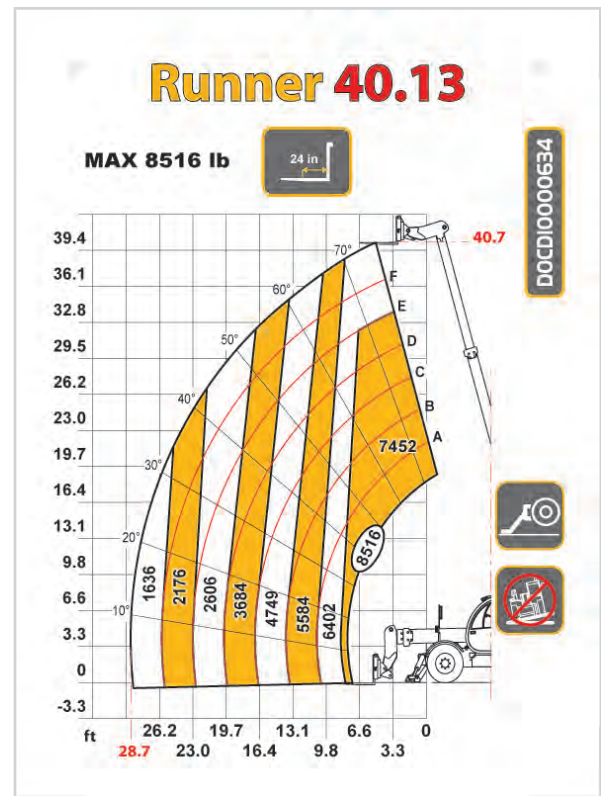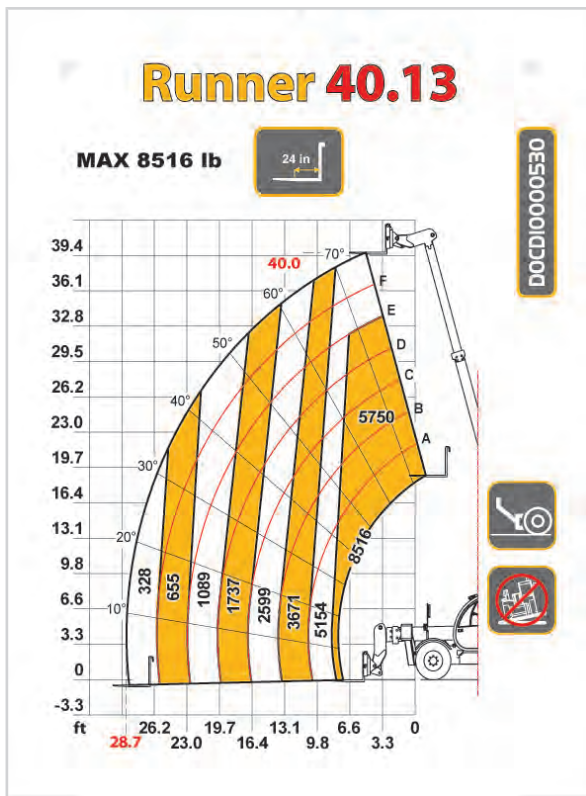

## 23.2.1 Equipment


	Production code	Description
TCV0008	BCV8069	Fork extender complete with pair of forks 120 x 50 L = 1200 mm and 5 t capacity
TCV0007	BCV8045, BCV8279	Fork counterplate (with pins) for use with quick attachment
TFR0007	BUD1077	Pair of floating forks mm 120 x 50 L = 1200. Capacity 5.0 t
TFR0002	BUD1051/0G, BUD1185	Pair of fork extensions L = 1900 mm for forks mm 120 x 50
TFR0009	BUD1121/0G	Fork counterplate guard
TBN0034	BUD3060	Mixing bucket yield 350 l (Required electrical contact on boom head)
TBN0035	BUD3063	Mixing bucket yield 500 l (Required electrical contact on boom head)
TGN0012	BUD3020	Hydraulically opening ladle l 400
TGN0015	BUD3021	Hydraulically opening ladle l 600
TCS0004	BUD6448	Front passenger basket cm 120 x 215. Capacity 300 Kg including 3 persons (Proportional hydraulic distributor with prearrangement for basket and lifting equipment is compulsory)
TCS0005	BUD6417	Front passenger basket cm 120 x 215. Capacity 300 Kg including 3 persons for vehicle with remote control (Proportional hydraulic distributor with pre-arrangement for basket and lifting equipment is compulsory)
TCS0006	BUD6450	Front passenger basket cm 120 x 240 with hydraulic extension up to cm 420. Capacity 300 Kg including 3 persons (Proportional hydraulic distributor with prearrangement for basket and lifting equipment is compulsory)
TCS0007	BUD6419	Front passenger basket cm 120 x 240 with hydraulic extension up to cm 420. Capacity 300 Kg including 3 persons for vehicle with remote control (Proportional hydraulic distributor with pre-arrangement for basket and lifting equipment is compulsory)
TCS0008	BUD6452	Trilateral passenger basket cm 120 x 215. Capacity 300 Kg including 3 persons (Proportional hydraulic distributor with prearrangement for basket and lifting equipment is compulsory)
TCS0009	BUD6423	Trilateral passenger basket cm 120 x 215. Capacity 300 Kg including 3 persons for vehicle with remote control (Proportional hydraulic distributor with pre-arrangement for basket and lifting equipment is compulsory)
TCS0002	BUD6218	Material basket 200 x 120 x 130 cm with side door. Capacity 1,000 kg
TSL0001	BUD4501, BUD4556	Jib (crane extension) L = 1.3 m with winch (Capacity 2.0 t). (Lifting equipment prearrangement or distributor with man basket and equipment prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0002	BUD4402, BUD4502	Jib (crane extension) L = 1.3 m with hook (capacity 2.0 t) (Lifting equipment prearrangement or distributor with man basket and lifting equipment prearrangement is compulsory, where present)

	Production code	Description
TSL0003	BUD4503, BUD4547	Jib (crane extension) L = 2.5 m with winch (Capacity 1.2 t). (Lifting equipment prearrangement or distributor with man basket prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0004	BUD4504	Jib (crane extension) L = 2.5 m with hook (capacity 1.2 t) (Lifting equipment prearrangement or distributor with man basket and lifting equipment prearrangement is compulsory, where present)
TSL0008	BUD4505	Jib (crane extension) L = 4.5 m with winch (Capacity 0.6 t). (Lifting equipment prearrangement or distributor with man basket and equipment prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0009	BUD4506	Jib (crane extension) L = 4.5 m with hook (capacity 0.6 t) (Lifting equipment prearrangement or distributor with man basket and lifting equipment prearrangement is compulsory, where present)
TSL0005	BUD4507	Winch for fork carriage (3.0 t capacity) with rope guide, double pull. (Lifting equipment prearrangement or distributor with man basket prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0010	BUD4508	Winch for fork carriage (4.0 t capacity) with rope guide, double pull. (Lifting equipment prearrangement or distributor with man basket prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0006	BUD4382, BUD4496	Jib L = 1.00 m with hook (capacity 2.5 t) (Lifting equipment prearrangement or distributor with man basket and equipment prearrangement is compulsory, where present)
TSL0007	BUB2448	Hook for fork carriage with the same capacity as the vehicle
TBN0136	BUB2717	Excavating bucket without teeth, m <sup>3</sup> 1.00 SAE heap, (width 2.4 m) with protection.
TBN0104	BUB2717-S	Excavating bucket without teeth, m <sup>3</sup> 1.00 SAE heap, (width 2.4 m) with blade guard, with protection.
TBN0105	BUB2718	Excavating bucket with teeth, m <sup>3</sup> 1.00 SAE heap, (width 2.4 m) with protection.
TBN0106	BUB2719	Bucket for light material (spec. weight max 0.8 t/m <sup>3</sup> ) m <sup>3</sup> 1.50 SAE heap (width 2.4 m)
TBN0107	BUB2719-S	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 1.50 SAE heap (width 2.4 m) with bolted blade guard
TBN0108	BUB2720	Bucket for ultralight material (spec. weight max 0.5 t/m <sup>3</sup> ) m <sup>3</sup> 2.5 SAE heap (width 2.4 m)
TBN0109	BUB2720-S	Bucket for ultralight materials (max spec. weight 0.5 t/ m <sup>3</sup> ) m <sup>3</sup> 2.5 SAE heap (width 2.4 m) with bolted blade protector.
TBN0134	BUB2721	4 in 1 Bucket L=2.3 m without teeth and protection
TBN0135	BUB2721-S	4 in 1 Bucket L=2.3 m with bolted blade guard and protection
TBN0137	BUB2722	Bucket with grab for manure, m <sup>3</sup> 1.5 SAE heaped (width 2.3 m)
TBN0138	BUB2722-S	Bucket with grab for manure and bolted blade protector, m <sup>3</sup> 1.5 SAE heaped (width 2.3 m)
TBN0248	CARSA0000563	Blade protector Width 2.40 m to be bolted
TBN0144	ASMCM0000192-0G	Blade Cover/Teeth Width 2.4 m



	Production code	Description
TBN0132	DRE3511	Mobile level indicator
TBN0251	ASMCM0000257-0G	Protection guard for bucket
TBN0252	ASMCM0000258-0G, ASMCM0000259-0G	Protection guard for bucket with grab

## 23.3 Samson 45.8

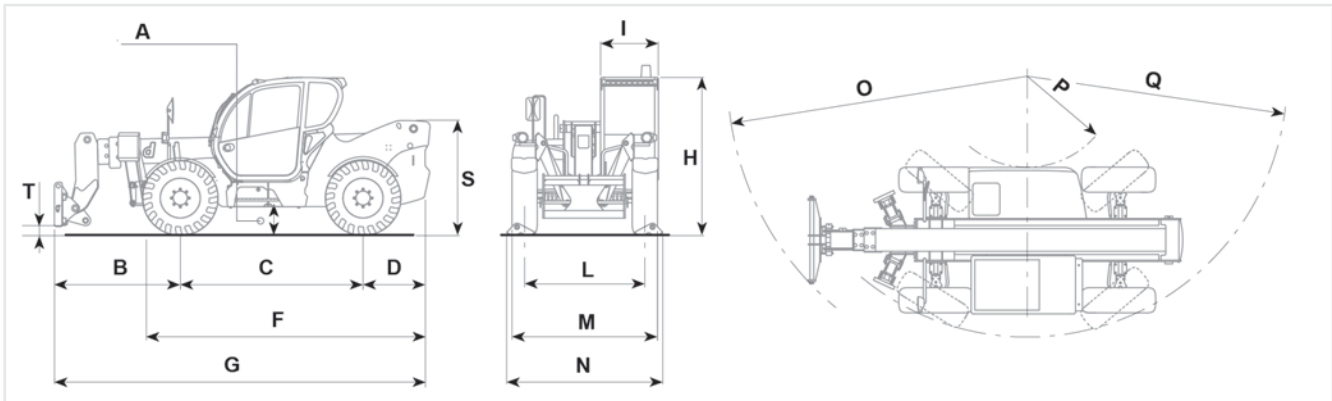

	MFG3321
Vehicle model	SAMSON 45.8
Sector	CONSTRUCTION
Homologation	XVM175
Technical type	175
Version	Operating
A	440 mm (17,3 in)
B	1480 mm (58,3 in)
C	2600 mm (102,4 in)
D	860 mm (33,9 in)
F	4000 mm (157,5 in)
G	4940 mm (194,5 in)
H	2460 mm (96,9 in)
I	940 mm (37 in)
L	1910 mm (75,2 in)
M	2310 mm (90,9 in)
O	4080 mm (160,6 in)
P	1260 mm (49,6 in)
Q	3920 mm (154,3 in)
S	-
T	125 mm (4,9 in)
U	2250 mm (88,6 in)
Z	1760 mm (69,3 in)
Maximum capacity	4500 kg (9921 lb)
Capacity at maximum height on wheels	2700 kg (5952 lb)
Capacity at maximum horizontal extension on wheels	1600 kg (3527 lb)
Maximum lifting height on wheels	7,90 m (25,9 ft)
Maximum horizontal extension on wheels	4,45 m (14,6 ft)
Fork swiveling angle	134°
Maximum climb angle	40%



	MFG3321
Pull-out force	5700 daN (12814 lbf)
Towing force	7300 daN (16411 lbf)
Lifting	13,0 s
Descent	9,8 s
Extension	6,8 s
Retraction	3,8 s
Forward swiveling	3,3 s
Reverse swiveling	2,3 s
Boom type	1-section telescopic boom
Wheels maximum capacity	4500 kg (9921 lb)
Maximum mass	10900 kg (24030 lb)
Unladen weight	8800 kg (19401 lb)
Maximum permitted mass on front axle	5650 kg (12456 lb)
Maximum permitted mass on rear axle	5800 kg (12787 lb)
Brand	FPT
Model	NEF-TCA-93
Fueling	Diesel
Displacement	4485 cm <sup>3</sup> (274 in <sup>3</sup> )
Operation	4-stroke
Cooling system	Liquid
Nominal power	93 kW (125 HP)
@rpm	2200 rpm
Peak power	-
@rpm	-
Maximum torque	525 Nm (387 lbft)
@rpm	1500 rpm
Number and arrangement of cylinders	4, Vertical in line
Injection	Mechanical direct
Consumption	230 g/kWh (378,35 lb/Hp h)
@rpm	2200 rpm
Intake	Turbo compressor after-cooler
Air Filter	Replaceable cartridge for dry filter
Emission standard	Stage IIIA/Tier 3
Exhaust gas treatment	-
Overspeed protection for speed	-
@rpm	-
CO emissions	-
HC emissions	-
NOx emissions	-
Particulate emissions	-
Alternator	-
Battery	-
Starter motor	-

	MFG3321
Hydraulic pump type	Gear pump for power steering and movements
Hydraulic pump capacity	130 L/min (34,3 gal/min)
Max. operating pressure	25,0 MPa (3626 psi)
Distributor control	4in1 proportional Joystick
Optional distributor control	4in1 proportional Joystick with FNR
Boom hydraulic sockets	With quick couplings
Rear hydraulic sockets	Up to 3 (optional)
Maximum pressure at rear hydraulic sockets	25,0 MPa (3626 psi)
Transmission type	Hydrostatic with variable flow pump
Hydraulic motor	Hydrostatic with continuous automatic adjustment
Reversal	Electro-Hydraulic
Transmission gearbox	Servocontrolled 2-speed
Inching	With hydraulic pedal for controlled forward movement
Type of axles	2 steering, with 4 planetary reduction gears
Driving axles	Front and rear
Service braking	Oil bath with servo brake on front and rear axle with double hydraulic system
Parking braking	Negative actuation with electrical control
Front axle	Rigid (Levelling upon request)
Rear axle	Swinging
Type of steering	4 wheels / transversal / 2 wheels
Engine oil quantity	10,00 L (2,64 gal)
Engine oil specifications	DIECI ENGINE HP SAE 15W-40; (< -20°C / < -4°F) DIECI ENGINE EVOLUTION TIR4 SAE 10W-30
Front axle oil quantity	7,50 L (1,98 gal)
Front reduction gears oil quantity	1,25 L (0,33 gal)
Front axle oil specifications	DIECI GEAR EP/E LS 85W-90 API GL-5, MIL-L-2105D; (< -20°C / < -4°F) DIECI SPECIAL LS SYNT AXEL OIL 75W-90
Rear axle oil quantity	7,75 L (2,05 gal)
Rear reduction gears oil quantity	1,25 L (0,33 gal)
Rear axle oil specifications	DIECI GEAR EP/E LS 85W-90 API GL-5, MIL-L-2105D; (< -20°C / < -4°F) DIECI SPECIAL LS SYNT AXEL OIL 75W-90
Transmission gearbox oil quantity	1,50 L (0,4 gal)
Transmission gearbox oil specifications	(from -10°C/14°F to +35°C/95°F) DIECI UTTO FLUID WB SAE 10W/30; (from -30°C/-22°F to +10°C/14°F) DIECI MTF III FLUID
Braking circuit oil quantity	1,20 L (0,32 gal)
Braking circuit oil specifications	DEXRON II
Coolant quantity	14,50 L (3,83 gal)
Coolant specifications	Antifreeze Red
Grease quantity	4,00 kg (9 lb)
Grease specifications	NLGI - 1
Hydraulic system (total)	155,0 L (40,95 gal)
Hydraulic oil type	DIECI Hydro Telehandler Fluid ISO46
Air conditioning refrigerant quantity	1,30 kg (3 lb)

	MFG3321
Air conditioning refrigerant specifications	R134A
Fuel tank	105,0 L (27,74 gal)
Acoustic pressure: Reference standard for stopped and running vehicle	-
Acoustic pressure: Value with stopped vehicle	-
Acoustic pressure: Value with running vehicle	-
Acoustic pressure: Reference standard perceived by the operator	-
Acoustic pressure: Value perceived by the operator with open cab	-
Acoustic pressure: Value perceived by the operator with closed cab	-
Acoustic power: Reference standard	Directive 2000/14/EC
Acoustic power: Measured value	106 dB(A)
Acoustic power: Guaranteed value	107 dB(A)
Reference standard for seat vibrations	-
Value for seat vibrations	-
Uncertainty for seat vibrations value	-
Reference standard for steering wheel vibrations	-
Value for steering wheel vibrations	-
Uncertainty for steering wheel vibrations value	-
Load per wheel	8500 daN (19109 lbf)
Reference Electromagnetic compatibility standard	-
Telehandler category	-
Telehandler capacity	-
Telehandler description	-
Standard tires	400/70x20"
Optional tires	400/70x24"; 18x22.5"
Unbraked trailer	-
Inertia braking	-
Mechanical braking	-
Hydraulic/pneumatic braking	-

Diagrams

Diagrams code	Vehicle code	Vehicle model	Production equipment code	Price list equipment code	Unit of measure	Operating Mode
AXB1326	MFG3321	Samson 45.8	BUD1077	TFR0007	Metric	Wheels - 0°
DOCDI000535	MFG3321	Samson 45.8	BUD1077	TFR0007	Imperial	Wheels - 0°

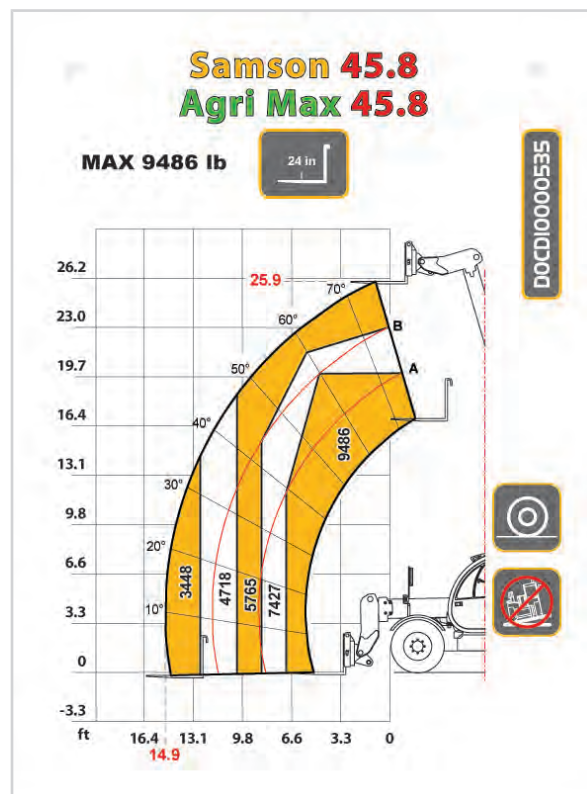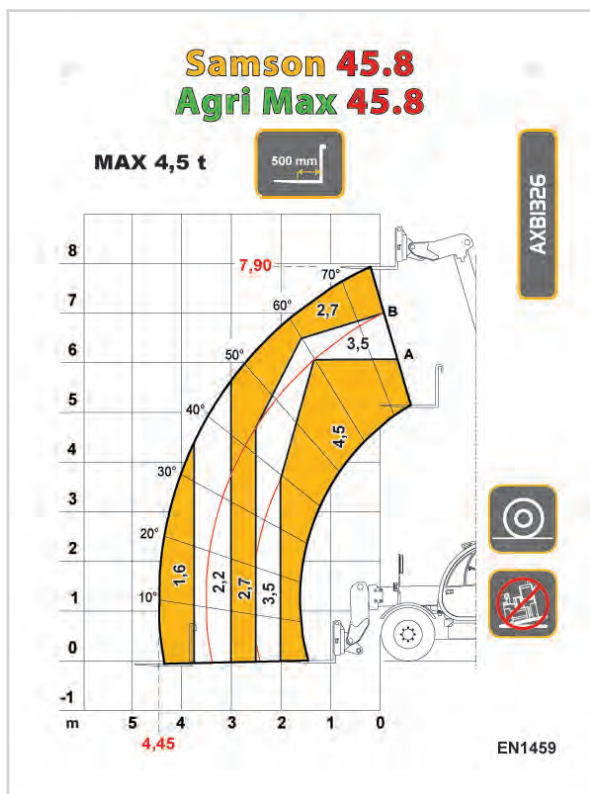


### 23.3.1 Equipment

	Production code	Description
TCV0008	BCV8069	Fork extender complete with pair of forks 120 x 50 L = 1200 mm and 5 t capacity
TCV0007	BCV8045, BCV8279	Fork counterplate (with pins) for use with quick attachment
TFR0007	BUD1077	Pair of floating forks mm 120 x 50 L = 1200. Capacity 5.0 t
TFR0002	BUD1051/OG, BUD1185	Pair of fork extensions L = 1900 mm for forks mm 120 x 50
TFR0009	BUD1121/OG	Fork counterplate guard
TBN0013	BUB2421	Bucket 4 in 1 m <sup>3</sup> 1.00 SAE heaped (L = 2.35 m)
TBN0030	BUB2462	Excavating bucket with teeth, m <sup>3</sup> 0.90 SAE heaped, (width 2.35 m) with teeth protection cover. (The bucket with blade protector is recommended) (Equipment approved for road use on the Italian territory)
TBN0031	BUB2462/S	Excavating bucket with teeth, m <sup>3</sup> 0.90 SAE heaped, (width 2.35 m) with protection
TBN0032	BUB2463	Excavating bucket without teeth, capacity 0.90 m <sup>3</sup> SAE heaped (width 2.35 m) with bucket blade cover. (The bucket with blade protector is recommended) (Equipment approved for road use on the Italian territory)
TBN0033	BUB2463/S	Excavating bucket without teeth, m <sup>3</sup> 0.90 SAE heaped, (width 2.35 m) with protection
TBN0020	BUB2422	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 1.00 SAE heaped (width 2,35 m) (The bucket with anti-wear blade protector is recommended) (Equipment approved for road use on the Italian territory)
TBN0021	BUB2422/S	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 1.00 SAE heaped (width 2.35 m) with blade protector
TBN0022	BUB2423	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 1.50 SAE heaped (width 2.35 m) (The bucket with anti-wear blade protector is recommended)
TBN0023	BUB2423/S	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 1.50 SAE heaped (width 2.35 m) with blade protector
TBN0026	BUB2424	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 2.00 SAE heaped (width 2.35 m) (The bucket with anti-wear blade protector is recommended)
TBN0027	BUB2424/S	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 2.00 SAE heaped (width 2.35 m) with blade protector
TBN0028	BUB2428	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 2.50 SAE heaped (width 2.35 m) (The bucket with anti-wear blade protector is recommended)
TBN0029	BUB2428/S	Bucket for light materials (max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 2.50 SAE heaped (width 2.35 m) with blade protector
TBN0034	BUD3060	Mixing bucket yield 350 l (Required electrical contact on boom head)
TBN0035	BUD3063	Mixing bucket yield 500 l (Required electrical contact on boom head)
TGN0012	BUD3020	Hydraulically opening ladle l 400
TGN0015	BUD3021	Hydraulically opening ladle l 600

	Production code	Description
TCS0002	BUD6218	Material basket 200 x 120 x 130 cm with side door. Capacity 1,000 kg
TSL0001	BUD4501, BUD4556	Jib (crane extension) L = 1.3 m with winch (Capacity 2.0 t). (Lifting equipment prearrangement or distributor with man basket and equipment prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0002	BUD4402, BUD4502	Jib (crane extension) L = 1.3 m with hook (capacity 2.0 t) (Lifting equipment prearrangement or distributor with man basket and lifting equipment prearrangement is compulsory, where present)
TSL0003	BUD4503, BUD4547	Jib (crane extension) L = 2.5 m with winch (Capacity 1.2 t). (Lifting equipment prearrangement or distributor with man basket prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0004	BUD4504	Jib (crane extension) L = 2.5 m with hook (capacity 1.2 t) (Lifting equipment prearrangement or distributor with man basket and lifting equipment prearrangement is compulsory, where present)
TSL0008	BUD4505	Jib (crane extension) L = 4.5 m with winch (Capacity 0.6 t). (Lifting equipment prearrangement or distributor with man basket and equipment prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0009	BUD4506	Jib (crane extension) L = 4.5 m with hook (capacity 0.6 t) (Lifting equipment prearrangement or distributor with man basket and lifting equipment prearrangement is compulsory, where present)
TSL0005	BUD4507	Winch for fork carriage (3.0 t capacity) with rope guide, double pull. (Lifting equipment prearrangement or distributor with man basket prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0010	BUD4508	Winch for fork carriage (4.0 t capacity) with rope guide, double pull. (Lifting equipment prearrangement or distributor with man basket prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0006	BUD4382, BUD4496	Jib L = 1.00 m with hook (capacity 2.5 t) (Lifting equipment prearrangement or distributor with man basket and equipment prearrangement is compulsory, where present)
TSL0007	BUB2448	Hook for fork carriage with the same capacity as the vehicle



## 23.4 Agri Max 45.8

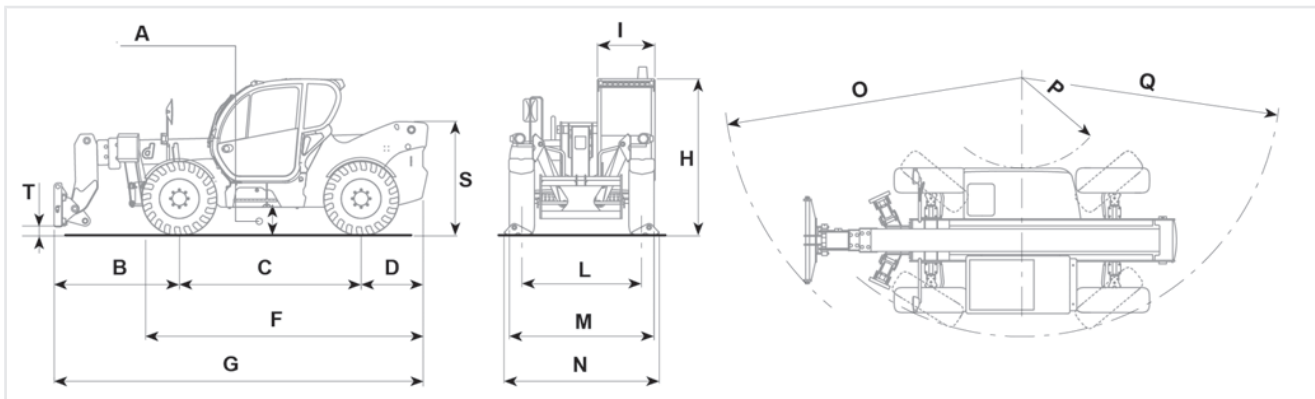

	MFG3322
Vehicle model	AGRI MAX 45.8
Sector	AGRICULTURAL
Homologation	XCM175
Technical type	175
Version	Tractor
A	440 mm (17,3 in)
B	1480 mm (58,3 in)
C	2600 mm (102,4 in)
D	860 mm (33,9 in)
F	4000 mm (157,5 in)
G	4940 mm (194,5 in)
H	2460 mm (96,9 in)
I	940 mm (37 in)
L	1910 mm (75,2 in)
M	2310 mm (90,9 in)
O	4080 mm (160,6 in)
P	1260 mm (49,6 in)
Q	3920 mm (154,3 in)
S	-
T	125 mm (4,9 in)
U	2250 mm (88,6 in)
Z	1760 mm (69,3 in)
Maximum capacity	4500 kg (9921 lb)
Capacity at maximum height on wheels	2700 kg (5952 lb)
Capacity at maximum horizontal extension on wheels	1600 kg (3527 lb)
Maximum lifting height on wheels	7,90 m (25,9 ft)
Maximum horizontal extension on wheels	4,45 m (14,6 ft)
Fork swiveling angle	134°
Maximum climb angle	40%



	<b>MFG3322</b>
Pull-out force	5700 daN (12814 lbf)
Towing force	7300 daN (16411 lbf)
Lifting	13,0 s
Descent	9,8 s
Extension	6,8 s
Retraction	3,8 s
Forward swiveling	3,3 s
Reverse swiveling	2,3 s
Boom type	1-section telescopic boom
Wheels maximum capacity	4500 kg (9921 lb)
Maximum mass	10900 kg (24030 lb)
Unladen weight	8800 kg (19401 lb)
Maximum permitted mass on front axle	5650 kg (12456 lb)
Maximum permitted mass on rear axle	5800 kg (12787 lb)
Brand	FPT
Model	NEF-TCA-93
Fueling	Diesel
Displacement	4485 cm <sup>3</sup> (274 in <sup>3</sup> )
Operation	4-stroke
Cooling system	Liquid
Nominal power	93 kW (125 HP)
@rpm	2200 rpm
Peak power	-
@rpm	-
Maximum torque	525 Nm (387 lbft)
@rpm	1500 rpm
Number and arrangement of cylinders	4, Vertical in line
Injection	Mechanical direct
Consumption	230 g/kWh (378,35 lb/Hp h)
@rpm	2200 rpm
Intake	Turbo compressor after-cooler
Air Filter	Replaceable cartridge for dry filter
Emission standard	Stage IIIA/Tier 3
Exhaust gas treatment	-
Overspeed protection for speed	-
@rpm	-
CO emissions	-
HC emissions	-
NOx emissions	-
Particulate emissions	-
Alternator	-
Battery	-
Starter motor	-

	MFG3322
Hydraulic pump type	Gear pump for power steering and movements
Hydraulic pump capacity	130 L/min (34,3 gal/min)
Max. operating pressure	25,0 MPa (3626 psi)
Distributor control	4in1 proportional Joystick
Optional distributor control	4in1 proportional Joystick with FNR
Boom hydraulic sockets	With quick couplings
Rear hydraulic sockets	Up to 3 (optional)
Maximum pressure at rear hydraulic sockets	25,0 MPa (3626 psi)
Transmission type	Hydrostatic with variable flow pump
Hydraulic motor	Hydrostatic with continuous automatic adjustment
Reversal	Electro-Hydraulic
Transmission gearbox	Servocontrolled 2-speed
Inching	With hydraulic pedal for controlled forward movement
Type of axles	2 steering, with 4 planetary reduction gears
Driving axles	Front and rear
Service braking	Oil bath with servo brake on front and rear axle with double hydraulic system
Parking braking	Negative actuation with electrical control
Front axle	Rigid (Levelling upon request)
Rear axle	Swinging
Type of steering	4 wheels / transversal / 2 wheels
Engine oil quantity	10,00 L (2,64 gal)
Engine oil specifications	DIECI ENGINE HP SAE 15W-40; (< -20°C / < -4°F) DIECI ENGINE EVOLUTION TIR4 SAE 10W-30
Front axle oil quantity	7,50 L (1,98 gal)
Front reduction gears oil quantity	1,25 L (0,33 gal)
Front axle oil specifications	DIECI GEAR EP/E LS 85W-90 API GL-5, MIL-L-2105D; (< -20°C / < -4°F) DIECI SPECIAL LS SYNT AXEL OIL 75W-90
Rear axle oil quantity	7,75 L (2,05 gal)
Rear reduction gears oil quantity	1,25 L (0,33 gal)
Rear axle oil specifications	DIECI GEAR EP/E LS 85W-90 API GL-5, MIL-L-2105D; (< -20°C / < -4°F) DIECI SPECIAL LS SYNT AXEL OIL 75W-90
Transmission gearbox oil quantity	1,50 L (0,4 gal)
Transmission gearbox oil specifications	(from -10°C/14°F to +35°C/95°F) DIECI UTTO FLUID WB SAE 10W/30; (from -30°C/-22°F to +10°C/14°F) DIECI MTF III FLUID
Braking circuit oil quantity	1,20 L (0,32 gal)
Braking circuit oil specifications	DEXRON II
Coolant quantity	14,50 L (3,83 gal)
Coolant specifications	Antifreeze Red
Grease quantity	4,00 kg (9 lb)
Grease specifications	NLGI - 1
Hydraulic system (total)	155,0 L (40,95 gal)
Hydraulic oil type	DIECI Hydro Telehandler Fluid ISO46
Air conditioning refrigerant quantity	1,30 kg (3 lb)

	MFG3322
Air conditioning refrigerant specifications	R134A
Fuel tank	105,0 L (27,74 gal)
Acoustic pressure: Reference standard for stopped and running vehicle	-
Acoustic pressure: Value with stopped vehicle	-
Acoustic pressure: Value with running vehicle	-
Acoustic pressure: Reference standard perceived by the operator	-
Acoustic pressure: Value perceived by the operator with open cab	-
Acoustic pressure: Value perceived by the operator with closed cab	-
Acoustic power: Reference standard	Directive 2000/14/EC
Acoustic power: Measured value	106 dB(A)
Acoustic power: Guaranteed value	107 dB(A)
Reference standard for seat vibrations	-
Value for seat vibrations	-
Uncertainty for seat vibrations value	-
Reference standard for steering wheel vibrations	-
Value for steering wheel vibrations	-
Uncertainty for steering wheel vibrations value	-
Load per wheel	8500 daN (19109 lbf)
Reference Electromagnetic compatibility standard	-
Telehandler category	-
Telehandler capacity	-
Telehandler description	-
Standard tires	400/70x20"
Optional tires	400/70x24"; 18x22.5"
Unbraked trailer	-
Inertia braking	-
Mechanical braking	-
Hydraulic/pneumatic braking	-

Diagrams

Diagrams code	Vehicle code	Vehicle model	Production equipment code	Price list equipment code	Unit of measure	Operating Mode
AXB1326	MFG3322	Agri Max 45.8	BUD1077	TFR0007	Metric	Wheels - 0°
DOCDI0000535	MFG3322	Agri Max 45.8	BUD1077	TFR0007	Imperial	Wheels - 0°

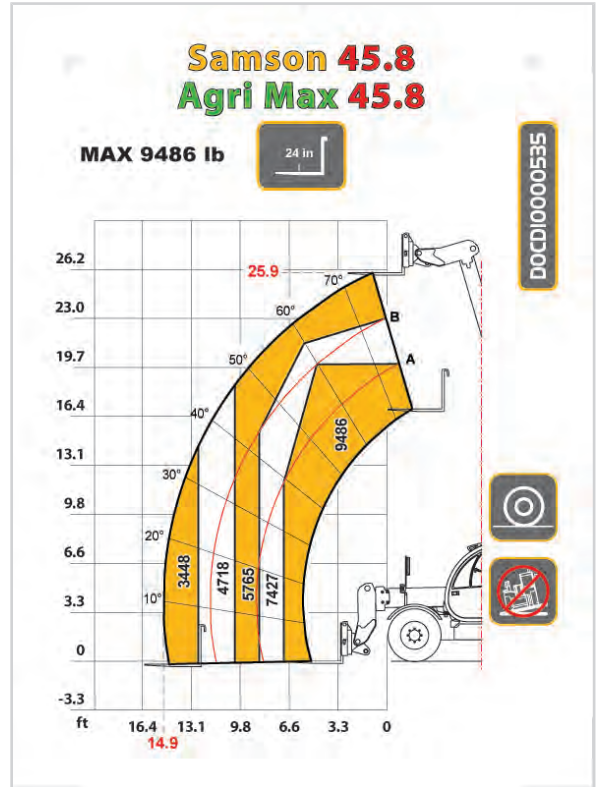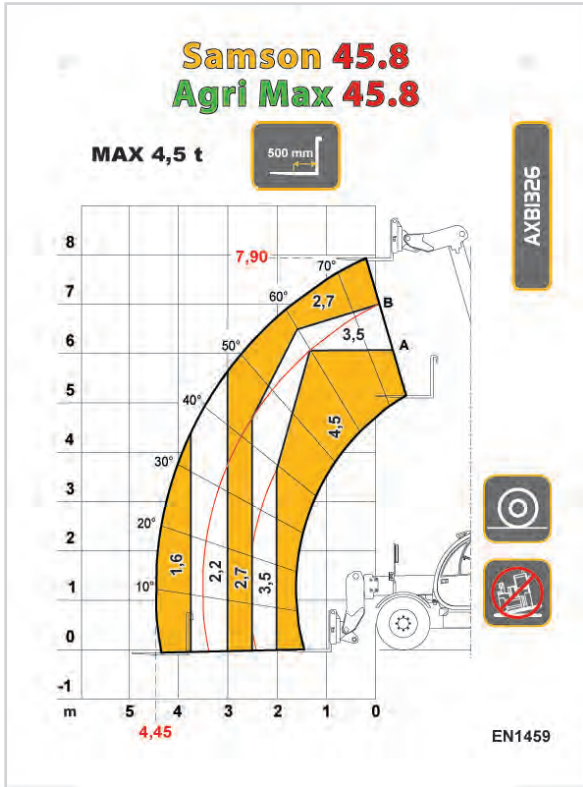

## 23.4.1 Equipment

	Production code	Description
TCV0012	BCV8294	Fork extender complete with pair of forks (Valid exclusively for Floating forks 150 x 60 L = 1200)
TCV0011	BCV8276	Fork counterplate (with pins) for use with quick coupling
TFR0017	BUD1187	Pair of floating forks mm 150 x 60 L = 1200. Capacity 7.5 t
TFR0018	BUD1188	Pair of floating forks mm 200 x 60 L = 1400. Capacity 7.5 t
TFR0012	BUD1050/0G, BUD1182	Pair of fork extensions L = 1900 mm (Valid exclusively for floating forks mm 150 x 60 L = 1200)
TFR0013	BUD1054/0G, BUD1186	Fork extensions L = 1900 mm (Valid exclusively for floating forks mm 200x60 L = 1400)
TFR0014	BUD1122/0G	Fork counterplate guard
TGN0016	BUD4057	Grab clamp for two roll bales
TGN0017	BUD4058	Clamp for big wrapped bales
TGN0018	BUB2505/0G, BUB2643	Fork with two jointed prongs for roll bale
TGN0019	BUB2620	Fork with three jointed prongs for roll bale
TGN0020	BUD1168	Fork for logs
TGN0021	BUD1073	Multipurpose fork with holder
TCS0017	BUD6485	Front man basket cm 120 x 215. Capacity 300 Kg including 3 persons (Proportional hydraulic distributor with basket and lifting accessories pre-arrangement is compulsory)
TCS0018	BUD6486	Front man basket cm 120x240 with hydraulic extension up to cm 420. Capacity 300 Kg including 3 persons (Proportional hydraulic distributor with basket and lifting accessories pre-arrangement is compulsory)
TCS0019	BUD6487	Trilateral man basket cm 120 x 215. Capacity 300 Kg including 3 persons (Proportional hydraulic distributor with basket and lifting accessories pre-arrangement is compulsory)
TCS0020	BUD6488	Trilateral man basket cm 120x240 with hydraulic extension up to cm 420. Capacity 300 Kg including 3 persons (Proportional hydraulic distributor with basket and lifting accessories pre-arrangement is compulsory)
TCS0021	BUD6490	Trilateral man basket cm 120x240 with hydraulic extension up to cm 420. Capacity 800 Kg including 3 persons (Proportional hydraulic distributor with Basket and lifting accessories pre-arrangement is compulsory)
TCS0070	BUD6493	Trilateral man basket cm 120 x 215. Capacity 800 Kg including 3 persons (Proportional hydraulic distributor with Basket and lifting accessories pre-arrangement is compulsory)
TCS0016	BUD6217	Material basket 200 x 120 x 130 cm with side door. Capacity 1000 kg
TSL0011	BUD4509	Jib (crane extension) L = 1.3 m with winch (Capacity 2.0 t). (Lifting equipment prearrangement or distributor with man basket prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0012	BUD4510	Jib (crane extension) L = 1.3 m with hook (capacity 2.0 t) (Lifting equipment prearrangement or distributor with man basket and lifting equipment prearrangement is compulsory, where present)

	Production code	Description
TSL0013	BUD4511, BUD4560	Jib (crane extension) L = 2.5 m with winch (Capacity 1.2 t). (Lifting equipment prearrangement or distributor with man basket prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0014	BUD4512	Jib (crane extension) L = 2.5 m with hook (capacity 1.2 t) (Lifting equipment prearrangement or distributor with man basket and lifting equipment prearrangement is compulsory, where present)
TSL0015	BUD4515	Winch for fork carriage (3.0 t capacity) with rope guide, double pull. (Lifting equipment prearrangement or distributor with man basket prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0016	BUD4516	Winch for fork carriage (4.0 t capacity) with rope guide, double pull. (Lifting equipment prearrangement or distributor with man basket prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0017	BUD4517	Winch for fork carriage (5.0 t capacity) double pull, with rope guide. (Lifting equipment prearrangement or distributor with man basket prearrangement is compulsory, where present. Incompatible with closed center services distributor, where present)
TSL0018	BUD4498	Jib L = 1.00 m with hook (capacity 3.0 t).(Prearrangement for lifting equipment or distributor with basket and lifting equipment prearrangement, where present, is compulsory)
TSL0020	BUD4499	Jib L = 1.40 m with hook (capacity 3.0 t).(Prearrangement for lifting equipment or distributor with basket and lifting equipment prearrangement, where present, is compulsory)
TSL0019	BUB2449	Hook for fork carriage with the same capacity as the vehicle
TSL0045	BUB2631	Hook for fork carriage with the same capacity as the vehicle valid for plate with double-quick coupling
TBN0185	BUB2654	Standard bucket, m <sup>3</sup> 1.25 SAE heaped, (width 2.45 m). (The bucket with blade protector is recommended) (Equipment approved for road circulation in Italy)
TBN0190	BUB2654-S	Standard bucket with bolted blade protector, m <sup>3</sup> 1.25 SAE heaped, (width 2.45 m) with blade protector. (Equipment approved for road circulation in Italy)
TBN0194	BUB2655	Standard bucket with teeth, m <sup>3</sup> 1.25 SAE heaped, (width 2.45 m) with teeth protection cover. (Equipment approved for road circulation in Italy)
TBN0198	BUB2656	Oversize bucket (material max spec. weight 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 2.50 SAE heaped (width 2.45 m) (The bucket with blade protector is recommended)
TBN0202	BUB2656-S	Oversize bucket with bolted blade protector (material spec. weight max 0.8 t/ m <sup>3</sup> ) m <sup>3</sup> 2.50 SAE heaped (width 2.45 m)
TBN0207	BUB2657	Extra-oversize bucket (material max spec. weight 0.4 t/ m <sup>3</sup> ) m <sup>3</sup> 3.5 SAE heaped (width 2.45 m) (The bucket with blade protector is recommended)
TBN0212	BUB2657-S	Extra-oversize bucket with bolted blade protector (material max spec. weight 0.4 t/ m <sup>3</sup> ) m <sup>3</sup> 3.5 SAE heaped (width 2.45 m)

	Production code	Description
TBN0215	BUB2669	4 in 1 bucket, capacity m <sup>3</sup> 1.25 SAE heaped (L = 2.45 m)
TBN0253	BUB2669-S	4 in 1 bucket with bolted blade protector capacity m <sup>3</sup> 1.25 SAE heaped (L = 2.45 m)
TBN0220	BUB2666	Bucket with grab for manure capacity m <sup>3</sup> 2.50 SAE heaped (width 2.45 m)
TBN0223	BUB2666-S	Bucket with grab for manure and bolted blade guard, capacity m <sup>3</sup> 2.50 SAE heaped (width 2.45 m)
TBN0226	BUB2667	Bucket with grab for silage m <sup>3</sup> 2.50 SAE heaped (width 2.45 m)
TBN0229	BUB2667-S	Bucket with grab for silage and bolted blade guard capacity m <sup>3</sup> 2.50 SAE heaped (width 2.45 m)
TBN0254	BUB2765	Bucket with grab for fodder capacity m <sup>3</sup> 2.50 SAE heaped (width 2.45 m)
TBN0255	BUB2765-S	Bucket with grab for fodder and bolted blade protector capacity m <sup>3</sup> 2.50 SAE heaped (width 2.45 m)
TBN0249	CARSA0000940	Blade protector Width 2.45 m to be bolted
TBN0132	DRE3511	Mobile level indicator
TBN0234	ASMCM0000325-0G	Blade Cover/Teeth Width 2.45 m
TBN0251	ASMCM0000257-0G	Protection guard for bucket
TBN0252	ASMCM0000258-0G, ASMCM0000259-0G	Protection guard for bucket with grab



## 23.5 Environmental conditions

Although the vehicle and the equipment can be used in several different situations, however, it is necessary to observe, as a precautionary measure, compliance with minimum standards of operation as specified below:

Parameter	Allowed values
Operating temperatures	from -20°C to +40 °C (from -4 °F to 104 °F)
Average daily temperature	< +40 °C (< 104 °F)
Storage temperature	from -25°C to +50 °C (from -13 °F to 122 °F)
Humidity	from 20 % to 95 %
Altitude	< 2500 m (< 8200 ft)

Table 7: Environmental conditions table

## 23.6 Electromagnetic Interference

In the case of additional equipment installed by the customer, the user must verify if the installation causes interference of any kind with the tools of the vehicle; if so, the user must correct such interferences.

It is essential to pay particular attention to mobile devices such as radio communications (telephones) that must be installed by trained service technicians must use externally mounted antennas.

In general, it should be kept in mind that any additional electrical equipment installed must comply with the regulations in the country of use of the vehicle.

## 23.7 Radiations

The machine, in conditions of normal use, does not produce any type of radiation, ionizing and non ionizing, that can cause problems to the operator.

## 23.8 DIECI Hydro Telehandler Fluid ISO46

The sticker shown aside (170350-1) indicates that the hydraulic circuit is filled with hydraulic oil DIECI Hydro Telehandler Fluid ISO46.



170350-1

### Specifications:

ISO 6743-4 HV, Afnor NFE 48-602, ISO 11158, DIN 51524 Part 3 HVLP, Afnor NFE 48-603 HV, ASTM D6158, Denison HF-0 / HF-1 / HF-2, Eaton Vickers I-286-S / M-2950-S, Cincinnati Vehicle P-68 / P-69 / P-70, Afnor NFE 48-690(dry), Afnor NFE 48-691(wet), U.S. Steel 126 / 127 / 136, JCMAS HK, Bosch variable vane pumps, Rexroth RE 90220, Sauer Danfoss 520L0463, General Motors (LS-2) LH-03-1 / LH-04-1 / LH-06-1, SEB 181222.

### Chemical-physical characteristics

Properties	Analysis method	Unit of measure	Value
Density at 15°C	ASTM D1298	kg/l	0.88
Viscosity at 40°C	ASTM D445	cSt	46.6
Viscosity at 100°C	ASTM D445	cSt	8.6
Viscosity Index	ASTM D2270	-	165
Kinematic viscosity at 40°C after Sonic Shear	ASTM D445	cSt	41.6
Viscosity Index after Sonic Shear	ASTM D2270	-	144
FZG Failure Load Stage	ASTM D5182	Stage	12
Flash Point (C.O.C.)	ASTM D92	°C	210
Pour point	ASTM D97	°C	-35
Temperature for Brookfield viscosity of 750cP	ASTM D2983	°C	-9

# 23.9 DIECI Hydro Telehandler Fluid ISO32



## NOTE

**Hydraulic oil for cold climates is an optional.**

Consult your dealer in case of doubts or information on your vehicle.

The sticker shown aside (170351-1) indicates that the hydraulic circuit is filled with hydraulic oil DIECI Hydro Telehandler Fluid ISO32.



170351-1

### Specifications:

ISO 6743-4 HV, Afnor NFE 48-602, ISO 11158, DIN 51524 Part 3 HVL P, Afnor NFE 48-603 HV, ASTM D6158, Denison HF-0 / HF-1 / HF-2, Eaton Vickers I-286-S / M-2950-S, Cincinnati Vehicle P-68 / P-69 / P-70, Afnor NFE 48-690(dry), Afnor NFE 48-691(wet), U.S. Steel 126 / 127 / 136, JCMAS HK, Bosch variable vane pumps, Rexroth RE 90220, Sauer Danfoss 520L0463, General Motors (LS-2) LH-03-1 / LH-04-1 / LH-06-1, SEB 181222


### Chemical-physical characteristics:

Properties	Analysis method	Unit of measure	Value
Color	-	-	Green-Blue
Density at 15°C	ASTM D1298	kg/l	0.878
Viscosity at 40°C	ASTM D445	cSt	32.4
Viscosity at 100°C	ASTM D445	cSt	6.6
Viscosity Index	ASTM D2270	-	165
Flash Point (C.O.C.)	ASTM D92	°C	205
Pour point	ASTM D97	°C	-37

## 23.10 Declaration of conformity for F-Gas

In accordance with Art. 12 of EU Reg.No. 517/2014 concerning the fluorinated gases contained in the air-conditioning system, on the vehicles there are:

- Label indicating the amount of fluorinated gases present (Fig. 170501).
- Declaration of Conformity (a facsimile is shown below)

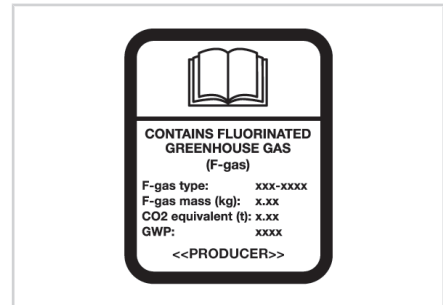

170501-1

**(Declaration of conformity with article 14 of Regulation (EU) No 517/2014 of the European Parliament and of the Council)**

We Dieci s.r.l. (VAT number 01682740350), declare under our sole responsibility that when placing on the market pre-charged equipment, which we import to or manufacture in the Union, the hydrofluorocarbons contained in that equipment are accounted for within the quota system referred to in Chapter IV of Regulation (EU) No 517/2014 of the European Parliament and of the Council as:

*[please tick the relevant option(s): coverage by the quota system is achieved by one or more of the options below]*

A. we hold authorisation(s) issued in accordance with Article 18(2) of Regulation (EU) No 517/2014 and registered in the registry referred to in Article 17 of that Regulation, at the time of release for free circulation to use the quota of a producer or importer of hydrofluorocarbons subject to Article 15 of Regulation (EU) No 517/2014 that cover(s) the quantity of hydrofluorocarbons contained in the equipment.

B. *[for importers of equipment only]* the hydrofluorocarbons contained in the equipment have been placed on the market in the Union, subsequently exported and charged into the equipment outside the Union, and the undertaking that placed the hydrofluorocarbons on the market made a declaration stating that the quantity of hydrofluorocarbons has been or will be reported as placed on the market in the Union and that it has not been and will not be reported as direct supply for export in the meaning of Article 15(2)(c) of Regulation (EU) No 517/2014 pursuant to Article 19 of Regulation (EU) No 517/2014 and Section 5C of the Annex to Commission Implementing Regulation (EU) No 1191/2014.

C. *[for equipment manufactured in the Union only]* the hydrofluorocarbons charged into the equipment were placed on the market by a producer or importer of hydrofluorocarbons subject to Article 15 of Regulation (EU) No 517/2014.


**Signed for and on behalf of:** Ennio Manghi, Director at DIECI S.r.l.

**Montecchio Emilia, 31.01.2017**

**DIECI SRL**  
Via E. Majorana, 2-4  
Montecchio Emilia (RE)  
One of the Directors  
Ennio Manghi

**Dieci Srl**  
Via E. Majorana, 2-4 • 42027 Montecchio Emilia • (Reggio Emilia) ITALY  
Tel. ++39 0522 869611 • Fax ++39 0522 869798 (Reception) - Fax ++39 0522 869797 (Amms.re)  
[www.dieci.com](http://www.dieci.com) • E-mail: [info@dieci.com](mailto:info@dieci.com)  
Cap. Soc. Int. Vers. € 10.000.000,00 Reg. Imp. R.E. N. 01283560686 R.E.A. R.E. N. 204278 - C.F. 01283560686 • P.I. 01682740350

# 23.11 Forks technical data

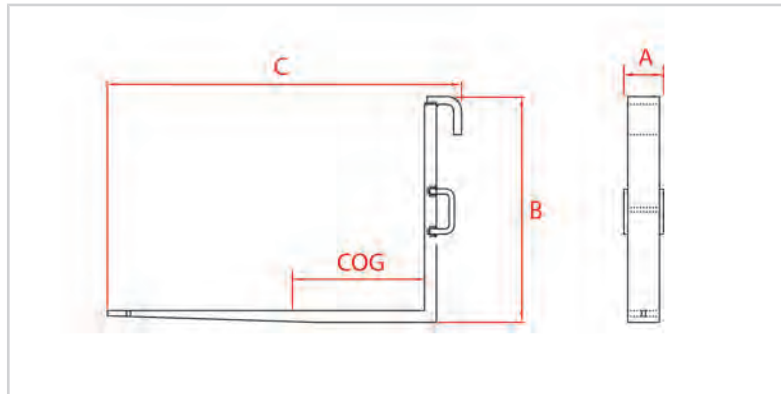


170221-1: Forks dimensions

**NOTE!** The dimensions indicated are for only one fork.

	<b>BUD1059</b>
Price list equipment code	TFR0008
Capacity	3800 kg (8378 lb)
Weight	85 kg (187 lb)
Width (A)	150 mm (5,9 in)
Height (B)	855 mm (33,7 in)
Length (C)	1340 mm (52,8 in)
COG	500 mm (19,7 in)
Width section	120 mm (4,7 in)
Height section	45 mm (1,8 in)
	<b>BUD1077</b>
Price list equipment code	TFR0007
Capacity	4500 kg (9921 lb)
Weight	97 kg (214 lb)
Width (A)	150 mm (5,9 in)
Height (B)	865 mm (34,1 in)
Length (C)	1345 mm (53 in)
COG	500 mm (19,7 in)
Width section	120 mm (4,7 in)
Height section	50 mm (2 in)

## 23.12 Buckets technical data

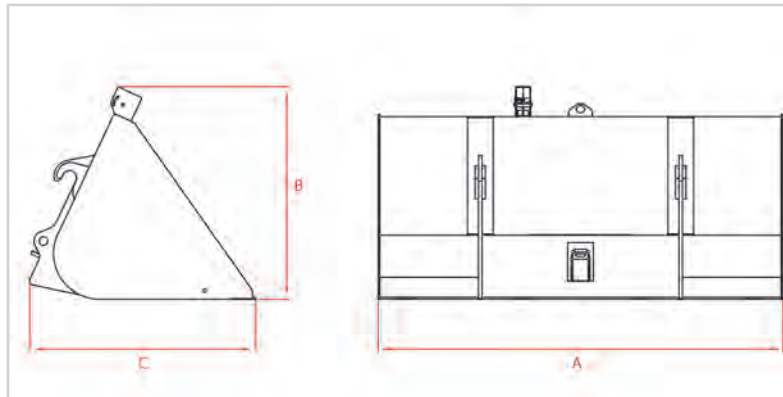

170220-1: Buckets dimensions

	<b>BUB2422</b>
Price list equipment code	TBN0020
SAE heap capacity	1 m <sup>3</sup> (35 ft <sup>3</sup> )
Struck capacity	-
Maximum density	-
Type of use	-
Weight	360 kg (794 lb)
Width (A)	2370 mm (93,3 in)
Height (B)	1015 mm (40 in)
Length (C)	1025 mm (40,4 in)
Tooth code	-
Number of teeth	-
	<b>BUB2423</b>
Price list equipment code	TBN0022
SAE heap capacity	1,5 m <sup>3</sup> (53 ft <sup>3</sup> )
Struck capacity	-
Maximum density	-
Type of use	-
Weight	365 kg (805 lb)
Width (A)	2370 mm (93,3 in)
Height (B)	1108 mm (43,6 in)
Length (C)	1175 mm (46,3 in)
Tooth code	-
Number of teeth	-
	<b>BUB2424</b>
Price list equipment code	TBN0026
SAE heap capacity	2 m <sup>3</sup> (71 ft <sup>3</sup> )
Struck capacity	-
Maximum density	-
Type of use	-

	<b>BUB2424</b>
Weight	485 kg (1069 lb)
Width (A)	2370 mm (93,3 in)
Height (B)	1244 mm (49 in)
Length (C)	1325 mm (52,2 in)
Tooth code	-
Number of teeth	-

	<b>BUB2428</b>
Price list equipment code	TBN0028
SAE heap capacity	2,5 m <sup>3</sup> (88 ft <sup>3</sup> )
Struck capacity	2,0 m <sup>3</sup> (71 ft <sup>3</sup> )
Maximum density	-
Type of use	-
Weight	560 kg (1235 lb)
Width (A)	2370 mm (93,3 in)
Height (B)	1398 mm (55 in)
Length (C)	1445 mm (56,9 in)
Tooth code	-
Number of teeth	-

	<b>BUB2462</b>
Price list equipment code	TBN0030
SAE heap capacity	1,44 m <sup>3</sup> (51 ft <sup>3</sup> )
Struck capacity	1,16 m <sup>3</sup> (41 ft <sup>3</sup> )
Maximum density	-
Type of use	-
Weight	405 kg (893 lb)
Width (A)	2370 mm (93,3 in)
Height (B)	1033 mm (40,7 in)
Length (C)	937 mm (36,9 in)
Tooth code	-
Number of teeth	-

	<b>BUB2463</b>
Price list equipment code	TBN0032
SAE heap capacity	0,90 m <sup>3</sup> (32 ft <sup>3</sup> )
Struck capacity	0,70 m <sup>3</sup> (25 ft <sup>3</sup> )
Maximum density	-
Type of use	-
Weight	400 kg (882 lb)
Width (A)	2370 mm (93,3 in)
Height (B)	1021 mm (40,2 in)
Length (C)	826 mm (32,5 in)
Tooth code	-
Number of teeth	-

## 23.13 Tires data

Type	Attachments	Tire dimensions	Characteristics	Brand	bar	MPa	psi	Rim size	Drawing
<b>175</b>	Standard	405/70-20 (16/70-20)	14 PR	MITAS	3.00	0.30	43	13.00 x 20	MPT-01
<b>175</b>	Alternative	400/70-20 (16/70-20)	149A8	MICHELIN	4.00	0.40	58	13.00 x 20	IND
<b>175</b>	Alternative	400/70-24 (16/70-24)	158A8	MICHELIN	5.00	0.50	73	13.00 x 24	IND
<b>175</b>	Alternative	405/70-20 (16/70-20)	14 PR	MITAS	3.50	0.35	50	13.00 x 20	MPT-04
<b>175</b>	Alternative	405/70-20 (16/70-20)	14 PR	BKT	4.50	0.45	65	13.00 x 20	MP 567
<b>175</b>	Alternative	405/70-24 (16/70-24)	14 PR	MITAS	4.00	0.40	58	13.00 x 24	MPT-01
<b>175</b>	Alternative	405/70-24 (16/70-24)	14 PR	MITAS	4.00	0.40	58	13.00 x 24	MPT-04
<b>175</b>	Alternative	405/70-24 (16/70-24)	14 PR	BKT	4.50	0.45	65	13.00 x 24	EM 936
<b>175</b>	Alternative	405/70-24 (16/70-24)	14 PR	BKT	4.50	0.45	65	13.00 x 24	MP 600
<b>175</b>	Alternative	18-22.5 (445/65-22.5)	16 PR	MITAS	4.50	0.45	65	14.00 x 22.5	MPT-06
<b>175</b>	Alternative	18-22.5 (445/65-22.5)	16 PR	BKT	4.50	0.45	65	14.00 x 22.5	MP 590
<b>175</b>	Alternative	18 R22.5 (445/65 R22.5)	169F	MITAS	8.00	0.80	116	14.00 x 22.5	AR-01



## 24 Control and maintenance logs

The Control Log and Maintenance Log are to be considered as integral parts of the machine and equipment.

These logs must therefore accompany the machine and equipment for their life, to final disposal.

### 24.1 Type of logs

#### 24.1.1 Control log

On the Control Log are recorded the main checks on the safety devices of the equipment, recommended by *Dieci S.r.l.*, with the related deadlines.

These checks ensure the proper operation of the safety devices.



#### NOTE

The checks specified in the Control Log are in addition to the routine maintenance described in the Maintenance Log.

#### 24.1.2 Maintenance Log

On the Maintenance Log are recorded all scheduled maintenance with timelines, referred to the use in normal, and not heavy, conditions. Such maintenance interventions allow to keep the machine or the equipment in the best efficiency conditions.

The scheduled maintenance intervals frequency must be reduced even to daily, if necessary, in particularly heavy working conditions (humidity, mud, sand, high dust level, etc ...).



#### NOTE

Consult the *DIECI* service center to establish appropriate timelines when working in particularly heavy environments.

## 24.2 Instructions for compiling the logs

### 24.2.1 Warnings on the control log

- The log must be prepared in accordance with the requirements imposed by the Essential Safety Requirement 4.4.2.b Annex I of the Machinery Directive 2006/42/EC, in order to preserve evidence of the proper conduct of all the inspection and maintenance activities concerning the machine safety.
- In the log, in addition to all the activities relating to the life, use and maintenance of safety systems of the machine (replacement of parts, overhauls, breakdowns, etc.) it is necessary to record all the checks required by the regulations in force in the country where the machine is used.
- It is also necessary that the name of the verifier technician and date of intervention are clearly identifiable.
- It is recommended to prepare, update and preserved with care, for the entire life of the machine or equipment, the control log.



#### NOTE

**Here following there are some pages to allow compiling such logs.**

Consult the Dieci s.r.l. service center to obtain more information regarding the availability of control and maintenance logs.

### 24.2.2 Warnings on the maintenance log

- The maintenance log shall prevail for warranty claims. All activities relating to the life, use and maintenance of the machine must be registered in the log.

### 24.2.3 Logs compiling

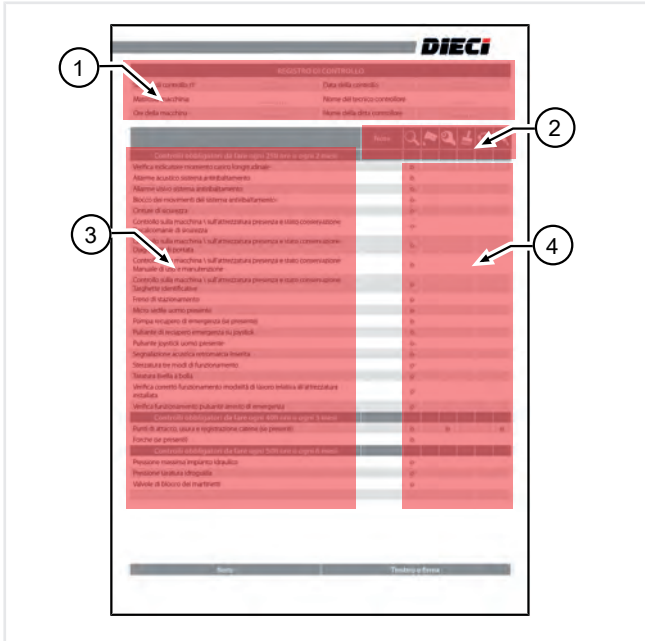


Figure: 150606-1

Each log (fig. 150606-1) requires the compilation of several parts:

1. Log data
2. Operations to carry out
3. Component or device on which to carry out the operation to be performed
4. Space that indicates the obligatory operation marked by the symbol "o", and the possibility to annotate an extraordinary operation not included in the log.

### 24.2.4 Logs legend

Symb ol	Description
	Control - Check
	Refueling
	Adjustment
	Cleaning
	Replacement

Symb ol	Description
	Lubrication
	Intervention at an authorized service center

### 24.2.5 Intervals legend



#### NOTE

**The intervals are defined both in hours of work and in time intervals from the date of purchase.**

It is necessary to make interventions at the end of the first interval, either work hours or time.

Timeli nes	Description
0h	According to the need - To be completed in the case of checks not linked to deadlines but more or less related to the heavy operation of the vehicle
10h / 1m	Every 10 hours of operation or every month
50h / 1m	Every 50 hours of operation or every month
250h / 2m	Every 250 hours of operation or every 2 months
500h / 6m	Every 500 hours of operation or every 6 months
1000h / 1y	Every 1000 hours of operation or every year
2000h	Every 2000 hours of operation
4000h	Every 4000 hours of operation
2y	Every 2 years

### 24.3 Periodic checks and recording mode (Italian only)

- The employer/operator of the machine is required to submit the machine to the periodic checks provided by law (Ministerial Decree 12/9/59 and Legislative Decree 81/08).

- He/she also has the obligation to comply with the maintenance and surveillance plan described in this Use and Maintenance Manual of the machine.
- The periodic inspection, testing and maintenance must be carried out by specialized personnel appointed for that purpose or by a workshop authorized by the manufacturer DIECI S.r.l.
- The employer/operator of the machine must record or appoint personnel trained for the purpose to record the results of the checks into the Control Log.
- Regular checks that have to be entered in the "Control log" are:
  - Quarterly periodic checks regarding the functionality and/or efficiency of ropes/chains according to Annex VI section 3.1.2 of Legislative Decree 81/08;
  - Yearly periodic checks regarding the operation and storage of the machine for safety purposes (yearly inspections, corrosion checks, calibration check, etc.) in accordance with Annex VII of Legislative Decree 81/08;
- The law provides administrative sanctions against those who do not carry out the quarterly and yearly checks.
- The Control Log, in which it is necessary to record the checks, must be shown on request to the officials responsible for monitoring the current legislation.
- Following the yearly periodic check the Local Health Authority official (Dip.SSIA), or the private Enabled Party chosen, issues a suitability report or prescribes the necessary obligations. The user is obliged to preserve the check report together with the Control Log.
- The checks evaluation must be recorded in the following dedicated pages indicating the outcome of the check, date, signature and any comments of the party in charge.
- If the pages dedicated in this Manual are insufficient for the annotations made in the life of the machine, use additional sheets being careful to compile them in the same way.

## 24.4








### Obligation and how to report to I.N.A.I.L. (National institute for insurance against accidents at work) (Italy only)

- The Legislative Decree 81/08 - Annex VII prescribes the obligation, to employers and users of lifting equipment with motor with capacity > 200 kg and lifting platforms for persons, to report the successful commissioning to the competent authority of the territory of the vehicle (currently I.N.A.I.L.), specifying the place of installation of the vehicle so that the authority itself may carry out the first verification.
- The report to I.N.A.I.L. must be carried out by attaching to the machine commissioning report a copy of the EC Declaration of Conformity of machinery referred to in Annex IIA of the Legislative Decree 17/2010 - Machinery Directive 2006/42/ EC.
- The original statements (CE Declaration of Conformity - Annex IIA) must be retained by the customer.
- The report to I.N.A.I.L. may be sent by registered letter with return receipt.

## 24.5 Control log

The following are some sheets for filling in the Control Log.

CONTROL LOG			
Control sheet no.	.....	Control date	.....
Vehicle serial number:	.....	Controller technician name	.....
Vehicle hours	.....	Controller company name	.....

	Controls							
250h / 3m	Longitudinal load momentum indicator check	<input type="checkbox"/>						
250h / 3m	Audible tipping alarm	<input type="checkbox"/>						
250h / 3m	Visual tipping warning	<input type="checkbox"/>						
250h / 3m	Anti-tipping system movements block	<input type="checkbox"/>						
250h / 3m	Seat belts	<input type="checkbox"/>						
250h / 3m	Control over the vehicle \ equipment for the presence and status of conservation of Safety Stickers	<input type="checkbox"/>						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Capacity Diagrams	<input type="checkbox"/>						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of the Use and maintenance manual	<input type="checkbox"/>						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Identification labels	<input type="checkbox"/>						
250h / 3m	Parking brake	<input type="checkbox"/>						
250h / 3m	Deadman seat microswitch	<input type="checkbox"/>						
250h / 3m	Emergency recovery pump (if any)	<input type="checkbox"/>						
250h / 3m	Emergency recovery button on joystick	<input type="checkbox"/>						
250h / 3m	Deadman joystick button	<input type="checkbox"/>						
250h / 3m	Reverse gear engaged acoustic signal	<input type="checkbox"/>						
250h / 3m	Three operation mode steering	<input type="checkbox"/>						
250h / 3m	Spirit level indication	<input type="checkbox"/>						
250h / 2m	Installed equipment working mode correct operation check	<input type="checkbox"/>						
250h / 2m	Emergency stop button operation check	<input type="checkbox"/>						
250h / 2m	Operation check consistent with the instructions in the cab	<input type="checkbox"/>						
400h / 3m	Chains (if any) coupling points, wear and adjustment	<input type="checkbox"/>		<input type="checkbox"/>			<input type="checkbox"/>	
400h / 3m	Forks (if present)	<input type="checkbox"/>						
500h / 6m	Hydraulic system maximum pressure	<input type="checkbox"/>						
500h / 6m	Power steering calibration pressure	<input type="checkbox"/>						
500h / 6m	Jacks block valves	<input type="checkbox"/>						








Notes	Stamp and signature

CONTROL LOG			
Control sheet no.	.....	Control date	.....
Vehicle serial number:	.....	Controller technician name	.....
Vehicle hours	.....	Controller company name	.....

	Controls							
250h / 3m	Longitudinal load momentum indicator check	O						
250h / 3m	Audible tipping alarm	O						
250h / 3m	Visual tipping warning	O						
250h / 3m	Anti-tipping system movements block	O						
250h / 3m	Seat belts	O						
250h / 3m	Control over the vehicle \ equipment for the presence and status of conservation of Safety Stickers	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Capacity Diagrams	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of the Use and maintenance manual	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Identification labels	O						
250h / 3m	Parking brake	O						
250h / 3m	Deadman seat microswitch	O						
250h / 3m	Emergency recovery pump (if any)	O						
250h / 3m	Emergency recovery button on joystick	O						
250h / 3m	Deadman joystick button	O						
250h / 3m	Reverse gear engaged acoustic signal	O						
250h / 3m	Three operation mode steering	O						
250h / 3m	Spirit level indication	O						
250h / 2m	Installed equipment working mode correct operation check	O						
250h / 2m	Emergency stop button operation check	O						
250h / 2m	Operation check consistent with the instructions in the cab	O						
400h / 3m	Chains (if any) coupling points, wear and adjustment	O		O			O	
400h / 3m	Forks (if present)	O						
500h / 6m	Hydraulic system maximum pressure	O						
500h / 6m	Power steering calibration pressure	O						
500h / 6m	Jacks block valves	O						

Notes	Stamp and signature

CONTROL LOG			
Control sheet no.	.....	Control date	.....
Vehicle serial number:	.....	Controller technician name	.....
Vehicle hours	.....	Controller company name	.....

	Controls							
250h / 3m	Longitudinal load momentum indicator check	O						
250h / 3m	Audible tipping alarm	O						
250h / 3m	Visual tipping warning	O						
250h / 3m	Anti-tipping system movements block	O						
250h / 3m	Seat belts	O						
250h / 3m	Control over the vehicle \ equipment for the presence and status of conservation of Safety Stickers	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Capacity Diagrams	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of the Use and maintenance manual	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Identification labels	O						
250h / 3m	Parking brake	O						
250h / 3m	Deadman seat microswitch	O						
250h / 3m	Emergency recovery pump (if any)	O						
250h / 3m	Emergency recovery button on joystick	O						
250h / 3m	Deadman joystick button	O						
250h / 3m	Reverse gear engaged acoustic signal	O						
250h / 3m	Three operation mode steering	O						
250h / 3m	Spirit level indication	O						
250h / 2m	Installed equipment working mode correct operation check	O						
250h / 2m	Emergency stop button operation check	O						
250h / 2m	Operation check consistent with the instructions in the cab	O						
400h / 3m	Chains (if any) coupling points, wear and adjustment	O		O			O	
400h / 3m	Forks (if present)	O						
500h / 6m	Hydraulic system maximum pressure	O						
500h / 6m	Power steering calibration pressure	O						
500h / 6m	Jacks block valves	O						

Notes	Stamp and signature








CONTROL LOG			
Control sheet no.	.....	Control date	.....
Vehicle serial number:	.....	Controller technician name	.....
Vehicle hours	.....	Controller company name	.....

	Controls							
250h / 3m	Longitudinal load momentum indicator check	O						
250h / 3m	Audible tipping alarm	O						
250h / 3m	Visual tipping warning	O						
250h / 3m	Anti-tipping system movements block	O						
250h / 3m	Seat belts	O						
250h / 3m	Control over the vehicle \ equipment for the presence and status of conservation of Safety Stickers	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Capacity Diagrams	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of the Use and maintenance manual	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Identification labels	O						
250h / 3m	Parking brake	O						
250h / 3m	Deadman seat microswitch	O						
250h / 3m	Emergency recovery pump (if any)	O						
250h / 3m	Emergency recovery button on joystick	O						
250h / 3m	Deadman joystick button	O						
250h / 3m	Reverse gear engaged acoustic signal	O						
250h / 3m	Three operation mode steering	O						
250h / 3m	Spirit level indication	O						
250h / 2m	Installed equipment working mode correct operation check	O						
250h / 2m	Emergency stop button operation check	O						
250h / 2m	Operation check consistent with the instructions in the cab	O						
400h / 3m	Chains (if any) coupling points, wear and adjustment	O		O			O	
400h / 3m	Forks (if present)	O						
500h / 6m	Hydraulic system maximum pressure	O						
500h / 6m	Power steering calibration pressure	O						
500h / 6m	Jacks block valves	O						

Notes	Stamp and signature



CONTROL LOG			
Control sheet no.	.....	Control date	.....
Vehicle serial number:	.....	Controller technician name	.....
Vehicle hours	.....	Controller company name	.....

	Controls							
250h / 3m	Longitudinal load momentum indicator check	O						
250h / 3m	Audible tipping alarm	O						
250h / 3m	Visual tipping warning	O						
250h / 3m	Anti-tipping system movements block	O						
250h / 3m	Seat belts	O						
250h / 3m	Control over the vehicle \ equipment for the presence and status of conservation of Safety Stickers	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Capacity Diagrams	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of the Use and maintenance manual	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Identification labels	O						
250h / 3m	Parking brake	O						
250h / 3m	Deadman seat microswitch	O						
250h / 3m	Emergency recovery pump (if any)	O						
250h / 3m	Emergency recovery button on joystick	O						
250h / 3m	Deadman joystick button	O						
250h / 3m	Reverse gear engaged acoustic signal	O						
250h / 3m	Three operation mode steering	O						
250h / 3m	Spirit level indication	O						
250h / 2m	Installed equipment working mode correct operation check	O						
250h / 2m	Emergency stop button operation check	O						
250h / 2m	Operation check consistent with the instructions in the cab	O						
400h / 3m	Chains (if any) coupling points, wear and adjustment	O		O			O	
400h / 3m	Forks (if present)	O						
500h / 6m	Hydraulic system maximum pressure	O						
500h / 6m	Power steering calibration pressure	O						
500h / 6m	Jacks block valves	O						








Notes	Stamp and signature

CONTROL LOG			
Control sheet no.	.....	Control date	.....
Vehicle serial number:	.....	Controller technician name	.....
Vehicle hours	.....	Controller company name	.....

	Controls							
250h / 3m	Longitudinal load momentum indicator check	O						
250h / 3m	Audible tipping alarm	O						
250h / 3m	Visual tipping warning	O						
250h / 3m	Anti-tipping system movements block	O						
250h / 3m	Seat belts	O						
250h / 3m	Control over the vehicle \ equipment for the presence and status of conservation of Safety Stickers	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Capacity Diagrams	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of the Use and maintenance manual	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Identification labels	O						
250h / 3m	Parking brake	O						
250h / 3m	Deadman seat microswitch	O						
250h / 3m	Emergency recovery pump (if any)	O						
250h / 3m	Emergency recovery button on joystick	O						
250h / 3m	Deadman joystick button	O						
250h / 3m	Reverse gear engaged acoustic signal	O						
250h / 3m	Three operation mode steering	O						
250h / 3m	Spirit level indication	O						
250h / 2m	Installed equipment working mode correct operation check	O						
250h / 2m	Emergency stop button operation check	O						
250h / 2m	Operation check consistent with the instructions in the cab	O						
400h / 3m	Chains (if any) coupling points, wear and adjustment	O		O			O	
400h / 3m	Forks (if present)	O						
500h / 6m	Hydraulic system maximum pressure	O						
500h / 6m	Power steering calibration pressure	O						
500h / 6m	Jacks block valves	O						

Notes	Stamp and signature

CONTROL LOG			
Control sheet no.	.....	Control date	.....
Vehicle serial number:	.....	Controller technician name	.....
Vehicle hours	.....	Controller company name	.....

	Controls							
250h / 3m	Longitudinal load momentum indicator check	O						
250h / 3m	Audible tipping alarm	O						
250h / 3m	Visual tipping warning	O						
250h / 3m	Anti-tipping system movements block	O						
250h / 3m	Seat belts	O						
250h / 3m	Control over the vehicle \ equipment for the presence and status of conservation of Safety Stickers	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Capacity Diagrams	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of the Use and maintenance manual	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Identification labels	O						
250h / 3m	Parking brake	O						
250h / 3m	Deadman seat microswitch	O						
250h / 3m	Emergency recovery pump (if any)	O						
250h / 3m	Emergency recovery button on joystick	O						
250h / 3m	Deadman joystick button	O						
250h / 3m	Reverse gear engaged acoustic signal	O						
250h / 3m	Three operation mode steering	O						
250h / 3m	Spirit level indication	O						
250h / 2m	Installed equipment working mode correct operation check	O						
250h / 2m	Emergency stop button operation check	O						
250h / 2m	Operation check consistent with the instructions in the cab	O						
400h / 3m	Chains (if any) coupling points, wear and adjustment	O		O			O	
400h / 3m	Forks (if present)	O						
500h / 6m	Hydraulic system maximum pressure	O						
500h / 6m	Power steering calibration pressure	O						
500h / 6m	Jacks block valves	O						








Notes	Stamp and signature

CONTROL LOG			
Control sheet no.	.....	Control date	.....
Vehicle serial number:	.....	Controller technician name	.....
Vehicle hours	.....	Controller company name	.....

	Controls							
250h / 3m	Longitudinal load momentum indicator check	O						
250h / 3m	Audible tipping alarm	O						
250h / 3m	Visual tipping warning	O						
250h / 3m	Anti-tipping system movements block	O						
250h / 3m	Seat belts	O						
250h / 3m	Control over the vehicle \ equipment for the presence and status of conservation of Safety Stickers	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Capacity Diagrams	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of the Use and maintenance manual	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Identification labels	O						
250h / 3m	Parking brake	O						
250h / 3m	Deadman seat microswitch	O						
250h / 3m	Emergency recovery pump (if any)	O						
250h / 3m	Emergency recovery button on joystick	O						
250h / 3m	Deadman joystick button	O						
250h / 3m	Reverse gear engaged acoustic signal	O						
250h / 3m	Three operation mode steering	O						
250h / 3m	Spirit level indication	O						
250h / 2m	Installed equipment working mode correct operation check	O						
250h / 2m	Emergency stop button operation check	O						
250h / 2m	Operation check consistent with the instructions in the cab	O						
400h / 3m	Chains (if any) coupling points, wear and adjustment	O		O			O	
400h / 3m	Forks (if present)	O						
500h / 6m	Hydraulic system maximum pressure	O						
500h / 6m	Power steering calibration pressure	O						
500h / 6m	Jacks block valves	O						

Notes	Stamp and signature

CONTROL LOG			
Control sheet no.	.....	Control date	.....
Vehicle serial number:	.....	Controller technician name	.....
Vehicle hours	.....	Controller company name	.....

	Controls							
250h / 3m	Longitudinal load momentum indicator check	O						
250h / 3m	Audible tipping alarm	O						
250h / 3m	Visual tipping warning	O						
250h / 3m	Anti-tipping system movements block	O						
250h / 3m	Seat belts	O						
250h / 3m	Control over the vehicle \ equipment for the presence and status of conservation of Safety Stickers	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Capacity Diagrams	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of the Use and maintenance manual	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Identification labels	O						
250h / 3m	Parking brake	O						
250h / 3m	Deadman seat microswitch	O						
250h / 3m	Emergency recovery pump (if any)	O						
250h / 3m	Emergency recovery button on joystick	O						
250h / 3m	Deadman joystick button	O						
250h / 3m	Reverse gear engaged acoustic signal	O						
250h / 3m	Three operation mode steering	O						
250h / 3m	Spirit level indication	O						
250h / 2m	Installed equipment working mode correct operation check	O						
250h / 2m	Emergency stop button operation check	O						
250h / 2m	Operation check consistent with the instructions in the cab	O						
400h / 3m	Chains (if any) coupling points, wear and adjustment	O		O			O	
400h / 3m	Forks (if present)	O						
500h / 6m	Hydraulic system maximum pressure	O						
500h / 6m	Power steering calibration pressure	O						
500h / 6m	Jacks block valves	O						

Notes	Stamp and signature

CONTROL LOG			
Control sheet no.	.....	Control date	.....
Vehicle serial number:	.....	Controller technician name	.....
Vehicle hours	.....	Controller company name	.....

Controls								
250h / 3m	Longitudinal load momentum indicator check	O						
250h / 3m	Audible tipping alarm	O						
250h / 3m	Visual tipping warning	O						
250h / 3m	Anti-tipping system movements block	O						
250h / 3m	Seat belts	O						
250h / 3m	Control over the vehicle \ equipment for the presence and status of conservation of Safety Stickers	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Capacity Diagrams	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of the Use and maintenance manual	O						
250h / 3m	Control over the vehicle \ equipment for the presence and conservation status of Identification labels	O						
250h / 3m	Parking brake	O						
250h / 3m	Deadman seat microswitch	O						
250h / 3m	Emergency recovery pump (if any)	O						
250h / 3m	Emergency recovery button on joystick	O						
250h / 3m	Deadman joystick button	O						
250h / 3m	Reverse gear engaged acoustic signal	O						
250h / 3m	Three operation mode steering	O						
250h / 3m	Spirit level indication	O						
250h / 2m	Installed equipment working mode correct operation check	O						
250h / 2m	Emergency stop button operation check	O						
250h / 2m	Operation check consistent with the instructions in the cab	O						
400h / 3m	Chains (if any) coupling points, wear and adjustment	O		O			O	
400h / 3m	Forks (if present)	O						
500h / 6m	Hydraulic system maximum pressure	O						
500h / 6m	Power steering calibration pressure	O						
500h / 6m	Jacks block valves	O						

Notes	Stamp and signature

## 24.6 Maintenance log

The following are some sheets for filling in the Maintenance Log for fixed vehicles.








MAINTENANCE LOG			
Maintenance sheet no.	.....	Maintenance date	.....
Vehicle serial number:	.....	Maintenance technician name	.....
Vehicle hours	.....	Maintenance company name	.....

	Maintenance							
0h	Air conditioning system	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Anti-tipping device inspection with load	<input type="checkbox"/>						
0h	Filters (air, engine oil, hydraulic oil, fuel, air conditioning system, cab)	<input type="checkbox"/>						
0h	Brake			<input type="checkbox"/>				
0h	Parking brake	<input type="checkbox"/>						
0h	Electrolyte level and battery charge	<input type="checkbox"/>						
0h	Lighting	<input type="checkbox"/>						
0h	Hydraulic oil level	<input type="checkbox"/>						
0h	Alternator belts \ services	<input type="checkbox"/>						
0h	Engine oil level	<input type="checkbox"/>						
0h	Radiators	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Radiator expansion tank	<input type="checkbox"/>	<input type="checkbox"/>					
0h	Tires pressure	<input type="checkbox"/>						
0h	Wear check (on both the vehicle and equipment if installed)	<input type="checkbox"/>						
10h / 1m	Window washer tank	<input type="checkbox"/>	<input type="checkbox"/>					
10h / 1m	Boom chains (if installed)	<input type="checkbox"/>						
10h / 1m	Safety stickers	<input type="checkbox"/>						
10h / 1m	Safety devices	<input type="checkbox"/>						
10h / 1m	Coolant	<input type="checkbox"/>						
10h / 1m	Engine oil level	<input type="checkbox"/>						
10h / 1m	Metal structural work, no cracks	<input type="checkbox"/>						
10h / 1m	Radiators				<input type="checkbox"/>			
50h / 1m	Grease level in the automatic lubrication system (if installed)						<input type="checkbox"/>	
50h / 1m	Prop shafts						<input type="checkbox"/>	
50h / 1m	Axles oscillation						<input type="checkbox"/>	
50h / 1m	Wheels reduction gear pins						<input type="checkbox"/>	
50h / 1m	Ropes and chains (if installed)	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Wear pads	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Mechanical joints of parking brake on the axle						<input type="checkbox"/>	
50h / 1m	Mechanical joints						<input type="checkbox"/>	
50h / 1m	Cab ventilation filter				<input type="checkbox"/>			
50h / 1m	Brakes oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic system leaks	<input type="checkbox"/>						
50h / 1m	Air filter				<input type="checkbox"/>			










Maintenance								
50h / 1m	Fuel filter				o			
50h / 1m	Coolant	o						
50h / 1m	Engine oil level	o						
50h / 1m	Tires pressure	o						
50h / 1m	Wheel nuts tightening	o						
50h / 1m	Inching oil level (only PS transmissions)	o						
First 100h	Differential axle oil					o		
250h / 2m	Ropes and chains (if any) coupling points, wear and adjustment	o		o			o	
250h / 2m	Boom chains (if installed)			o				
250h / 2m	Seat belts	o						
250h / 2m	Rear view mirrors	o						
250h / 2m	Anti-tipping device	o						
250h / 2m	Electrolyte level and battery charge	o						
250h / 2m	Torque specifications - Hydraulic Fittings			o				
250h / 2m	Alternator belts \ services	o		o				
250h / 2m	Torque specifications - fasteners			o				
500h / 6m	PTO gearbox oil (if installed)					o		
500h / 6m	Differential axle oil	o						
500h / 6m	Epicycloidal reduction gear oil	o						
500h / 6m	Forks: wear	o						
500h / 6m	Cab ventilation filter					o		
500h / 6m	Brakes oil					o		
500h / 6m	Electrical system	o						
500h / 6m	Hydraulic oil filter(s)					o		
500h / 6m	Block valves	o						
500h / 6m	Air filter					o		
500h / 6m	FPT fuel filter					o		
500h / 6m	FPT engine oil filter					o		
500h / 6m	FPT engine oil					o		
500h / 6m	KUBOTA fuel filter					o		
500h / 6m	KUBOTA engine oil filter					o		
500h / 6m	KUBOTA engine oil					o		
500h / 6m	Transmission oil	o						
1000h / 1y	PTO gearbox oil (if installed)					o		
1000h / 1y	Differential axle oil					o		
1000h / 1y	Epicycloidal reduction gear oil					o		
1000h / 1y	Equipment condition	o						**
1000h / 1y	Forks support plate: wear	o						**

	Maintenance							
1000h / 1y	Telescopic boom: conditions	o						**
1000h / 1y	Telescopic boom: bearings and pivot bushes	o						**
1000h / 1y	Wear pads: wear	o						**
1000h / 1y	Cab structure	o						**
1000h / 1y	Brakes oil circuit				o			**
1000h / 1y	Brakes oil circuit: Pressure	o						**
1000h / 1y	Brake			o				**
1000h / 1y	Electrical system: cables condition	o						**
1000h / 1y	Electrical system: Lighting and signaling	o						**
1000h / 1y	Electrical system: Acoustic signal devices	o						**
1000h / 1y	Hydraulic system: Jacks	o						**
1000h / 1y	Hydraulic system: Pipes and flexible pipes	o						**
1000h / 1y	Hydraulic system: Movements speed	o						**
1000h / 1y	Hydraulic oil					o		
1000h / 1y	Engine valves clearances	o						**
1000h / 1y	Coolant					o		
1000h / 1y	Engine speeds	o						**
1000h / 1y	Fuel tank				o			
1000h / 1y	Wheels and tires conditions	o						**
1000h / 1y	Chassis: bearings and pivot bushes	o						**
1000h / 1y	Chassis: structure	o						**
1000h / 1y	Transmission oil					o		
2000h	Axles oscillation	o						**
2000h	Ropes and chains (if installed)					o		**
2000h	Hydraulic system: Capacity	o						**
2000h	Hydraulic system: Pressures	o						**
2000h	Hydraulic oil tank				o			**
2000h	Alternator and Starter motor	o						**
2000h	Radiators	o			o			**
3600h	AdBlue tank filter FPT engine (only Stage IIIB/Tier 4i and Stage IV/ Tier 4f engine sizes)					o		**
4000h	Prop shafts	o				o		**
4000h	Reduction gears universal joint	o						**
4000h	Wheels reduction gear clearance	o						**
4000h	Steering ball joints	o						**
4000h	Wheels reduction gear pins	o						**
4000h	Brakes wear	o						**
2y	Air conditioning system (if installed): Dissipater filter					o		**
2y	Air conditioning system (if installed): Oil refrigerant	o						**
2y	Air conditioning system (if installed): Pressure switches	o		o				**
2y	Air conditioning system (if installed): Condenser and evaporator coils				o			**








Maintenance								
2y	Air conditioning system (if installed): Condensate and exhaust valve tank				o			**
Notes		Stamp and signature						

MAINTENANCE LOG			
Maintenance sheet no.	.....	Maintenance date	.....
Vehicle serial number:	.....	Maintenance technician name	.....
Vehicle hours	.....	Maintenance company name	.....

	Maintenance							
0h	Air conditioning system	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Anti-tipping device inspection with load	<input type="checkbox"/>						
0h	Filters (air, engine oil, hydraulic oil, fuel, air conditioning system, cab)	<input type="checkbox"/>						
0h	Brake			<input type="checkbox"/>				
0h	Parking brake	<input type="checkbox"/>						
0h	Electrolyte level and battery charge	<input type="checkbox"/>						
0h	Lighting	<input type="checkbox"/>						
0h	Hydraulic oil level	<input type="checkbox"/>						
0h	Alternator belts \ services	<input type="checkbox"/>						
0h	Engine oil level	<input type="checkbox"/>						
0h	Radiators	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Radiator expansion tank	<input type="checkbox"/>	<input type="checkbox"/>					
0h	Tires pressure	<input type="checkbox"/>						
0h	Wear check (on both the vehicle and equipment if installed)	<input type="checkbox"/>						
10h / 1m	Window washer tank	<input type="checkbox"/>	<input type="checkbox"/>					
10h / 1m	Boom chains (if installed)	<input type="checkbox"/>						
10h / 1m	Safety stickers	<input type="checkbox"/>						
10h / 1m	Safety devices	<input type="checkbox"/>						
10h / 1m	Coolant	<input type="checkbox"/>						
10h / 1m	Engine oil level	<input type="checkbox"/>						
10h / 1m	Metal structural work, no cracks	<input type="checkbox"/>						
10h / 1m	Radiators				<input type="checkbox"/>			
50h / 1m	Grease level in the automatic lubrication system (if installed)						<input type="checkbox"/>	
50h / 1m	Prop shafts						<input type="checkbox"/>	
50h / 1m	Axles oscillation						<input type="checkbox"/>	
50h / 1m	Wheels reduction gear pins						<input type="checkbox"/>	
50h / 1m	Ropes and chains (if installed)	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Wear pads	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Mechanical joints of parking brake on the axle						<input type="checkbox"/>	
50h / 1m	Mechanical joints						<input type="checkbox"/>	
50h / 1m	Cab ventilation filter				<input type="checkbox"/>			
50h / 1m	Brakes oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic system leaks	<input type="checkbox"/>						
50h / 1m	Air filter				<input type="checkbox"/>			

Maintenance								
50h / 1m	Fuel filter				o			
50h / 1m	Coolant	o						
50h / 1m	Engine oil level	o						
50h / 1m	Tires pressure	o						
50h / 1m	Wheel nuts tightening	o						
50h / 1m	Inching oil level (only PS transmissions)	o						
First 100h	Differential axle oil					o		
250h / 2m	Ropes and chains (if any) coupling points, wear and adjustment	o		o			o	
250h / 2m	Boom chains (if installed)			o				
250h / 2m	Seat belts	o						
250h / 2m	Rear view mirrors	o						
250h / 2m	Anti-tipping device	o						
250h / 2m	Electrolyte level and battery charge	o						
250h / 2m	Torque specifications - Hydraulic Fittings			o				
250h / 2m	Alternator belts \ services	o		o				
250h / 2m	Torque specifications - fasteners			o				
500h / 6m	PTO gearbox oil (if installed)					o		
500h / 6m	Differential axle oil	o						
500h / 6m	Epicycloidal reduction gear oil	o						
500h / 6m	Forks: wear	o						
500h / 6m	Cab ventilation filter					o		
500h / 6m	Brakes oil					o		
500h / 6m	Electrical system	o						
500h / 6m	Hydraulic oil filter(s)					o		
500h / 6m	Block valves	o						
500h / 6m	Air filter					o		
500h / 6m	FPT fuel filter					o		
500h / 6m	FPT engine oil filter					o		
500h / 6m	FPT engine oil					o		
500h / 6m	KUBOTA fuel filter					o		
500h / 6m	KUBOTA engine oil filter					o		
500h / 6m	KUBOTA engine oil					o		
500h / 6m	Transmission oil	o						
1000h / 1y	PTO gearbox oil (if installed)					o		
1000h / 1y	Differential axle oil					o		
1000h / 1y	Epicycloidal reduction gear oil					o		
1000h / 1y	Equipment condition	o						**
1000h / 1y	Forks support plate: wear	o						**

	Maintenance							
1000h / 1y	Telescopic boom: conditions	o						**
1000h / 1y	Telescopic boom: bearings and pivot bushes	o						**
1000h / 1y	Wear pads: wear	o						**
1000h / 1y	Cab structure	o						**
1000h / 1y	Brakes oil circuit				o			**
1000h / 1y	Brakes oil circuit: Pressure	o						**
1000h / 1y	Brake			o				**
1000h / 1y	Electrical system: cables condition	o						**
1000h / 1y	Electrical system: Lighting and signaling	o						**
1000h / 1y	Electrical system: Acoustic signal devices	o						**
1000h / 1y	Hydraulic system: Jacks	o						**
1000h / 1y	Hydraulic system: Pipes and flexible pipes	o						**
1000h / 1y	Hydraulic system: Movements speed	o						**
1000h / 1y	Hydraulic oil					o		
1000h / 1y	Engine valves clearances	o						**
1000h / 1y	Coolant					o		
1000h / 1y	Engine speeds	o						**
1000h / 1y	Fuel tank				o			
1000h / 1y	Wheels and tires conditions	o						**
1000h / 1y	Chassis: bearings and pivot bushes	o						**
1000h / 1y	Chassis: structure	o						**
1000h / 1y	Transmission oil					o		
2000h	Axles oscillation	o						**
2000h	Ropes and chains (if installed)					o		**
2000h	Hydraulic system: Capacity	o						**
2000h	Hydraulic system: Pressures	o						**
2000h	Hydraulic oil tank				o			**
2000h	Alternator and Starter motor	o						**
2000h	Radiators	o			o			**
3600h	AdBlue tank filter FPT engine (only Stage IIIB/Tier 4i and Stage IV/ Tier 4f engine sizes)					o		**
4000h	Prop shafts	o				o		**
4000h	Reduction gears universal joint	o						**
4000h	Wheels reduction gear clearance	o						**
4000h	Steering ball joints	o						**
4000h	Wheels reduction gear pins	o						**
4000h	Brakes wear	o						**
2y	Air conditioning system (if installed): Dissipater filter					o		**
2y	Air conditioning system (if installed): Oil refrigerant	o						**
2y	Air conditioning system (if installed): Pressure switches	o		o				**
2y	Air conditioning system (if installed): Condenser and evaporator coils				o			**

Maintenance								
2y	Air conditioning system (if installed): Condensate and exhaust valve tank				o			**
Notes		Stamp and signature						








MAINTENANCE LOG			
Maintenance sheet no.	.....	Maintenance date	.....
Vehicle serial number:	.....	Maintenance technician name	.....
Vehicle hours	.....	Maintenance company name	.....

	Maintenance							
0h	Air conditioning system	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Anti-tipping device inspection with load	<input type="checkbox"/>						
0h	Filters (air, engine oil, hydraulic oil, fuel, air conditioning system, cab)	<input type="checkbox"/>						
0h	Brake			<input type="checkbox"/>				
0h	Parking brake	<input type="checkbox"/>						
0h	Electrolyte level and battery charge	<input type="checkbox"/>						
0h	Lighting	<input type="checkbox"/>						
0h	Hydraulic oil level	<input type="checkbox"/>						
0h	Alternator belts \ services	<input type="checkbox"/>						
0h	Engine oil level	<input type="checkbox"/>						
0h	Radiators	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Radiator expansion tank	<input type="checkbox"/>	<input type="checkbox"/>					
0h	Tires pressure	<input type="checkbox"/>						
0h	Wear check (on both the vehicle and equipment if installed)	<input type="checkbox"/>						
10h / 1m	Window washer tank	<input type="checkbox"/>	<input type="checkbox"/>					
10h / 1m	Boom chains (if installed)	<input type="checkbox"/>						
10h / 1m	Safety stickers	<input type="checkbox"/>						
10h / 1m	Safety devices	<input type="checkbox"/>						
10h / 1m	Coolant	<input type="checkbox"/>						
10h / 1m	Engine oil level	<input type="checkbox"/>						
10h / 1m	Metal structural work, no cracks	<input type="checkbox"/>						
10h / 1m	Radiators				<input type="checkbox"/>			
50h / 1m	Grease level in the automatic lubrication system (if installed)						<input type="checkbox"/>	
50h / 1m	Prop shafts						<input type="checkbox"/>	
50h / 1m	Axles oscillation						<input type="checkbox"/>	
50h / 1m	Wheels reduction gear pins						<input type="checkbox"/>	
50h / 1m	Ropes and chains (if installed)	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Wear pads	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Mechanical joints of parking brake on the axle						<input type="checkbox"/>	
50h / 1m	Mechanical joints						<input type="checkbox"/>	
50h / 1m	Cab ventilation filter				<input type="checkbox"/>			
50h / 1m	Brakes oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic system leaks	<input type="checkbox"/>						
50h / 1m	Air filter				<input type="checkbox"/>			










Maintenance								
50h / 1m	Fuel filter				o			
50h / 1m	Coolant	o						
50h / 1m	Engine oil level	o						
50h / 1m	Tires pressure	o						
50h / 1m	Wheel nuts tightening	o						
50h / 1m	Inching oil level (only PS transmissions)	o						
First 100h	Differential axle oil					o		
250h / 2m	Ropes and chains (if any) coupling points, wear and adjustment	o		o			o	
250h / 2m	Boom chains (if installed)			o				
250h / 2m	Seat belts	o						
250h / 2m	Rear view mirrors	o						
250h / 2m	Anti-tipping device	o						
250h / 2m	Electrolyte level and battery charge	o						
250h / 2m	Torque specifications - Hydraulic Fittings			o				
250h / 2m	Alternator belts \ services	o		o				
250h / 2m	Torque specifications - fasteners			o				
500h / 6m	PTO gearbox oil (if installed)					o		
500h / 6m	Differential axle oil	o						
500h / 6m	Epicycloidal reduction gear oil	o						
500h / 6m	Forks: wear	o						
500h / 6m	Cab ventilation filter					o		
500h / 6m	Brakes oil					o		
500h / 6m	Electrical system	o						
500h / 6m	Hydraulic oil filter(s)					o		
500h / 6m	Block valves	o						
500h / 6m	Air filter					o		
500h / 6m	FPT fuel filter					o		
500h / 6m	FPT engine oil filter					o		
500h / 6m	FPT engine oil					o		
500h / 6m	KUBOTA fuel filter					o		
500h / 6m	KUBOTA engine oil filter					o		
500h / 6m	KUBOTA engine oil					o		
500h / 6m	Transmission oil	o						
1000h / 1y	PTO gearbox oil (if installed)					o		
1000h / 1y	Differential axle oil					o		
1000h / 1y	Epicycloidal reduction gear oil					o		
1000h / 1y	Equipment condition	o						**
1000h / 1y	Forks support plate: wear	o						**

	Maintenance							
1000h / 1y	Telescopic boom: conditions	o						**
1000h / 1y	Telescopic boom: bearings and pivot bushes	o						**
1000h / 1y	Wear pads: wear	o						**
1000h / 1y	Cab structure	o						**
1000h / 1y	Brakes oil circuit				o			**
1000h / 1y	Brakes oil circuit: Pressure	o						**
1000h / 1y	Brake			o				**
1000h / 1y	Electrical system: cables condition	o						**
1000h / 1y	Electrical system: Lighting and signaling	o						**
1000h / 1y	Electrical system: Acoustic signal devices	o						**
1000h / 1y	Hydraulic system: Jacks	o						**
1000h / 1y	Hydraulic system: Pipes and flexible pipes	o						**
1000h / 1y	Hydraulic system: Movements speed	o						**
1000h / 1y	Hydraulic oil					o		
1000h / 1y	Engine valves clearances	o						**
1000h / 1y	Coolant					o		
1000h / 1y	Engine speeds	o						**
1000h / 1y	Fuel tank				o			
1000h / 1y	Wheels and tires conditions	o						**
1000h / 1y	Chassis: bearings and pivot bushes	o						**
1000h / 1y	Chassis: structure	o						**
1000h / 1y	Transmission oil					o		
2000h	Axles oscillation	o						**
2000h	Ropes and chains (if installed)					o		**
2000h	Hydraulic system: Capacity	o						**
2000h	Hydraulic system: Pressures	o						**
2000h	Hydraulic oil tank				o			**
2000h	Alternator and Starter motor	o						**
2000h	Radiators	o			o			**
3600h	AdBlue tank filter FPT engine (only Stage IIIB/Tier 4i and Stage IV/ Tier 4f engine sizes)					o		**
4000h	Prop shafts	o				o		**
4000h	Reduction gears universal joint	o						**
4000h	Wheels reduction gear clearance	o						**
4000h	Steering ball joints	o						**
4000h	Wheels reduction gear pins	o						**
4000h	Brakes wear	o						**
2y	Air conditioning system (if installed): Dissipater filter					o		**
2y	Air conditioning system (if installed): Oil refrigerant	o						**
2y	Air conditioning system (if installed): Pressure switches	o		o				**
2y	Air conditioning system (if installed): Condenser and evaporator coils				o			**








Maintenance								
2y	Air conditioning system (if installed): Condensate and exhaust valve tank				o			**
Notes				Stamp and signature				

MAINTENANCE LOG			
Maintenance sheet no.	.....	Maintenance date	.....
Vehicle serial number:	.....	Maintenance technician name	.....
Vehicle hours	.....	Maintenance company name	.....








	Maintenance							
0h	Air conditioning system	<input type="radio"/>			<input type="radio"/>			
0h	Anti-tipping device inspection with load	<input type="radio"/>						
0h	Filters (air, engine oil, hydraulic oil, fuel, air conditioning system, cab)	<input type="radio"/>						
0h	Brake			<input type="radio"/>				
0h	Parking brake	<input type="radio"/>						
0h	Electrolyte level and battery charge	<input type="radio"/>						
0h	Lighting	<input type="radio"/>						
0h	Hydraulic oil level	<input type="radio"/>						
0h	Alternator belts \ services	<input type="radio"/>						
0h	Engine oil level	<input type="radio"/>						
0h	Radiators	<input type="radio"/>			<input type="radio"/>			
0h	Radiator expansion tank	<input type="radio"/>	<input type="radio"/>					
0h	Tires pressure	<input type="radio"/>						
0h	Wear check (on both the vehicle and equipment if installed)	<input type="radio"/>						
10h / 1m	Window washer tank	<input type="radio"/>	<input type="radio"/>					
10h / 1m	Boom chains (if installed)	<input type="radio"/>						
10h / 1m	Safety stickers	<input type="radio"/>						
10h / 1m	Safety devices	<input type="radio"/>						
10h / 1m	Coolant	<input type="radio"/>						
10h / 1m	Engine oil level	<input type="radio"/>						
10h / 1m	Metal structural work, no cracks	<input type="radio"/>						
10h / 1m	Radiators				<input type="radio"/>			
50h / 1m	Grease level in the automatic lubrication system (if installed)						<input type="radio"/>	
50h / 1m	Prop shafts						<input type="radio"/>	
50h / 1m	Axles oscillation						<input type="radio"/>	
50h / 1m	Wheels reduction gear pins						<input type="radio"/>	
50h / 1m	Ropes and chains (if installed)	<input type="radio"/>					<input type="radio"/>	
50h / 1m	Wear pads	<input type="radio"/>					<input type="radio"/>	
50h / 1m	Mechanical joints of parking brake on the axle						<input type="radio"/>	
50h / 1m	Mechanical joints						<input type="radio"/>	
50h / 1m	Cab ventilation filter				<input type="radio"/>			
50h / 1m	Brakes oil level	<input type="radio"/>						
50h / 1m	Hydraulic oil level	<input type="radio"/>						
50h / 1m	Hydraulic system leaks	<input type="radio"/>						
50h / 1m	Air filter				<input type="radio"/>			

Maintenance								
50h / 1m	Fuel filter				o			
50h / 1m	Coolant	o						
50h / 1m	Engine oil level	o						
50h / 1m	Tires pressure	o						
50h / 1m	Wheel nuts tightening	o						
50h / 1m	Inching oil level (only PS transmissions)	o						
First 100h	Differential axle oil					o		
250h / 2m	Ropes and chains (if any) coupling points, wear and adjustment	o		o			o	
250h / 2m	Boom chains (if installed)			o				
250h / 2m	Seat belts	o						
250h / 2m	Rear view mirrors	o						
250h / 2m	Anti-tipping device	o						
250h / 2m	Electrolyte level and battery charge	o						
250h / 2m	Torque specifications - Hydraulic Fittings			o				
250h / 2m	Alternator belts \ services	o		o				
250h / 2m	Torque specifications - fasteners			o				
500h / 6m	PTO gearbox oil (if installed)					o		
500h / 6m	Differential axle oil	o						
500h / 6m	Epicycloidal reduction gear oil	o						
500h / 6m	Forks: wear	o						
500h / 6m	Cab ventilation filter					o		
500h / 6m	Brakes oil					o		
500h / 6m	Electrical system	o						
500h / 6m	Hydraulic oil filter(s)					o		
500h / 6m	Block valves	o						
500h / 6m	Air filter					o		
500h / 6m	FPT fuel filter					o		
500h / 6m	FPT engine oil filter					o		
500h / 6m	FPT engine oil					o		
500h / 6m	KUBOTA fuel filter					o		
500h / 6m	KUBOTA engine oil filter					o		
500h / 6m	KUBOTA engine oil					o		
500h / 6m	Transmission oil	o						
1000h / 1y	PTO gearbox oil (if installed)					o		
1000h / 1y	Differential axle oil					o		
1000h / 1y	Epicycloidal reduction gear oil					o		
1000h / 1y	Equipment condition	o						**
1000h / 1y	Forks support plate: wear	o						**

	Maintenance							
1000h / 1y	Telescopic boom: conditions	o						**
1000h / 1y	Telescopic boom: bearings and pivot bushes	o						**
1000h / 1y	Wear pads: wear	o						**
1000h / 1y	Cab structure	o						**
1000h / 1y	Brakes oil circuit				o			**
1000h / 1y	Brakes oil circuit: Pressure	o						**
1000h / 1y	Brake			o				**
1000h / 1y	Electrical system: cables condition	o						**
1000h / 1y	Electrical system: Lighting and signaling	o						**
1000h / 1y	Electrical system: Acoustic signal devices	o						**
1000h / 1y	Hydraulic system: Jacks	o						**
1000h / 1y	Hydraulic system: Pipes and flexible pipes	o						**
1000h / 1y	Hydraulic system: Movements speed	o						**
1000h / 1y	Hydraulic oil					o		
1000h / 1y	Engine valves clearances	o						**
1000h / 1y	Coolant					o		
1000h / 1y	Engine speeds	o						**
1000h / 1y	Fuel tank				o			
1000h / 1y	Wheels and tires conditions	o						**
1000h / 1y	Chassis: bearings and pivot bushes	o						**
1000h / 1y	Chassis: structure	o						**
1000h / 1y	Transmission oil					o		
2000h	Axles oscillation	o						**
2000h	Ropes and chains (if installed)					o		**
2000h	Hydraulic system: Capacity	o						**
2000h	Hydraulic system: Pressures	o						**
2000h	Hydraulic oil tank				o			**
2000h	Alternator and Starter motor	o						**
2000h	Radiators	o			o			**
3600h	AdBlue tank filter FPT engine (only Stage IIIB/Tier 4i and Stage IV/ Tier 4f engine sizes)					o		**
4000h	Prop shafts	o				o		**
4000h	Reduction gears universal joint	o						**
4000h	Wheels reduction gear clearance	o						**
4000h	Steering ball joints	o						**
4000h	Wheels reduction gear pins	o						**
4000h	Brakes wear	o						**
2y	Air conditioning system (if installed): Dissipater filter					o		**
2y	Air conditioning system (if installed): Oil refrigerant	o						**
2y	Air conditioning system (if installed): Pressure switches	o		o				**
2y	Air conditioning system (if installed): Condenser and evaporator coils				o			**

Maintenance								
2y	Air conditioning system (if installed): Condensate and exhaust valve tank				o			**
Notes		Stamp and signature						








MAINTENANCE LOG			
Maintenance sheet no.	.....	Maintenance date	.....
Vehicle serial number:	.....	Maintenance technician name	.....
Vehicle hours	.....	Maintenance company name	.....

	Maintenance							
0h	Air conditioning system	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Anti-tipping device inspection with load	<input type="checkbox"/>						
0h	Filters (air, engine oil, hydraulic oil, fuel, air conditioning system, cab)	<input type="checkbox"/>						
0h	Brake			<input type="checkbox"/>				
0h	Parking brake	<input type="checkbox"/>						
0h	Electrolyte level and battery charge	<input type="checkbox"/>						
0h	Lighting	<input type="checkbox"/>						
0h	Hydraulic oil level	<input type="checkbox"/>						
0h	Alternator belts \ services	<input type="checkbox"/>						
0h	Engine oil level	<input type="checkbox"/>						
0h	Radiators	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Radiator expansion tank	<input type="checkbox"/>	<input type="checkbox"/>					
0h	Tires pressure	<input type="checkbox"/>						
0h	Wear check (on both the vehicle and equipment if installed)	<input type="checkbox"/>						
10h / 1m	Window washer tank	<input type="checkbox"/>	<input type="checkbox"/>					
10h / 1m	Boom chains (if installed)	<input type="checkbox"/>						
10h / 1m	Safety stickers	<input type="checkbox"/>						
10h / 1m	Safety devices	<input type="checkbox"/>						
10h / 1m	Coolant	<input type="checkbox"/>						
10h / 1m	Engine oil level	<input type="checkbox"/>						
10h / 1m	Metal structural work, no cracks	<input type="checkbox"/>						
10h / 1m	Radiators				<input type="checkbox"/>			
50h / 1m	Grease level in the automatic lubrication system (if installed)						<input type="checkbox"/>	
50h / 1m	Prop shafts						<input type="checkbox"/>	
50h / 1m	Axles oscillation						<input type="checkbox"/>	
50h / 1m	Wheels reduction gear pins						<input type="checkbox"/>	
50h / 1m	Ropes and chains (if installed)	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Wear pads	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Mechanical joints of parking brake on the axle						<input type="checkbox"/>	
50h / 1m	Mechanical joints						<input type="checkbox"/>	
50h / 1m	Cab ventilation filter				<input type="checkbox"/>			
50h / 1m	Brakes oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic system leaks	<input type="checkbox"/>						
50h / 1m	Air filter				<input type="checkbox"/>			



Maintenance								
50h / 1m	Fuel filter				o			
50h / 1m	Coolant	o						
50h / 1m	Engine oil level	o						
50h / 1m	Tires pressure	o						
50h / 1m	Wheel nuts tightening	o						
50h / 1m	Inching oil level (only PS transmissions)	o						
First 100h	Differential axle oil					o		
250h / 2m	Ropes and chains (if any) coupling points, wear and adjustment	o		o			o	
250h / 2m	Boom chains (if installed)			o				
250h / 2m	Seat belts	o						
250h / 2m	Rear view mirrors	o						
250h / 2m	Anti-tipping device	o						
250h / 2m	Electrolyte level and battery charge	o						
250h / 2m	Torque specifications - Hydraulic Fittings			o				
250h / 2m	Alternator belts \ services	o		o				
250h / 2m	Torque specifications - fasteners			o				
500h / 6m	PTO gearbox oil (if installed)					o		
500h / 6m	Differential axle oil	o						
500h / 6m	Epicycloidal reduction gear oil	o						
500h / 6m	Forks: wear	o						
500h / 6m	Cab ventilation filter					o		
500h / 6m	Brakes oil					o		
500h / 6m	Electrical system	o						
500h / 6m	Hydraulic oil filter(s)					o		
500h / 6m	Block valves	o						
500h / 6m	Air filter					o		
500h / 6m	FPT fuel filter					o		
500h / 6m	FPT engine oil filter					o		
500h / 6m	FPT engine oil					o		
500h / 6m	KUBOTA fuel filter					o		
500h / 6m	KUBOTA engine oil filter					o		
500h / 6m	KUBOTA engine oil					o		
500h / 6m	Transmission oil	o						
1000h / 1y	PTO gearbox oil (if installed)					o		
1000h / 1y	Differential axle oil					o		
1000h / 1y	Epicycloidal reduction gear oil					o		
1000h / 1y	Equipment condition	o						**
1000h / 1y	Forks support plate: wear	o						**

	Maintenance							
1000h / 1y	Telescopic boom: conditions	o						**
1000h / 1y	Telescopic boom: bearings and pivot bushes	o						**
1000h / 1y	Wear pads: wear	o						**
1000h / 1y	Cab structure	o						**
1000h / 1y	Brakes oil circuit				o			**
1000h / 1y	Brakes oil circuit: Pressure	o						**
1000h / 1y	Brake			o				**
1000h / 1y	Electrical system: cables condition	o						**
1000h / 1y	Electrical system: Lighting and signaling	o						**
1000h / 1y	Electrical system: Acoustic signal devices	o						**
1000h / 1y	Hydraulic system: Jacks	o						**
1000h / 1y	Hydraulic system: Pipes and flexible pipes	o						**
1000h / 1y	Hydraulic system: Movements speed	o						**
1000h / 1y	Hydraulic oil					o		
1000h / 1y	Engine valves clearances	o						**
1000h / 1y	Coolant					o		
1000h / 1y	Engine speeds	o						**
1000h / 1y	Fuel tank				o			
1000h / 1y	Wheels and tires conditions	o						**
1000h / 1y	Chassis: bearings and pivot bushes	o						**
1000h / 1y	Chassis: structure	o						**
1000h / 1y	Transmission oil					o		
2000h	Axles oscillation	o						**
2000h	Ropes and chains (if installed)					o		**
2000h	Hydraulic system: Capacity	o						**
2000h	Hydraulic system: Pressures	o						**
2000h	Hydraulic oil tank				o			**
2000h	Alternator and Starter motor	o						**
2000h	Radiators	o			o			**
3600h	AdBlue tank filter FPT engine (only Stage IIIB/Tier 4i and Stage IV/ Tier 4f engine sizes)					o		**
4000h	Prop shafts	o				o		**
4000h	Reduction gears universal joint	o						**
4000h	Wheels reduction gear clearance	o						**
4000h	Steering ball joints	o						**
4000h	Wheels reduction gear pins	o						**
4000h	Brakes wear	o						**
2y	Air conditioning system (if installed): Dissipater filter					o		**
2y	Air conditioning system (if installed): Oil refrigerant	o						**
2y	Air conditioning system (if installed): Pressure switches	o		o				**
2y	Air conditioning system (if installed): Condenser and evaporator coils				o			**








Maintenance								
2y	Air conditioning system (if installed): Condensate and exhaust valve tank				o			**
Notes		Stamp and signature						

MAINTENANCE LOG			
Maintenance sheet no.	.....	Maintenance date	.....
Vehicle serial number:	.....	Maintenance technician name	.....
Vehicle hours	.....	Maintenance company name	.....

	Maintenance							
0h	Air conditioning system	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Anti-tipping device inspection with load	<input type="checkbox"/>						
0h	Filters (air, engine oil, hydraulic oil, fuel, air conditioning system, cab)	<input type="checkbox"/>						
0h	Brake			<input type="checkbox"/>				
0h	Parking brake	<input type="checkbox"/>						
0h	Electrolyte level and battery charge	<input type="checkbox"/>						
0h	Lighting	<input type="checkbox"/>						
0h	Hydraulic oil level	<input type="checkbox"/>						
0h	Alternator belts \ services	<input type="checkbox"/>						
0h	Engine oil level	<input type="checkbox"/>						
0h	Radiators	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Radiator expansion tank	<input type="checkbox"/>	<input type="checkbox"/>					
0h	Tires pressure	<input type="checkbox"/>						
0h	Wear check (on both the vehicle and equipment if installed)	<input type="checkbox"/>						
10h / 1m	Window washer tank	<input type="checkbox"/>	<input type="checkbox"/>					
10h / 1m	Boom chains (if installed)	<input type="checkbox"/>						
10h / 1m	Safety stickers	<input type="checkbox"/>						
10h / 1m	Safety devices	<input type="checkbox"/>						
10h / 1m	Coolant	<input type="checkbox"/>						
10h / 1m	Engine oil level	<input type="checkbox"/>						
10h / 1m	Metal structural work, no cracks	<input type="checkbox"/>						
10h / 1m	Radiators				<input type="checkbox"/>			
50h / 1m	Grease level in the automatic lubrication system (if installed)						<input type="checkbox"/>	
50h / 1m	Prop shafts						<input type="checkbox"/>	
50h / 1m	Axles oscillation						<input type="checkbox"/>	
50h / 1m	Wheels reduction gear pins						<input type="checkbox"/>	
50h / 1m	Ropes and chains (if installed)	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Wear pads	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Mechanical joints of parking brake on the axle						<input type="checkbox"/>	
50h / 1m	Mechanical joints						<input type="checkbox"/>	
50h / 1m	Cab ventilation filter				<input type="checkbox"/>			
50h / 1m	Brakes oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic system leaks	<input type="checkbox"/>						
50h / 1m	Air filter				<input type="checkbox"/>			

Maintenance								
50h / 1m	Fuel filter				o			
50h / 1m	Coolant	o						
50h / 1m	Engine oil level	o						
50h / 1m	Tires pressure	o						
50h / 1m	Wheel nuts tightening	o						
50h / 1m	Inching oil level (only PS transmissions)	o						
First 100h	Differential axle oil					o		
250h / 2m	Ropes and chains (if any) coupling points, wear and adjustment	o		o			o	
250h / 2m	Boom chains (if installed)			o				
250h / 2m	Seat belts	o						
250h / 2m	Rear view mirrors	o						
250h / 2m	Anti-tipping device	o						
250h / 2m	Electrolyte level and battery charge	o						
250h / 2m	Torque specifications - Hydraulic Fittings			o				
250h / 2m	Alternator belts \ services	o		o				
250h / 2m	Torque specifications - fasteners			o				
500h / 6m	PTO gearbox oil (if installed)					o		
500h / 6m	Differential axle oil	o						
500h / 6m	Epicycloidal reduction gear oil	o						
500h / 6m	Forks: wear	o						
500h / 6m	Cab ventilation filter					o		
500h / 6m	Brakes oil					o		
500h / 6m	Electrical system	o						
500h / 6m	Hydraulic oil filter(s)					o		
500h / 6m	Block valves	o						
500h / 6m	Air filter					o		
500h / 6m	FPT fuel filter					o		
500h / 6m	FPT engine oil filter					o		
500h / 6m	FPT engine oil					o		
500h / 6m	KUBOTA fuel filter					o		
500h / 6m	KUBOTA engine oil filter					o		
500h / 6m	KUBOTA engine oil					o		
500h / 6m	Transmission oil	o						
1000h / 1y	PTO gearbox oil (if installed)					o		
1000h / 1y	Differential axle oil					o		
1000h / 1y	Epicycloidal reduction gear oil					o		
1000h / 1y	Equipment condition	o						**
1000h / 1y	Forks support plate: wear	o						**







	Maintenance							
1000h / 1y	Telescopic boom: conditions	o						**
1000h / 1y	Telescopic boom: bearings and pivot bushes	o						**
1000h / 1y	Wear pads: wear	o						**
1000h / 1y	Cab structure	o						**
1000h / 1y	Brakes oil circuit				o			**
1000h / 1y	Brakes oil circuit: Pressure	o						**
1000h / 1y	Brake			o				**
1000h / 1y	Electrical system: cables condition	o						**
1000h / 1y	Electrical system: Lighting and signaling	o						**
1000h / 1y	Electrical system: Acoustic signal devices	o						**
1000h / 1y	Hydraulic system: Jacks	o						**
1000h / 1y	Hydraulic system: Pipes and flexible pipes	o						**
1000h / 1y	Hydraulic system: Movements speed	o						**
1000h / 1y	Hydraulic oil					o		
1000h / 1y	Engine valves clearances	o						**
1000h / 1y	Coolant					o		
1000h / 1y	Engine speeds	o						**
1000h / 1y	Fuel tank				o			
1000h / 1y	Wheels and tires conditions	o						**
1000h / 1y	Chassis: bearings and pivot bushes	o						**
1000h / 1y	Chassis: structure	o						**
1000h / 1y	Transmission oil					o		
2000h	Axles oscillation	o						**
2000h	Ropes and chains (if installed)					o		**
2000h	Hydraulic system: Capacity	o						**
2000h	Hydraulic system: Pressures	o						**
2000h	Hydraulic oil tank				o			**
2000h	Alternator and Starter motor	o						**
2000h	Radiators	o			o			**
3600h	AdBlue tank filter FPT engine (only Stage IIIB/Tier 4i and Stage IV/ Tier 4f engine sizes)					o		**
4000h	Prop shafts	o				o		**
4000h	Reduction gears universal joint	o						**
4000h	Wheels reduction gear clearance	o						**
4000h	Steering ball joints	o						**
4000h	Wheels reduction gear pins	o						**
4000h	Brakes wear	o						**
2y	Air conditioning system (if installed): Dissipater filter					o		**
2y	Air conditioning system (if installed): Oil refrigerant	o						**
2y	Air conditioning system (if installed): Pressure switches	o		o				**
2y	Air conditioning system (if installed): Condenser and evaporator coils				o			**

Maintenance								
2y	Air conditioning system (if installed): Condensate and exhaust valve tank				o			**
Notes				Stamp and signature				








MAINTENANCE LOG			
Maintenance sheet no.	.....	Maintenance date	.....
Vehicle serial number:	.....	Maintenance technician name	.....
Vehicle hours	.....	Maintenance company name	.....

	Maintenance							
0h	Air conditioning system	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Anti-tipping device inspection with load	<input type="checkbox"/>						
0h	Filters (air, engine oil, hydraulic oil, fuel, air conditioning system, cab)	<input type="checkbox"/>						
0h	Brake			<input type="checkbox"/>				
0h	Parking brake	<input type="checkbox"/>						
0h	Electrolyte level and battery charge	<input type="checkbox"/>						
0h	Lighting	<input type="checkbox"/>						
0h	Hydraulic oil level	<input type="checkbox"/>						
0h	Alternator belts \ services	<input type="checkbox"/>						
0h	Engine oil level	<input type="checkbox"/>						
0h	Radiators	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Radiator expansion tank	<input type="checkbox"/>	<input type="checkbox"/>					
0h	Tires pressure	<input type="checkbox"/>						
0h	Wear check (on both the vehicle and equipment if installed)	<input type="checkbox"/>						
10h / 1m	Window washer tank	<input type="checkbox"/>	<input type="checkbox"/>					
10h / 1m	Boom chains (if installed)	<input type="checkbox"/>						
10h / 1m	Safety stickers	<input type="checkbox"/>						
10h / 1m	Safety devices	<input type="checkbox"/>						
10h / 1m	Coolant	<input type="checkbox"/>						
10h / 1m	Engine oil level	<input type="checkbox"/>						
10h / 1m	Metal structural work, no cracks	<input type="checkbox"/>						
10h / 1m	Radiators				<input type="checkbox"/>			
50h / 1m	Grease level in the automatic lubrication system (if installed)						<input type="checkbox"/>	
50h / 1m	Prop shafts						<input type="checkbox"/>	
50h / 1m	Axles oscillation						<input type="checkbox"/>	
50h / 1m	Wheels reduction gear pins						<input type="checkbox"/>	
50h / 1m	Ropes and chains (if installed)	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Wear pads	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Mechanical joints of parking brake on the axle						<input type="checkbox"/>	
50h / 1m	Mechanical joints						<input type="checkbox"/>	
50h / 1m	Cab ventilation filter				<input type="checkbox"/>			
50h / 1m	Brakes oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic system leaks	<input type="checkbox"/>						
50h / 1m	Air filter				<input type="checkbox"/>			



Maintenance								
50h / 1m	Fuel filter				o			
50h / 1m	Coolant	o						
50h / 1m	Engine oil level	o						
50h / 1m	Tires pressure	o						
50h / 1m	Wheel nuts tightening	o						
50h / 1m	Inching oil level (only PS transmissions)	o						
First 100h	Differential axle oil					o		
250h / 2m	Ropes and chains (if any) coupling points, wear and adjustment	o		o			o	
250h / 2m	Boom chains (if installed)			o				
250h / 2m	Seat belts	o						
250h / 2m	Rear view mirrors	o						
250h / 2m	Anti-tipping device	o						
250h / 2m	Electrolyte level and battery charge	o						
250h / 2m	Torque specifications - Hydraulic Fittings			o				
250h / 2m	Alternator belts \ services	o		o				
250h / 2m	Torque specifications - fasteners			o				
500h / 6m	PTO gearbox oil (if installed)					o		
500h / 6m	Differential axle oil	o						
500h / 6m	Epicycloidal reduction gear oil	o						
500h / 6m	Forks: wear	o						
500h / 6m	Cab ventilation filter					o		
500h / 6m	Brakes oil					o		
500h / 6m	Electrical system	o						
500h / 6m	Hydraulic oil filter(s)					o		
500h / 6m	Block valves	o						
500h / 6m	Air filter					o		
500h / 6m	FPT fuel filter					o		
500h / 6m	FPT engine oil filter					o		
500h / 6m	FPT engine oil					o		
500h / 6m	KUBOTA fuel filter					o		
500h / 6m	KUBOTA engine oil filter					o		
500h / 6m	KUBOTA engine oil					o		
500h / 6m	Transmission oil	o						
1000h / 1y	PTO gearbox oil (if installed)					o		
1000h / 1y	Differential axle oil					o		
1000h / 1y	Epicycloidal reduction gear oil					o		
1000h / 1y	Equipment condition	o						**
1000h / 1y	Forks support plate: wear	o						**

	Maintenance							
1000h / 1y	Telescopic boom: conditions	o						**
1000h / 1y	Telescopic boom: bearings and pivot bushes	o						**
1000h / 1y	Wear pads: wear	o						**
1000h / 1y	Cab structure	o						**
1000h / 1y	Brakes oil circuit				o			**
1000h / 1y	Brakes oil circuit: Pressure	o						**
1000h / 1y	Brake			o				**
1000h / 1y	Electrical system: cables condition	o						**
1000h / 1y	Electrical system: Lighting and signaling	o						**
1000h / 1y	Electrical system: Acoustic signal devices	o						**
1000h / 1y	Hydraulic system: Jacks	o						**
1000h / 1y	Hydraulic system: Pipes and flexible pipes	o						**
1000h / 1y	Hydraulic system: Movements speed	o						**
1000h / 1y	Hydraulic oil					o		
1000h / 1y	Engine valves clearances	o						**
1000h / 1y	Coolant					o		
1000h / 1y	Engine speeds	o						**
1000h / 1y	Fuel tank				o			
1000h / 1y	Wheels and tires conditions	o						**
1000h / 1y	Chassis: bearings and pivot bushes	o						**
1000h / 1y	Chassis: structure	o						**
1000h / 1y	Transmission oil					o		
2000h	Axles oscillation	o						**
2000h	Ropes and chains (if installed)					o		**
2000h	Hydraulic system: Capacity	o						**
2000h	Hydraulic system: Pressures	o						**
2000h	Hydraulic oil tank				o			**
2000h	Alternator and Starter motor	o						**
2000h	Radiators	o			o			**
3600h	AdBlue tank filter FPT engine (only Stage IIIB/Tier 4i and Stage IV/ Tier 4f engine sizes)					o		**
4000h	Prop shafts	o				o		**
4000h	Reduction gears universal joint	o						**
4000h	Wheels reduction gear clearance	o						**
4000h	Steering ball joints	o						**
4000h	Wheels reduction gear pins	o						**
4000h	Brakes wear	o						**
2y	Air conditioning system (if installed): Dissipater filter					o		**
2y	Air conditioning system (if installed): Oil refrigerant	o						**
2y	Air conditioning system (if installed): Pressure switches	o		o				**
2y	Air conditioning system (if installed): Condenser and evaporator coils				o			**








Maintenance								
2y	Air conditioning system (if installed): Condensate and exhaust valve tank				o			**
Notes		Stamp and signature						

MAINTENANCE LOG			
Maintenance sheet no.	.....	Maintenance date	.....
Vehicle serial number:	.....	Maintenance technician name	.....
Vehicle hours	.....	Maintenance company name	.....

	Maintenance							
0h	Air conditioning system	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Anti-tipping device inspection with load	<input type="checkbox"/>						
0h	Filters (air, engine oil, hydraulic oil, fuel, air conditioning system, cab)	<input type="checkbox"/>						
0h	Brake			<input type="checkbox"/>				
0h	Parking brake	<input type="checkbox"/>						
0h	Electrolyte level and battery charge	<input type="checkbox"/>						
0h	Lighting	<input type="checkbox"/>						
0h	Hydraulic oil level	<input type="checkbox"/>						
0h	Alternator belts \ services	<input type="checkbox"/>						
0h	Engine oil level	<input type="checkbox"/>						
0h	Radiators	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Radiator expansion tank	<input type="checkbox"/>	<input type="checkbox"/>					
0h	Tires pressure	<input type="checkbox"/>						
0h	Wear check (on both the vehicle and equipment if installed)	<input type="checkbox"/>						
10h / 1m	Window washer tank	<input type="checkbox"/>	<input type="checkbox"/>					
10h / 1m	Boom chains (if installed)	<input type="checkbox"/>						
10h / 1m	Safety stickers	<input type="checkbox"/>						
10h / 1m	Safety devices	<input type="checkbox"/>						
10h / 1m	Coolant	<input type="checkbox"/>						
10h / 1m	Engine oil level	<input type="checkbox"/>						
10h / 1m	Metal structural work, no cracks	<input type="checkbox"/>						
10h / 1m	Radiators				<input type="checkbox"/>			
50h / 1m	Grease level in the automatic lubrication system (if installed)						<input type="checkbox"/>	
50h / 1m	Prop shafts						<input type="checkbox"/>	
50h / 1m	Axles oscillation						<input type="checkbox"/>	
50h / 1m	Wheels reduction gear pins						<input type="checkbox"/>	
50h / 1m	Ropes and chains (if installed)	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Wear pads	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Mechanical joints of parking brake on the axle						<input type="checkbox"/>	
50h / 1m	Mechanical joints						<input type="checkbox"/>	
50h / 1m	Cab ventilation filter				<input type="checkbox"/>			
50h / 1m	Brakes oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic system leaks	<input type="checkbox"/>						
50h / 1m	Air filter				<input type="checkbox"/>			

Maintenance								
50h / 1m	Fuel filter				o			
50h / 1m	Coolant	o						
50h / 1m	Engine oil level	o						
50h / 1m	Tires pressure	o						
50h / 1m	Wheel nuts tightening	o						
50h / 1m	Inching oil level (only PS transmissions)	o						
First 100h	Differential axle oil					o		
250h / 2m	Ropes and chains (if any) coupling points, wear and adjustment	o		o			o	
250h / 2m	Boom chains (if installed)			o				
250h / 2m	Seat belts	o						
250h / 2m	Rear view mirrors	o						
250h / 2m	Anti-tipping device	o						
250h / 2m	Electrolyte level and battery charge	o						
250h / 2m	Torque specifications - Hydraulic Fittings			o				
250h / 2m	Alternator belts \ services	o		o				
250h / 2m	Torque specifications - fasteners			o				
500h / 6m	PTO gearbox oil (if installed)					o		
500h / 6m	Differential axle oil	o						
500h / 6m	Epicycloidal reduction gear oil	o						
500h / 6m	Forks: wear	o						
500h / 6m	Cab ventilation filter					o		
500h / 6m	Brakes oil					o		
500h / 6m	Electrical system	o						
500h / 6m	Hydraulic oil filter(s)					o		
500h / 6m	Block valves	o						
500h / 6m	Air filter					o		
500h / 6m	FPT fuel filter					o		
500h / 6m	FPT engine oil filter					o		
500h / 6m	FPT engine oil					o		
500h / 6m	KUBOTA fuel filter					o		
500h / 6m	KUBOTA engine oil filter					o		
500h / 6m	KUBOTA engine oil					o		
500h / 6m	Transmission oil	o						
1000h / 1y	PTO gearbox oil (if installed)					o		
1000h / 1y	Differential axle oil					o		
1000h / 1y	Epicycloidal reduction gear oil					o		
1000h / 1y	Equipment condition	o						**
1000h / 1y	Forks support plate: wear	o						**

	Maintenance							
1000h / 1y	Telescopic boom: conditions	o						**
1000h / 1y	Telescopic boom: bearings and pivot bushes	o						**
1000h / 1y	Wear pads: wear	o						**
1000h / 1y	Cab structure	o						**
1000h / 1y	Brakes oil circuit				o			**
1000h / 1y	Brakes oil circuit: Pressure	o						**
1000h / 1y	Brake			o				**
1000h / 1y	Electrical system: cables condition	o						**
1000h / 1y	Electrical system: Lighting and signaling	o						**
1000h / 1y	Electrical system: Acoustic signal devices	o						**
1000h / 1y	Hydraulic system: Jacks	o						**
1000h / 1y	Hydraulic system: Pipes and flexible pipes	o						**
1000h / 1y	Hydraulic system: Movements speed	o						**
1000h / 1y	Hydraulic oil					o		
1000h / 1y	Engine valves clearances	o						**
1000h / 1y	Coolant					o		
1000h / 1y	Engine speeds	o						**
1000h / 1y	Fuel tank				o			
1000h / 1y	Wheels and tires conditions	o						**
1000h / 1y	Chassis: bearings and pivot bushes	o						**
1000h / 1y	Chassis: structure	o						**
1000h / 1y	Transmission oil					o		
2000h	Axles oscillation	o						**
2000h	Ropes and chains (if installed)					o		**
2000h	Hydraulic system: Capacity	o						**
2000h	Hydraulic system: Pressures	o						**
2000h	Hydraulic oil tank				o			**
2000h	Alternator and Starter motor	o						**
2000h	Radiators	o			o			**
3600h	AdBlue tank filter FPT engine (only Stage IIIB/Tier 4i and Stage IV/ Tier 4f engine sizes)					o		**
4000h	Prop shafts	o				o		**
4000h	Reduction gears universal joint	o						**
4000h	Wheels reduction gear clearance	o						**
4000h	Steering ball joints	o						**
4000h	Wheels reduction gear pins	o						**
4000h	Brakes wear	o						**
2y	Air conditioning system (if installed): Dissipater filter					o		**
2y	Air conditioning system (if installed): Oil refrigerant	o						**
2y	Air conditioning system (if installed): Pressure switches	o		o				**
2y	Air conditioning system (if installed): Condenser and evaporator coils				o			**

Maintenance								
2y	Air conditioning system (if installed): Condensate and exhaust valve tank				o			**
Notes		Stamp and signature						








MAINTENANCE LOG			
Maintenance sheet no.	.....	Maintenance date	.....
Vehicle serial number:	.....	Maintenance technician name	.....
Vehicle hours	.....	Maintenance company name	.....

	Maintenance							
0h	Air conditioning system	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Anti-tipping device inspection with load	<input type="checkbox"/>						
0h	Filters (air, engine oil, hydraulic oil, fuel, air conditioning system, cab)	<input type="checkbox"/>						
0h	Brake			<input type="checkbox"/>				
0h	Parking brake	<input type="checkbox"/>						
0h	Electrolyte level and battery charge	<input type="checkbox"/>						
0h	Lighting	<input type="checkbox"/>						
0h	Hydraulic oil level	<input type="checkbox"/>						
0h	Alternator belts \ services	<input type="checkbox"/>						
0h	Engine oil level	<input type="checkbox"/>						
0h	Radiators	<input type="checkbox"/>			<input type="checkbox"/>			
0h	Radiator expansion tank	<input type="checkbox"/>	<input type="checkbox"/>					
0h	Tires pressure	<input type="checkbox"/>						
0h	Wear check (on both the vehicle and equipment if installed)	<input type="checkbox"/>						
10h / 1m	Window washer tank	<input type="checkbox"/>	<input type="checkbox"/>					
10h / 1m	Boom chains (if installed)	<input type="checkbox"/>						
10h / 1m	Safety stickers	<input type="checkbox"/>						
10h / 1m	Safety devices	<input type="checkbox"/>						
10h / 1m	Coolant	<input type="checkbox"/>						
10h / 1m	Engine oil level	<input type="checkbox"/>						
10h / 1m	Metal structural work, no cracks	<input type="checkbox"/>						
10h / 1m	Radiators				<input type="checkbox"/>			
50h / 1m	Grease level in the automatic lubrication system (if installed)						<input type="checkbox"/>	
50h / 1m	Prop shafts						<input type="checkbox"/>	
50h / 1m	Axles oscillation						<input type="checkbox"/>	
50h / 1m	Wheels reduction gear pins						<input type="checkbox"/>	
50h / 1m	Ropes and chains (if installed)	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Wear pads	<input type="checkbox"/>					<input type="checkbox"/>	
50h / 1m	Mechanical joints of parking brake on the axle						<input type="checkbox"/>	
50h / 1m	Mechanical joints						<input type="checkbox"/>	
50h / 1m	Cab ventilation filter				<input type="checkbox"/>			
50h / 1m	Brakes oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic oil level	<input type="checkbox"/>						
50h / 1m	Hydraulic system leaks	<input type="checkbox"/>						
50h / 1m	Air filter				<input type="checkbox"/>			



Maintenance								
50h / 1m	Fuel filter				o			
50h / 1m	Coolant	o						
50h / 1m	Engine oil level	o						
50h / 1m	Tires pressure	o						
50h / 1m	Wheel nuts tightening	o						
50h / 1m	Inching oil level (only PS transmissions)	o						
First 100h	Differential axle oil					o		
250h / 2m	Ropes and chains (if any) coupling points, wear and adjustment	o		o			o	
250h / 2m	Boom chains (if installed)			o				
250h / 2m	Seat belts	o						
250h / 2m	Rear view mirrors	o						
250h / 2m	Anti-tipping device	o						
250h / 2m	Electrolyte level and battery charge	o						
250h / 2m	Torque specifications - Hydraulic Fittings			o				
250h / 2m	Alternator belts \ services	o		o				
250h / 2m	Torque specifications - fasteners			o				
500h / 6m	PTO gearbox oil (if installed)					o		
500h / 6m	Differential axle oil	o						
500h / 6m	Epicycloidal reduction gear oil	o						
500h / 6m	Forks: wear	o						
500h / 6m	Cab ventilation filter					o		
500h / 6m	Brakes oil					o		
500h / 6m	Electrical system	o						
500h / 6m	Hydraulic oil filter(s)					o		
500h / 6m	Block valves	o						
500h / 6m	Air filter					o		
500h / 6m	FPT fuel filter					o		
500h / 6m	FPT engine oil filter					o		
500h / 6m	FPT engine oil					o		
500h / 6m	KUBOTA fuel filter					o		
500h / 6m	KUBOTA engine oil filter					o		
500h / 6m	KUBOTA engine oil					o		
500h / 6m	Transmission oil	o						
1000h / 1y	PTO gearbox oil (if installed)					o		
1000h / 1y	Differential axle oil					o		
1000h / 1y	Epicycloidal reduction gear oil					o		
1000h / 1y	Equipment condition	o						**
1000h / 1y	Forks support plate: wear	o						**

	Maintenance							
1000h / 1y	Telescopic boom: conditions	o						**
1000h / 1y	Telescopic boom: bearings and pivot bushes	o						**
1000h / 1y	Wear pads: wear	o						**
1000h / 1y	Cab structure	o						**
1000h / 1y	Brakes oil circuit				o			**
1000h / 1y	Brakes oil circuit: Pressure	o						**
1000h / 1y	Brake			o				**
1000h / 1y	Electrical system: cables condition	o						**
1000h / 1y	Electrical system: Lighting and signaling	o						**
1000h / 1y	Electrical system: Acoustic signal devices	o						**
1000h / 1y	Hydraulic system: Jacks	o						**
1000h / 1y	Hydraulic system: Pipes and flexible pipes	o						**
1000h / 1y	Hydraulic system: Movements speed	o						**
1000h / 1y	Hydraulic oil					o		
1000h / 1y	Engine valves clearances	o						**
1000h / 1y	Coolant					o		
1000h / 1y	Engine speeds	o						**
1000h / 1y	Fuel tank				o			
1000h / 1y	Wheels and tires conditions	o						**
1000h / 1y	Chassis: bearings and pivot bushes	o						**
1000h / 1y	Chassis: structure	o						**
1000h / 1y	Transmission oil					o		
2000h	Axles oscillation	o						**
2000h	Ropes and chains (if installed)					o		**
2000h	Hydraulic system: Capacity	o						**
2000h	Hydraulic system: Pressures	o						**
2000h	Hydraulic oil tank				o			**
2000h	Alternator and Starter motor	o						**
2000h	Radiators	o			o			**
3600h	AdBlue tank filter FPT engine (only Stage IIIB/Tier 4i and Stage IV/ Tier 4f engine sizes)					o		**
4000h	Prop shafts	o				o		**
4000h	Reduction gears universal joint	o						**
4000h	Wheels reduction gear clearance	o						**
4000h	Steering ball joints	o						**
4000h	Wheels reduction gear pins	o						**
4000h	Brakes wear	o						**
2y	Air conditioning system (if installed): Dissipater filter					o		**
2y	Air conditioning system (if installed): Oil refrigerant	o						**
2y	Air conditioning system (if installed): Pressure switches	o		o				**
2y	Air conditioning system (if installed): Condenser and evaporator coils				o			**








Maintenance								
2y	Air conditioning system (if installed): Condensate and exhaust valve tank				o			**
Notes		Stamp and signature						

MAINTENANCE LOG			
Maintenance sheet no.	.....	Maintenance date	.....
Vehicle serial number:	.....	Maintenance technician name	.....
Vehicle hours	.....	Maintenance company name	.....

	Maintenance							
0h	Air conditioning system	<input type="radio"/>			<input type="radio"/>			
0h	Anti-tipping device inspection with load	<input type="radio"/>						
0h	Filters (air, engine oil, hydraulic oil, fuel, air conditioning system, cab)	<input type="radio"/>						
0h	Brake			<input type="radio"/>				
0h	Parking brake	<input type="radio"/>						
0h	Electrolyte level and battery charge	<input type="radio"/>						
0h	Lighting	<input type="radio"/>						
0h	Hydraulic oil level	<input type="radio"/>						
0h	Alternator belts \ services	<input type="radio"/>						
0h	Engine oil level	<input type="radio"/>						
0h	Radiators	<input type="radio"/>			<input type="radio"/>			
0h	Radiator expansion tank	<input type="radio"/>	<input type="radio"/>					
0h	Tires pressure	<input type="radio"/>						
0h	Wear check (on both the vehicle and equipment if installed)	<input type="radio"/>						
10h / 1m	Window washer tank	<input type="radio"/>	<input type="radio"/>					
10h / 1m	Boom chains (if installed)	<input type="radio"/>						
10h / 1m	Safety stickers	<input type="radio"/>						
10h / 1m	Safety devices	<input type="radio"/>						
10h / 1m	Coolant	<input type="radio"/>						
10h / 1m	Engine oil level	<input type="radio"/>						
10h / 1m	Metal structural work, no cracks	<input type="radio"/>						
10h / 1m	Radiators				<input type="radio"/>			
50h / 1m	Grease level in the automatic lubrication system (if installed)						<input type="radio"/>	
50h / 1m	Prop shafts						<input type="radio"/>	
50h / 1m	Axles oscillation						<input type="radio"/>	
50h / 1m	Wheels reduction gear pins						<input type="radio"/>	
50h / 1m	Ropes and chains (if installed)	<input type="radio"/>					<input type="radio"/>	
50h / 1m	Wear pads	<input type="radio"/>					<input type="radio"/>	
50h / 1m	Mechanical joints of parking brake on the axle						<input type="radio"/>	
50h / 1m	Mechanical joints						<input type="radio"/>	
50h / 1m	Cab ventilation filter				<input type="radio"/>			
50h / 1m	Brakes oil level	<input type="radio"/>						
50h / 1m	Hydraulic oil level	<input type="radio"/>						
50h / 1m	Hydraulic system leaks	<input type="radio"/>						
50h / 1m	Air filter				<input type="radio"/>			

Maintenance								
50h / 1m	Fuel filter				o			
50h / 1m	Coolant	o						
50h / 1m	Engine oil level	o						
50h / 1m	Tires pressure	o						
50h / 1m	Wheel nuts tightening	o						
50h / 1m	Inching oil level (only PS transmissions)	o						
First 100h	Differential axle oil					o		
250h / 2m	Ropes and chains (if any) coupling points, wear and adjustment	o		o			o	
250h / 2m	Boom chains (if installed)			o				
250h / 2m	Seat belts	o						
250h / 2m	Rear view mirrors	o						
250h / 2m	Anti-tipping device	o						
250h / 2m	Electrolyte level and battery charge	o						
250h / 2m	Torque specifications - Hydraulic Fittings			o				
250h / 2m	Alternator belts \ services	o		o				
250h / 2m	Torque specifications - fasteners			o				
500h / 6m	PTO gearbox oil (if installed)					o		
500h / 6m	Differential axle oil	o						
500h / 6m	Epicycloidal reduction gear oil	o						
500h / 6m	Forks: wear	o						
500h / 6m	Cab ventilation filter					o		
500h / 6m	Brakes oil					o		
500h / 6m	Electrical system	o						
500h / 6m	Hydraulic oil filter(s)					o		
500h / 6m	Block valves	o						
500h / 6m	Air filter					o		
500h / 6m	FPT fuel filter					o		
500h / 6m	FPT engine oil filter					o		
500h / 6m	FPT engine oil					o		
500h / 6m	KUBOTA fuel filter					o		
500h / 6m	KUBOTA engine oil filter					o		
500h / 6m	KUBOTA engine oil					o		
500h / 6m	Transmission oil	o						
1000h / 1y	PTO gearbox oil (if installed)					o		
1000h / 1y	Differential axle oil					o		
1000h / 1y	Epicycloidal reduction gear oil					o		
1000h / 1y	Equipment condition	o						**
1000h / 1y	Forks support plate: wear	o						**

	Maintenance							
1000h / 1y	Telescopic boom: conditions	o						**
1000h / 1y	Telescopic boom: bearings and pivot bushes	o						**
1000h / 1y	Wear pads: wear	o						**
1000h / 1y	Cab structure	o						**
1000h / 1y	Brakes oil circuit				o			**
1000h / 1y	Brakes oil circuit: Pressure	o						**
1000h / 1y	Brake			o				**
1000h / 1y	Electrical system: cables condition	o						**
1000h / 1y	Electrical system: Lighting and signaling	o						**
1000h / 1y	Electrical system: Acoustic signal devices	o						**
1000h / 1y	Hydraulic system: Jacks	o						**
1000h / 1y	Hydraulic system: Pipes and flexible pipes	o						**
1000h / 1y	Hydraulic system: Movements speed	o						**
1000h / 1y	Hydraulic oil					o		
1000h / 1y	Engine valves clearances	o						**
1000h / 1y	Coolant					o		
1000h / 1y	Engine speeds	o						**
1000h / 1y	Fuel tank				o			
1000h / 1y	Wheels and tires conditions	o						**
1000h / 1y	Chassis: bearings and pivot bushes	o						**
1000h / 1y	Chassis: structure	o						**
1000h / 1y	Transmission oil					o		
2000h	Axles oscillation	o						**
2000h	Ropes and chains (if installed)					o		**
2000h	Hydraulic system: Capacity	o						**
2000h	Hydraulic system: Pressures	o						**
2000h	Hydraulic oil tank				o			**
2000h	Alternator and Starter motor	o						**
2000h	Radiators	o			o			**
3600h	AdBlue tank filter FPT engine (only Stage IIIB/Tier 4i and Stage IV/ Tier 4f engine sizes)					o		**
4000h	Prop shafts	o				o		**
4000h	Reduction gears universal joint	o						**
4000h	Wheels reduction gear clearance	o						**
4000h	Steering ball joints	o						**
4000h	Wheels reduction gear pins	o						**
4000h	Brakes wear	o						**
2y	Air conditioning system (if installed): Dissipater filter					o		**
2y	Air conditioning system (if installed): Oil refrigerant	o						**
2y	Air conditioning system (if installed): Pressure switches	o		o				**
2y	Air conditioning system (if installed): Condenser and evaporator coils				o			**

Maintenance								
2y	Air conditioning system (if installed): Condensate and exhaust valve tank				o			**
Notes		Stamp and signature						







